 


Nokia 1506 User Guide

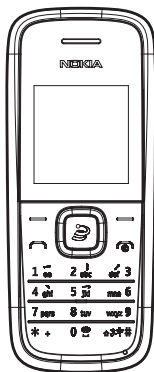

© 2009 Nokia. All rights reserved.

Nokia, Nokia Connecting People and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options.

Export controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

xxxxxxx, Issue 1

Contents

SAFETY.....	5	Set predictive English input on and off.....	25
1. Get started.....	8	Traditional English input	26
Install the UIM card and battery.....	8	Predictive English input.....	26
Charge the battery.....	10	Tips for writing text	27
Switch your device on or off	11	5. Menu functions.....	28
Normal operating position	11	Messaging.....	28
Access codes.....	12	Contacts.....	34
Nokia support on the web.....	13	Log	38
2. Your phone	14	Settings	39
Keys and parts (front)	14	esurfing	48
Keys and parts (side).....	15	Gallery.....	48
Standby mode and shortcuts.....	15	Customer Service	49
Keyguard.....	16	Organiser.....	49
Data transfer	17	Games	53
3. Call functions	18	6. Enhancements	54
Make and answer a call	18	7. Battery and charger information.....	55
Make a conference call	18	Nokia battery authentication guidelines.....	57
Loudspeaker.....	19	Care and maintenance	60
4. Input methods	20	Additional safety information.....	63
Switch between input methods.....	20	Index.....	71
Pinyin input method.....	21		
Stroke input method	22		
Phrase input.....	24		

SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



SWITCH OFF IN RESTRICTED AREAS

Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your device is not water-resistant. Keep it dry.

■ About your device

The wireless device (RH-128) described in this guide is approved for use on the CDMA 800 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.



Warning: To use any features in this device, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

■ Network services

To use the device you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Your service provider can give you instructions and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

1. Get started

■ Install the UIM card and battery

Keep all UIM cards out of the reach of small children.

For availability and information on using UIM card services, contact your UIM card vendor. This may be the service provider or other vendor.

 


Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached.

1. To remove the cover, with the back of the device facing you, press and hold the release button and lift the back cover up.




2. Insert your finger into the finger grip and lift the battery from its compartment.

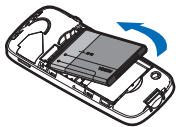


3. Keep the bevelled corner of the UIM card facing up and matching along the corresponding bevelled corner of the card holder.

 4. Insert the UIM card into the holder with the gold-coloured contacts facing down, matching up with the gold-coloured contacts on the device.

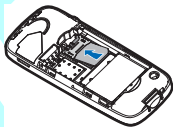

 5. Position the battery so the gold-coloured contacts match up with those on the device, and insert the battery into the battery slot.

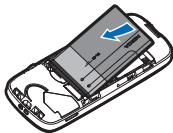

6. Push down on the other end of the battery to snap the battery into place.

7. Align the back cover with the back of the device. To lock it, press the bottom of the back cover.



■ Charge the battery



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an AC-8C charger. The battery intended for use with this device is the BL-4C.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

1. Plug the charger transformer into a standard wall outlet.



2. Insert the charger output plug into the socket at the left side of the device.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

■ Switch your device on or off

To switch your device on or off, press and hold the power key for at least 2 seconds.



Warning: Do not switch on the device when wireless device use is prohibited or when it may cause interference or danger.

■ Normal operating position

Your device has an internal antenna. Hold the device with the antenna pointed up and over your shoulder.





Note: As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with such an antenna affects the communication quality and may cause the device to operate at a higher power level than otherwise needed and may reduce the battery life.



■ Access codes

The security code supplied with the device helps to protect your device against unauthorised use. The preset code is 12345.

You can change the code, and set the phone to request the code. Keep the code secret and in a safe place separate from your phone.

If you forget the code and your phone is locked, your phone will require service and additional charges may apply. For more information, contact a Nokia Care point or your device dealer.

The PIN code supplied with the UIM card helps to protect the card against unauthorised use. If you enter the PIN code incorrectly three times in succession, you are asked for the PUK code. If you do not have it, contact your service provider.

To set how your device uses the access codes and security settings, select **Menu** > *Settings* > *Security*.

■ **Nokia support on the web**

Check www.nokia.com/support or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

2. Your phone

■ Keys and parts (front)

1 – Earpiece

2 – Display screen

3 – Left selection key

4 – Call key

5 – Keypad

 
6 – Power/End key

7 – Right selection key

8 – 4-way navigation key
(hereafter referred to as scroll
key)


9 – Middle selection key

10 – Press and hold the # key to toggle between *Silent*
and *General* profile

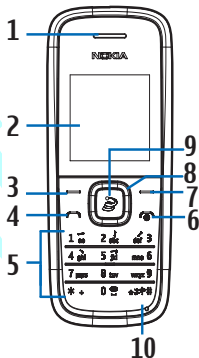


■ Keys and parts (side)

 - 1 — Headset port
- 2 — Charger/USB port
- 3 — Device strap eyelet
- 4 — Loudspeaker

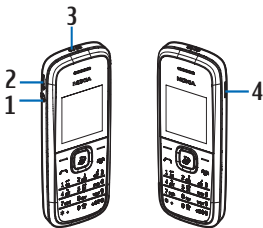

■ Standby mode and shortcuts

 - 1 — Name of the network or operator logo
- 2 — Signal strength of the wireless network
- 3 — Battery charge level
- 4 — Left selection key ([Menu](#))
- 5 — Middle selection key (⌂)
- 6 — Right selection key ([Go to](#))

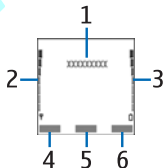

In the standby mode, the scroll key functions as follows:

Scroll up: list contacts

Scroll down: list contacts

Scroll right: view calendar

Scroll left: quickly create a text message

To customise you scroll keys, see "My shortcuts," p. 41.

■ Keyguard

The keyguard locks the keypad to prevent keys from being pressed accidentally. If the keypad is locked, it unlocks when you receive a call. After the call, the keypad is automatically locked.

To set the keypad to lock automatically after a preset time delay when the device is in the standby mode and no function of the device has been used, select **Menu** > **Settings** > **Phone** > **Automatic keyguard** > **On**, set the delay time in mm:ss format, and then select **OK**. To deactivate the feature, select **Off**.

When the keyguard is on, calls may be possible to the official emergency number programmed into your device.

To unlock the keypad, select **Unlock**, and press * within 2 seconds.

To lock the keypad, select **Menu**, and press * within 5 seconds.

■ Data transfer

To use the USB data cable to transfer data and files between your device and a compatible PC, install Nokia PC Suite software on the PC first. Connect your device to the PC with the USB data cable, and start the synchronization from the PC.

You may find PC Suite and related information on the Nokia web site at www.nokia.com/pcsuite.



Important: Do not make calls when the USB data cable is connected to the device.

3. Call functions

■ Make and answer a call

To make a call, enter the phone number, with the country code and area code if necessary, and press the call key.

To increase or decrease the volume of the earpiece or headset during the phone call, use the scroll key.

To answer an incoming call, press the call key or the middle selection key.

To reject the call without answering, press the end key.

■ Make a conference call

Conference calling (network service) allows you to talk to two other people at the same time.

1. Call the first participant.
2. Select **Options** > **New call**, and call the next participant.
3. When the call is answered, to set up the conference call, press the call key.

4. To end the conference call, select **Options** > *End all calls*, or press the end key.

■ Loudspeaker

To use your device handsfree during a call, select **Loudsp.**



Warning: Do not hold the device near your ear when the loudspeaker is in use because the volume may be extremely loud.

To deactivate the loudspeaker during a call, select **Normal**.

The loudspeaker is deactivated automatically when a call (or a call attempt) ends or when certain enhancements are connected.

4. Input methods

 
The input methods available in the phone are preset according to the market where it will be sold.

This phone supports simplified Chinese input methods.

To switch the writing language when writing text, press and hold #, and select *Writing language* and the desired language.

■ Switch between input methods

Input method indicators are shown at the top of the display:

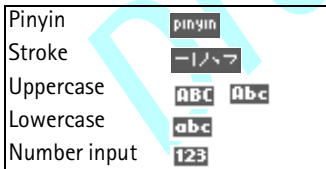

Not all the methods may be available in all circumstances. Always check the indicator to see which input method is in use.

To switch between available input methods, press # repeatedly, until the indicator of the desired input method is displayed.

■ Pinyin input method

The pinyin symbols are printed on the number keys. You only need to press a key once, regardless of the position of the symbol on the number key. The phone makes logical combinations of the pinyin symbols.

To input a character using the pinyin input method:

1. Press the number key once for each pinyin symbol you want to input (use "v" for "u").
2. Press 1 repeatedly until you get the desired tone mark.
3. If necessary, press * repeatedly to highlight the desired pinyin combination.
4. Scroll to the desired Chinese character, and select **OK**.

Ambiguous Pinyin

With this feature, your phone will tolerate ambiguity of certain pinyin pairs: c/ch, z/zh, s/sh, n/l, r/l, f/h, an/ang, in/ing, and en/eng. To select which ambiguous pinyin pairs to use, when no input symbol or prediction list is displayed, select **Options** > *Ambiguous pinyin*.

■ Stroke input method

The strokes constituting Chinese characters have been divided into five categories: horizontal, vertical, left-falling, dot, and turning. Each category corresponds to a number key from 1 to 5, respectively.

按键	1	2	3	4	5
笔画分类	一	丨	丿	丶	㇏

input the strokes.



Tip: if you are not sure which stroke to use or which category it belongs to, press **6** to substitute that stroke, then continue with the subsequent strokes. A question mark appears in the input area to represent that stroke.

2. Scroll to the desired Chinese character, and select **OK**.

■ Phrase input

You may input a phrase of no more than seven Chinese characters at a time.

1. Press the relevant number keys to enter the syllable or pinyin initial, or first strokes for the first character of the phrase.
2. Press **0** to enter a separator; or, if in the pinyin mode, press **1** repeatedly to enter the tone mark of the character you want.
3. Enter the syllable or pinyin initial, or first strokes of the next Chinese character.
4. Repeat step 2 and 3, if necessary, to enter the syllables or pinyin initials, or first strokes of all the characters in the phrase.

5. If in the pinyin mode, press * repeatedly, if necessary, to highlight the pinyin combination you want.
6. Scroll through the candidate list to the desired phrase, and select **OK**.

Not all phrases are stored in your phone. To create a phrase of no more than seven characters, when no input symbol or prediction list is displayed, select **Options** > **User phrases** > **Add**. When the database becomes full, the new phrase replaces the phrase that has not been accessed for the longest time.

Use a separator to separate pinyin strings for syllables of different characters or the strokes of different characters.

When you enter a separator, the phone predicts characters or character strings that can form a phrase with the possible candidates of the combination of pinyin or stroke strings and separators, if any, that you have entered.

■ Set predictive English input on and off

When writing text in English, to switch predictive text input on or off, press and hold #, and select **Prediction on** or **Prediction off**.

■ Traditional English input

Press a number key, 2 to 9, repeatedly until the desired character appears.

The available characters depend on the selected writing language.

If the next letter you want is located on the same key as the present one, wait until the cursor appears, or scroll right, and enter the letter.

To access the most common punctuation marks and special characters, press 1 repeatedly. To access the list of special characters, press *.

■ Predictive English input

Predictive English input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word using the keys 2 to 9. Press each key only once for one letter.
2. To confirm a word, scroll right or add a space.
 - If the word is not correct, press * repeatedly until the desired word appears, and confirm it.

- If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.
- To write compound words, enter the first part of the word, and scroll right to confirm it. Write the last part of the word, and confirm the word.

3. Start writing the next word.

■ Tips for writing text

The following functions may also be available for writing text:

- To insert a number when no input symbol is displayed, press and hold the desired number key.
- To insert a space when there is no candidate or prediction list displayed, press 0.
- To enter a special character after you have finished entering a word or character, press *.
- To repeat a character to the left of the cursor in the editing window, press and hold *.
- To end the Chinese character prediction, select **Back**, or press the relevant keys to start entering new text.

5. Menu functions

The device functions are grouped into menus. Not all menu functions or option items are described here.

In the standby mode, select **Menu** and the desired menu and submenu. To exit the current level of menu, select **Exit** or **Back**. To return to the standby mode directly, press the end key.

■ Messaging



The message services can only be used when they are supported by your network or service provider.

Message settings

To edit your message settings, select **Menu** > **Messaging** > **Message settings** > **Sending options** and the setting you wish to change:

- **Priority** – Select the priority of the message as **Normal** or **Urgent**

- *Delivery reports* — A note is sent to you confirming delivery of the message. Select *On* or *Off*.
- *Signature* — Select whether you want to attach a signature to your messages. Select *On* or *Off*.

To change other settings, select **Menu** > *Messaging* > *Message settings* > *Other settings* and the relevant setting:

- *Save incoming text messages* — Set where incoming messages are stored, select *Save to UIM then phone if mem. full*, *Phone only* or *UIM card only*
- *Message font size* — Change the font size
- *Message overwriting* — When the message memory is full, you cannot receive new messages. You can set your device to automatically replace old messages with new ones in certain folders. Select *Sent items only*, *Inbox only*, or *S. items & Inbox*. To deactivate this feature, select *Off*.
- *Save sent messages* — You can set whether messages are saved automatically to the sent items folder when sent. Select *Always save*, *Always prompt* or *Off*.

- *Queue msgs. when digital unavailable* — You can store in the outbox messages that can be sent later when digital service is available. Select *On*, *On prompt*, or *Off*.

Create message

1. Select *Menu* > *Messaging* > *Create message*, and compose a message using the keypad. To compose a picture message (network service), scroll to the message field and select *Options* > *Insert picture*. Scroll to a picture, and select *Use* or *View* > *Use*.
To go quickly to create message, in the standby mode, scroll left.
2. Enter the recipient's phone number. To retrieve a phone number from your contacts or the recently used recipients list, select *Add* > *Recently used* or *Contacts*, and the recipients. To send to a distribution list, select *Add* > *Distribution lists*, and then choose a distribution list created in your device.
3. To send the message, in the message editor screen, select *Send*.



Note: Your device may not indicate whether the message is received at the intended destination. For more details about messaging services, contact your service provider. The picture message function can be used only if it is supported by your network operator or service provider. Only compatible devices that offer picture message features can receive and display picture messages.

Voice messages

Voice mail is a network service. If you subscribe to voice mail, your service provider will activate the service and give you a voice mailbox number to save to your device. For more details about voice messages, contact your service provider. To listen to the voice messages received in your voice mail box, select **Menu** > *Messaging* > *Voice messages* > *Listen to voice messages*.

Read and reply

Messages are automatically stored in the inbox after they have been read or if you select **Exit** when a notification appears in the standby mode.

Messages that are unsent, or that failed to be sent, are automatically stored in the outbox folder.

When you receive a message, a note and the unopened letter icon (✉) are displayed.

1. To read the message, select **Show**, or, to dismiss the notification, select **Exit**.

Scroll to view the whole message, if necessary.

2. Select **Reply** > *Empty screen*, *Original text*, *Template*, or other preset reply.
3. Enter your reply, select **Send**.

Distribution lists

You can create lists of up to ten recipients. These lists can be used to quickly address a text message to a group.

To create a new distribution list, in the standby mode, select **Menu** > *Messaging* > *Distribution lists* > **New list** (if the list is empty) or **Options** > *Create new list* to create additional lists. To populate your list, select **Add new** and a contact from your contacts list.

To use, rename, or modify a distribution list, highlight the distribution list, and select **Options** > *Send message*, *Rename list*, *Clear list*, or *Delete list*.

Delete messages

If your message memory is full and you have more messages waiting,  blinks in the standby mode.

To delete a single message, select **Menu** > *Messaging*, and the folder containing the message. Select the message and **Options** > *Delete* > **Yes**. The messages that are locked cannot be deleted. To delete locked messages, unlock them first. Select the locked message, and **Options** > *Unlock*.

To delete all messages in a folder, select **Menu** > *Messaging* > *Delete messages* and one of the following:

- *All* — Select *Inbox*, *Sent items*, *Outbox*, *Drafts*, *Saved text msgs.*, or the user defined folder and **Done**. To confirm the deletion when prompted, select **Yes**.
- *All read* — Select *Inbox*, *Sent items*, *Outbox*, *Drafts*, *Saved text msgs.*, or the user defined folder and **Done**. To confirm the deletion when prompted, select **Yes**.

- *All unread* — Select *Inbox*, *Saved text msgs.*, or the user defined folder and *Done*. To confirm the deletion when prompted, select *Yes*.

■ Contacts



You can save names and phone numbers (contacts) in the phone memory and the UIM card memory.

The UIM card memory can save names with one phone number attached to them. The contacts saved in the UIM card memory are indicated by  at the right top corner of the screen.

To add a new contact, select *Menu* > *Contacts* > *Names* > *Add* (if the contact list is empty) or *Options* > *Add new contact*, and enter the name and the phone number. Names and numbers are saved in the used memory.

Search contacts

Search using the search command

1. In the standby mode, select *Menu* > *Contacts* > *Names* > *Options* > *Search*.

2. Enter the characters or letters of the name your are searching for, and scroll to the contact from the provided list.

When using the Search command, to change the input method, pressing #.

Settings

Settings allows you to determine which memory is in use, how your phone numbers are viewed, and the memory status of contacts in your phone and UIM card.

Select **Menu** > **Contacts** > **Settings** and from the following:

- **Memory in use** — to determine which memory is in use, the phone, the UIM card, or both
- **Contacts view** — to select how names and numbers are viewed in the contacts list
- **Name display** — to select whether the contact's first or last name is displayed first
- **Font size** — to set the font size
- **Memory status** — to view the amount of space available in the phone or UIM card

Groups

To arrange the names and phone numbers saved in the memory into caller groups with different ringing tones and group images, select **Menu** > *Contacts* > *Groups*.

Speed dials

Your device can dial a phone number with one keypress. You can assign phone numbers to the number keys, 2 to 9. To assign a phone number to a number key, select **Menu** > *Contacts* > *Speed dials*, and scroll to the number to assign as the shortcut.

Select **Assign**, or if a number has already been assigned to the key, select **Options** > *Change*.

Delete contacts

To delete all the contacts from the phone or UIM card memory, select **Menu** > *Contacts* > *Delete all contacts* > *From phone mem.* or *From UIM card*. Confirm with the security code.

To delete a contact, search for the desired contact, and select **Menu** > *Contacts* > *Names* > **Options** > *Delete contact*.

Move or copy contacts

To move or copy a contact between the UIM card memory and the phone memory, select **Menu** > *Contacts* > *Names*. Select the contact to move or copy and **Options** > *Move contact* or *Copy contact*.

To move or copy several contacts, select the contacts and **Options** > *Mark*. When you have marked the selected contacts, select **Options** > *Move marked* or *Copy marked*.

To move or copy all contacts between the UIM card memory and the phone memory, select **Menu** > *Contacts* > *Move contacts* or *Copy contacts*.

Business card

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, search for the contact in the contact list, and select **Details** > **Options** > *Send bus. card.*

When you receive a business card, to save the business card in the phone memory, select **Show** > **Save**. To discard the business card, select **Exit** > **Yes**.

■ Log



Log stores information of the last missed, received, or dialed calls (network service). It also adds the total duration of all calls. When the number of calls exceeds the limite, the most recent call replaces the oldest. To access the log, your device must be switched on and inside the network service area.

Select **Menu** > **Log** > *Call log, Missed calls, Received calls, or Dialed numbers*. From here you can view the date and time of a call; edit, view, or call the registered phone number; save it to contacts; or delete it from the phone memory. You can also send a text message.

To view the contacts to whom you most recently sent messages, select **Menu** > **Log** > *Message recipients*.

To delete the missed, dialled, or received calls from the phone memory, select **Menu** > *Log* > *Clear log lists* and the item you would like to clear.

To view the approximate duration of the last call, all received calls, all dialled calls, or all calls, select **Menu** > *Log* > *Call duration*. To reset the timers, select *Clear timers*, enter your security code, and select **OK**.



Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding off for billing, and so forth.

■ Settings



In this menu, you can adjust various phone settings. To reset menu settings to their default values, select **Menu** > *Settings* > *Restore factory sett.*

Profiles

Profiles define, for example, how your device reacts when you receive a call or message, or how your keypad sounds when you press a key. Ringing options, keypad tones, and

other settings for each of the available profiles can be personalised to suit your needs.

To activate or personalise a profile, or set a timed expiration for a profile, select **Menu** > *Settings* > *Profiles*, a profile and *Activate*, *Personalise* or *Timed*.

Display settings

Select **Menu** > *Settings* > *Display* and from the following:

- *Wallpaper* — to set a background image that is displayed when the device is in the standby mode
- *Standby mode font colour* — to select the colour for the texts on the display in the standby mode
- *Screen saver* — to choose a screen saver for the device display
- *Colour schemes* — to personalise the colours on the device display
- *Backlight time-out* — to control the backlight time-out of your device display

Tones settings

To set the tone of the device, select **Menu** > *Settings* > *Tones* and from the available options.

Date and time settings

Select **Menu** > *Settings* > *Date and time* and from the following:

- *Clock* — to hide or show the clock, set the time, change the time zone and format
- *Date* — to hide or show the date, set the date, change the date format and date separator
- *Auto-update of date & time* — to activate or deactivate the automatic-update of the date and time

When the automatic-update of the date and time is activated, network time will replace the time and date of your device. This feature supports alarm clock, calendar, and time stamping of the call lists.

My shortcuts

Shortcuts give you quick access to frequently use phone functions.

To allocate functions to the shortcut keys, select **Menu** > **Settings** > **My shortcuts**, the relevant function and **Right selection key** or **Navigation key**.

Call settings

Select **Menu** > **Settings** > **Call** and from the following:

- **Anykey answer** — to answer an incoming call by briefly pressing any key, except the end key, left selection key and right selection key
- **Automatic redial** — to set your device to redial a number after an unsuccessful call attempt
- **Speed dialling** — to select whether the number keys (2-9) can be used for one-touch dialling (calling a number by pressing and holding a key)
- **Calling card** — to save up to four calling cards in your device to use for long distance calls
- **Abbreviated dialling** — to save a 5 or 6-digit dialling prefix that will allow you to dial a 10-digit number by entering the last 4 or 5 digits
- **International prefix** — to make international calls using the + sign as the international prefix. The device

replaces the international access code with the + sign in a saved phone number when creating a call.

- *Call summary* — to display the time spent on a call at the end of the call
- *Show call time on display* — to select whether the call timer is displayed and running when you have a call in progress
- *Ringing tone for no caller ID* — to set a tone for incoming calls that do not have a caller ID

Phone settings

Select **Menu** > *Settings* > *Phone* and from the following:

- *Phone language* — to select the language for the display text
- *Memory status* — to view the size of memory available on your device
- *Automatic keypad* — to set the keypad to lock automatically after a preset time delays
- *DTMF tones* — to set Dual Tone Multi Frequency

- *Start-up tone* — to select whether the device sounds a start-up tone when it is switched on
- *Switch off tone* — to select whether the device sounds a switch-off tone when switched off
- *Welcome note* — to write a welcome note that briefly appears when you switch your device on
- *Flight query* — When this is *On*, the device asks whether to activate the flight profile every time the device switches on. With flight profile, all radio connections are switched off. The flight profile should be used in areas sensitive to radio emissions
- *Confirm UIM service actions* — to request notification, when your service provider makes changes to UIM-related services
- *Help text activation* — to display brief descriptions for most menu items

Enhancements settings

The enhancements settings menu is shown only if the device is or has been connected to a compatible enhancement.

Select [Menu](#) > [Settings](#) > [Enhancements](#) > [Headset](#) or [Charger](#).

Security Settings

The security settings allows you to modify various security funtions by select [Menu](#) > [Settings](#) > [Security settings](#) and the following:

- [PIN code request](#) — [On](#) to ask for pin code when switch this device on
- [Phone lock](#) — [On](#) to activate phone lock
- [Allowed number when lock active](#) — set the phone number that can be dialed when the phone is locked
- [Change lock code](#) — modify lock code
- [Call restrictions](#) — allows you to block incoming or outgoing calls
- [Security level](#) — allows you protect the phone and the memory with the security code
- [Access codes](#) — allows you to change security code and pin code
- [Voice privacy](#) — [On](#) to encrypt your voice

Network

The network menu allows you to customise the roam call ringing tone, and the way your device chooses a network in which to operate while you are within or outside of your primary or home system. Your device is set to search for the most effective network. If your device cannot find a preferred network, it selects a network automatically based on the option you choose in the network menu.

The menu options you see in your device are based on your service provider's network. The network determines which options actually appear in the device menu. For more information, check with your service provider.

Select [Menu](#) > [Settings](#) > [Network](#) > [Single band phones](#) or [Roam call ringing tone](#).

Network services

The following features are network services. To check the availability of the services, please contact your service provider.

Select [Menu](#) > [Settings](#) > [Network services](#) and from the following:

- *Call divert* – to divert incoming calls to other phone numbers
- *Call waiting* – to request the network to send a beep during a call, when another call is coming
- *Send my caller ID* – to send or block the display of your number when you make a call
- *Network feature setting* – to activate network services in your device by using feature codes received from your service provider

Phone details

You can view device-related details. In the standby mode, select **Menu** > *Settings* > *Phone details* > *User details*, *Version details*, *System details* or *Icon details*.

esurfing



You can access value added services offered by your service provider. This is network service. Select **Menu** > *esurfing* and the following:

Best Tone — to call the service number offered by your service provider

i Music — to call the service number offered by your service provider

UTK — to check UIM services offered by your service provider

■ Gallery



To manage graphics, tones, recordings, and received files, select **Menu** > *Gallery* > *Graphics*, *Tones*, *Recordings*, or *Receiv. files*.

■ Customer Service



This menu allows you to quickly access customer services provided by the service provider.

Select **Menu** > *Customer Service* and from the following:

- *Customer Hotline* — to call the service hotline number
- *Mobile e-hall* — to check available shops by sending SMS message

- [Calling Secretary](#) — to dial the voicemail of Best Tone Secretary
- [My Subscription](#) — to check the services you subscribed or unsubscribe the service you have subscribed
- [Phone Service Guide](#) — to view customer service information, such as hotline number and web address

■ **Organiser**



Your device contains features to help organise your everyday life, including an alarm clock, calendar, calculator, timer, stopwatch, Recorder, and world clock.

Alarm clock

The device sounds an alarm on the time you specified while your device is on.

To set the alarm:

1. Select [Menu](#) > [Organiser](#) > [Alarm clock](#) > [Alarm time](#)
2. Enter the time in hh:mm format and select [OK](#).

After the alarm is set,  is displayed in the standby mode.

To set the device to alert you on selected days of the week, select *Repeat alarm* > *Repetition days*.

To select the alarm tone or to set a radio station to play when the alarm expires, select *Alarm tone*.

To set a snooze time-out, select *Snooze time-out* and the time.

To stop the alarm, select *Stop*. If you select *Snooze*, the alarm stops for the selected snooze time-out and then resumes.

Calendar

To open the calendar, scroll right at standby mode or select *Menu* > *Organiser* > *Calendar*:

- To view a specific date from the calendar view, select *Options* > *Go to date*, enter the date, and press *OK*.
- To add a note to a specific date from the month view, select the date (with the desired date highlighted) and *Options* > *Make a note* > *Meeting*, *Call*, *Birthday*, *Memo*, or *Reminder*. Your device asks for further information depending on which note you select. Any date that appear in bold font, or any day underlined in

week view, contains notes, such as a meeting or reminder.

- To send a note (For example, a calendar note) from week view or month view, select **View** > **Options** > **Send note**. When you receive a note from another device, from the prompt window, select **Show** > **Save** to save the note in the phone memory . To discard the note from the prompt window, select **Exit** > **Yes**.
- To use lunar calendar, select **Options** > **Lunar calendar**. The phone language must be set as Chinese to enable this feature. You can search for holidays by select **Lunar festival**. To convert between gregorian date and lunar date in the lunar calendar, select **Options** > **Gregorian to lunar** or **Lunar to gregorian** and enter the date.
- To view more options, Select **Options** > **Settings**.

Calculator

The calculator in your device adds, subtracts, multiplies, divides, calculates the square and the square root, and converts currency values.



Note: This calculator has a limited accuracy and is designed for simple calculations.

To use calculator, select **Menu** > *Organiser* > *Calculator* and following:

1. Enter the first number in the calculation. Select # for a decimal point if necessary.
2. Select **Options** > *Add, Subtract, Multiply, Divide, Square, Square root*, or *Change sign*. Enter the second number if needed.
3. Select **Equals** to obtain the result.
4. To start a new calculation, select and hold **Clear**.

You can convert foreign currency to domestic currency, or vice versa.

To create and save an exchange rate:

1. Select **Options** > *Exchange rate* > *Foreign unit in domestic units* or *Domestic unit in foreign units*.
2. Enter the exchange rate, press the # key for a decimal point, and select **OK**.

The exchange rate remains in the memory until you replace it with another one.

To perform the currency conversion, enter the amount to be converted, and select **Options** > *In foreign* or *In domestic*.

■ Games



Your device software may include some games specially designed for this Nokia device. To display the games, in the standby mode, select **Menu** > *Games*.

Draft

6. Enhancements



Warning: Use only batteries, chargers and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Power

- Standard 860 mAh Li-Ion Battery (BL-4C)
- Travel Charger (AC-8C)

USB Cable

- USB Cable (CA-101)

Audio

- Headset (WH-101)



Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

7. Battery and charger information

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-4C 860 mAh Li-Ion battery. This device is intended for use when supplied with power from the following chargers: Nokia AC-8C. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Always switch the device off and disconnect the charger before removing the battery.

Unplug the charger from the electrical plug and the device

when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, deform, puncture, or shred cells or batteries. In the event of a

battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of such a leak, flush your skin or eyes immediately with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorised Nokia dealer, and inspect the hologram label using the following steps:

Successful completion of the steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic, original

Nokia battery, you should refrain from using it, and take it to the nearest authorised Nokia service point or dealer for assistance. Your authorised Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

Authenticate hologram



1. When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



2. When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorised Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokia.com/battery.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.

- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.



Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. Do not dispose of these products as unsorted municipal waste.

By returning the products to collection you help prevent uncontrolled waste disposal and promote the reuse of material resources. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local Nokia representative. For the product Eco-Declaration or instructions for returning your obsolete product, go to countryspecific information at www.nokia.com.

Additional safety information

■ Small children

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or

the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimeters (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimise the potential for interference.
- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the

air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles

using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

■ Emergency calls



Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the device. The device will attempt to make emergency calls over both the wireless networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you must complete the following:
 - Insert a UIM card if your device uses one.
 - Remove certain call restrictions you have activated in your device.
 - Change your profile from offline or flight profile mode to an active profile.

2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested

frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.98 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.40 W/kg and when properly worn on the body is 0.47 W/kg.

■ Battery information

This section provides information about battery charging times with the Travel Charger (AC-8C), and talk and standby times. Please note that the information in this section is subject to change. For more information, contact your service provider.



Important: Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition, temperatures to which battery is exposed, use in digital mode, and many other factors. The amount of time a device is used for calls will affect its standby time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.

Charging times

The following charging times are approximate

Charger options	AC-8C
BL-4C 860 mAh Li-Ion battery	Up to 3 hours

Talk and standby times

Function	Digital
Talk time (with standard battery)	Up to 3.25 hours
Standby time (with standard battery)	Up to 10 days

Index

A

access codes 12
alarm clock 50

B

battery information 69
 charging times 70
 talk and standby times 70
business card 38

C

calculator 52
calendar 50
call 18
 conference call 18
certification information (SAR)
68
contacts 34
 delete 36
 groups 36
 settings 35
customer service 49

D

data transfer 17
distribution lists 32

E

emergency calls 67
English input 26
esurfing 48

G

gallery 48
games 53

I

Input methodes 20

K

keyguard 16

L

log 38
loudspeaker 19

M

messaging 28
 delete 33
 settings 28
 voice 31

O

organiser 49

P

Phrase input 24
Pinyin input 21
Predictive English 26

S

settings 39
 call 42
 date and time 41
 display 40
 enhancements 45
 network 46
 network services 47
 phone 43
 phone details 47
 profiles 40
 tones 41
shortcuts 15
speed dials 36
Stroke input 22