

Transmitter VB-CA17G

User Guide:

- 1. Press the button I and button III simultaneously, the related receiving device will turn on and enter working status.**
- 2. Then press the button II, the related receiving device will turn off, and stop working.**

Battery Type: 23A 12V

NOTE:

THE MANUFACTURE IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.