

4. PRODUCT LABELLING

4.1. Labels



REFERENCE DU DOCUMENT / DOCUMENT REFERENCE				
Langue/ Language	Numéro / Number	Code Doc. / Doc. Code	Indice / Revision Index	Pages
EN	7033	110	A	8/43

4.2. Location of the label on the EUT

The label is located on mechanical part. It is stuck at the left of the top side.

The hyperX label is located on the plastic cover. There is a distance of 1 cm between the label and the cover side.

(see photo and drawing)



REFERENCE DU DOCUMENT / DOCUMENT REFERENCE				
Langue/ Language	Numéro / Number	Code Doc. / Doc. Code	Indice / Revision Index	Pages
EN	7033	110	A	9/43