



# Promi SD™

## User Manual

Version 1.7

by Bluetooth

Enabling Wireless Serial Communications

# FCC CONCERNS

## FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Exposure Statement:

The antenna(s) used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

## Do not



Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

### Revision History: User Manual of Promi SD™

Version	Changed Contents	Date
1.1	Draft version	01/02/2003
1.2	Added Technical Specifications/Troubleshooting.	06/14/2003
1.3	Amended Power Consumption data of Promi SD101/102/202	06/24/2003
1.4	Amended PromiWIN software interface	07/14/2003
1.5	Added feature of Promi SD version v3b	09/08/2003
1.6	Revised by modifying some errors in technical specifications	12/22/2003
1.7	Removed old information on model Promi SD102	07/22/2004

### Firmware/Hardware Version History

#### V3b: The latest version

Model Name	Firmware version	Hardware version	Hardware Handshaking	DTR/DSR/CDC	Release Date
Promi SD101	PSDv3b	1.5	AT command  Available  (on/off)	N/A	Sept 8, 2003
Promi SD102	PSDv3b	2.0		Available	Oct. 10, 2003
Promi SD202	PSDv3b	2.0			Sept 8, 2003

**\*Note: From Firmware version PSDv3b, customers may choose whether to use hardware flow control using PromiWIN software. If [you have PSDv3b, please use PromiWINver3.0b](#) for configuration.**

#### V3a

Model Name	Firmware version	Hardware version	Hardware Handshaking	DTR/DSR/CDC	Release Date
Promi SD101	PSDv3a	1.5	Auto Detection	N/A	Aug 11, 2003
Promi SD102	PSDv3a	2.0		Available	July 14, 2003
Promi SD202	PSDv3a	2.0			July 30, 2003

#### V2 series: Old version

Model Name	Firmware version	Hardware version	Hardware Handshaking	DTR/DSR
Promi SD101	PSDv2h	1.0	Manual	N/A
Promi SD102	PSDv2i	2.0	Auto Detection	Available for Loop-back
Promi SD202	PSDv2h	2.0	Auto Detection	Available for Loop-back

# Contents

<b>1. Product Description .....</b>	<b>5</b>
1.1    About Promi SD™ .....	5
1.2    External View .....	8
1.3    LED Indicator .....	9
1.4    Block Diagram.....	9
1.5    Power Supply .....	10
1.6    Interface- RS232 / Bluetooth.....	11
1.6.1    RS232 Interface	11
1.6.2    Bluetooth Interface	13
<b>2. Configuration .....</b>	<b>14</b>
2.1    Using Promi-WIN™.....	14
2.1.1    Let's make SD01 to be discoverable/connectable.	15
2.1.2    Let's make SD02 to search SD01 and connect to.	17
2.1.3    Let's make Auto-Connection between SD01 and SD02.	19
2.2. Using a Terminal Program.....	21
2.2.1    Connecting Promi SD™ to host.	21
2.2.2    Making the first Promi SD™/Bluetooth connection	21
2.2.3    Making Promi SD™ do INQUIRY SCAN and PAGE SCAN	23
2.2.4    Releasing the existing Bluetooth connection	24
2.2.5    Automatic connection of two Promi SD™ Units	25
2.2.6    AT command vs. Operational Status	26
<b>3. Technical Specifications .....</b>	<b>27</b>
3.1    Default Serial Settings.....	27
3.2    Power Consumption.....	27
3.3    Environmental.....	28
3.4    Serial Interface .....	28
3.5    Maximum distance between Promi SD™s .....	29
<b>4. Troubleshooting .....</b>	<b>30</b>

4.1	ON/OFF of Hardware Flow control .....	30
4.2	Enabling/Disabling of Response Signals.....	31
	-OK, CONNECT, DISCONNECT & ERROR.....	31
4.3	For DCE connection .....	32
4.4	Hardware Reset.....	32
4.5	How to get Bluetooth CF cards connected to Promi SD .....	33
<b>5.</b>	<b>Optional Antennas .....</b>	<b>35</b>
<b>6.</b>	<b>For Multi-Serial Connections .....</b>	<b>37</b>
6.1	Promi-MSP™.....	37
<b>7.</b>	<b>Legal Notice .....</b>	<b>38</b>
<b>9.</b>	<b>About this Manual .....</b>	<b>40</b>
	<b>Appendix A: Power Adaptor Specification .....</b>	<b>41</b>
	<b>Appendix B: AT command sets .....</b>	<b>44</b>

# 1. Product Description

## 1.1 About Promi SD™

---

Promi SD™ is developed for long range, easy-to-install, low-cost, wireless serial communications. Provided is point-to-point wireless connection without standard RS232 cables.

For point-to-multipoint connections, please refer to our [Promi-MSP™](#), providing all the features of RS485.

Product line

Model Name	Part No.	Spec.
Promi SD101	PSD00-10100	Class 2 / Output Power: 2.5mW (4dBm) 5V DC power supply Rechargeable Li-poly Battery, internal w/ Power Adapter w/ Setup Software & manual on CD
Promi SD202	PSD00-20200	Class 1 / Output Power: 63mW (18dBm) 5V DC power supply w/o Battery & Power Adapter w/ Setup Software & manual on CD w/ USB Power Cable & DC Power Cable (Optional: 5V Power Adapter)



Fig. 1.1.1 A CD-ROM inclusive a setup software (Promi-WIN™) and user manual

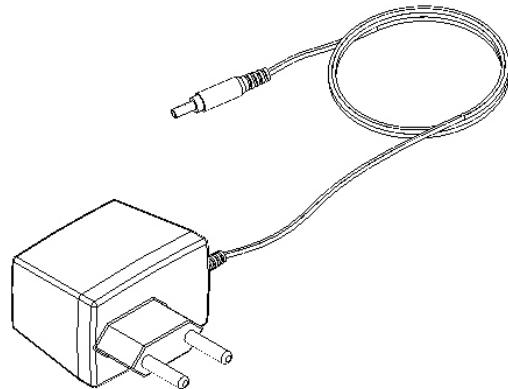


Fig. 1.1.2 Optional Power Adaptor

Part no. PSD00-00010

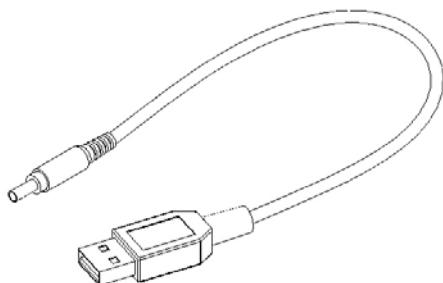


Fig. 1.1.3 USB Power Adaptor

Part no. PSD00-00020

\*You may use USB port to supply power to Promi SD™ using this USB power cable

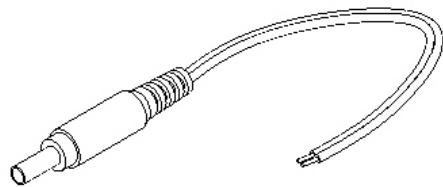


Fig. 1.1.4 DC Power Cable

Part no. PSD00-00030

\*Red colored line of DC power cable is for ‘+’

## 1.2 External View

---

Promi SD™

Dimensions: 60 x 26 x 16 (mm)

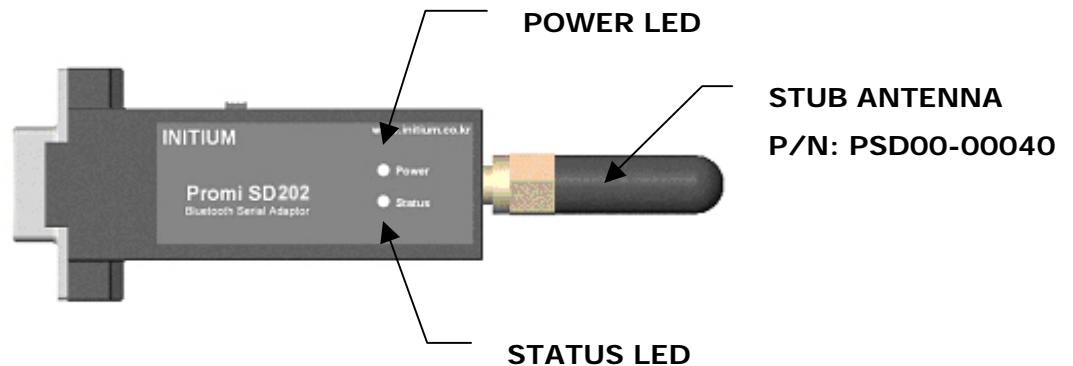


Figure 1.2.1 Promi SD™ top view

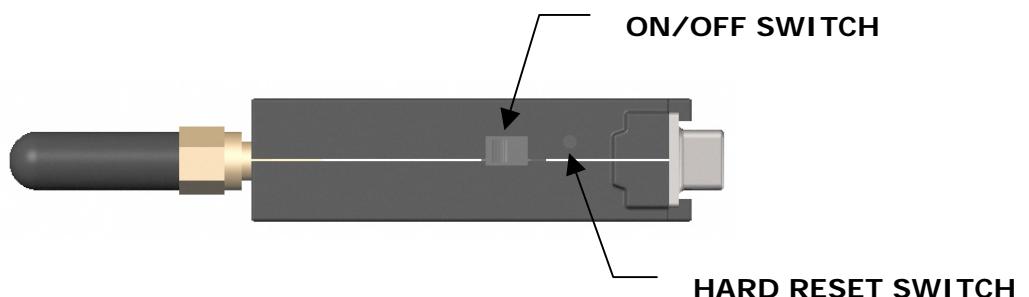


Figure 1.2.2 Promi SD™ right side view

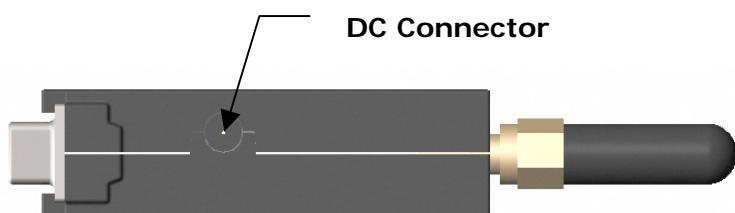


Figure 1.2.3 Promi SD™ left side view

Please refer to the [1.5 Power Supply](#) section for Promi SD™ power options

## 1.3 LED Indicator

---

The Promi SD™ STATUS LED indicates the following:

Amber STATUS LED indicates standard mode on Promi SD™ power-up.

Green STATUS LED indicates Promi SD™ is connected to another Bluetooth device

Green flashing STATUS LED every second indicates Promi SD™ INQUIRY operation

Green flashing STATUS LED every 3 seconds indicates Promi SD™ INQUIRY SCAN or PAGE SCAN operation


Amber POWER LED of Promi SD101 indicates battery is being charged.

Green POWER LED of Promi SD101 indicates battery is fully charged.

Green POWER LED of Promi SD202 indicates power is being supplied.

## 1.4 Block Diagram

---

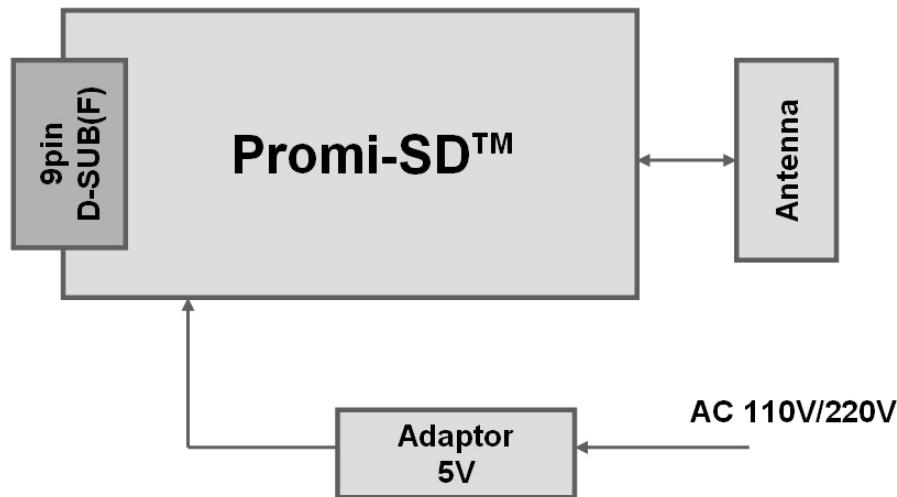

## 1.5 Power Supply

---

Power may be supplied by following ways:

- Power via a standard AC-plug DC-adapter (p/n: PSD00-00010)
- Power via USB power cable (p/n: PSD00-00020)
- Power via DC power cable (p/n: PSD00-00030)
- Power via pin 9 of D-SUB connector.

Promi SD101 can be recharged by 4 ways above.



Figure 1.5.1. DC plug polarity

Promi SD101 (Class2): 5V+/-10%, 500mA minimum

Promi SD202 (Class1): 4V~12V, 150mA minimum

Current Consumption Data at different speeds of serial communications:

Condition of Baud Rate	Current Consumption		Battery Life (Promi SD101)
	(Promi SD101)	(Promi SD202)	
9600bps	35.3 mA	40 mA	5 hrs 20 min
115200bps	40 mA	72 mA	4 hrs 30 min.

## 1.6 Interface- RS232 / Bluetooth

---

### 1.6.1 RS232 Interface

Promi SD™ has a 9-PIN DSUB (female) connector as shown below in Fig 1.7.1.

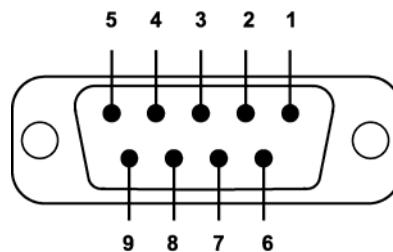



Figure 1.7.1 9-PIN DSUB (Female)

- The serial interface is RS232 DCE configured; a DTE device can be connected.
- Baud rate: 1200~115200 bps  
230400bps (for Promi SD102/202/ESD)
- Hardware flow control (RTS/CTS)

Pin	Signal	Direction
1	CD	Output
2	TxD	Output
3	RxD	Input
4	DSR	Input
5	GND	-
6	DTR	Output
7	CTS	Input
8	RTS	Output
9	Vcc	Input

Table 1.7.1. Promi SD™ 9-PIN Specification

Promi SD™ is designed to operate as DCE (Data Communications Equipment). To connect to DTE (Data Terminal Equipment), for example a PC or a laptop, a straight cable must be used as in below.

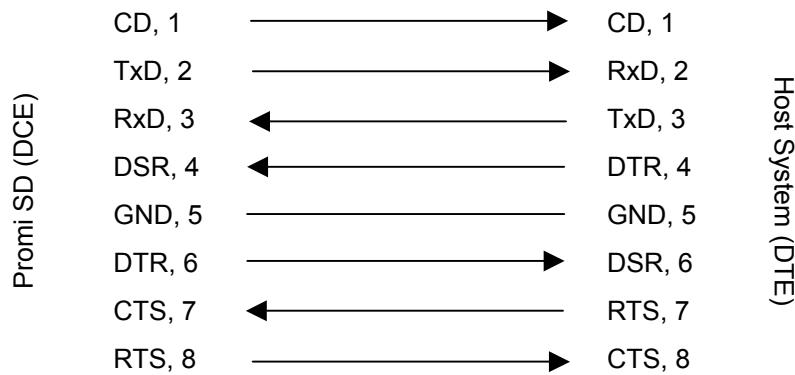

\*DTR/DSR of Promi SD™ will be functioned for either Loop-back operation or for full transfer. Users may select a function of DTR/DSR using AT command-**ATS14**. **Default value of ATS14 is 1.**

- ATS14=1<cr>: Default setting. Users may use DTR/DSR lines for communications
- ATS14=0<cr>: Users may use DTR/DSR lines for Loop-back only.
- ATS14?: To see current status of ATS14.

\*Default setting of CD line in Promi SD is to show the status of Bluetooth connection. If users want to use CD line to send CDC signal to the other side, such as for connection between Promi SD and DCE device, users need to configure ATS13.

- ATS13=0<cr>: Default setting. Users may use CDC line for checking Bluetooth connection
- ATS13=1<cr>: Users may receive CDC signal from other Promi SD. (This function will be available from future version of Promi SD for DCE devices)
- ATS13?: To see current status of ATS13.

### 1.6.2 Bluetooth Interface

Bluetooth Specification	V 1.1
Level	4 dBm (Promi SD101) 18 dBm (Promi SD202)
Range	~30m (Promi SD101) ~100m (Promi SD202)
Bluetooth protocols	RFCOMM, L2CAP, SDP
Supported Profiles	General Access Profile Serial Port Profile

## 2. Configuration

### 2.1 Using Promi-WIN™

---

With Promi SD™, Bluetooth wireless connections can be made to any Bluetooth device supporting SPP (Serial Port Profile). Especially when using the Promi SD™ as a cable replacement, take advantage of the Promi SD™ automatic connection feature. Once a pair of Promi SDs is set for this feature, they automatically connect whenever powered up. A pair of Promi SD units, within their radio range, may be used as a virtual RS-232 cable.

To make wireless connections between two Bluetooth devices, one device should be in *Discoverable* (INQUIRY SCAN) and *Connectable* (PAGE SCAN) as well. Most Bluetooth devices are set to *Discoverable* and *Connectable* in manufacture. However, to maximize internal battery life, Promi SD INQUIRY SCAN and PAGE SCAN are disabled. To make Promi SD respond to the INQUIRY and PAGE operations of other Bluetooth devices, activate INQUIRY SCAN and PAGE SCAN.

Before making the first Bluetooth connection with SD units, be prepared with a pair of SD units and also install the PromiWIN™ program on the CD enclosed in the Promi SD™ product package.

## Configuration By Promi-WIN™

---

Please prepare two of the Promi SDs to make connection.


Let's say 1st unit as '**SD01**' and 2nd unit as '**SD02**' in this guide book. Make sure that power to both **SD01** and **SD02** are ALWAYS supplied, even when you detach from your computer.

---

### 2.1.1 Let's make **SD01** to be discoverable/connectable.

In this procedure, **SD01** will become discoverable/connectable to be able to receive connection from **SD02**.

- 1-1. Attach **SD01** to your PC, and start Promi-WIN™
- 1-2. Start PromiWIN™ then you will see a pop-up window for configuration of PromiWIN™.

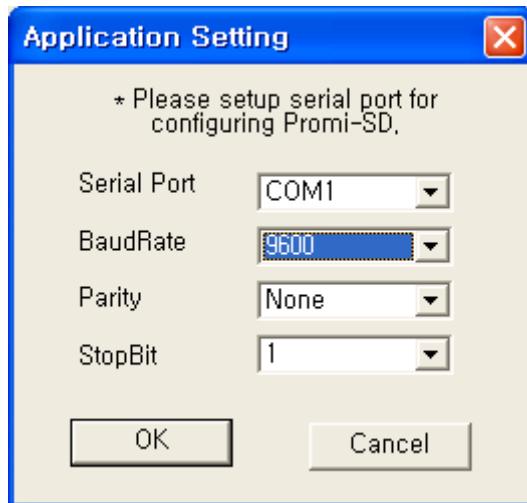


<Fig. 1.1>

- 1-3. Select the number of the Serial port where **SD01** is attached as in the Fig. 1.1 above.
- 1-4. Users need to select exactly same Baud/Parity/StopBit as real settings of attached SD01. 9600/No/OneStopBit are default initial settings of all of Promi SDs.
- 1-5. Press OK button when finished.


1-6. Open 'Promi-WIN™->Start Configuration' on the upper left menu.

Promi-WIN™ will bring the information on the attached **SD01** as in Fig. 1.2

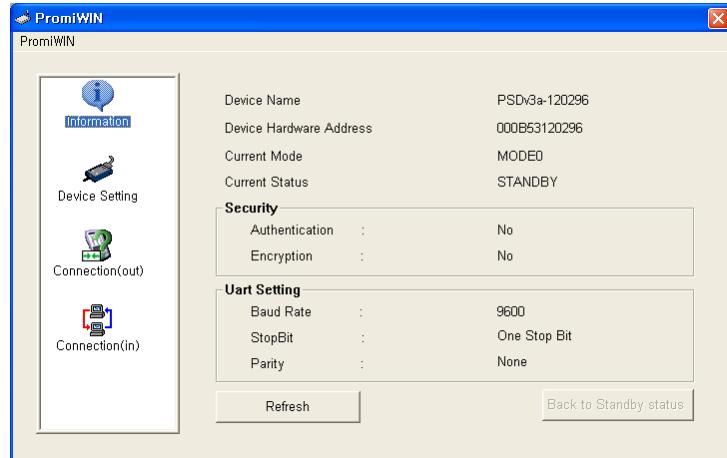


<Fig. 1.2>

1-7. Click the 'Device Setting' icon in the list control box. Users may change the Baud rate/Parity/StopBit to meet their individual needs.

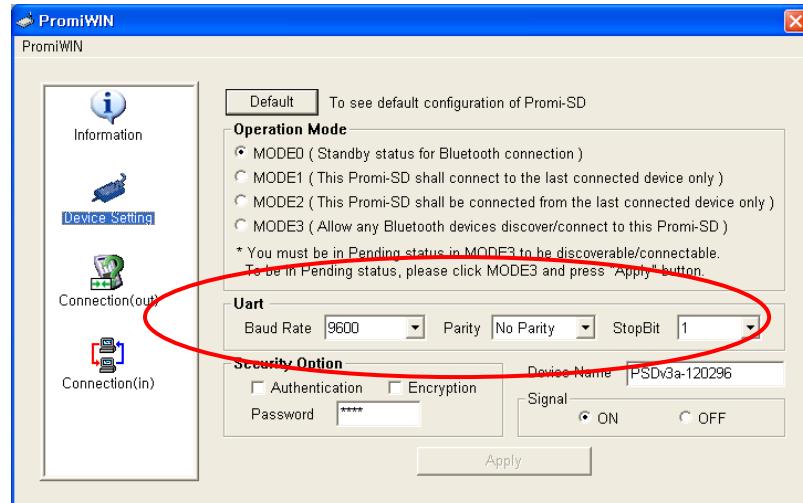

<Fig. 1.3>

1-8. Click the '**Connection(in)**' icon in list control box. Check both options and then click the START button as shown in Fig. 1.5.

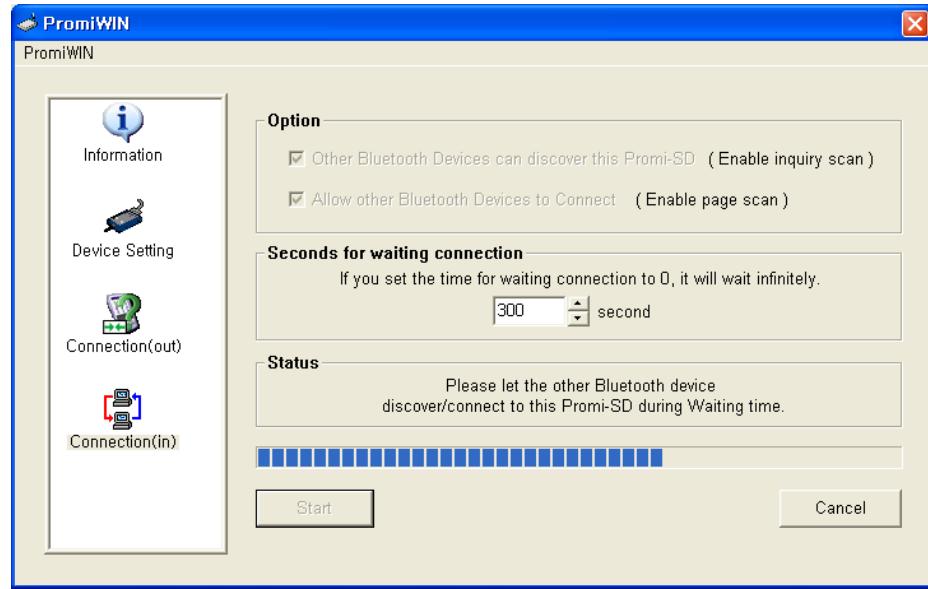


<Fig. 1.5>

- 1-9. **SD01** now became 'Discoverable/Connectable' so it can receive Bluetooth connection from **SD02**. The STATUS LED of **SD01** will blink green, twice every 3 seconds.
- 1-10. Detach **SD01** from your computer, making sure its status LED is blinking green.
- 1-11. Close Promi-WIN™.

### 2.1.2 Let's make **SD02** to search **SD01** and connect to.

- 2-1. Attach **SD02** to your PC, and start Promi-WIN™.
- 2-2. Select the number of the Serial port where **SD02**.
- 2-3. Users need to select exactly same Baud/Parity/StopBit as the setting of attached **SD02**. 9600/No/OneStopBit is default setting of all of Promi SDs.
- 2-4. Press OK button.
- 2-5. Select the 'Connection(out)' icon in the list control box and click the SEARCH button.

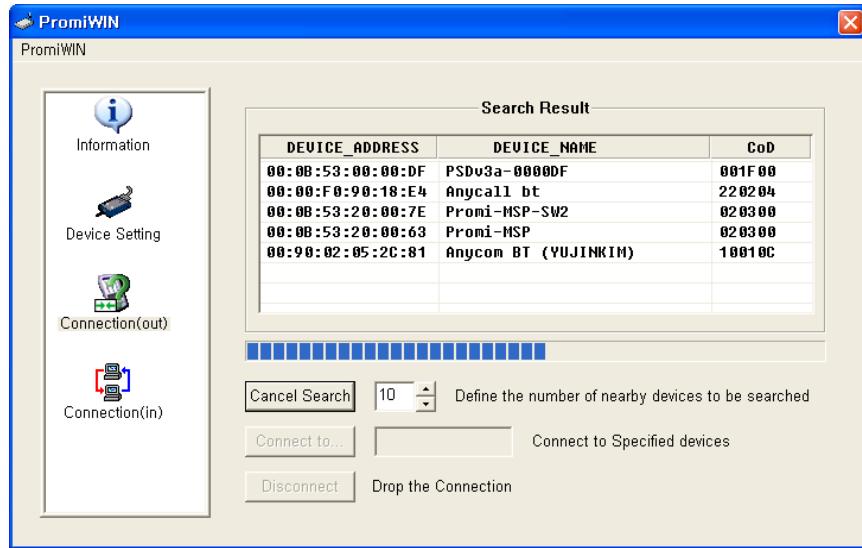


- 2-6. Search **SD01** from the searched list. Device Address of **SD01** can be found on the back side of **SD01**. If you find **SD01**, press Cancel button to finish searching. Make sure that Status LED of **SD01** is still blinking in Green color.
- 2-7. Please select **SD01** from the searched list, then press CONNECT TO button.
- 2-8. You will get Successful Connection message.



- 2-9. **Now, Status LEDs on Both SD01 and SD02 are Green**, which means they are connected.
- 2-10. Do not detach **SD02** from your computer yet, we will go to next stage for Auto-connection (Always-connection).


## 2.1.3 Let's make Auto-Connection between SD01 and SD02.

3-1. With **SD02** which is still attached to your computer, in **Connection(out)** page, press **DISCONNECT** button at the bottom to release the connection for a while. **SD02** remembers who was the last-connected device, even after Disconnected.

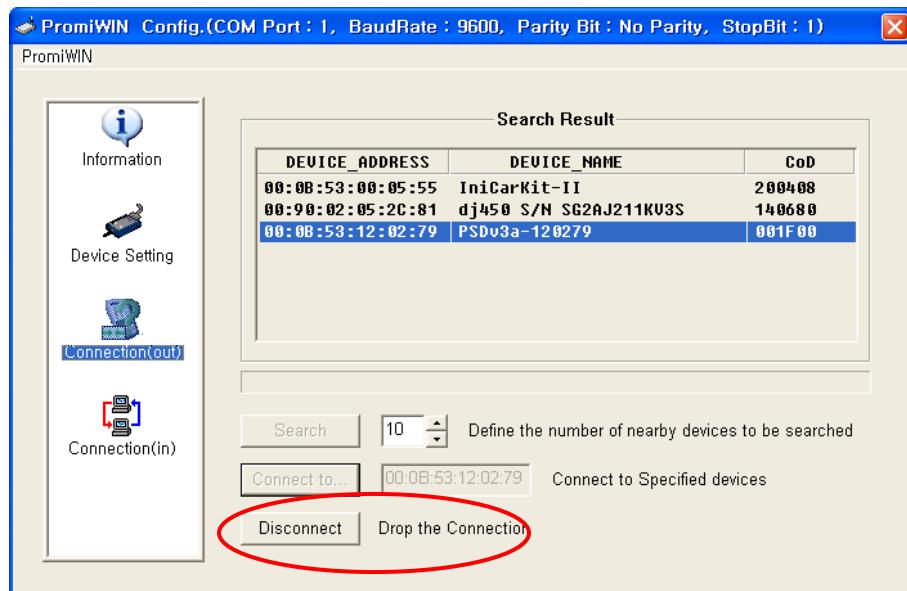


3-2. Now, **Status LEDs of SD02 becomes 'Orange'**, as well as **SD01**, as they are disconnected.

3-3. Select Device Setting icon in the list control box, and select **MODE1** in Operation Mode and apply.

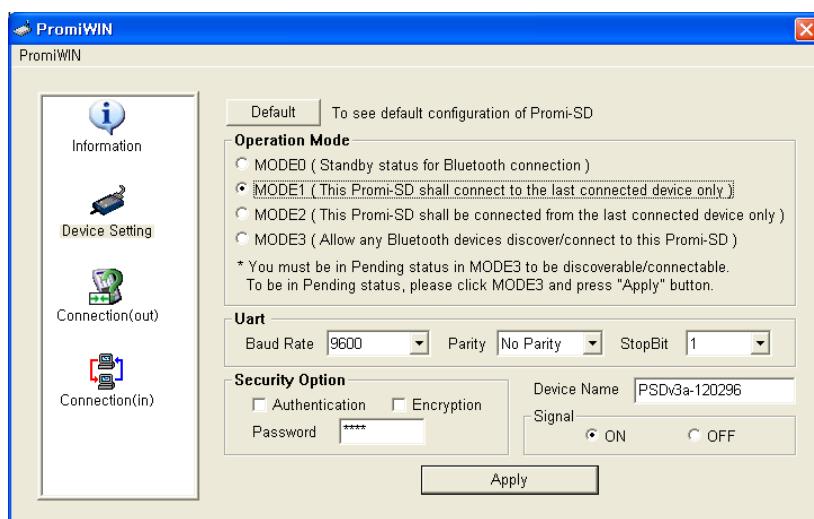

- 3-4. **Now jobs for SD02 are finished. Detach SD02 from your computer.**
- 3-5. **Attach SD01 to your computer.**
- 3-6. Restart Promi-WIN™.
- 3-7. Select Device Setting icon in the list control box, and select **MODE2** in Operation Mode and apply.

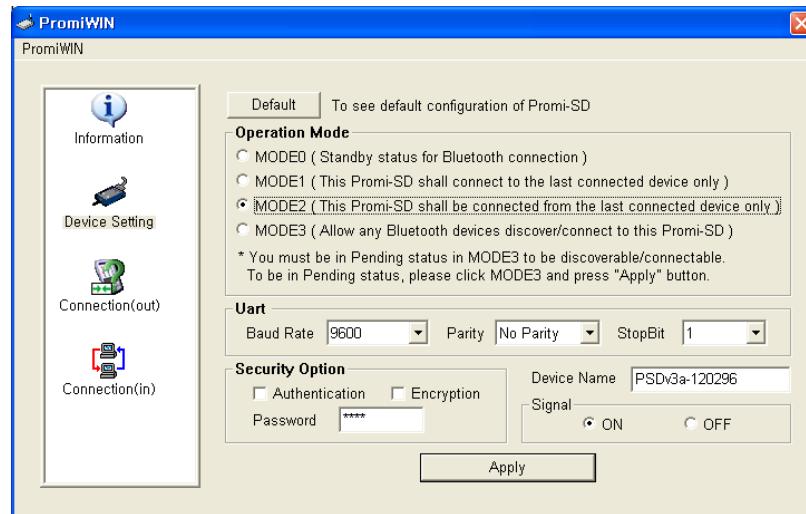

- 3-8. Now, detach **SD01** from your computer.
- 3-9. Make sure that power to Both **SD01** and **SD02** are supplied.

With two of the **SD01** and **SD02**, turn off both using Switch on the side of its body. Then, turn on again Both **SD01** and **SD02** almost at the same time.

**Now, you will see Green Status LEDs on both units.**

**SD01** and **SD02** will be connected automatically, whenever, if configuration is not changed.

## **2.2. Using a Terminal Program**

---

Promi SD™ units are easily controlled and configured via PromiWIN™. Likewise functions are accomplished via any terminal program such as HyperTerminal. AT command sets supported by Promi SD™ add sophistication to Promi SD™ control.

### **2.2.1 Connecting Promi SD™ to host.**

For SD use, follow the simple instructions below:

1. Connect an SD to a host serial port. Then, turn on the SD.
2. Check the STATUS LED color. Amber indicates standard mode.
3. Execute any terminal program and activate Local Echo.
4. Configure the host serial port to match the SD unit configuration. The SD default configuration is 9600 bps Baud, 8 Data bit, No Parity, 1 Stop bit and H/W flow control.
5. Enter 'AT' command at the prompt. An SD 'OK' reply indicates proper operation.

### **2.2.2 Making the first Promi SD™/Bluetooth connection**

As stated before, Bluetooth wireless connections can be made with any other Bluetooth device supporting Bluetooth SPP (Serial Port Profile). For Bluetooth wireless connections to an SD, first make another SD '*Discoverable*' and '*Connectable*'. In this case, refer to section 3.3 before following the instructions below.

1. First check the status of the SD by entering 'AT+BTINFO?'. The SD response is comprised of BD\_ADDR, Device Name, Operating Mode, Operating Status, Authentication and Encryption flags. To make connection to other Bluetooth devices, the operating status of the first SD should be

'STANDBY'. A 'PENDING' operating status of the first SD indicates the unit is busy with another operation. In this case, cancel the ongoing operation by entering the 'AT+BTCANCEL' command.

```
AT+BTINFO?  
000B530000A9,PSDv2g-0000A9,MODE0,STANDBY,0,0  
OK
```

2. Search other local Bluetooth devices by entering the 'AT+BTINQ?' command.

```
AT+BTINQ?  
000B53000080,PSDv2g-000080,001F00  
0004B300E205,AP2002:1 #0,020300  
OK
```

3. Check the search list. Enter 'ATD' command in the BD\_ADDR of any Bluetooth device for connection. During the connection process, the STATUS LED will flash green every second.
4. Connection is indicated by the SD returning a 'CONNECT' message and displaying a green STATUS LED.

```
ATD000B53000080  
OK  
CONNECT
```

### 2.2.3 Making Promi SD™ do INQUIRY SCAN and PAGE SCAN

Unlike many Bluetooth serial dongles, the SD has an internal, rechargeable battery. As stated before, to maximize battery life, the SD INQUIRY SCAN and PAGE SCAN is set to disabled in manufacture. Therefore, to make the SD “Discoverable” (INQUIRY SCAN) and “Connectable” (PAGE SCAN), these operations must be manually activated.

1. Check the SD status by entering a ‘AT+BTINFO?’ command.

```
AT+BTINFO?  
000B530000A9,PSDv2g-0000A9,MODE0,STANDBY,0,0
```

OK

2. Enter the ‘AT+BTSCAN’ command. The SD will start INQUIRY SCAN and PAGE SCAN operation. During the process, the SD will flash twice every 3 seconds until it is connected to another Bluetooth device.

```
AT+BTSCAN
```

OK

3. Try Bluetooth connection to the SD from the other Bluetooth device. Once connected the first SD will return the ‘CONNECT’ message and the STATUS LED will display a continuous green without flashing.

```
AT+BTSCAN
```

OK

CONNECT

## 2.2.4 Releasing the existing Bluetooth connection

Once connected successfully, the SD becomes transparent to any serial applications on hosts. Data may be transferred within the radio range of the SD. According to SD terminology, this operating status is called 'ONLINE STATUS'. In ONLINE STATUS, all AT commands are treated as characters and are ignored by the command interpreter of the SD. Therefore to escape from ONLINE STATUS enter escape string '+++'.

1. Transition from ONLINE STATUS to STANDBY STATUS by entering '+++’ string to the SD. Check the current SD status by entering the 'AT+BTINFO?' command. The SD status should display CONNECT STATUS.

```
+++  
OK  
AT+BTINFO?  
000B530000A9,PSDv2g-0000A9,MODE0,CONNECT,0,0  
OK
```

2. Release the current Bluetooth connection by entering 'ATH' command. Once disconnected successfully, the SD returns the 'DISCONNECT' message.

```
ATH  
OK  
DISCONNECT
```

## 2.2.5 Automatic connection of two Promi SD™ Units

Two SD units connect automatically when powered up. For automatic SD connection first make a Bluetooth connection between two SD units. Once connected, the SD stores the 48-bit BD\_ADDR of its counterpart. To expedite 48-bit BD\_ADDR input operation, the SD is designed to store the BD\_ADDR of its latest counterpart.

1. Set one SD to do INQUIRY SCAN and PAGE SCAN operation as directed in section 3.3.
2. Set the other SD to connect to the SD in the previous step.
3. Once connected successfully, both SD units store the BD\_ADDR of their counterpart in their internal Flash. When desired, release the connection as directed in section 3.4.
4. Set the operating mode of one SD to MODE 1 by entering an 'AT+BTMODE' command as shown below.

```
AT+BTMODE,1  
OK
```

5. Set the operating mode of the other SD to MODE 2 by entering an 'AT+BTMODE' command as show below.

```
AT+BTCANCEL  
OK  
AT+BTMODE,2  
OK
```

6. Turn both SD units power off. The SD pair will connect automatically when they are powered up again.
7. To release this paring, set them to MODE 0 by entering 'AT+BTMODE, 0'. or reset the units by pressing the RESET button.

```
AT+BTMODE,0
```

```
OK
```

### 2.2.6 AT command vs. Operational Status

The AT command sets listed above can be executed per Promi SD™ operational status. The following table shows the operational status and executable AT command sets.

AT Command	Standby	Pending	Online
<b>AT&lt;cr&gt;</b>	✓	✓	
<b>ATZ&lt;cr&gt;</b>	✓	✓	
<b>AT+BTINQ?&lt;cr&gt;</b>	✓ <sup>1)</sup>		
<b>ATD112233445566&lt;cr&gt;</b>	✓ <sup>1)</sup>		
<b>ATD&lt;cr&gt;</b>	✓ <sup>1)</sup>		
<b>AT+BTSCAN,n&lt;cr&gt;</b>	✓ <sup>1)</sup>		
<b>AT+BTSCAN,112233445566&lt;cr&gt;</b>	✓ <sup>1)</sup>		
<b>AT+BTCANCEL&lt;cr&gt;</b>		✓	
<b>+++</b>			✓
<b>ATO&lt;cr&gt;</b>	✓ <sup>2)</sup>		
<b>ATH&lt;cr&gt;</b>	✓ <sup>2)</sup>		
<b>AT+BTAUTH,Auth,Encr&lt;cr&gt;</b>	✓ <sup>3)</sup>		
<b>AT+BTMODE,n&lt;cr&gt;</b>	✓ <sup>3) 4)</sup>		
<b>AT+BTNAME="Name"&lt;cr&gt;</b>	✓ <sup>3)</sup>		
<b>AT+BTKEY="nnnn"&lt;cr&gt;</b>	✓ <sup>3)</sup>		
<b>ATS10=0 or ATS10=1</b>			

<b>AT+BTINFO?&lt;cr&gt;</b>	✓	✓
<b>AT+UARTCONFIG,b,p,s&lt;cr&gt;</b>	✓ <sup>(3) 4)</sup>	

- 1) Effective when Promi SD™ is not in connection with Bluetooth.
- 2) Effective when Promi SD™ is in connection status with Bluetooth.
- 3) Recommend to be used when Promi SD™ is not in connections status with Bluetooth
- 4) To apply new values to Promi SD™, software reset requires by ATZ command or restart Promi SD™.

**\*NOTE: Full AT commands set can be found in Appendix B.**

## 3. Technical Specifications

### 3.1 Default Serial Settings

- 9600 Baud, 8 data bits, no parity, 1 stop bit, hardware flow control

### 3.2 Power Consumption

Condition	Current Consumption		Battery Life
	(Promi SD101)	(Promi SD202)	
180mA Li-Poly Battery			
If NOT connected to Host	3.5 mA	19 mA	49 hrs 30 min.
If connected to Host	13.5 mA	24 mA	13 hrs 10 min
For data communications with Host only	26.5 mA	27 mA	6 hrs 50 min
During INQUIRY mode	62 mA	96 mA	3 hrs 20 min
For Master connection	63 mA	96 mA	3 hrs 10 min

During SCAN (page & inquiry) mode	27 mA	25 mA	6 hrs 30 min.
Park mode	13.8 mA	34 mA	12 hrs 40 min
Non-Park mode	17.8 mA	40 mA	10 hrs

### 3.3 Environmental

---

**Model No.: Promi SD101**

Recommended operating conditions:-10'C~70'C

Humidity: 90% Non-condensing

**Model No.: Promi SD202**

Recommended operating conditions: -20'C~70'C

Humidity: 90% Non-condensing

### 3.4 Serial Interface

---

**Model No.: Promi SD101**

RS232, Female DSUB-9, 1200~115200 baud,

CTS/RTS flow control or no flow control

**Model No.: Promi SD202**

RS232, Female DSUB-9, 1200~230400 baud,

Automatic Detection Feature of Hardware flow control

DTR/DSR for loop-back & communications  
CDC to check Bluetooth connection

### 3.5 Maximum distance between Promi SD™s

---

In open space, maximum distances between two Promi SD units were tested using different types of Optional Antennas. Users may extend wireless link distance up to 1.2Km via Promi SD202 with Patch Antennas for both sides.

Model no.	Antennas for two Promi SD units	Max. Distance
Promi SD101	Default Antenna - Default Antenna	30 meters
	Default Antenna - Dipole Antenna	50 meters
	Dipole Antenna - Dipole Antenna	80 meters
	Patch Antenna - Dipole Antenna	150 meters
	Patch Antenna - Patch Antenna	300 meters
Promi SD202	Default Antenna - Default Antenna	120 meters
	Default Antenna - Dipole Antenna	150 meters
	Dipole Antenna - Dipole Antenna	200 meters
	Patch Antenna - Dipole Antenna	400 meters
	Patch Antenna - Patch Antenna	1,200 meters

For information on optional Antennas, refer to Chapter 5 Optional Antennas.

## 4. Troubleshooting


### 4.1 ON/OFF of Hardware Flow control

---

Promi SD101 of version v2g & v2h are designed to use CTS/RTS for handshaking. For equipment which is not using Hardware flow control for serial communications, Promi SD101's firmware should be set to turn OFF hardware flow control (CTS/RTS). Customers may indicate preferences when ordering or turn off the handshaking by bridging CTS and RTS (no. 7 and no. 8 lines) using a Gender changer.

Version v3a has automatic detection feature of hardware flow control, but in certain environment such as with PC, this function may not operate well.

**\*Starting from Promi SD version v3b, customers may choose the usage of hardware flow control using PromiWIN software.**

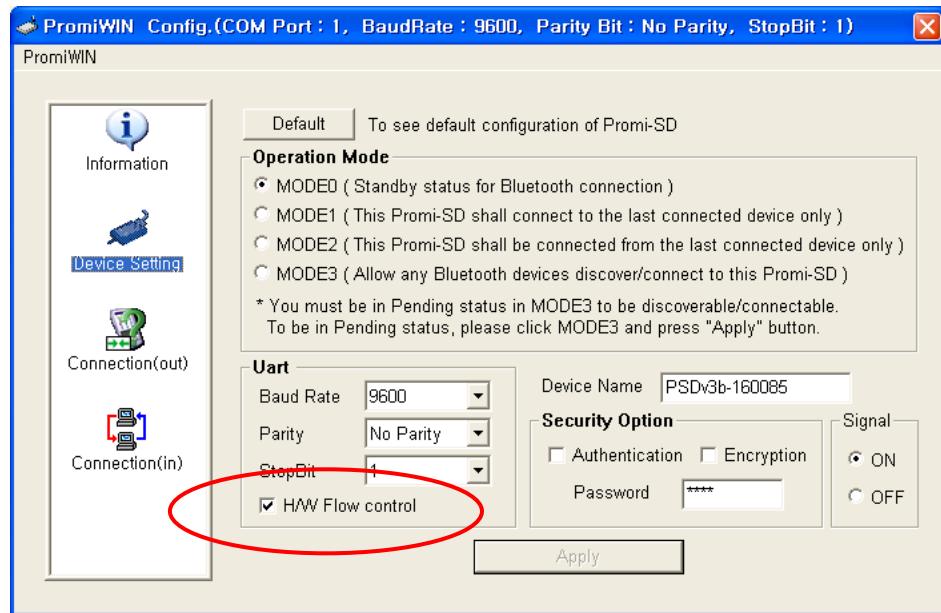

If checked, Promi SD will use hardware flow control. If you do not want to use the function, please uncheck and press Apply button.


## 4.2 Enabling/Disabling of Response Signals -OK, CONNECT, DISCONNECT & ERROR

---

Promi SD™ will respond to users on the current status, success & failure of connections, and error mode. Both PromiWIN™ and Terminal Programs will receive related response signals from Promi SD™.

In some cases, various equipment may regard these four response signals incorrectly and react inappropriately. To avoid these possible errors, users may disable the response signals via PromiWIN™ or AT commands at Terminal.

- 1) By Promi-WIN™, check OFF at Signal pane at Device Setting panel to disable 4 response signals from Promi SD™.

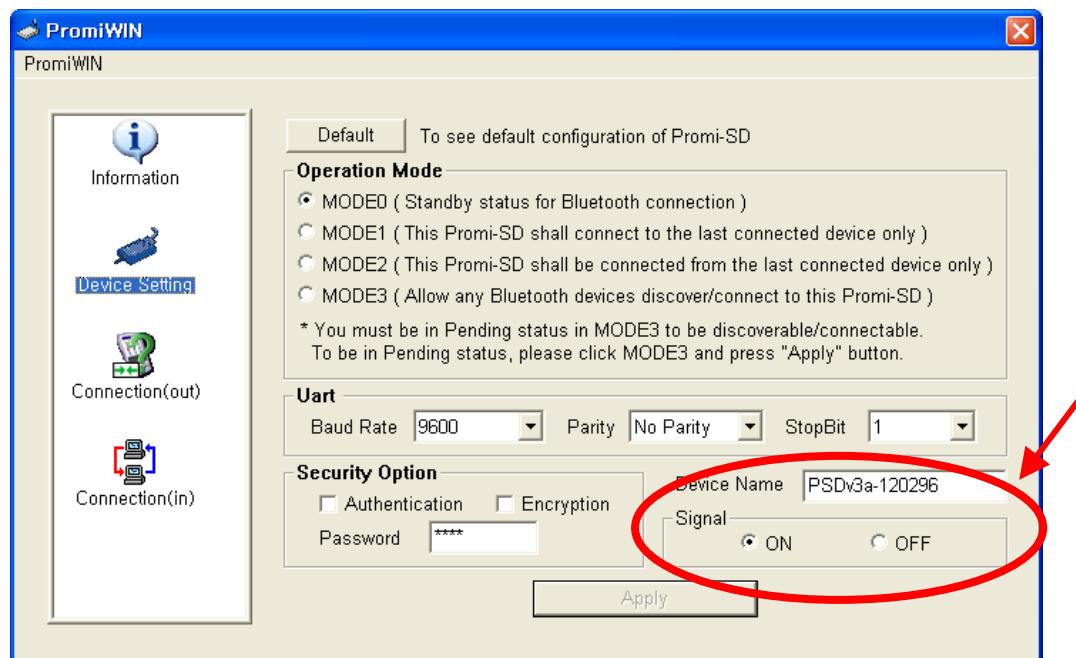

2) By AT commands at your Terminal program.

ATS10=1 : Enabling/ON 4 signals

ATS10=0 : Disabling/OFF 4 signals

ATS10? : To see current status

### 4.3 For DCE connection

Promi SD™ is twisted Rx/Tx-ready for direct DTE connection. For connection to DCE equipment such as modem etc., customers need to use a gender changer which twisted Tx/Rx, CTS/RTS, DTR/DSR for right operation.

For more information, please contact [support@initium.co.kr](mailto:support@initium.co.kr)

### 4.4 Hardware Reset

For Hardware reset, press the button on the right side of the Promi SD™ unit with a narrow tool such as a ball-point pen.




## 4.5 How to get Bluetooth CF cards connected to Promi SD

If you are using Bluetooth CF cards or USB adaptors from other manufacturers, please use PromiWIN™ software of latest version, which will be more familiar to consumers.

PromiWIN™ can be downloaded from our website at:

<http://www.initium.co.kr/english/download.html>


- 1) In PromiWIN version3, start and go to the Device Setting menu.
- 2) Select **MODE3** to allow any Bluetooth device can discover and connect to this Promi SD.

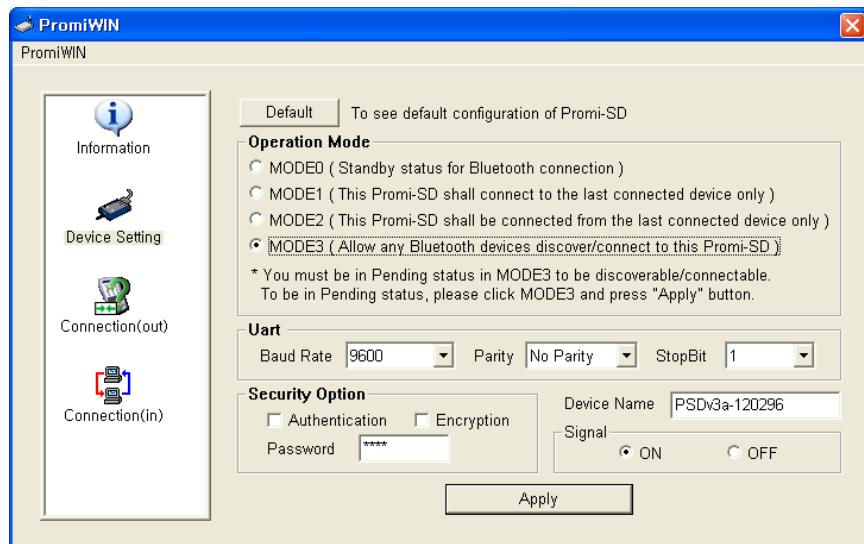

- 3) Press "Apply" button.
- 4) You will get Configuration has been applied message.



5) If you confirm, the page will show the current device **information** as in below.

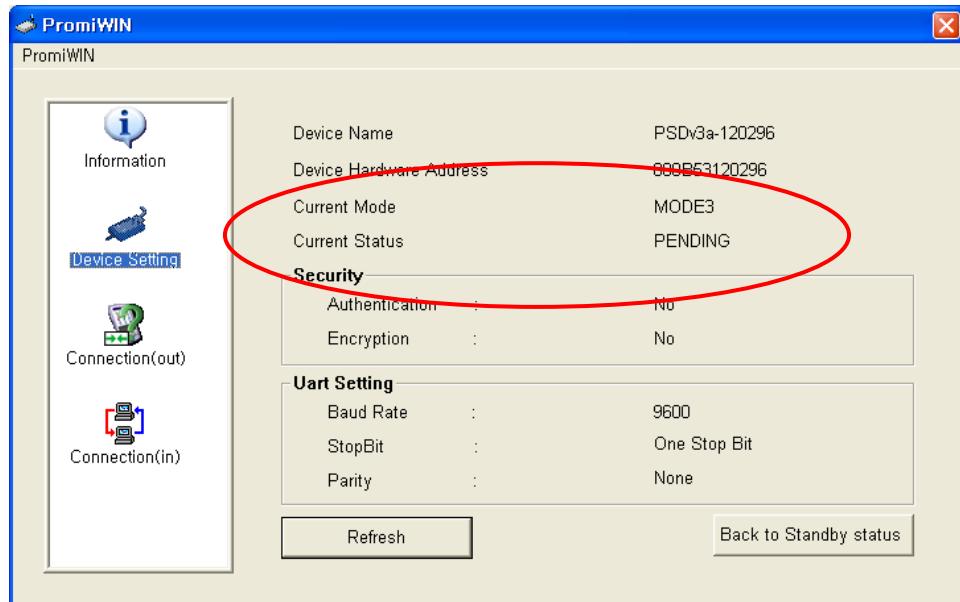

6) Please CONFIRM that now the Promi SD is in MODE3 and PENDING status as in Red circle above. If the Promi SD is in STANBY status, connection WILL NOT be made.


7) At this stage, Promi SD™ is DISCOVERABLE & CONNECTABLE MODE  
[Get your Bluetooth CF cards or USB adaptors connected to this Promi SD™ now.](#) Then you finish to connect your Bluetooth devices to Promi SD. Open your COM port of Serial Communication program to verify communication status.

## 5. Optional Antennas

(1) Dipole Antenna

	<p>Part No.: PSD00-00050 2dBi Connector: SMA Size: 10cm</p>
---	---

(2) Patch Antenna (w/ RF extension cable & wall-attachable nails)

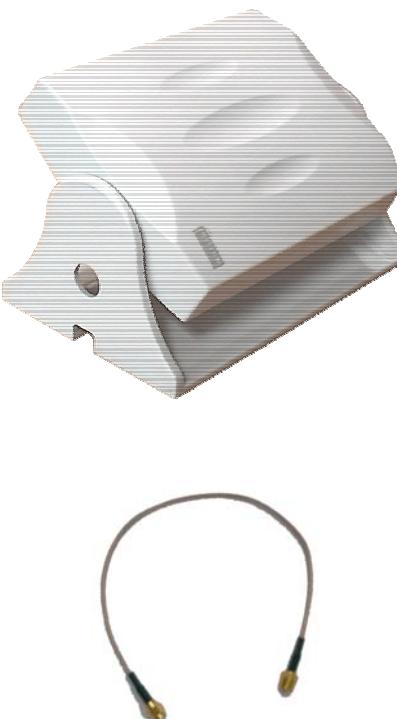	<p>Part No.: PSD00-00060 8.5dBi Including a 30cm RF extension cable</p>
	<p>Longer RF extension cable Part No.: PSD00-00061: 1m length For 3m and longer length, please ask it to our <a href="mailto:support@initium.co.kr">support@initium.co.kr</a> SMA connector</p>

	Part No. : PSD00-00062 Anchor Support *This will be needed if there is a need to attach the Patch antenna to the wall.
---	--

\*Distance Data between Promi SD™s when Optional Antennas are used:

Model no.	Antennas for two Promi SD units	Max. Distance
Promi SD101	Default Antenna - Default Antenna	30 meters
	Default Antenna - Dipole Antenna	50 meters
	Dipole Antenna - Dipole Antenna	80 meters
	Patch Antenna - Dipole Antenna	150 meters
	Patch Antenna - Patch Antenna	300 meters
Promi SD202	Default Antenna - Default Antenna	120 meters
	Default Antenna - Dipole Antenna	150 meters
	Dipole Antenna - Dipole Antenna	200 meters
	Patch Antenna - Dipole Antenna	400 meters
	Patch Antenna - Patch Antenna	1,200 meters

## 6. For Multi-Serial Connections

### 6.1 Promi-MSP™

---

For multiple serial connections, we recommend Promi-MSP™. Promi-MSP™ has 7 default Bluetooth connections and can be expanded to up to 14 connections.

More information on Promi-MSP™ can be found in its User Manual at [www.initium.co.kr](http://www.initium.co.kr)



<Fig. 7.1.1 Promi-MSP™>

## 7. Legal Notice

### About this Document

This document provides introductory instructions on how to set up and manage Promi SD™ within your networking environment. Should you require more information, please refer to Initium website at <http://www.initium.co.kr>.

### Trademark Acknowledgements

The Bluetooth trademarks are owned by their proprietor and used by Initium Co., Ltd. under license. Promi™ is a registered trademark of INITIUM.

### Copyright Information

The unauthorized copying of materials that are covered by copyright and other international proprietary or intellectual property rights is prohibited in most countries. Initium Co., Ltd. recommends that the users of this equipment seek the necessary authorizations for copying material. The instructions for use in the manual shall not be considered as an inducement to make illicit duplications of material. Any duplication will be made at user's own risk.

### Maintenance and Support

Every care has been taken in the preparation of this manual; if you detect any inaccuracies or omissions, please inform us by contacting Intium's technical support. Initium Co., Ltd. cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without any prior notice.

### Limited Warranty

Promi SD™

Initium Co., Ltd. warrants the original owner that the products delivered will be free from defects in material and workmanship for 90 days following the date of purchase. This warranty does not cover any damage attributable to erroneous installation of the product.

INITIUM'S TOTAL LIABILITY IS LIMITED TO THE PRICE/LICENSE FEE ACTUALLY

PAID BY PURCHASER TO INITIUM FOR THE PRODUCT WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED.

IN NO EVENT SHALL INITIUM OR ITS LICENSOR AND SUPPLIERS BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL LOSSES OR DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF DATA OR DATA BEING RENDERED INACCURATE, LOSSES SUSTAINED BY YOU OR THIRD PARTIES SUCH AS LOSS OF BUSINESS, LOSS OF PROFITS, BUSINESS INTERRUPTION OR PERSONAL INJURY, EVEN IF INITIUM OR ITS LICENSORS OR SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty does not cover replacement of products damaged by abuse, accident, misuse, neglect, alteration, repair, disaster, improper installation or improper testing.

## **FCC NOTICE**

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.  
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITION:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,  
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE  
OPERATION.

### **CAUTION :**

- 1)Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 2)This appliance and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

## 9. About this Manual

This manual is available in a printable PDF version on-line and on the CD enclosed in the Promi SD™ product package.

For additional support related to Promi SD™ and this document, contact INITIUM via:

---

**INITIUM Co., Ltd.**

**#716, Kumgang-Hitech Valley, 133 Sangdaewon, Jungwon, Sungnam,  
Kyunggi, 462-120, Korea**

**Tel.: +82-31-777-5703**

**Fax: +82-31-777-5704**

**OR**

**[www.initium.co.kr](http://www.initium.co.kr)**

**OR**

---

**Email: [info@initium.co.kr](mailto:info@initium.co.kr)**

## **Appendix A: Power Adaptor Specification**

**Manufacturer: Anam Instruments Inc.**

**Emerald B/D 7F, 1042, Hoga-dong, Dongan-gu, Anyang, Korea**

**Tel.: +82-31-347-6140**

**Fax: +82-31-347-7019**

**[www.anamic.co.kr](http://www.anamic.co.kr)**

### **Manufacturer's Model Name: AP1015**

#### **1. STANDARD FEATURES**

- 1.1. 10WATT AC/DC SWITCHING MODE ADAPTOR
- 1.2. WALL MOUNT DESIGN
- 1.3. 100~240Vac UNIVERSAL VOLTAGE INPUT
- 1.4. 5V 2A REGULATED OUTPUT
- 1.5. SHORT CIRCUIT PROTECTION
- 1.6. DESIGN TO MEET CLASS B LIMIT OF EN55022 AND FCC PART 15
- 1.7. VACUUM IMPREGNATED TRANSFORMER
- 1.8. 100% BURN-IN PROCESS

#### **2. ELECTRICAL CHARACTERISTICS**

##### **2.1 INPUT CHARACTERISTICS**

###### **2.1.1. AC INPUT VOLTAGE**

- 2.1.1.1. Nominal input voltage : 110 / 220 Vac
- 2.1.1.2. Rated input voltage range : 100 to 240 Vac
- 2.1.1.3. Operating input voltage range : 90 to 264 Vac

###### **2.1.2. AC INPUT FREQUENCY**

- 2.1.2.1. Nominal input frequency : 50 / 60 Hz
- 2.1.2.2. Rated input frequency : 47 - 63 Hz
- 2.1.3. AC INPUT CURRENT : MAX 0.3 A (RMS) at 90 Vac

##### **2.2 OUTPUT CHARACTERISTICS**

###### **2.2.1. DC OUTPUT**

OUTPUT VOLTAGE	LOAD			OUTPUT RANGE	OUTPUT RIPPLE
	MIN	MAX	PEAK		
5 VDC	0.2 A	2 A	-	4.75 ~ 5.25 V	50 mVpp

- 2.2.1.1. Specified output regulation limit includes line regulation and load regulation.
- 2.2.1.2. Continuous output shall not exceed 10 W.
- 2.2.1.3. Ripple and noise is measured at the end of output connector with 20MHz oscilloscope bandwidth.
- 2.2.1.4. A 22uF Electrolytic capacitor and a 0.22uF Ceramic capacitor should be connected in parallel with output load..
- 2.2.2. EFFICENCY : Minimum 70 % at 2A load condition.
- 2.2.3. SHORT CIRCUIT PROTECTION : CYCLING
- 2.2.4. NO LOAD OPERATION : NO DAMAGE
- 2.2.5. DI-ELECTRIC WITHSTANDING VOLTAGE
  - 2.2.5.1. Primary to Secondary : 3 KV, 1 Second
  - 2.2.5.2. Cut-Off Current : 10mA
- 2.2.6. EMI
  - 2.2.6.1. Shall be designed to meet CLASS B Limit of FCC part 15.
  - 2.2.6.2. Shall be designed to meet EN 55022
- 2.2.7. SAFETY
  - 2.2.7.1. UL & cUL : UL1950
  - 2.2.7.2. TUV - CE : EN60950
  - 2.2.7.3. ek-mark : K60950
  - 2.2.7.4. CB / QAS / CCIB / PSE
- 2.3. GENERAL CHARACTERISTICS
  - 2.3.1. OPERATING TEMPERATURE RANGE : 0'C to 35'C at 100% Load condition.  
0'C to 40'C at 90% Load condition.
  - 2.3.2. OPERATING HUMIDITY : 15 to 80% RELATIVE HUMIDITY
  - 2.3.3. STORAGE TEMPERATURE : -20'C to 85'C
  - 2.3.4. STORAGE HUMIDITY : 90 % RELATIVE
  - 2.3.5. BURN-IN PROCESS
    - 2.3.5.1. All unit shall be subjected to burn-in process of mass production.
    - 2.3.5.2. TEMPERATURE : 30 +/- 5'C
    - 2.3.5.3. LOAD CONDITION : 2 A

2.3.5.4. INPUT VOLTAGE : 110 / 220 Vac

### 3. MECHANICAL CHARACTERISTICS

#### 3.1. DIMENSIONAL SIZE

LENGTH : 66 mm

WIDTH : 48.5 mm

HIGHT : 35 mm

#### 3.2. OUTPUT CABLE

CABLE LENGTH : 1850 +/- 50

## Appendix B: AT command sets

---

The following AT command sets are supported by Promi<sup>TM</sup>-SD. Here <cr> represents carriage return of ASCII Code (0x0D) and <lf> represents line feed of ASCII Code (0x0A).

### AT<cr>

*Function :* Check the presence of your SD.

*Response :* <cr><lf>OK<cr><lf> or  
<cr><lf>ERROR<cr><lf>

*Description :* In standard mode, you can check whether your SD is connected to a host correctly by using this AT command.

### ATZ<cr>

*Function :* Do soft-reset

*Response :* <cr><lf>OK<cr><lf> or  
<cr><lf>ERROR<cr><lf>

*Description :* You can do soft-reset by using this AT command. When your SD is already connected to the other device, it disconnects the connected device. You can halt the current ongoing operation by using this command.

### AT&F<cr>

*Function :* Restore the default configuration of your SD.

*Response :* <cr><lf>OK<cr><lf> or  
<cr><lf>ERROR<cr><lf>

*Description :* You can restore the default configuration of your SD by executing this AT command.

### AT+BTINQ?<cr>

*Function :* Search (INQUIRY) other Bluetooth devices nearby.

*Response :* <cr><lf>BD\_ADDR, Device Name , Class of Device<cr><lf>  
<cr><lf>BD\_ADDR, Device Name , Class of Device<cr><lf>  
...  
<cr><lf>BD\_ADDR, Device Name , Class of Device<cr><lf>  
<cr><lf>OK<cr><lf>

*Description :* This command is used to inquiry other Bluetooth devices nearby. The INQUIRY process is carried out during the predefined time duration (30

seconds). The maximum number of INQUIRY result is 10.

#### **ATD BD\_ADDR <cr>**

*Function :* Make connection with the given BD\_ADDR.

*Response :* <cr><lf>OK<cr><lf>  
<cr><lf>CONNECT<cr><lf>  
or  
<cr><lf>OK<cr><lf>  
<cr><lf>ERROR<cr><lf>.

*Description :* After getting BD\_ADDRs, you can make connection to other Bluetooth device by using this AT command. Once you input this command, SD tries to connect the Bluetooth device with the given BD\_ADDR for 5 minutes. The connection failure happens when a Bluetooth device with the given BD\_ADDR is not in PAGE SCAN mode or is already connected to other Bluetooth device.

#### **ATD<cr>**

*Function :* Make connection with a Bluetooth device connected most recently.

*Response :* <cr><lf>OK<cr><lf>  
<cr><lf>CONNECT<cr><lf>  
or  
<cr><lf>OK<cr><lf>  
<cr><lf>ERROR<cr><lf>.

*Description :* If you execute this AT command, your SD make connection with a Bluetooth device which your SD connect most recently. To make this AT command work successfully, there should be at least one successful connection to the other Bluetooth you want to connect.

#### **AT+BTSCAN <cr>**

*Function :* Make your SD do INQUIRY SCAN and PAGE SCAN alternately.

*Response :* <cr><lf>OK<cr><lf>  
<cr><lf>CONNECT<cr><lf>

*Description :* You can force your SD to do INQUIRY SCAN or PAGE SCAN alternately with this AT command. Your SD does INQUIRY SCAN and PAGE SCAN until it has a connection from other Bluetooth device. Once connected, your SD returns 'CONNECT' message. You can use 'AT+BTCANCEL' to cancel this operation. This AT command has the same effect of 'AT+BTSCAN,3,0'.

### **AT+BTSCAN, n, to<cr>**

*Function :* You can force your SD to do INQUIRY SCAN or PAGE SCAN.

*Response :* <cr><lf>OK<cr><lf>

<cr><lf>CONNECT<cr><lf>

or

<cr><lf>OK<cr><lf>

<cr><lf>ERROR<cr><lf>

*Description :* To make SD to be *Discoverable* and *Connectable* from other Bluetooth devices, you should set its INQUIRY SCAN and PAGE SCAN. To make your SD do INQUIRY SCAN only, you should set n as 1. To make your SD do PAGE SCAN only, you should set n as 2. When n is set to 3, your SD does INQUIRY SCAN and PAGE SCAN alternately. Here, 'to' indicates the time out interval of INQUIRY SCAN and PAGE SCAN operations. If you set 'to' to '0', your SD does INQUIRY SCAN and PAGE SCAN until it has a connection from other Bluetooth device. Your SD returns 'CONNECT' message when it is connected from other Bluetooth device within the given time out intervals. Otherwise, it returns 'ERROR' message.

### **AT+BTSCAN, BD\_ADDR, to<cr>**

*Function :* Wait Bluetooth connection from a device with given BD\_ADDR.

*Response :* <cr><lf>OK<cr><lf>

<cr><lf>CONNECT<cr><lf>

or

<cr><lf>OK<cr><lf>

<cr><lf>ERROR<cr><lf>

*Description :* Once you enter this AT command, your SD does PAGE SCAN. However, it waits a connection from a Bluetooth device with the given BD\_ADDR. This process lasts during 'to' time interval. Especially when 'to' has value of '0', your SD waits connection infinitely.

### **AT+BTCANCEL<cr>**

*Function :* Cancel currently ongoing operation of your SD.

*Response :* <cr><lf>OK <cr><lf>

*Description :* This AT command works only when your SD is busy in doing 'AT+BTSCAN', 'ATD' or 'AT+BTINQ?'. Once canceled successfully, your SD will become

STANBY STATUS'.

+++

*Function :* Make transition from ONLINE STATUS to STANDBY STATUS.  
*Response :* <cr><lf>OK <cr><lf>.  
*Description :* If you input '+++’ string to your SD in ONLINE STATUS, your SD goes into STANBY STATUS. Once SD enters into STANDBY STATUS, you can use any AT command sets supported by Promi™-SD.

**ATO<cr>**

*Function :* Make transition from STANBY STATUS to ONLINE STATUS.  
*Response :* None  
*Description :* This AT command is the counter operation of '+++’. You can change the operating status to ONLINE STATUS again by using this command. In ONLINE STATUS, the data can be transferred between two hosts. The existence of your SD becomes transparent to any host applications which use serial ports.

**ATH<cr>**

*Function :* Release the current Bluetooth connection.  
*Response :* <cr><lf>OK<cr><lf>  
<cr><lf>DISCONNECT <cr><lf>.  
*Description :* This AT command can be used for disconnecting the existing Bluetooth connection.

**AT+BTSEC, Authentication, Encryption <cr>**

*Function :* Set Bluetooth authentication or encryption features selectively.  
*Response :* <cr><lf>OK<cr><lf>.  
*Description :* By using this AT command, you can set authentication or encryption feature of your SD during Bluetooth connection process. Once you set authentication or encryption features, your SD stores its status. To release authentication or encryption features you set, you should use this AT commands or do soft-reset. To enable authentication or encryption, set authentication or encryption parameter as 1. Otherwise set either of them as 0.

**AT+BTLAST?<cr>**

*Function :* Return BD\_ADDR of the Bluetooth device to your host which your SD is connected most recently.

*Response :* <cr><lf>BD\_ADDR<cr><lf>  
<cr><lf>OK<cr><lf>

*Description :* You can use this AT command if you need to refer the BD\_ADDR of most recently connected Bluetooth device.

**AT+BTMODE, n<cr>**

*Function :* Set the operating mode of your SD.

*Response :* <cr><lf>OK<cr><lf>

*Description :* Your SD has 4 different operating mode. According to the current operating mode you set, your SD behavior differently.

n=0 : This means your SD is in MODE 0. MODE 0 is the default configuration.

n=1 : In MODE 1, your SD will try to make connection to most recently connected Bluetooth device.

n=2 : In MODE 2, your SD will wait connection from most recently connected Bluetooth device.

n=3 : IN MODE 3, your SD does INQUIRY SCAN and PAGE SCAN alternately.

**AT+BTNAME="FriendlyName"<cr>**

*Function :* Assign user friendly device name to your SD.

*Response :* <cr><lf>OK<cr><lf>

*Description :* You can assign your SD user friendly name by using this AT command. With the assigned name, you can distinguish your SD easily from other Bluetooth devices. Up to 32 characters are permitted as user friendly name.

**AT+BTKEY="nnnn"<cr>**

*Function :* Change the passkey.

*Response :* <cr><lf>OK<cr><lf>

*Description :* When the authentication is enabled in your SD, you should assign passkey. Two Bluetooth devices which are to be connected should have the same passkey. The default passkey of your SD is '1234'. You can assign maximum 16 alphanumeric characters as a passkey.

### **AT+BTINFO?<cr>**

*Function :* Return the internal status of your SD.

*Response :* <cr><lf>BD\_ADDR,Name,Mode,Status,Auth,Encryp<cr><lf>  
<cr><lf>OK<cr><lf>

*Description :* When you enter this AT commands at a host terminal, your SD returns its device information and status to a host. It encompasses BD\_ADDR, user friendly name, operating mode, operating status and authentication/encryption status. Especially when the operating status is PENDING, it means your SD is busy in processing 'AT+BTINQ?', 'ATD' or 'AT\_BTSCAN'. When Authentication or Encryption feature is activated, the corresponding parameter has value of '1'.

### **AT+BTLPM,n<cr>**

*Function :* Set Bluetooth Low power consumption mode.

*Response :* <cr><lf>OK<cr><lf>

*Description :* To minimize power consumption, your SD supports Bluetooth PARK mode. When you set n as 1, your SD uses PARK mode. Using PARK mode might cause extra data transmission delay in some cases.

### **AT+BTSD?<cr>**

*Function :* Return the list of secured devices.

*Response :* <cr><lf>BD\_ADDR<cr><lf>  
<cr><lf>BD\_ADDR<cr><lf>  
...  
<cr><lf>BD\_ADDR<cr><lf>  
<cr><lf>OK<cr><lf>

*Description :* Your SD can pair up to 5 Bluetooth devices. Upon receiving this AT command, your SD returns all the BD\_ADDRS of the previously paired Bluetooth devices.

### **AT+BTCSD<cr>**

*Function :* Delete the info of all the paired devices stored in your SD.

*Response :* <cr><lf>OK<cr><lf>

*Description :* This AT command just deletes the info of paired devices stored on SD's Flash memory. To delete the same info resides on SD's RAM, you have to do software reset or hardware reset.

### **AT+BTFP,n<cr>**

*Function :* Force your SD to generate passkey automatically.

*Response :* <cr><lf>OK<cr><lf>

*Description :* Once paired, your SD uses the stored link key. By using this AT command, you can make Bluetooth connection with a new link key. When n is set to 1, your SD newly generates a link key during connection process.

### **AT+UARTCONFIG, baudrate, parity, stopbit,handshaking<cr>**

*Function :* Configure the serial port of your SD.

*Response :* <cr><lf>OK<cr><lf>

*Description :* By using this AT command, you can reconfigure the serial port of your SD. You can set baudrate, parity, stopbit . To make this command result active, you should do soft-reset or turn off/on your SD. The following values are permitted for each parameter.

- Baudrate = 1200, 2400, 9600, 19200, 38400, 57600 or 115200.  
230400 (only for Promi SD102/202/ESD)
- Parity = N (No parity), E (Even parity) or O (Odd parity).
- Stopbit = 1 or 2.
- Handshaking = 1 or 0  
(If '1', hardware handshaking will be used. If '0', handshaking function of Promi SD will be turned off)

## **Full AT commands set**

No.	Command	Response	Comments
1)	AT<cr>	<cr><lf>OK<cr><lf>	
2)	ATZ<cr>	<cr><lf>OK<cr><lf>	Drops all connections, disable Inquiry and Page scans. Reset the bluetooth module.
3)	AT&F<cr>	<cr><lf>OK<cr><lf>	Reset to factory default state
4)	AT+BTINQ?<cr>	<cr><lf>112233445 5,FriendlyName,Co D<cr><lf> <cr><lf>112233445 5,FriendlyName,Co D<cr><lf> <cr><lf>112233445 5,FriendlyName,Co D<cr><lf> <cr><lf>OK<cr><lf>	Inquiry nearby devices. The OK at the end means end of inquiry.
5)	ATD112233445566<cr>	<cr><lf>OK<cr><lf> <cr><lf>CONNECT <cr><lf> or <cr><lf>ERROR<cr><lf>	Connect to the specified device. If you want to enable Authentication and Encryption, just set variable as 1.
6)	ATD<cr>	<cr><lf>OK<cr><lf> <cr><lf>CONNECT <cr><lf> or <cr><lf>ERROR<cr><lf>	Connect to the device that last successfully connected.
7)	AT+BTSCAN<cr>	<cr><lf>OK<cr><lf>	Enable inquiry and page scans with timeout of infinity.
8)	AT+BTSCAN,n,to<cr>	<cr><lf>OK<cr><lf>	Enable inquiry or Page scans. If n=1, disable page and enable inquiry. If n=2, enable page and disable inquiry. If n=3, enable both page and inquiry. Scan will be performed during <to>

			seconds.
9)	AT+BTSCAN112233445566,to<cr>	<cr><lf>OK<cr><lf>	Will scan of only specified device.
10)	AT+BTCANCEL<cr>	<cr><lf>OK<cr><lf>	cancel the current pending operation when the device is inquiring, paging or scanning mode.
11)	+++	<cr><lf>OK<cr><lf>	Drop from online mode to command mode.
12)	ATO<cr>	<cr><lf>OK<cr><lf>	Return to online mode if currently being connected.
13)	ATH<cr>	<cr><lf>OK<cr><lf>	Drop the connection.
14)	AT+BTSEC,Authentication,Encryption<cr>	<cr><lf>OK<cr><lf>	Same as AT+BTAUTH
15)	AT+BTLAST?<cr>	<cr><lf>OK<cr><lf>	Query the bd-address of last connected device
16)	AT+BTMODE,n<cr>	<cr><lf>OK<cr><lf>	Sets the mode of device. If n=0, device operates at Standard mode which accepts all AT commands supported. If n=1, device operates at Master mode which try to connect peer device. If n=2, device operates at Slave mode which waiting for connection. If n=3, device operates at always connectable mode.
17)	AT+BTNAME="FriendlyName"<cr>	<cr><lf>OK<cr><lf>	Sets the friendly name of this unit.
18)	AT+BTKEY="nnnn"<cr>	<cr><lf>OK<cr><lf>	Sets the Passkey of this unit. Up to 16 characters.
19)	AT+BTINFO?<cr>	<cr><lf>11223344566,FriendlyName,Mode,State,Authentication,Encryption<cr><lf><cr><lf>OK<cr><lf>	Retrieve local device information including BD address, Friendly name, mode of device, internal operation state and status of authentication and encryption features.

20)	AT+BTLP, n<cr>	<cr><lf>OK<cr><lf>	Enable or disable the low power mode of dongle. n = 1 or 0
21)	AT&V<cr>	<cr><lf>S0: m0; S1: m1; ... Sn: mn<cr><lf><cr><lf>OK<cr><lf>	View all the values of internal S-registers
22)	AT+BTSD?<cr>	<cr><lf>bdaddr of secured device 1<cr><lf><cr><lf>bdaddr of secured device 1<cr><lf><cr><lf>OK<cr><lf>	Query the bd-addresses of secured devices
23)	AT+BTCSD<cr>	<cr><lf>OK<cr><lf>	Clear the list of secured devices
24)	AT+BTFP, n<cr>	<cr><lf>OK<cr><lf>	Force paring when connecting as master
25)	AT+UARTCONFIG,baudrate,parity,st opbit,handshaking<cr>	<cr><lf>OK<cr><lf>	Sets the configuration of UART interface. Possible values are; baudrate =1200,4800,9600,19200,38400,5760 0 or 115200. parity = N(o parity), E(ven parity) or O(dd parity). stop = 1 or 2. Handshaking = 1 or 0 (If '1', hardware handshaking will be used. If '0', handshaking function of Promi SD will be turned off)
26)	AT+SETESC,nn<cr>	<cr><lf>OK<cr><lf>	Sets the escape sequence character. 'nn' should be ASCII code (Decimal), and printable character. Default escape character is '+++'
27)	AT+PINQ?<cr>	<cr><lf>OK<cr><lf>	For Periodic Inquiry. Promi SD will try to inquire nearby Bluetooth devices periodically and deliver the inquired

			result to Host. To lease periodic inquiry function, AT+BTCANCEL. Shows S-register values
28)	AT&V		

**S-register command: If you change the values of S-register, please reboot Promi SD.**

ATSnn=mm<cr>: To change ATSnn register value

ATSnn?: To check current ATSnn register value.

29)	ATS3	Stream UART policy (Default 0)  If set as '0', throughput is the priority, if set as '1', Latency is the priority.
30)	ATS4	Enable Remote name query (default 1)  Get BDaddress and device name during Inquiry.  If set as '0', only get BD address. Inquiry time can be faster.
31)	ATS10	Default 1  ATS10=1<cr> :  Enabling all of the response messages- OK, CONNECT, DISCONNECT, and ERROR.   ATS10=0<cr> :  Disabling all of the response messages- OK, CONNECT, DISCONNECT, and ERROR.  ATS10?<cr> : To see current status of ATS10
32)	ATS11	Enable Escape (default 1)  Escape sequence character enable change from on-line mode to command mode. If set to '0', transmission speed can be improved.
33)	ATS12	Clear UART buffer at Disconnect. (default 0)  If set to '1', when disconnected, data stored in Promi SD will be removed.
34)	ATS13	Enable CDC accept (default 0)  If set to '0', Promi SD will use CDC signal to let Host know Bluetooth connection status.

		If set to '1', Promi SD will accept CDC signal from other peer (DCE-configured) Bluetooth device.
35)	ATS14	<p>ATS14=1&lt;cr&gt;: Users may use DTR/DSR lines for communications</p> <p>ATS14=0&lt;cr&gt;: Users may use DTR/DSR lines for Loop-back only.</p> <p>Default value of ATS14 is 0.</p>
36)	ATS15	<p>ATS15=1&lt;cr&gt;:</p> <p>If users set ATS15=1, users may use DTR signal to disconnect Bluetooth connection.</p> <p>If ATS15=1, and DTR signal is changed from state ON to OFF, your connection will be disconnected.</p> <p>ATS15=0&lt;cr&gt;: If ATS15=0, users may NOT use DTR signal to disconnect the Bluetooth connection.</p>
37)	ATS24	Maximum number of inquiry result (default 10)
38)	ATS29	Error Code for last occurred error. Users can not change this value
39)	ATS31	Page Timeout (default 300) Unit: second.
40)	ATS33	Inquiry Timeout (default 30) Unit: second.
41)	ATS46	BD address of last connected device