



## Buzz Wild Racer

### Buzz Wild Racer (French)

© Disney/Pixar  
The Disney Store, Inc., Glendale, California 91203-2671  
[www.disneystore.com](http://www.disneystore.com)

Car Requires 4 AA batteries (not included).  
Pour faire fonctionner cette voiture 4 piles AA (non fournies).  
Remote Controller requires 2 AA batteries (not included).  
La télécommande manuelle nécessite 2 piles AA (non fournies).

Battery Installations Instructions:-  
Sooner or later the batteries that originally came with the Vehicle and Remote Controller are going to run down and require replacing. To replace the batteries, carefully read the following instructions:

#### VEHICLE:-

- 1) Unscrew the battery cover (under the vehicle) using a Phillips screwdriver and remove the discharged batteries.
- 2) Insert 4 new "AA" size batteries. Carefully note the direction of the (+) and (-) symbols on the batteries.
- 3) Close the Battery Cover and tighten screw.

#### REMOTE CONTROL :-

- 1) Slide open the Battery Cover (Rear End) and remove the discharged batteries.
- 2) Insert 2 new "AA" size batteries. Carefully note the direction of the (+) and (-) symbols on the batteries.
- 3) Close the Battery Cover.



#### VEHICLE:- (FRENCH)

- 1) Unscrew the battery cover (under the vehicle) using a Phillips screwdriver and remove the discharged batteries.
- 2) Insert 4 new "AA" size batteries. Carefully note the direction of the (+) and (-) symbols on the batteries.
- 3) Close the Battery Cover and tighten screw.

#### REMOTE CONTROL :- (FRENCH)

- 1) Slide open the Battery Cover (Rear End) and remove the discharged batteries.
- 2) Insert 2 new "AA" size batteries. Carefully note the direction of the (+) and (-) symbols on the batteries.
- 3) Close the Battery Cover.

**Disney store**

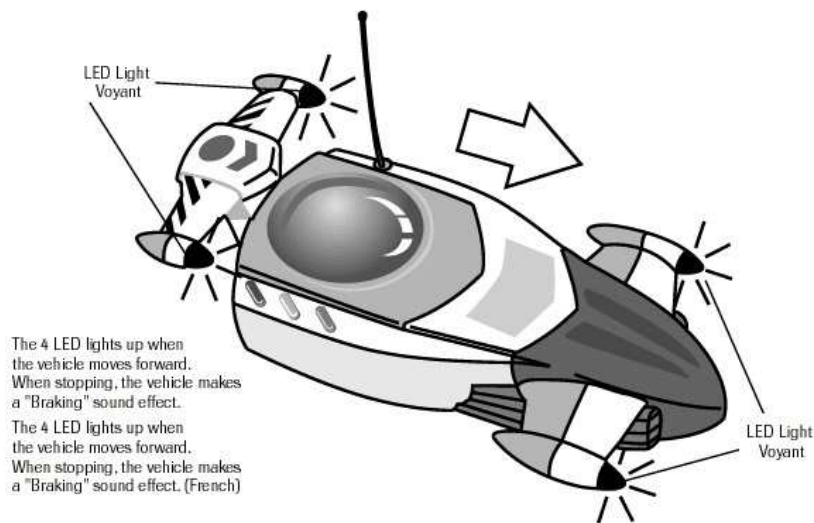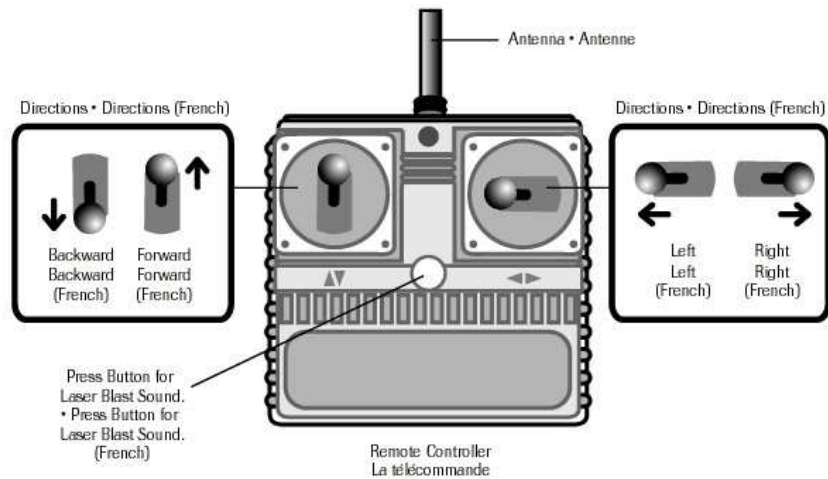

**WARNING:-** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.