

STRATEGIC SPORTS LTD

LIU HUANG DISTRICT , CHASHANTOWN , DONGGUAN CITY , GUANGDONG PROVINCE

Bluetooth manual

KB91S

TEL: +86-769-8865 8666

FAX: +86-769-88658674

■ BASIC FUNCTIONS

Pairing-up with a mobile telephone.

When the device is switched off, press down and keep the «power»  pushed in for about ten seconds.

Keep it pressed down until the red and blue lights flash without stopping.

The device is searching for a Bluetooth device from your Bluetooth mobile telephone.

Once fitted, the device name «**kb91s**» is displayed on the mobile phone. Choose the connection with the device «**kb91s**». **default access code: 0000**. The light must always flash red and blue for reconnection. If not, re-start it. (Please note: in order to connect the «**kb91s**» device to a suitable Bluetooth device, carry out the same procedure).

If the connection has not established at the end of 3 minutes, pairing-up will be automatically cancelled.

Start-up

Press down and keep the «power»  pushed until the led flashes. [On certain mobile phone models, pairing-up is required for each connection. On others, the connection will automatically be established if you have previously connected the device to the mobile phone.]

Switching off

Press down and keep the «power»  pushed until all the leds go out.

■ CHARGING THE APPLIANCE

The appliance battery is completely charged in 3 hours and allows music to be listened to for 2 hours at maximum volume or the telephone to be used for 3 hours.

To maintain the battery in optimal functioning conditions, it is recommended to:

- recharge your appliance within 2 weeks if it discharges completely.

- recharge your appliance every 3 months if it is completely charged.

■ MUSIC FUNCTIONS

Connect the appliance and play music.

If the appliance is fitted, press on the *"play/pause"*  once the appliance is turned on.

The connection will automatically be established.

You can use the play, pause, volume + and -, previous, next as normal.

Changing the direction of play.

To go back or forward one track, quickly press *"previous"*  or *"next"* .

■ CONNECTING THE APPLIANCE TO A MOBILE PHONE

Connecting to a mobile phone.

If the appliance is fitted, press down *"talk"* , and the connection will automatically be established.

If it is not fitted, please follow the pairing-up procedure first.

On some phones reconnection is made from the telephone and not from the Bluetooth headset
=> read the instructions for your telephone.

Answering a call

When a call is incoming, press the *"talk"*  down quickly.

Rejecting a call

When a call is incoming, double click on the button *"talk"*  to reject the call.

EN - QUICK START GUIDE FOR YOUR WIRELESS HEADSET.

Hanging up

Press down on the “talk”  during your conversation or when you want to terminate the call.

Last number redial

Double click on the button “talk”  to redial the last telephone number.

Silent mode

During a call, simultaneously press on the buttons  and  to put the call into silent mode, in this case, the person will not hear your voice. Simultaneously press on the buttons  and  to come back to the call.

Call waiting (if the option is available and activated on the mobile phone)

During a call, there is a ringing noise:

- press the button “talk”  to answer a new incoming call and put the first one on waiting
- press the button “talk”  to select the desired call
- keep the button pressed “talk”  hanging up

Volume +

In play mode, press button “vol+”  until you hear the volume go up.

Volume -

In play mode, press button “vol-”  until you hear the volume go down.

LED LIT UP

Pairing-up mode

When the red light and blue light flash quickly.

Conversation and play music mode

The blue led will flash every 4 seconds. (If the battery is low, the red light will light up in place of the blue.).

Connected device mode

The blue led will blink 2 to 4 times in about 3 seconds. (If the battery is low, the red light will light up in place of the blue.).

Inactive mode

The blue led will flash every 3 seconds. (If the battery is low, the red light will light up in place of the blue.).

For maximal protection, users should carefully read the advice given in this notice before each use. Keep this notice for further reference during the whole service life of your helmet. A helmet reduces the seriousness of head injuries, but it does not avoid the risk of injuries, including fatal injury.

1 When choosing your size in the shop, make sure that the helmet is perfectly adapted to the person's head size. The helmet should not move, while remaining comfortable.

2 Adjust the chinstrap so that the helmet does not move on the person's head, taking care however that it is not uncomfortable under the chin. The person should not be able to remove the helmet without undoing the chinstrap. **WARNING:** a helmet that moves on the head can have serious consequences in the case of shock.

Because the sample size is too small, so Label write here!

FCC ID: QOK-KB91S

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.