



PREPRRRTION


Twist dome cover counterclockwise to open. Slide pedestal/attached car off of controller.

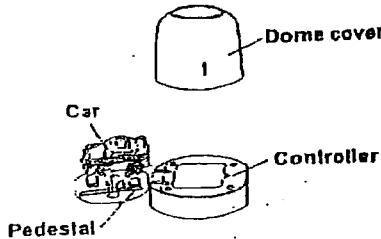

Use a Philips tip screwdriver to detach the car from the pedestal.

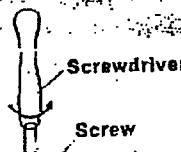


Place three "AA" alkaline batteries into controller and replace battery cover.

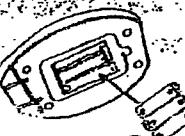


OPERRTING INSTRUCTIONS

To charge the car, open cover at the bottom of controller. Align metal nodes on controller with the nodes on the car and place car onto controller. The charging indicator light will come on when car is charging. After 2 full charge (approx 45 seconds) the light will turn off. Take car off of controller.

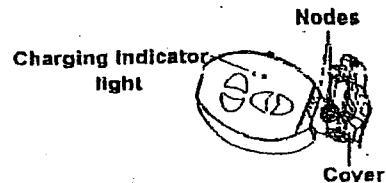

The controller is full function. To make the car go, Push the forward or reverse button. The car will turn left and right when the left or right button is pushed. The car will only turn left and right when it is moving in forward or reverse direction. The operating light will come on when car is in use. When indicator light becomes faint, it is time to replace batteries. While operating controller, make sure antenna is fully extended.

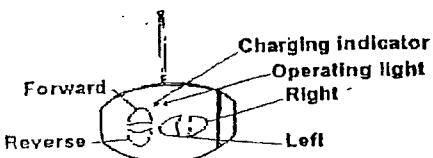

Occasionally the car will sway left or right while moving in forward or reverse direction. To correct this, adjust the directional guide on the bottom of car as shown in the illustration below. This may need to be done a few times while operating car.



For best results operate on a smooth dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines or CB's. The manufacturer is not responsible for radio or

TV interference caused by unauthorized modification of this equipment. Such modifications could void the user's authority to operate the equipment.

If played outdoors, there might be malfunctions dust and rubbish. Dust and clean it. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the device.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Aerin: SILVIA HU
FM: 14.10.12