

Test positions for body:


According to the antenna position, the Body SAR is tested at the following 7 test positions all with the distance =5mm between the EUT and the phantom bottom :



Picture 1-1: Toward Phantom (5mm)



Picture 1-2: Toward Ground (5mm)

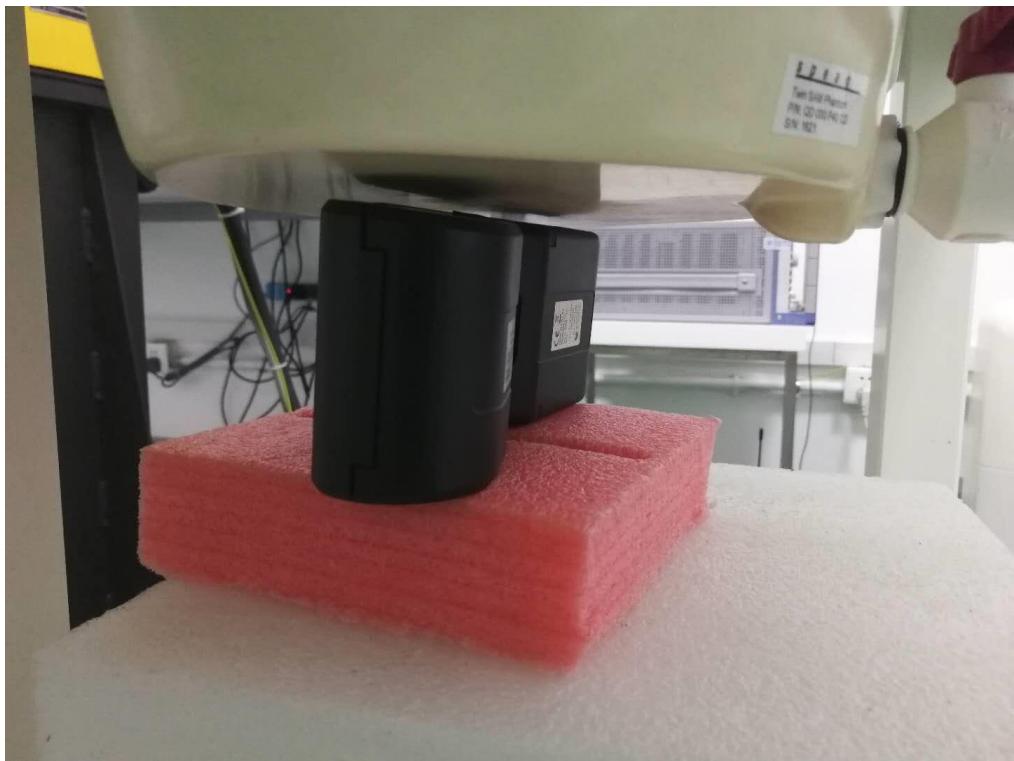

Picture 1-3: Toward Left (5mm)



Picture 1-4: Toward Right (5mm)



Picture 1-5: Toward Top (5mm)



Picture 1-6: Toward Bottom (5mm)



Picture 1-7: Toward Tilt (5mm)

Test positions for body:


According to the antenna position, the limb SAR is tested at the following 7 test positions all with the distance =0mm between the EUT and the phantom bottom :



Picture 1-8: Toward Phantom (0mm)




Picture 1-9: Toward Ground (0mm)

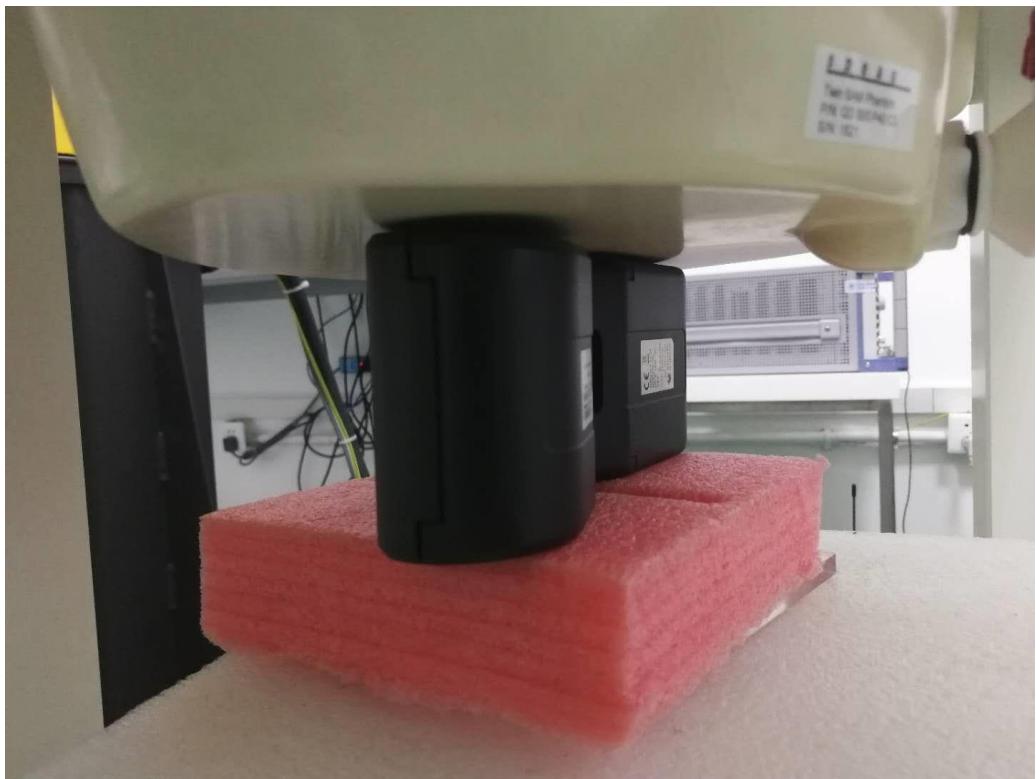

Picture 1-10: Toward Left (0mm)



Picture 1-11: Toward Right (0mm)

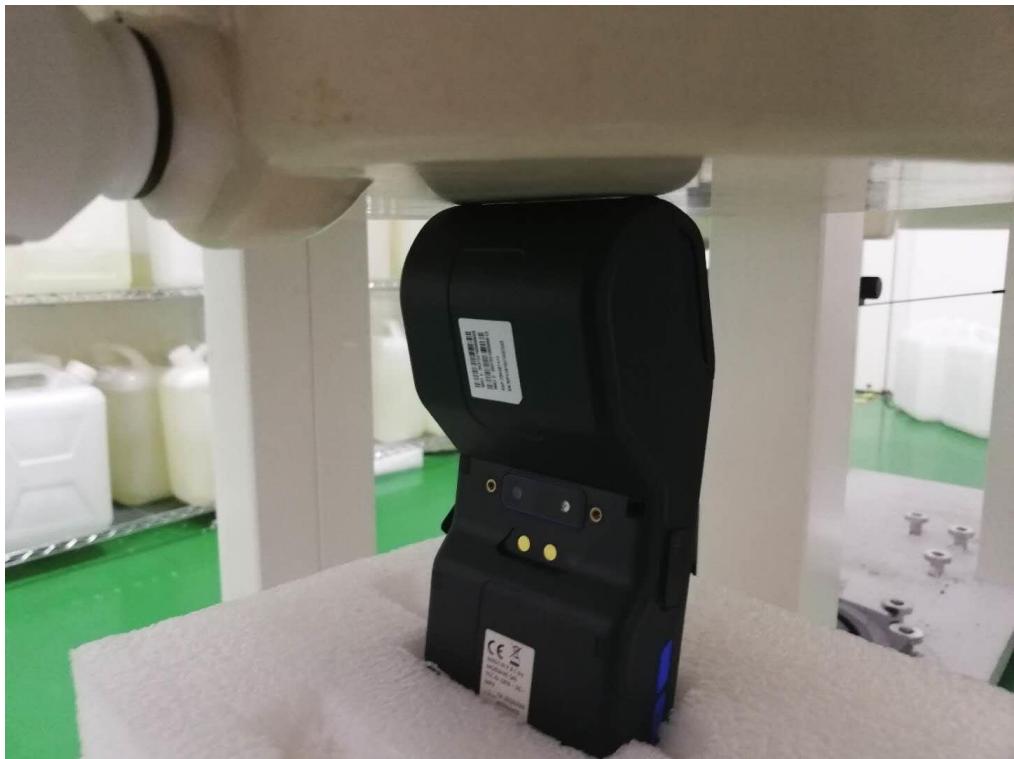

Picture 1-12: Toward Top (0mm)



Picture 1-13: Toward Bottom (0mm)



Picture 1-14: Toward Tilt (0mm)