



**WIRELESS GAME CONTROLLER
AIR STYLE W-SHOCK2**

FCC Compliance

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

No special accessory is required to enable the equipment to comply with the emission limits.

LPQE 0003 ZA



WIRELESS GAME CONTROLLER AIR STYLE W-SHOCK2 Instruction Manual




Thank you for purchasing this product.
For safe operation of this product, please read this manual carefully with this instruction manual for the appropriate game console together, before use.

Contents


Wireless Game Controller	1
Base Hub Receiver	1
Battery	2
Instruction Manual	1
Warranty Card	1

Button Name for the Air Style W-Shock2 Wireless Game Controller

 
Wireless Game Controller

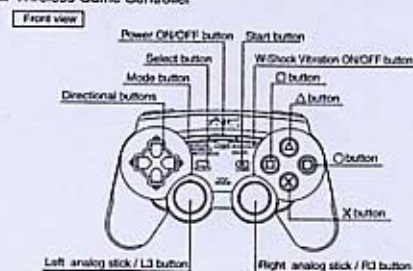

Top down view

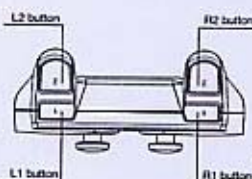 


Base Hub Receiver

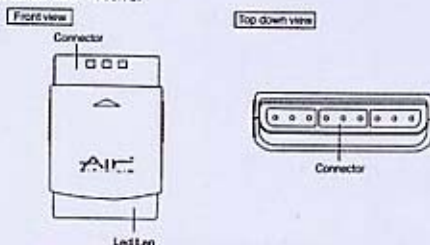 


Battery

 - Insert battery into the battery compartment in accordance to poles (+ and -) indicated.
- You can use rechargeable batteries.

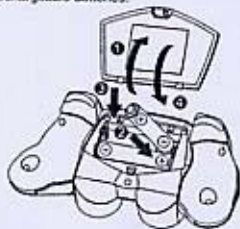


How to use

 
Step-1 Insert the BASE HUB into the controller slot of game console.

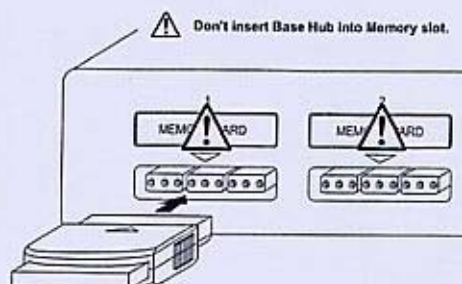

 
Step-2 After insert the BASE HUB you can see the blue light start to blink.

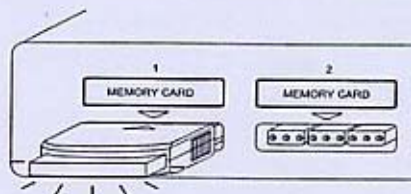

 Step-3 Please take the controller and press power ON/OFF button.
And check the Mode button, start to blink slowly.

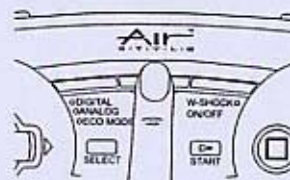

 Step-4 After the wireless default set up, LED on BASE HUB and Controller will stop blinking and light up.

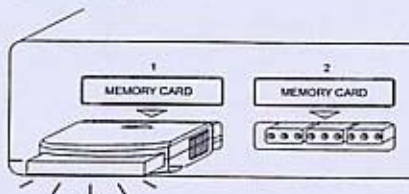

Step-5 W-SHOCK2 Wireless Game Controller is ready to play Game.

Channel Scanning

Air Style wireless Game Controller will scan the vacant channel automatically. If all channels are busy, the Blue LED will start to blink. Likely causes could be due to all channels are busy, interference with 900 Mhz Wireless products e.g. telephone, wireless transmitter, etc.

Feature

1. Mode



Eco Mode

Economic Mode for the Battery Life.

You can save the battery life, but you may feel some kind of delay. We propose to use Eco Mode for the slower game with W-Shock OFF condition, you can maximize the battery life.

2. W-Shock Vibration

Default Mode is "OFF"

If you want to feel Vibration during Game, you can choose Vibration "ON" mode. Press the W-SHOCK ON/OFF button on the Air Style Wireless Game Controller unit.

But you have to read and understand those conditions stated under safety issue section.



3. Auto Power Off

 
This is the Power switch of Controller. Auto Power OFF mode Air Style W-Shock2 Wireless Game Controller has the Auto power off mode.

If you do not press any button for 15 minutes, Controller will move to the sleep mode. But if you press any button under the sleep mode, Air Style W-Shock2 Wireless Game Controller start to vibrate and wake up immediately. And if any button is not pressed for a duration of 1 hour, Air Style W-Shock2 Wireless Game Controller Power will be OFF automatically and Base LED will be OFF.

If you want to play again, press Power ON/OFF button and wait for making Link.

4. Search "PAIR"

AirStyle Wireless Game Controller comes in pair. It consist of one unit of Controller and one unit of Base Hub Receiver.

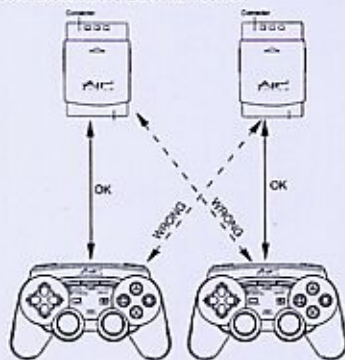

You can search the paired Base Hub Receiver by pushing both Joy Stick down the same time. The BLUE LED will blink.

5. Battery Life Indication

When the installed battery capacity is low, Mode LED start to blink.

When you see the Mode LED start to blink, please replace with new battery.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

For your reference about Battery Life

Battery	Mode	Battery Life
Alkaline	ECO / Vibration Off	50 hours
Ni-cd	ECO / Vibration Off	10 hours
Ni-MH	ECO / Vibration Off	20 hours

When any one of the battery are played under Analog or Digital mode with vibration off, the battery life will varies.

The above battery life table is for reference purpose only and it will varies in accordance to the type of game play.

Safety Issue (W-Shock Vibration Function)

- Stop using this unit immediately, if you become tired or if you experience unpleasantness or pain in your hands or arms while using. If the condition persists, consult your doctor.
- Do not attempt to operate the Air Style W-Shock2 Wireless Controller in anyway other than with your hands. Do not bring the Air Style W-Shock2 Wireless Controller into close contact with your head, face or near the bones of any other part of your body.
- Do not use the vibration function of the Air Style W-Shock2 Wireless Controller, if you have any ailment in the bones or joints of your hands or arms.
- Do not use the W-Shock Vibration function of the Air Style W-Shock2 Wireless Controller when your fingers, hands, wrists, or arms are dislocated, or sprained, or if you have a pulled muscle. These ailments may become worse due to the vibration function of the controller.
- Avoid prolonged use of the Air Style W-Shock2 Wireless Controller. Take a break approximately every 30 minutes.

Precautions

- Do not expose the Air Style W-Shock2 Wireless Game Controller to high temperatures, high humidity or direct sunlight. (operate in an environment where temperature range 5°C - 35°C)
- Do not allow liquid or small particles to get into the Air Style W-Shock2 Wireless Game Controller.
- Never disassemble or modify the Air Style W-Shock2 Wireless Game Controller.
- Do not bend, throw or drop the Air Style W-Shock2 Wireless Game Controller or subject it to strong physical shock.
- Do not touch the metal parts of the Controller and Base Hub.
- When cleaning the controller, please use a soft, dry cloth. Never use benzene, thinner, or other chemicals on the controller.
- Do not put the Air Style W-Shock2 Wireless Game Controller in places with excessive humidity or dust or anywhere subject to oily smoke or steam.
- Stop using the Air Style W-Shock2 Wireless Game Controller immediately if you feel hot or it perform abnormally.
- Place the Air Style W-Shock2 Wireless Game Controller in a stable location.
- Place the Air Style W-Shock2 Wireless Game Controller out of the reach of small children.
- Do not leave the Air Style W-Shock2 Wireless Game Controller on the floor.
- Do not open the Air Style Wireless Game controller unit or Base hub Receiver.

FCC Information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harm interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.

Warranty Card

The warranty card is printed on the graphic card.

Support

See the following Web site.
www.fountech.com