

GOLDENPOINT INT'L LIMITED

ELECTRONIC BALLAST

USER'S MANUAL

DO NOT USE OR INSTALL UNDER THE FOLLOWING CONDITIONS:

- 1) WITH LOW VOLTAGE DC SUCH AS EMERGENCY LIGHTING.
- 2) WITH DIMMING CIRCUIT FIXTURES.
- 3) WHERE WATER MAY CONDENSE ON THE BALLAST.

THIS BALLAST IS UNSUITABLE FOR APPLICATIONS WHERE IT IS SWITCHED ON AND OFF REPEATEDLY.

THIS BALLAST IS DESIGNED TO BE USED WITH A STABLE SOURCE OF MAINS VOLTAGE THAT FLUCTUATES FROM 110V TO 130V, 50 OR 60Hz.

THIS BALLAST IS SUITABLE FOR USE WITH PLC FLUORESCENT LAMPS.

THIS PRODUCT COMPLIES WITH PART 18 OF FCC RULES BUT MAY CAUSE INTERFERENCE TO RADIOS, TELEVISION, WIRELESS TELEPHONES, REMOTE CONTROLS AND SHOULD NOT BE INSTALLED WITH MARITIME SAFETY COMMUNICATION EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45—30MHZ. IF INTERFERENCE OCCURS, MOVE PRODUCT AWAY FROM THE DEVICE OR PLUG EITHER INTO A DIFFERENT OUTLET, OR MOVE THE PRODUCT OUT OF THE SIGHT WITH THE REMOTE CONTROL RECEIVER.

WIRING DIAGRAMS

