



Magic Motion Candy
User Guide
SMV07

Candy User Guide
Magic Cell Series

Specification

Color	Body color (White/Black)
Candy Size	19.2*35.5*24.0mm
Candy Weight	50g
Working Time	1000+ hours
Memory	1000
Motion Sensor	Support

Contents Of Package

Candy	X1
User Guide	X1
USB Magnet Charging Cable	X1

First Use

Step 1: App Download
User can download App through below either way:
1. Search for Magic Motion in iOS App Store or Google Play
2. Scan below QR Bar to download directly

Step 2: Run Magic Motion App
Click Magic Motion App to run and follow the guide to connect Candy

Step 3: Turn on your Candy by pressing the Power Key
Candy is ready to connect when the LED light on Candy is on. After waiting for 3 minutes and it is connected with App.

When the App shows connected means it is successfully connected

Step 4: Enjoy the fun with Candy

Step 5: Power Off
When finished using, long press Power Key 3 seconds to switch off

Further Use

step1 Turn on your Candy.
step2 Open Magic Motion App., select Candy to connect.
step3 Have more fun with Candy.

Independent Mode (Without Smartphone)

Step1 Power on Candy
Step2 Press Power key again to access mode1.
Step3 Press Power key again to stop.
Step4 Press Power key again to access mode2.
To access more modes by pressing power key constantly to shift different modes.

Charging Battery

Step1 Remove the Magic Cell from the Rubber Ring.
Step2 Connect the Magnet Charging cable with the magnet charging port on Magic Cell. It starts charging when the LED light is ON. Red light stands for charging. Green light stands for fully charged

Cleaning "Candy"

Before Usage
Please clean Candy with cleanser or warm water and anti-bacterial soap.

After Usage
Please clean Candy with cleanser or warm water and anti-bacterial soap and dry it.

Storage
Keep Candy in a cool and ventilated place. Avoid direct sunlight and keep it away from children.

Warning
Candy is designed for external body massage. Please don't put it into inside of the body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can release radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Charge or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Touch beyond your thought

© 2015 www.magicmotion.com