



MINI REMOTE CONTROL CAR

INSTRUCTION MANUAL


Twist the dome cover counterclockwise to open.
Slide battery cover/attached car off of controller.

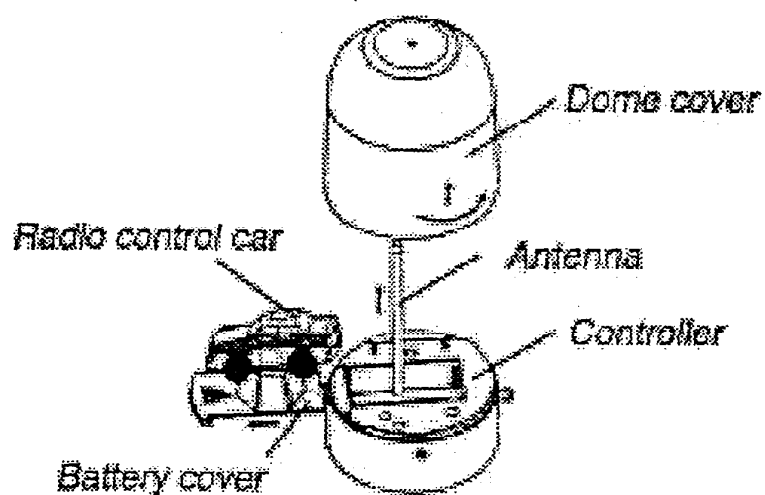

Use a Phillips head screwdriver to detach the car from the battery cover and pedestal.

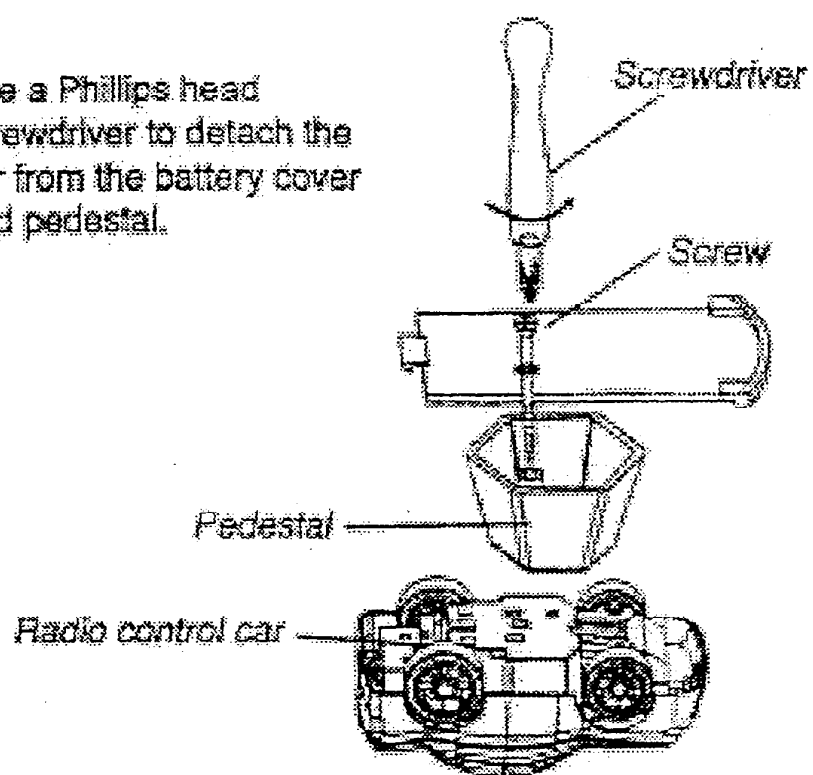

Place two "AA" alkaline batteries into the controller and replace the battery cover.

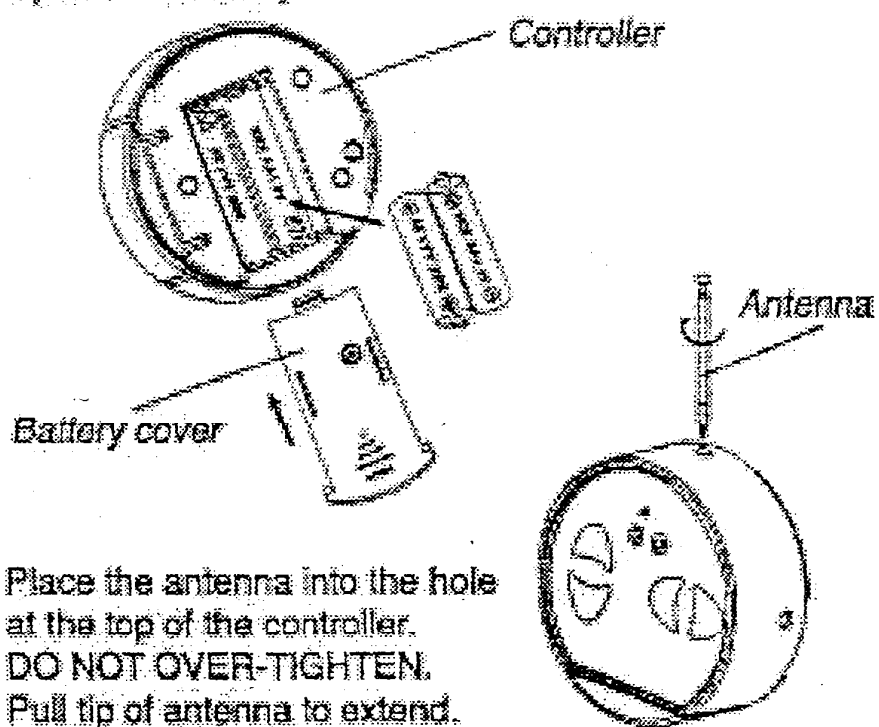


Place the antenna into the hole at the top of the controller.
DO NOT OVER-TIGHTEN.
Pull tip of antenna to extend.

OPERATING INSTRUCTIONS

"Modifications not authorized by the manufacturer may void users authority to operate this device"


To charge the car, open the cover at the bottom of the controller. Align the metal nodes on the controller with the nodes on the car onto controller. The charging indicator light will come on when the car is charging. After a full charge or approximately 45 seconds, the light will turn off. Take the car off of the controller.

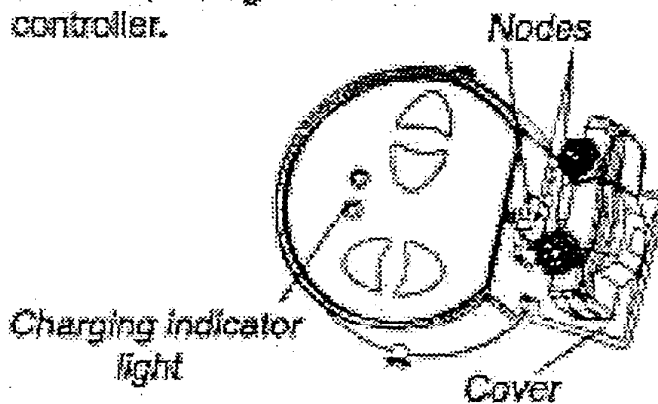

The controller is now full functioning. To make the car move, push the forward or reverse button. The car will turn left and right when the corresponding button on the controller is pushed. The car will only turn left and right when it is moving in the forward or reverse directions. The operating light will come on when the car is in use.

When the indicator light becomes faint, it is time to replace the batteries.


While operating the controller, make sure that the antenna is fully extended.

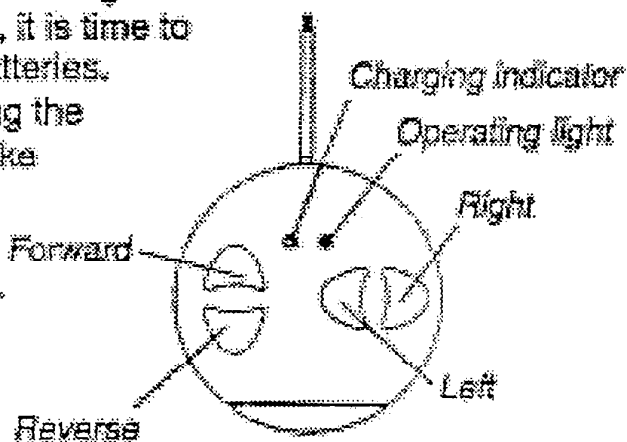

Occasionally, the car will sway left or right while moving forward or backward. To correct this, adjust the directional guide on the bottom of the car as shown in the illustration below. This may need to be done a few times while operating the car.

For best results, operate on a smooth, dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines or CBs.

The manufacturer is not responsible for radio or TV interference caused by unauthorized modification of this equipment. Such modifications could void the users authority to operate the equipment.

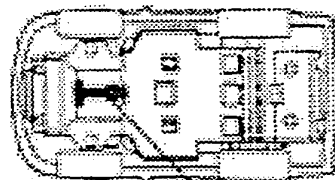

Directional guide

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant of Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ~Reorient or relocate the receiving antenna.
- ~Increase the separation between the equipment and receiver.
- ~Consult the dealer or an experienced radio/TV technician for help.