

175LPI B/W E/DOWN

Pantone 2747U (Dark Blue)



Before operating this product, read, understand, and follow these instructions. Be sure to save these instructions for future reference.

Operating Instructions

WARNING:
CHOKING HAZARD — Small parts.
Not for children under 3 yrs.

- This product is intended for entertainment purposes only for children five (5) years of age or older.
- Do not use the product for any other purpose.
- This product is not intended for use by children under the age of five (5) years. Keep the product out of the reach of young children and pets.
- Never operate this product if it is not working properly, damaged, or exposed to water or other liquids. This product has no user-serviceable parts. Only qualified service personnel should perform any servicing. Do not attempt to disassemble or repair this product yourself. Return the product to a service center for examination and repair.
- Do not place or store this product near water or other liquids.
- Do not store or expose this product to direct sunlight or extreme temperatures.

Battery Precautions:

- Keep batteries away from children and pets.
- Do not mix a used battery with a new battery, or mix different chemistries or sizes of batteries.
- Remove spent or discharged batteries from the product. Remove the batteries when the product will not be used for extended periods of time to prevent damage due to rusted or corroded batteries.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Battery Disposal: Spent or discharged batteries must be properly disposed of and recycled in compliance

with all applicable laws. For detailed information, contact your local county solid waste authority.

- Follow the battery manufacturer's safety, usage, and disposal instructions.

 
 
CAUTION: Batteries should be handled by adults only. Do not allow a child to handle this product. Always ensure the battery compartment cover(s) is securely attached to the battery compartment in accordance with all product usage instructions.

1. Open the Battery Covers from the back of the transmitter controller and the recharging stand.
2. Insert two (2) "AA" size alkaline (or NiKMH) batteries to the transmitter controller battery compartment and insert another two (2) "AA" size alkaline (or NiKMH) batteries to the recharging stand battery compartment. Be sure to align the battery polarity (+/-) as inscribed on the Battery Compartment.

NOTE: The Mini-rechargeable battery inside of the vehicle does not need replacement.

3. Securely close the Battery Cover onto each side of the transmitter controller.
4. **NOTE:** Remove the batteries when the product is not in use to prevent damage to the product due to rusted or corroded batteries.

Parts Identification:

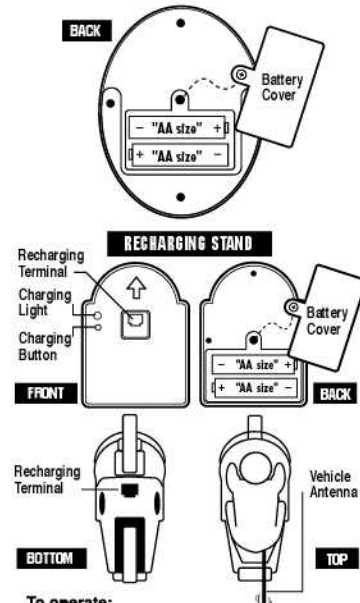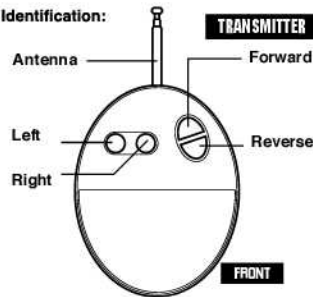

To operate:

1. Screw (clockwise) the Antenna onto the Transmitter Controller; then fully extend it.
2. Charge the vehicle:
 - a. Position the vehicle on the Charging Stand.
NOTE: Ensure the vehicle's charging terminal touches the Charging Stand contacts. Do not operate the Transmitter Controller while the vehicle is charging.
 - b. Gently press down the vehicle so it locks into position on the Charging Stand.

 
 
Pantone 2747U (Dark Blue)

Press the recharging button (on the top of recharging stand)
The red charging indicator (top, left corner) light turns on.

- c. Carefully remove the vehicle from the Charging Stand when the red charging light turns off.

NOTE: The vehicle battery is fully recharged when the red charging light turns off. If charging the vehicle for the first time (or if unused for a long period of time), charge the vehicle twice before using it. Recharge the vehicle when it runs slow (or stops completely).

3. Use the Control Buttons (Forward, Reverse, Left, & Right) to move the vehicle.

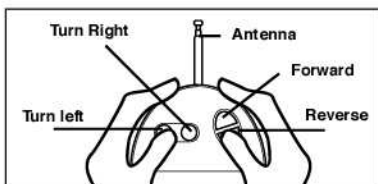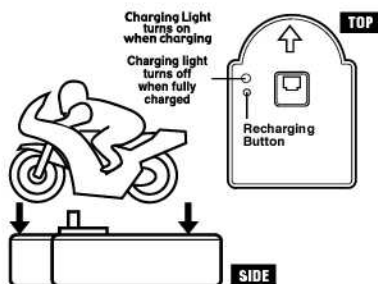

Tips & Hints:

- For best performance, operate the vehicle on a flat, smooth surface.
- Do not operate the Transmitter Controller while the vehicle is recharging.
- Frequently check and clean the vehicles wheels to remove any dirt or foreign objects.
- Always maintain the transmitter within operating range of the vehicle.
- Fully extend both the Transmitter Controller and the vehicle's antenna for increased operating range.

- ◊ The vehicles operating range is decreased;
- ◊ The vehicle's response becomes slow; or
- ◊ If the Transmitter Controller and the Recharging Stand's red light becomes dim.

- Recharge the vehicle when it becomes slow or stops completely.

FCC Requirements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by applying and removing power to the equipment, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit separated from the circuit to which the receiver is connected.
- Consult a dealer or an experienced radio / television technician for assistance.

SPECIFICATIONS

Power Source

Transmitter Controller: Two(2)x1.5V"AA"size(UM3) batteries
Recharging Stand: Two(2)x1.5V"AA"size(UM3) batteries
Vehicle: Micro-rechargeable battery

Frequency

27MHz

Transmitter Control Operating Range

up to 26.2 ft (8 m)

Operating (running) Time

Approximately six (6) minutes after one (1) minute of "Quick Charge" time.

FCC ID

XXX8306A

Weight

Transmitter Controller: 85 g

Vehicle: 24 g

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

This product is warranted against defects on materials and workmanship caused by manufacturing process for six (6) months from the original date of purchase. Within this 6-month warranty period, the item will be replaced or your money will be refunded at our option at the place of purchase upon presentation of sales receipt or other proof of purchase. This warranty does not apply to items subjected to misuse or accidental damage.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

" NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modifications could void the User's authority to operate the equipment."

Made in China