

 
 
 
**Cyan Magenta Yellow Black**

xxxxxx  
Issue 1

## 2 Contents

<b>Contents</b>	
<b>Safety</b>	<b>5</b>
<b>Support</b>	<b>7</b>
<b>Get started</b>	<b>8</b>
Insert SIM card and battery	8
Insert a microSD card	9
Remove the microSD card	10
Charge the battery	11
GSM antenna	12
Headset	13
Connect a USB data cable	14
Magnets and magnetic fields	14
Keys and parts	15
Access codes	16
Switch on and off	17
Home screen	18
Keypad lock	19
<b>Functions without a SIM card</b>	<b>19</b>
<b>Applications running in background</b>	<b>20</b>
<b>Calls</b>	<b>20</b>
Make and answer a call	20
Loudspeaker	20
Dialling shortcuts	21
<b>Write text</b>	<b>21</b>
Text modes	21
Traditional text input	22
Predictive text input	23
<b>Navigate the menus</b>	<b>23</b>
<b>Messaging</b>	<b>24</b>
Text and multimedia messages	24
Flash messages	27
Nokia Xpress audio messages	27
Voice messages	27


---



---

## Contents 3

 Message settings	28	Alarm clock	39
<b>Contacts</b>	<b>29</b>	Calendar and to-do list	40
<b>Call log</b>	<b>30</b>	Extras	41
<b>Settings</b>	<b>31</b>	Camera and video	42
Profiles	31	FM radio	43
Tones	31	Voice recorder	45
Display	32	Media player	45
Date and time	32	<b>Maps</b>	<b>47</b>
Shortcuts	32	About Maps	47
Synchronisation and backup	33	Introduction	49
Connectivity	34	Navigate to your destination	51
Call and phone	36	<b>Web or Internet</b>	<b>56</b>
Accessories	37	Connect to a web service	57
Configuration	37	<b>SIM services</b>	<b>57</b>
Restore factory settings	38	<b>Green tips</b>	<b>58</b>
<b>Operator menu</b>	<b>39</b>	Save energy	58
<b>Gallery</b>	<b>39</b>	Recycle	59
<b>Applications</b>	<b>39</b>	Learn more	59




---

**4    Contents**

 ---

**Product and safety  
information                    59**

**Index                            74**



## Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

### SWITCH ON SAFELY



Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

### ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

### INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

### SWITCH OFF IN RESTRICTED AREAS



Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

---

## 6 Safety

---

### QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

### ACCESSORIES AND BATTERIES

 
 


 
Use only approved accessories and batteries. Do not connect incompatible products.

### WATER-RESISTANCE



Your device is not water-resistant. Keep it dry.





---

## Support 7

### Support

When you want to learn more about how to use your product or you are unsure how your device should function, see the user guide or see the support pages at [www.nokia.com/support](http://www.nokia.com/support) or your local Nokia website, or with a mobile device, [www.nokia.mobi/support](http://www.nokia.mobi/support).

If this does not resolve your issue, do one of the following:

- Restart the device: switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device.
- Restore the original factory settings as explained in the user guide.
- Update your device software regularly for optimum performance and possible new features, as explained in the user guide.

If your issue remains unsolved, contact Nokia for repair options. See [www.nokia.com/repair](http://www.nokia.com/repair), or in Latin America, [www.nokia-latinoamerica.com/centrosdeservicio](http://www.nokia-latinoamerica.com/centrosdeservicio). Before sending your device for repair, always back up the data in your device.



## 8 Get started

### Get started

#### Insert SIM card and battery

Safe removal. Always switch the device off and disconnect the charger before removing the battery.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.



- 1 Slide the back cover downwards, and remove it (1).
- 2 Remove the battery (2).
- 3 Insert the SIM card. Ensure the contact surface area is facing down and the bevelled corner of the SIM card is facing the bottom of the device (3, 4, 5).
- 4 Replace the battery and the back cover (6, 7).

 
#### Insert a microSD card

Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.




Your phone supports microSD cards with a capacity of up to 8 GB.

A compatible memory card may be supplied with the device, and may already be inserted in the device. If not, do the following:



## 10 Get started

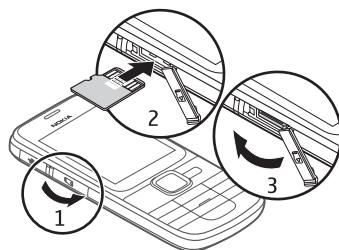


- 1 Open the cover of the memory card slot.
- 2 Insert the card into the memory card slot with the contact surface facing up, and press until it locks into place.
- 3 Close the cover of the memory card slot.

### Remove the microSD card

 **Important:** Do not remove the memory card during an operation when the card is being accessed. Doing so may damage the memory card and the device, and corrupt data stored on the card.

You can remove or replace the memory card during phone operation without switching the device off, but you need



## Get started 11

 
to ensure that no application is currently accessing the memory card.



### Charge the battery


Your battery has been partially charged at the factory. If the device indicates a low charge, do the following:

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the device.
- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.



You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

 Charging the device while listening to the radio may affect the quality of reception.



## 12 Get started

### GSM antenna



Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

The figure shows the GSM antenna area marked in grey.


**Headset**

**Warning:**

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV Connector, pay special attention to volume levels.

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.

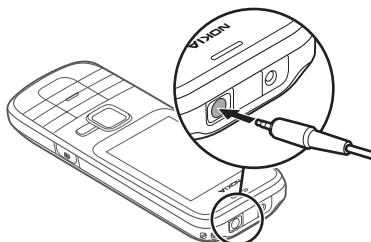


---

## 14 Get started

---

### Connect a USB data cable

Connect a compatible USB data cable to the USB connector.

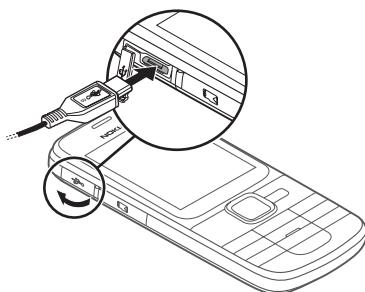


To modify the USB settings, select **Menu > Settings > Connectivity > USB data cable** and the desired mode.

### Magnets and magnetic fields


Keep your device away from magnets or magnetic fields.

**Keys and parts**

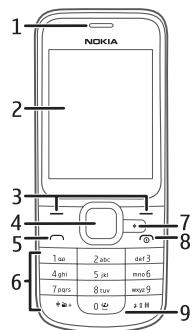

- 1** Earpiece
- 2** Display
- 3** Selection keys
- 4** Navi™ key (scroll key)
- 5** Call key
- 6** Keypad
- 7** Maps key
- 8** End/Power key
- 9** Microphone


## 16 Get started

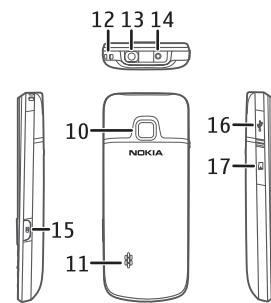

- 10 Camera lens
- 11 Loudspeaker
- 12 Wrist strap eyelet
- 13 Headset connector/Nokia AV Connector (3.5 mm)
- 14 Charger connector
- 15 Capture key
- 16 Micro USB cable connector
- 17 Memory card slot

### Access codes

 The security code helps to protect your device against unauthorised use. The preset code is 12345. You can create and change the code, and set the device to request the



---

## Get started 17

code. Keep the code secret and in a safe place separate from your device. If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care point or your device dealer.

 
The PIN code supplied with the SIM card protects the card against unauthorised use. The PIN2 code supplied with some SIM cards is required to access certain services. If you enter the PIN or PIN2 code incorrectly three times in succession, you are asked for the PUK or PUK2 code. If you do not have them, contact your service provider.

The module PIN is required to access the information in the security module of your SIM card. The signing PIN may be required for the digital signature. The barring password is required when using the call barring service.

To set how your device uses the access codes and security settings, select **Menu > Settings > Security**.


### Switch on and off

Press and hold the power key.




## 18 Get started

### Home screen

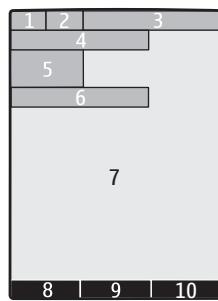

 - 1 Network signal strength
- 2 Battery charge status
- 3 Indicators
- 4 Network name or the operator logo
- 5 Clock
- 6 Date (if the home screen mode is deactivated)
- 7 Display
- 8 Function of the left selection key
- 9 Function of the scroll key
- 10 Function of the right selection key



## Get started 19

### Keypad lock

#### Lock the keypad

Select **Menu**, and press \* within 2.5 seconds.

#### Unlock the keypad

Select **Unlock**, and press \* within 1.5 seconds. If requested, enter the lock code.

#### Answer a call when the keypad is locked

Press the call key. When you end or reject a call, the keypad locks automatically.

#### Set automatic keypad lock

Select **Menu > Settings > Phone > Automatic keyguard > On**, and set the length of time, after which the keypad locks.



When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device.

### Functions without a SIM card

Some functions of your phone may be used without inserting a SIM card, such as Organiser functions and games. Some functions appear dimmed in the menus and cannot be used.





## 20 Calls

### Applications running in background

Leaving applications running in the background increases the demand on battery power and reduces the battery life.

#### Calls

##### Make and answer a call

###### Make a call

Enter the phone number, including the country and area code if necessary, and press the call key.

###### Answer an incoming call

Press the call key.

###### Reject a call


 
Press the end key.

 
###### Adjust the volume

During a phone call, scroll up or down.

#### Loudspeaker

If available, you may select **Loudsp.** or **Handset** to use the loudspeaker or the earpiece of the phone during a call.

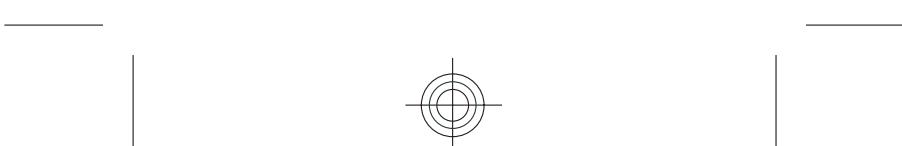



## Write text 21

### Warning:

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

### Dialling shortcuts

#### Assign a phone number to a number key

 
 
Select Menu > Contacts > Speed dials, scroll to a desired number (2-9), and select Assign. Enter the desired phone number, or select Search and a saved contact.

#### Activate speed dialling

Select Menu > Settings > Call > Speed dialling > On.

#### Make a call using speed dialling

In the standby mode, press and hold the desired number key.




## Write text

### Text modes

 To enter text (for example, when writing messages) you can use traditional or predictive text input.






## 22 Write text

When you write text, press and hold **Options** to switch between traditional text input, indicated by  and predictive text input, indicated by . Not all languages are supported by predictive text input.

The character cases are indicated by  and .

To change the character case, press **#**. To change from the letter to number mode, indicated by , press and hold **#**, and select **Number mode**. To change from the number to the letter mode, press and hold **#**.

 To set the writing language, select **Options > Writing language**.




### Traditional text input

Press a number key, 2-9, repeatedly until the desired character appears. The available characters depend on the selected writing language.

If the next letter you want is located on the same key as the present one, wait until the cursor appears, and enter the letter.

 To access the most common punctuation marks and special characters, press **1** repeatedly. To access the list of special characters, press **\***. To insert a space, press **0**.





## **Navigate the menus 23**

### **Predictive text input**

 
Predictive text input is based on a built-in dictionary to which you can also add new words.

 
- 1 Start writing a word, using the keys **2** to **9**. Press each key only once for one letter.
- 2 To confirm a word, scroll right or add a space.
  - If the word is not correct, press **\*** repeatedly, and select the word from the list.
  - If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.
  - To write compound words, enter the first part of the word, and scroll right to confirm it. Write the last part of the word, and confirm the word.
- 3 Start writing the next word.

### **Navigate the menus**

The device functions are grouped into menus. Not all menu functions or option items are described here.

In the home screen, select **Menu** and the desired menu and submenu.





## 24 Messaging

### Exit the current menu level

Select Exit or Back.

### Return to the home screen

Press the end key.

 
### Change the menu view

Select Menu > Options > Main menu view.



## Messaging

Create and receive messages, such as text and multimedia, with your device. The messaging services can only be used if your network or service provider supports them.




### Text and multimedia messages


You can create a message and optionally attach, for example, a picture. Your phone automatically changes a text message to a multimedia message when a file is attached.



### Text messages

  Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language





## **Messaging 25**

 
options take more space, and limit the number of characters that can be sent in a single message.

The total number of characters left and the number of messages needed for sending are displayed.

To send messages, the correct message centre number must be stored in your device. Normally, this number is set by default through your SIM card.

To set the number manually, do the following:

- 1 Select **Menu > Messaging > More > Msg. settings > Text messages > Message centre.**
- 2 Enter the name and number supplied by your service provider.





### **Multimedia messages**

A multimedia message can contain text, pictures, and sound or video clips.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

  The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.





## 26 Messaging

**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

For availability and subscription to the multimedia messaging service (MMS), contact your service provider.

 
### Create a message

- 1 Select **Menu > Messaging > Create message.**
- 2 Write your message.  
To insert a special character or a smiley, select **Options > Insert symbol.**  
To attach an object to the message, select **Options > Insert object.** The message type changes automatically to multimedia message.
- 3 To add recipients, select **Send to** and a recipient.  
To enter a phone number or mail address manually, select **Number or e-mail.** Enter a phone number, or select **E-mail**, and enter a mail address.
- 4 Select **Send.**

Multimedia messages are indicated with an icon at the top of the display.

Service providers may charge differently depending on the message type. For details, contact your service provider.





## **Messaging 27**

### **Flash messages**

Flash messages are text messages that are instantly displayed upon reception.

Select **Menu > Messaging**.

- 1 Select **More > Other messages > Flash message**.
- 2 Write your message.
- 3 Select **Send to** and a contact.

 


### **Nokia Xpress audio messages**

Create and send audio messages using MMS in a convenient way.

Select **Menu > Messaging**.


- 1 Select **More > Other messages > Audio message**.  
The voice recorder opens.
- 2 To record your message, select **●**.
- 3 To stop recording, select **■**.
- 4 Select **Send to** and a contact.



### **Voice messages**

 The voice mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.





## 28 Messaging

### Call your voice mailbox

Press and hold 1.

### Edit your voice mailbox number

Select Menu > Messaging > More > Voice messages and Voice mailbox no..

### Message settings

Select Menu > Messaging and More > Msg. settings.

 
Select from the following:

**General settings** — Save copies of sent messages in your device, overwrite old messages if the message memory becomes full, and set up other preferences related to messages.

**Text messages** — Allow delivery reports, set up message centres for SMS and SMS mail, select the type of character support, and set up other preferences related to text messages.

**Multimedia msgs.** — Allow delivery reports, set up the appearance of multimedia messages, allow the reception of multimedia messages and advertisements, and set up other preferences related to multimedia messages.

**Service messages** — Activate service messages, and set up preferences related to service messages.



## Contacts

You can save names and phone numbers in the device memory and on the SIM card. In the device memory, you can save contacts with numbers and text items. Names and numbers saved on the SIM card are indicated with .

Select **Menu > Contacts > Names**.

### Add a contact

Select **Options > Add new contact**.

### Add details to a contact


Ensure that the memory in use is either **Phone** or **Phone and SIM**. Scroll to a contact, and select **Details > Options > Add detail**.

### Search for a contact

Select **Names**. Scroll through the list of contacts, or enter the first characters of the contact's name.

### Copy a contact between the device memory and SIM card

Select **Names**, scroll to the contact, and select **Options > More > Copy contact**. On the SIM card, you can save only one phone number for each name.

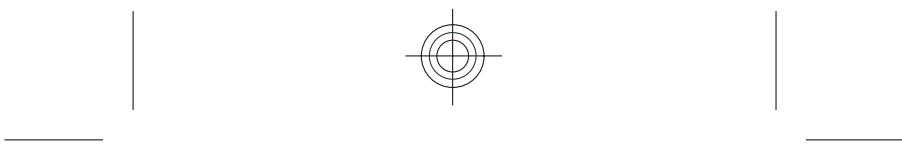


## 30 Call log

To select the SIM card or device memory for your contacts, to select how the names and numbers in the contacts list are displayed, and to view the memory capacity for contacts, select **Settings** and the appropriate option.

You can send and receive a person's contact information as a business card from a compatible device that supports the vCard standard.

### Send a business card

 
Select a contact, **Options** > **More** > **Business card**, and the sending type.



## Call log

To view the information on your calls, messages, data, and synchronisation, select **Menu** > **Log** and from the available options.

**Note:** The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

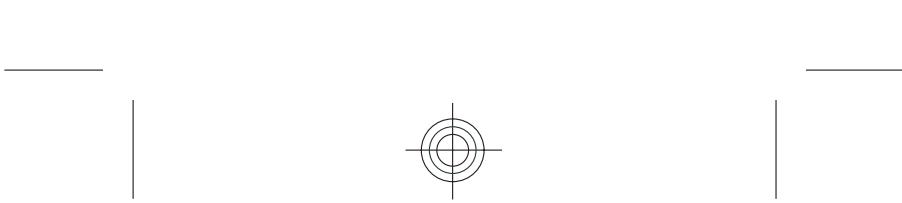

## Settings

### Profiles

Waiting for a call, but can't let your device ring? There are various settings groups called profiles, which you can customise with ringing tones for different events and environments.

Select **Menu > Settings > Profiles**.

Select the desired profile and from the following:

**Activate** — Activate the profile.

**Personalise** — Modify the profile settings.

**Timed** — Set the profile to be active until a certain time. When the time set for the profile expires, the previous profile that was not timed becomes active.

### Tones

You can change the tone settings of the selected active profile.

Select **Menu > Settings > Tones**. You can find the same settings in the **Profiles** menu.

## 32 Settings

### Display

To view or adjust the wallpaper, font size, or other features related to the device display, select **Menu > Settings > Display**.

### Date and time

Select **Menu > Settings > Date and time**.

#### Set the date and time

Select **Date & time settings**.

#### Set the date and time format

Select **Date & time format**.

 
#### Update the time automatically according to the current time zone

Select **Auto-update of time (network service)**.

### Shortcuts

With personal shortcuts, you can get quick access to frequently used phone functions.

Select **Menu > Settings > My shortcuts**.



## Settings 33

### Assign phone functions to the selection keys

Select **Right selection key** or **Left selection key** and a function from the list.

### Select shortcut functions for the scroll key

Select **Navigation key**. Scroll to the desired direction, and select **Change** or **Assign** and a function from the list.

### Synchronisation and backup

Select **Menu** > **Settings** > **Sync & backup**.

Select from the following:

 
 
**Synchronisation** — Create a backup of your personal data to a Nokia server. Before you start backing up data, you need to set up your My Nokia account. Select **Connect**, and you are guided through the process of backing up data.

 
**Phone switch** — Synchronise or copy selected data, such as your contacts, calendar entries, notes, or messages, between your device and another device.

**Create backup** — Back up selected data.

**Restore backup** — Restore data from a backup. To view the details of a backup file, select **Options** > **Details**.

**Data transfer** — Synchronise or copy selected data between your device and a network server (network service).





## 34 Settings

## Connectivity

Your phone has several features that allow you to connect to other devices to transmit and receive data.

## Bluetooth wireless technology

Bluetooth technology allows you to connect your device, using radio waves, to a compatible Bluetooth device or accessory that is within 10 metres (32 feet).

 
Select **Menu > Settings > Connectivity > Bluetooth**.

## Set up a Bluetooth connection

**Set up a Bluetooth connection**

- 1 Select **My phone's name**, and enter a name for your device.
- 2 Select **Bluetooth > On**.  indicates that Bluetooth connectivity is active.
- 3 To connect your device to an audio accessory, select **Conn. to audio acc.** and the device that you want to connect to.
- 4 To pair your device with any Bluetooth device in range, select **Paired devices > Add new device**.  
Scroll to a found device, and select **Add**.  
Enter a passcode (up to 16 characters) on your device, and allow the connection on the other Bluetooth device.






## Settings 35

If you are concerned about security, deactivate the Bluetooth function, or set **Phone visibility** to **Hidden**. Accept Bluetooth communication only from those you trust.

### Connect your PC to the internet

 You can use Bluetooth technology to connect your compatible PC to the internet without the PC Suite software. Your device must be able to connect to the internet (network service), and your PC must support Bluetooth technology. After connecting to the network access point (NAP) service of the device, and pairing with your PC, your device automatically opens a packet data connection to the internet.



This device is compliant with Bluetooth Specification 2.0 + EDR supporting the following profiles: generic access, hands-free, headset, object push, file transfer, dial-up networking, serial port, SIM access, and generic object exchange. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Features using Bluetooth technology increase the demand on battery power and reduce the battery life.



## 36 Settings

### Packet data

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an internet protocol (IP)-based network.

To define how to use the service, select **Menu > Settings > Connectivity > Packet data > Packet data conn.** and from the following options:

**When needed** — to establish the packet data connection when an application needs it. The connection is closed when the application is terminated.

**Always online** — to automatically connect to a packet data network when you switch the phone on

### Call and phone

Select **Menu > Settings > Call.**

 
#### Divert incoming calls

Select **Call divert** (network service). For details, contact your service provider.

#### Automatically redial ten times after an unsuccessful attempt

Select **Automatic redial > On.**

---



---

## Settings 37

**Get a notification of incoming calls while you are in a call**

Select Call waiting > Activate (network service).

**Display or hide your number to the person you are calling**

Select Send my caller ID (network service).

Select Menu > Settings > Phone.

**Set the display language**

Select Language settings > Phone language.

 
 
 
 
**Accessories**

This menu is only available if the device is or has been connected to a compatible accessory.

Select Menu > Settings > Accessories. Select an accessory and an option, depending on the accessory.

**Configuration**

You can configure your phone with settings that are required for certain services. Your service provider may also send you these settings.



## 38 Settings

Select **Menu > Settings > Configuration** and from the following options:

**Default config. sett.** — to view the service providers saved in the phone and set a default service provider

**Act. def. in all apps.** — to activate the default configuration settings for supported applications

**Preferred access pt.** — to view the saved access points

 
**Device mgr. settings** — to allow or prevent the phone from receiving software updates. This option may not be available, depending on your phone.

**Personal settings** — to manually add new personal accounts for various services and to activate or delete them. To add a new personal account, select **Add** or **Options > Add new**. Select the service type, and enter the required parameters. To activate a personal account, scroll to it, and select **Options > Activate**.

### Restore factory settings

To restore the phone back to factory conditions, select **Menu > Settings > Rest. fact. sett.** and from the following:

**Settings only** — Reset all preference settings without deleting any personal data.



## Operator menu 39

**All** — Reset all preference settings and delete all personal data, such as contacts, messages, media files, and activation keys.

 
### Operator menu

Access a portal to services provided by your network operator. For more information, contact your network operator. The operator can update this menu with a service message.




### Gallery

In Gallery, you can manage images, video clips, and music files.



### View the Gallery contents

 Select Menu > Gallery.



### Applications

#### Alarm clock

You can set an alarm to sound at a desired time.

 


 
#### Set the alarm

1 Select Menu > Applications > Alarm clock.



Cyan Magenta Yellow Black





## 40 Applications

- 2 Set the alarm, and enter the alarm time.
- 3 To issue an alarm on selected days of the week, select **Repeat:** > **On** and the days.
- 4 Select the alarm tone. If you select the radio as the alarm tone, connect the headset to the device.
- 5 Set the length of the snooze time-out period, and select **Save**.

### Stop the alarm

Select **Stop**. If you let the alarm sound for a minute or select **Snooze**, the alarm stops for the length of the snooze time-out period, then resumes.



### Calendar and to-do list

Select **Menu** > **Calendar**. The current day is framed. If there are any notes set for the day, the day is in bold.

#### Add a calendar note

Scroll to the date, and select **Options** > **Make a note**.

 
#### View the details of a note

Scroll to a note, and select **View**.

#### Delete all notes from the calendar

Select **Options** > **Delete notes** > **All notes**.





## Applications 41

### **View the to-do list**

Select Menu > Applications > To-do list.

The to-do list is displayed and sorted by priority. To add, delete, or send a note, to mark the note as done, or to sort the to-do list by deadline, select **Options**.

### **Extras**

Your device may include some games and Java™ applications specially designed for your device.

Select Menu > Applications > Extras.

### **Open a game or application**

 
 
 
 
Select Games, Collection, or Memory card, and a game or an application.

 
 
 
### **View the amount of memory available for game and application installations**

Select Options > Memory status.

### **Download a game or application**

Select Options > Downloads > Game downloads or App. downloads.





## 42 Applications

Your device supports J2ME™ Java applications. Make sure an application is compatible with your device before downloading it.

**Important:** Only install and use applications and other software from sources that you trust. Applications from untrusted sources may include malicious software that can access data stored in your device, cause financial harm, or damage your device.

The downloaded applications may be saved in Gallery instead of Applications.

### Camera and video

Your device supports an image capture resolution of 1200x1600 pixels.

### Camera mode

#### Use the still image function

 
In the home screen, press the capture key.

#### Zoom in or out

Scroll up or down.

#### Capture an image

Press the capture key.



## Applications 43

### **Set the preview mode and time**

Select Options > Settings > Photo preview time.

To activate the self-timer, or to capture images in a fast sequence, select Options and the desired option.

### **Video mode**

#### **Use the video function**

Press and hold the capture key.

#### **Start recording a video clip**

Press the capture key.

#### **Switch between camera and video mode**

In camera or video mode, scroll left or right.



### **FM radio**

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or accessory needs to be attached to the device for the FM radio to function properly.



## 44 Applications

### **Warning:**

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Select **Menu > Applications > Radio**, or, in the home screen, press and hold **\***.

#### **Search for a neighbouring station**

Press and hold the scroll key to the left or right.

#### **Save a station**

Tune to the desired station, and select **Options > Save station**.

#### **Switch between saved stations**

 
 
 
Scroll left or right to switch between stations, or press the corresponding number key of the memory location of a desired station.

#### **Adjust the volume**

Scroll up or down.

#### **Leave the radio playing in the background**

Press the end key.



## **Applications 45**

### **Close the radio**

Press and hold the end key.

### **Voice recorder**

Select Menu > Applications > Voice recorder.

#### **Start recording**

Select the record icon.

#### **Start recording during a call**

Select Options > More > Record. When recording a call, hold the phone in the normal position near to your ear. The recording is saved in the Recordings folder in Gallery.

#### **Listen to the latest recording**

Select Options > Play last recorded.

#### **Send the last recording in a multimedia message**

Select Options > Send last recorded.

### **Media player**

Your device includes a media player for listening to songs or other MP3 or AAC sound files.

## 46 Applications

### **Warning:**

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Select **Menu > Applications > Media player**.

#### **Start or pause playing**

Press the scroll key.

#### **Skip to the beginning of the current song**

Scroll left.

#### **Skip to the previous song**

Scroll left twice.

#### **Skip to the next song**

 
 
 
Scroll right.

#### **Rewind the current song**

Press and hold the scroll key to the left.

#### **Fast-forward the current song**

Press and hold the scroll key to the right.



## Maps 47

### Adjust the volume

Scroll up or down.

### Mute or unmute the media player

Press #.

### Leave the media player playing in the background

Press the end key.

### Close the media player

Press and hold the end key.

 
## Maps

### About Maps

 Select Menu > Maps.

With Maps, you can browse maps of different cities and countries, search for addresses and places of interest, and view your current position, if available. You can also plan routes, and get turn-by-turn navigation guidance.

If there are maps available in your device or on an inserted memory card, you can browse them without an internet connection. When you browse to an area which is not covered by the maps already downloaded in your device,



## 48 Maps

a map for the area is automatically downloaded through the internet. You may be prompted to select an access point to use with the internet connection.

Downloading maps may involve the transmission of large amounts of data through your service provider's network. For information about data transmission charges, contact your service provider.

Some services may not be available in all countries, and may be provided only in selected languages.

When you open Maps, select from the following:

**Current position** — View your current location.

**Recent locat.** — View the locations you have browsed.

**Find address** — Search for a specific address.

 
**Point me to** — View the direction to a destination, displayed in a straight line.

 
**Saved locations** — Find a location you have saved on your device.

**Plan route** — Plan a route.

**Settings** — Define the Maps settings.

Almost all digital cartography is inaccurate and incomplete to some extent. Never rely solely on the cartography that you download for use in this device.





---

## Maps 49

### Introduction

#### About positioning methods

 
 
Maps displays your location on the map using GPS or A-GPS.

 
The Global Positioning System (GPS) is a satellite-based navigation system used for calculating your location. Assisted GPS (A-GPS) is a network service that uses local network information to improve the speed and accuracy of the GPS positioning.

Downloading A-GPS data involves data transfer through your service provider's network. While roaming, that is, outside your service provider's network, the data transfer charges may be higher than expected. Therefore, by default, A-GPS is not used while roaming, but this means that calculating your location may take longer than when using A-GPS.

To allow using A-GPS while roaming, select **Menu > Settings > Connectivity > GPS > Net-assisted GPS**. For information about data transfer charges, contact your service provider.

The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The accuracy of location data can be affected by adjustments to GPS satellites made by the United States government and is





## 50 Maps

subject to change with the United States Department of Defense civil GPS policy and the Federal Radionavigation Plan. Accuracy can also be affected by poor satellite geometry. Availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. GPS signals may not be available inside buildings or underground and may be impaired by materials such as concrete and metal.

GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.

The trip meter has limited accuracy, and rounding errors may occur. Accuracy can also be affected by availability and quality of GPS signals.



 
### GPS receiver

Using the internal GPS receiver may drain the device battery faster.

### Use an external GPS receiver

- 1 Fully charge your compatible GPS receiver, and switch it on.
- 2 Set up a Bluetooth connection between your device and the GPS receiver.





## Maps 51

- 3 Place the GPS receiver in a position with an unobstructed view to the sky.
- 4 Open the Maps application, and select the external GPS receiver.

It may take several minutes to establish the first GPS connection. Subsequent connections are faster, but, if you have not used GPS for several days, or you are very far from the last location you used it, it may take a while to find a strong satellite signal.

You can also use Maps without a GPS receiver to browse maps, search for addresses and locations, and plan routes.



### **Navigate to your destination**

 
#### **Plan a route**

 
Select Menu > Maps.

- 1 Select **Plan route**.
- 2 Select **Starting point** and your current position, a saved or recent location, a place from the map, or a specific address as the start point of your route.
- 3 Select **Destination** and the end point of your route.

### **Show the route on the map**

Select Options > Show route > View map.





## 52 Maps

### **Navigate to the destination**

Select Options > Show route > Options > Start navigation.

### **View the details of the route**

Select Options > Route > Route details.

### **Clear the route**

 
 
Select Options > Route > Clear route.

 
### **Navigate to a destination**

Select Menu > Maps.

- 1 Select Plan route, and create a route.
- 2 Select Options > Show route > Options > Start navigation.
- 3 Accept the displayed disclaimer, if prompted.
- 4 Select the language for voice guidance, if prompted.

Downloading voice guidance files may involve transmission of large amounts of data (network service). For more information, contact your network service provider.





## Maps 53

 
### Repeat the voice guidance

Select Repeat.

### Silence the voice guidance

Select Options > Mute audio.

If you deviate from the set route, the device automatically plans a new route.





### Stop navigating

Select Stop.

### Navigate on foot

  Select Settings > Routing settings > Route selection > On foot. This optimises the routes you create for navigation on foot.




Cyan Magenta Yellow Black

## 54 Maps
 
### Drive navigation view



- 1 Route
- 2 Your location and the direction in which you are moving
- 3 Compass



## Maps 55

### Walk navigation view

 


- 1 Your location
- 2 Route to follow
- 3 Compass
- 4 Your route trail — Displays where you have been walking.
- 5 Destination


### View the direction to your destination

Select Menu > Maps.

- 1 Select Point me to.



Cyan Magenta Yellow Black


 


## 56 Web or Internet

- 2 To set your destination, select the appropriate option.
- 3 Select the desired location.

The straight line indicates the straightest route and the shortest distance to your destination. The route ignores any obstacles on the route, such as buildings and natural obstacles, or elevation differences.

  To help you identify where you are and keep in the right direction, red dots display the route you have been walking or driving.




### Web or Internet

You can access various internet services with your phone browser. The appearance of the web pages may vary due to screen size. You may not be able to see all the details on the web pages.

Depending on your phone, the web browsing function may be displayed as Web or Internet in the menu, hereafter referred to as Web.

 **Important:** Use only services that you trust and that offer adequate security and protection against harmful software.





---

## SIM services 57

 
For the availability of these services, pricing, and instructions, contact your service provider.

You may receive the configuration settings required for browsing as a configuration message from your service provider.

### Connect to a web service

Select **Menu > Internet > Home**. Or, in the standby mode, press and hold **0**.


After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.



### SIM services

 Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.





## 58 Green tips

 
### Green tips



Here are tips on how you can contribute to protecting the environment.


#### Save energy


When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet.



You do not need to charge your battery so often if you do the following:

  - Close and disable applications, services, and connections when not in use.
- Decrease the brightness of the screen.
- Set the device to enter the power saver mode after the minimum period of inactivity, if available in your device.
- Disable unnecessary sounds, such as keypad and ringing tones.





## Product and safety information 59

### Recycle

Most of the materials in a Nokia phone are recyclable. Check how to recycle your Nokia products at [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or with a mobile device, [www.nokia.mobi/werecycle](http://www.nokia.mobi/werecycle).

Recycle packaging and user guides at your local recycling scheme.

### Learn more

For more information on the environmental attributes of your device, see [www.nokia.com/ecodeclaration](http://www.nokia.com/ecodeclaration).



## Product and safety information

 
### General information

#### About your device

The wireless device described in this guide is approved for use on the (E)GSM 850, 900, 1800, and 1900 MHz networks. Contact your service provider for more information about networks.

Your device may have preinstalled bookmarks and links for third-party internet sites and may allow you to access third-party sites. These are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you access such sites, take precautions for security or content.





## 60 Product and safety information

### Warning:

To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.


When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Make back-up copies or keep a written record of all important information stored in your device.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

The images in this guide may differ from your device display.

 Refer to the user guide for other important information about your device.




### Network services

To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Network services involve transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can explain what charges will apply. Some networks may have limitations that affect how you can use some features of this device requiring network support such as support for specific technologies like WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols and language-dependent characters.

 Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons.





## Product and safety information 61

### Shared memory

The following features in this device may share memory: multimedia messaging (MMS), e-mail application, instant messaging. Use of one or more of these features may reduce the memory available for the remaining features. If your device displays a message that the memory is full, delete some of the information stored in the shared memory.

### Digital rights management

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10, OMA DRM 1.0, OMA DRM 1.0 forward lock, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.



### Accessories

#### Warning:

 
Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. In particular, use of unapproved chargers or batteries may present a risk of fire, explosion, leakage, or other hazard.


For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

### Battery

#### Battery and charger information

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-5C. Nokia may make additional battery models available for this



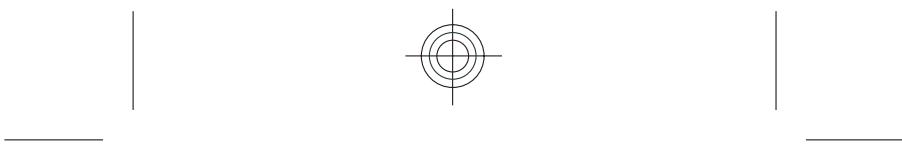

## 62 Product and safety information

device. This device is intended for use when supplied with power from the following chargers: AC-3. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, K, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

 
 
If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

 
Safe removal. Always switch the device off and disconnect the charger before removing the battery.

Proper charging. Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not short-circuit. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.





## Product and safety information 63

**Disposal.** Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

 
**Leak.** Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help.

**Damage.** Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

**Correct use.** Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

### **Nokia battery authentication guidelines**


Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from a Nokia authorised service centre or dealer, and inspect the hologram label using the following steps:




## 64 Product and safety information

### Authenticate hologram


- 1 When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.

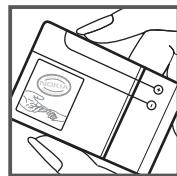

- 2 When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.

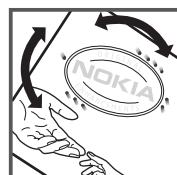

 Successful completion of the steps is not a total assurance of the authenticity of the battery. If you cannot confirm authenticity or if you have any reason to believe that your Nokia battery with the hologram on the label is not an authentic Nokia battery,



## Product and safety information 65

 
you should refrain from using it, and take it to the nearest Nokia authorised service centre or dealer for assistance.

 
For additional information, refer to the warranty and reference leaflet included with your Nokia device.

### Taking care of your device

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. When the device warms to its normal temperature from a cold temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.





## 66 Product and safety information

- Backup all data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any accessory.

### Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or [nokia.mobi/werecycle](http://nokia.mobi/werecycle).



### Additional safety information

The surface of this device is nickel-free.

### Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.



### Operating environment

This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

 


To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.



Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.





## Product and safety information 67

### Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy.

### Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

 
If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

 
 
### Hearing aids

Some digital wireless devices may interfere with some hearing aids.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.






## 68 Product and safety information

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

### Potentially explosive environments

 Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.




### Emergency calls

**Important:** This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device may attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

 To make an emergency call:





## Product and safety information 69

- 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
  - Insert a SIM card if your device uses one.
  - Remove certain call restrictions you have activated in your device.
  - Change your profile from Offline or Flight profile to an active profile.
- 2 Press the end key as many times as needed to clear the display and ready the device for calls.
- 3 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 4 Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

### Certification information (SAR)

**This mobile device meets guidelines for exposure to radio waves.**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.



 
 

 


## 70 Product and safety information

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.80 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 0.97 W/kg and when properly worn on the body is 0.89 W/kg.

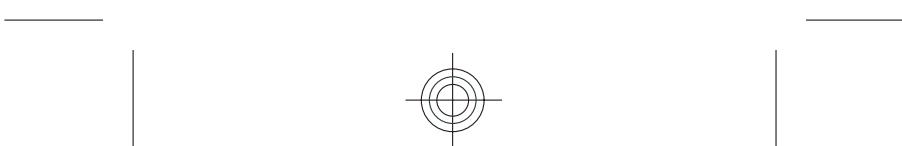

## DECLARATION OF CONFORMITY

CE 0434



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

Hereby, NOKIA CORPORATION declares that this RM-586 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

© 2010 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegl.com>.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

The availability of some features may vary by region. Please contact your operator for more details. The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications.

BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

FCC/INDUSTRY CANADA NOTICE  
Your device may cause TV or radio interference (for example, when using a

telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

xxxxxx/Issue 1 EN

## 74 Index

### Index

#### A

- access codes 16
- accessories 37
- applications 39
- audio messages 27

#### B

- backing up data 33
- battery 8, 11
- battery charge level indicator 18
- Bluetooth 34
- browser 56
- business cards 29

#### C

- cable connection 14
- calendar 40
- call log 30
- calls 20
- camera 42
- configuration 37
- contacts 29

#### D

- date and time 32
- display settings 32

#### E

- extras 41

#### F

- factory settings 38
- flash messages 27

#### G

- Gallery 39

- games 41

#### H

- headset 13

#### I

- image mode 42

- indicators 18

- internet 56

#### K

- keyguard 19

- keypad lock 19

---

Index 75

---

keys	15	<b>P</b>	
<b>M</b>		passwords	16
Maps	47	PIN code	16
— GPS receiver	50	predictive text input	23
— navigating	52, 54, 55	profiles	31
— positioning	49	<b>S</b>	
— routes	51	security code	16
media player	45	settings	31
memory card	9	— configuration	37
menus	23	— phone	36
message centre		settings, display	32
number	24	shortcuts	32
message settings	28	signal strength	
messages	26	indicator	18
microSD card	9	SIM card	8, 19
<b>N</b>		speed dialling	21
Nokia support information	7	support resources	7
number mode	21	synchronisation	33
<b>O</b>		<b>T</b>	
offline mode	19	text messages	24
operator menu	39	text modes	21
		to-do list	40
		tones	31
		traditional text input	22

---

---

**76 Index**

---

**U**

USB cable  
connection 14  
USB charging 11

**V**

video mode 42  
voice messages 27  
voice recorder 45

**W**

web 56  
write text 21