

Instruction Manual

RADIO CONTROL

FOR AGES 8 AND UP

Flying Saucer



CAUTIONS:

- DO NOT AIM AT PEOPLE OR ANIMALS.
- DO NOT ATTEMPT TO MODIFY FLYING SAUCER IN ANY WAY.
- DO NOT ATTEMPT TO FLY ANY OBJECT.
- PLAY IN THE CLEAR OPEN AREA.
- ADULT SUPERVISION IS RECOMMENDED WHEN USING THIS TOY.

MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE
THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:
- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

EXTREME
SPEED

- EASY TO FLY
- EXCITING FUN


RADIO CONTROLLER



BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER.
THIS UNIT REQUIRES 2 "AA" (1.5V) BATTERIES (NOT INCLUDED).
ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME.
REPLACE BATTERY COMPARTMENT COVER AND SCREW.
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE.
REMOVE THE BATTERIES WHEN NOT IN USE.
ADULT SUPERVISION IS RECOMMENDED.

CHARGING BOARD

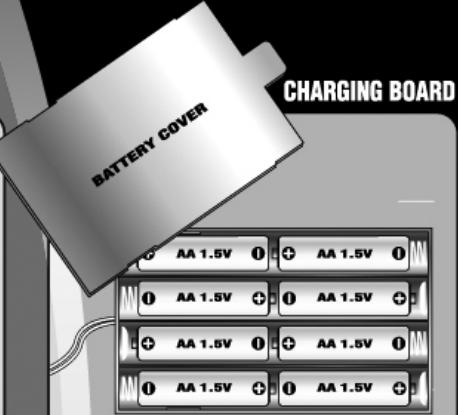

BATTERY REPLACEMENT

TO OPEN BATTERY COMPARTMENT COVER.
THIS UNIT REQUIRES 8 "AA" (1.5V) BATTERIES (NOT INCLUDED).
ALWAYS REPLACE ALL EIGHT BATTERIES AT THE SAME TIME.
REPLACE BATTERY COMPARTMENT COVER.
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE.
REMOVE THE BATTERIES WHEN NOT IN USE.
ADULT SUPERVISION IS RECOMMENDED.



1430 Valwood Parkway,
Suite 145,
Carrollton, TX 75006,
USA

NON-REPLACEABLE BUTTON CELL BATTERIES

MADE IN CHINA