

INSTRUCTION MANUAL

Click Chick

Walkie Talkies

CAUTION:
YOUR TRANSCEIVERS SET HAVE BEEN FULLY ADJUSTED PRIOR TO SHIPMENT. BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY. AFTER USE, ALWAYS TURN THE ON/OFF SWITCH TO 'OFF' POSITION. KEEP YOUR SET IN A DRY PLACE. TAKE OUT BATTERIES WHEN WALKIE TALKIES ARE NOT IN USE.

HOW TO OPERATE:
TO PUT BATTERIES INTO ONE PAIR OF WALKIE TALKIE. OPEN BATTERY COMPARTMENT WITH A SCREW DRIVER AND SNAP IN A 9 VOLT BATTERY TO EACH WALKIE TALKIE. REPLACE THE COVER FIRMLY.
TO OPERATE THE WALKIE TALKIE, TURN THE POWER ON/OFF. SWITCH TO 'ON'. PRESS THE 'PUSH-TO-TALK' BUTTON FOR TRANSMITTING AND SPEAK IN A NORMAL VOICE, LEVEL INTO THE CONDENSER MIC. RELEASE THE 'PUSH-TO-TALK' BUTTON FOR RECEIVING. THEN JUST LISTEN FROM THE SPEAKER. MORSE CODE KEY IS USED TO SEND A CALL SIGNAL. TO SEND CALL SIGNALS, PUSH THE 'PUSH-TO-TALK' BUTTON, PRESS THE CALL SIGNAL KEY AND QUICKLY RELEASE TO SEND A (DOT) OR HOLD KEY LONGER TO SEND A (DASH).
TO TURN OFF THE POWER, SWITCH THE POWER ON/OFF SWITCH TO 'OFF'.

BATTERY REPLACEMENT
REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. EACH UNIT REQUIRES 1 "9V" BATTERY (NOT INCLUDED). REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
DISPOSE OF BATTERY(IES) SAFELY.
DO NOT DISPOSE OF THIS PRODUCT IN A FIRE. THE BATTERIES INSIDE MAY EXPLODE OR LEAK.
THE BATTERIES ARE TO BE REMOVED AND NOT TO BE SHORT-CIRCUITED.
PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE.
REMOVE THE BATTERIES WHEN NOT IN USE.
ADULT SUPERVISION IS RECOMMENDED.

"MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE"
THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:
- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

KONG SHING

3940
PRINTED IN CHINA

Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.