



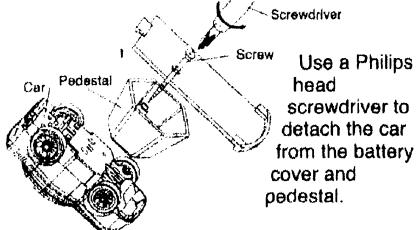


## PREPARATION

Twist dome cover counter clockwise to open. Slide battery cover/remove car from controller.

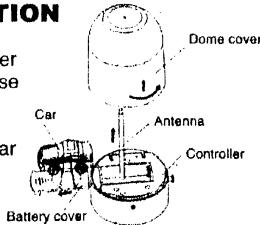

Use a Philips head screwdriver to detach the car from the battery cover and pedestal.

Place two "AA" alkaline batteries in controller and replace battery cover.

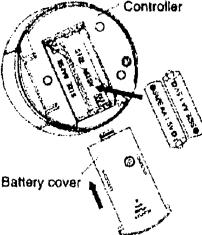


### BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER (THIS UNIT REQUIRES 2 "AA" BATTERIES (NOT INCLUDED)). ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE.


Insert antenna into hole at the top of controller. Turn clockwise to secure antenna. DO NOT OVER-TIGHTEN. Pull tip of antenna to extended.

SMART KIDS MODEL NO 8368  
FCC Tested To Comply  
With FCC Standards  
FOR HOME OR OFFICE USE

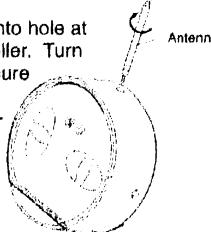


## OPERATION INSTRUCTIONS


To charge the car, open cover at the bottom of controller. Align metal clips on controller with the clips on the car and place car onto controller. The charging indicator light will come on when car is charging. After a full charge (approx 45 seconds) the light will turn off. Take car off controller.

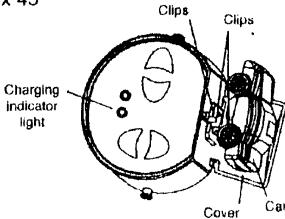

To make the car go, push the forward or reverse button. The car will turn left and right when the left and right button is pushed. The car will only turn left and right when it is moving in forward or reverse direction. The operating light will come on when car is in use. When indicator light becomes faint, it is time to replace batteries. While operating controller, make sure antenna is fully extended.

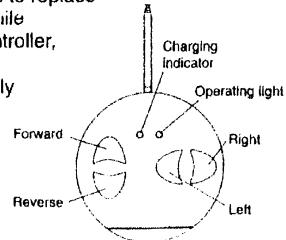

 Occasionally the car will sway left or right while moving in forward or reverse direction. To correct this, adjust the directional guide on the bottom of car as shown in the illustration below. This may need to be done a few times while operating car.



For best results operate on a smooth dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines. The manufacturer is not responsible for radio or TV interference caused by unauthorized modification of this equipment. Such modifications could void the users authority to operate the equipment.

"Modifications not authorized by the manufacturer may void users authority to operate this device"

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.