

**User Guide**  
**Gaming Tablets My Play**  
**Android 4.0**

Thanks for choosing this Game tablet. Please read carefully and following the instruction before handling and installing your device. Keep these instruction for further reference.

**Important notice:**

- Don't shake, or it may lead to damage to the product
- Only use components and accessories recommended by the manufacturer
- The illustrations of the product may vary from actual product
- To prevent fire or electric shock, do not put the appliance near objects filled with liquids
- The included power adapter is specific to the product. Using a different adapter may cause damage or accidents.
- Never open the product to clean, otherwise the warranty will be canceled
- Clean the outside of the product using a soft, dry cloth. Never use an abrasive pad, scouring powder or solvent such as alcohol or gasoline.
- At full volume,for an extended period of time can damage your hearing
- Please backup your data to your computer regularly, in case important personal data being deleted by mistake. When this device is used as a portable storage, please follow the correct file management instruction in this manual.

**FCC warning:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for A Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in A residential installation.

This equipment generates, uses and can radiate radio frequency energy and , if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

### **IC Caution:**

Contact Us : [www.dea-factory.com](http://www.dea-factory.com)

The products comply with the RSS-210 Annex 8 RF Exposure Compliance about the distance of 20cm.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **Introduction:**

The game tablet offers all the innovation of Android operation system for games, browsing and applications. Lightweight, tactile and ultra-connected, this device is the answer to all your mobility needs.

On a 7 inch touch screen evolving under Android 4.0, access internet using Wi-Fi and customized your games and applications through Android market.

This device is a game station for all your Android 3D games for mobility and on TV.

This device is a transportable audio/video center that can play movies and music in HD.

### **Main features:**

- 1.Video format: support 1080P(1920\*1080) full HD decoder
- 2.Game format: support PC grade H3D (HD real 3D), internet multiplayer games, Support Adobe flash version 10.3 and support online games.
- 3.HD camera: DC, DV function, support internet video calling and chatting.
- 4.Built-in full HDMI 1080P output.
- 5.HD color TFT 7 inch display 1024\*600 with crystal bright colors
- 6.Full 5-touch capacitive screen built-in for perfectly support of various games and application touch screen + button +360 degree joy stick +sensor overall contain all kinds of games and applications.
- 7.Support WIFI wireless internet, quickly open the webpage, support online games, video chatting, online TV and online video. Adopt top ARM-Cortex A8

kernel and now most advanced supposed type degree flow line. The speed of 1.2GHz dominant frequency is 15-10 times that of ARM9/11

8.Low power consumption

9.Powerful Mali400 GPU 3D graphics card built in with 2.0 GPU, supports a large scale of 3D games. RAM Memory is 1GB.

10.Support: USB-OTG, USB keyboard, support USB mouse and is plug and play.

11.Built-in android 4.0 Operating System, support internet marvelous quantity android utility software, dictionary E-book read PPTV electronics dictionary European common market stocks software etc, user can download mass internet applications.

### **Basic feature list**

1)Video: full formats support, 1080 P1920\*1080 pixel decode and RM/RMVB,

2)Support PPS, online TV and films,

3)Support flash player 10,X

4) Voice: full formats decode, multi-task play, enjoy music, read book and play games at the same time, multichannel output.

4)Camera

5)Photo function

6)DV function

7)Picture browsing

8)E-book (Adobe reader), PDF read function and iReader

9)Perpetual calendar


10)Calculator

11)IE Quickly open any website to see news, office applications, read online download support, webpage flash display.

12)E-mail, Office work support mail to send and receive, Word & Excel software open.

**13)Support multiple input method and handwriting input. Support (video) chatting**

## Product overview

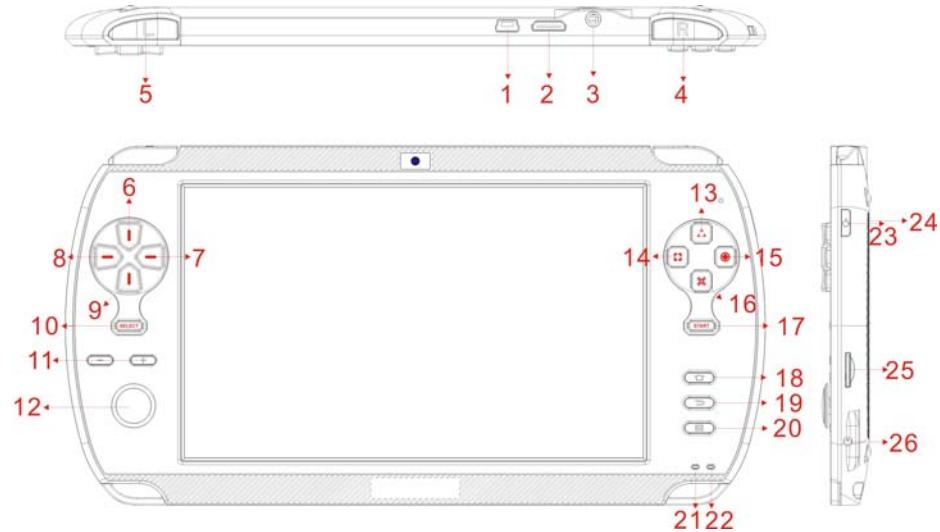

- 1)USB/OTG/HOST connector:Plug USB device for external USB expanding, browsing and data copy.
- 2)HDMI TV output interface: Connect though HDMI cable for TV display
- 3)Earphone output interface: Connect to earphone
- 4)R+
- 5)L+
- 6)UP:Press to move up
- 7)Right: Press to move right
- 8)Left: Press to move left
- 9)Down: Press to move down
- 10)Select: Press to select the target menu
- 11)VOL UP/DOWN:Press to increase or decrease the volume
- 12)360 degree 8-direction Joy Stick: Joy stick controlling
- 13)
- 14)
- 15)
- 16)
- 17) Start: Press to start menu or game
- 18) MENU: a.Press to enter the main menu.  
b.some applications need to use the menu to choose (quit) instead of ESC.  
c.Dynamic screen protection settings: at the menu of HOME interface, you can set dynamic screen protection.

19) ESC: Press to exit

20) F n: function key, use together with other keys for controlling

- F n + UP: volume increase
- F n + DOWN: volume decrease
- F n + LEFT: Home function
- F n + RIGHT: Suspend dormancy

21) Charge indicator

22) Power indicator

23) Power button: Press to turn on or off the device

24) Reset key: Press to reset the device

25) DC 5V charge interface: Connect to charge the device

### **Charging and battery management**

The new battery will be in its best condition after 2-3 times full charge and discharge. It is recommended that stop charging after four hours. The device can be charged with AC charger when it is on or off. Please charge it by the adapter provided together with the product.

#### **Note:**

- 1) Do not use other adapters to charge your tablet which can cause damage to the battery.
- 2) The tablet can be charged via USB cable when connected to your PC, but charging time is much longer than DC port.)
- 3) When the machine shows that power is not enough, please charge in time, lest the automatic shutdown.

### **Power on/shut down/sleep/wake**

- Power on: press long on the 'POWER' key about 5 seconds until screen display boot logo up and it will start up android operating system screen. If in charging mode, please hold the key for about 3 seconds and it will indicates the charging status. By holding the power key for over 3 seconds, you'll enter Android Operating System screen.
- Shut down: Hold the power button for over 3 seconds in boot up status until you get the power off table. Select power off and the system will be down.
- Dormant state: Press one second on the POWER key to release the sleep mode.
- Wake up: Press short on the POWER button in blank screen mode to wake up the operation
- Attention: if you do not use the Tablet PC, press for about 5 seconds on POWER key to shut down. The POWER indication will light up when it is in boot mode. The charging indication will light up when it is in charging mode.

## Lock/Unlock the screen(sleep mode)

**Auto Standby:** The device turns off the LCD display automatic into standby mode when no operation to the device in the system default or set standby time.


**Manual standby:** Short press the power key and device enter the standby mode to prevent wrong operation, saving power.

**Unlock the screen:** Short press the power key to active the screen. Hold the  icon and drag it to the  icon to unlock the screen.

## Reset

Use a pin to reset the tablet when the device is frozen or does not respond to any operations.

## Main interface:

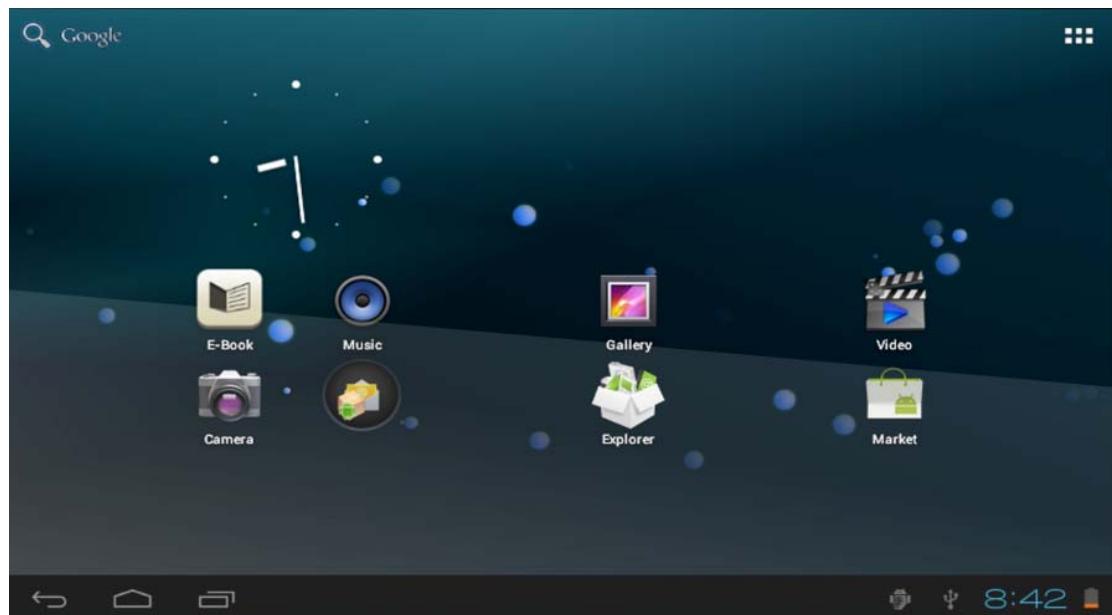

: Click this icon to return to the previous window.

: Click this icon to return to the home page.

: Click this icon pop up programs list running in the back ground.

: Click this icon to all application programs or widget interface.

: Click this icon into the search.

: Drag this icon to see the system information

- **Delete shortcut:** long press target shortcut icon, and then drag it directly to the "× Remove" location.
- **Add homepage icon:** in the main interface, click the "grid" to enter into all application programs and widget interface, long press the program icon or widget that you need to add, then it will be automatically added to the main interface, and drag this icon to the location where you want to place.
- **Change wallpaper:** In the main interface you can long press blank position, then popup an option box, choose and set the wallpaper.

### **Gravity Sensor**

If you open the gravity sensor function, the screen will automatically rotate according to the device direction.

#### **Turn on or turn off the Gravity sensor**

In quick settings panel interface, choose "auto-rotate screen" on or off to open or close gravity sensor. And in settings interface, click "Display", then "Auto-rotate screen" to open or close.

### **Input methods switch**

Tap and hold the text field to edit text or change input method.

### **Extended storage card**

The device has extended storage card slot to support storing files and applications onto storage card.

**[Tip]** 1, When the storage card is in use for reading or writing, do not take it out to avoid damaging the data and storage card.

2, When formatting the storage card on PC, please choose the FAT32 style.

**Unmount storage card:** In the main interface, click the "grid" → "setting" → "storage", in SD card option, click unmount storage card. To takeout the storage card, please push it to the slot, and then release, that will automatically release the storage card.

### **Computer connection**

**1)** Connect to PC with USB cable, it automatically pops up a "USB connected" screen at the bottom right corner. Hold and slide the icon "usb" upwards with your finger if the "USB connected" screen disappeared.

Press "Turn on USB storage" if you want to copy files between your computer and your tablet or TF card. Or press "Turn off USB storage" to safely disconnect from your computer.

2) Please do not change the directory name under the root directory to avoid the application error when reading files.

3) Make sure that the device has enough power, so as to avoid not being identified when connecting to computer.

**【Note】** (1) When connect the device to the computer, please ensure that the USB debugging function has been closed otherwise the computer cannot read data in the device; (2)Please confirm the computer communication operation has been stopped before removing.

### **Basic setting:**

In the main interface, click the "■" -"setting" icon. Setting interface is divided into four categories as "WIRELESS & NETWORKS", "DEVICE", "PERSONAL" and "SYSTEM".



### **Wireless & Networks**

Including: Wi-Fi, Data usage, VPN, Portable hotspot and mobile networks.

#### **WI-FI:**

Turn on the Wi-Fi network, the device will search Wi-Fi networks.

Choose the Wi-Fi network which you want to connect. Enter password if needed.

**〔Tip〕** ① If need to rescan for available networks, tap "scan" at the top right corner. ② Click "ADD NETWORK" then enter the SSID (name) of the network. If necessary, enter password or other network configuration details and press "Save". ③ By clicking "■" → "Advanced", you can do more Wi-Fi advanced

Settings. ④ In Wi-Fi settings interface, press the name of the network. Touch "Forget" in the dialog that opens.

## **Device**

Including sound, display, storage, battery and Apps.

### **Sound**

**Volumes:** Pressing the volume will popup a setting interface, you can set music,video, games & other media volume, notifications volume and alarms volume, then press OK.

### **Display**

Under "Settings", tap 'Display' to set Brightness, Wallpaper, Auto-rotate screen, Sleep and Font size.

1) **Brightness:** click the brightness, popup brightness Settings panel, drag the progress bar to adjust brightness.

2) **Wallpaper:** click the wallpaper, select wallpaper source (Gallery,Live Wallpapers,Wallpapers),choose your favorite wallpaper setting.

3) **Sleep:** The display has a screen timeout by default set to 2 min. If the unit is left inactive for that period of time, the screen will go dark as if turned off. However, it is simply in standby mode. Quick press the power button and a screen will appear with a white padlock button. This is your Screen Lock.

4) **Auto-rotate screen:** Turn on/off auto-rotate screen function.

5) **Font size:** The font we usually select normal by default set.

**Storage:** Click "storage" ,you can check the storage status of device, internal storage,SD card and usb storage.

**Battery:** It shows battery capacity left and elapsed time on battery.

**Apps:** You can view or setup applications of downloaded,on sd card and running state.

## **PERSONAL**

1. **Accounts & sync:** you can add or manage synchronized account.

2. **Location services:** Including "Google's location service" , "GPS satellites" and "location & google searching"

3. **Security:** Including "Screen security", "Passwords", "Device administration" and "Credential storage".

4. **Language & input:** Including "Language setting", "keyboard & input methods setting", "Speech" and "Mouse/Trackpad setting".

5. **Backup & reset:** you can backup and restore the system data. If you need to reset the device when severe error occurs or forgot the un-lock password, please make sure you have backup the system resources .

## **System**

- 1.Date & time: The date & time can be adjusted automatically or manually.
- 2.Accessibility: including service and system setting.
- 3.Developer options: Including "USB debugging", "development device ID", "Stay awake", "Allow mock locations", "HDCP checking", "Desktop backup password", "User interface " and "APPS".

- 4.About tablet :Including "System updates", "Status", "Legal information" and device information. Click on "system updates", if shows some new versions available, just click and download.

### **Apkinstaller**

In all apps interface, click Apkinstaller to enter install, manage and exit interface.

**Install:** Download apps from play store to the device or obtain the 3<sup>rd</sup>-party apps which can be suitable for Android platform, then copy them into this device and proceed the installation.

- ①Click "install", select path, it will automatically scan all the apps in this path.
- ②Press the apps you want to install.


【 Note 】 For this system 3<sup>rd</sup> party programs are ".Apk" suffix files.

### **Manage:**

- ①Click "manage", you can view the list of all installed applications in the system.
- ②Click on the application which you want to manage, popup "Action" dialog box;
- ③Click on "Launch", "Export", "Uninstall" or "Cancel", complete management actions.

### **File manager**

In all apps interface, click the "File manager" to enter the management interface.

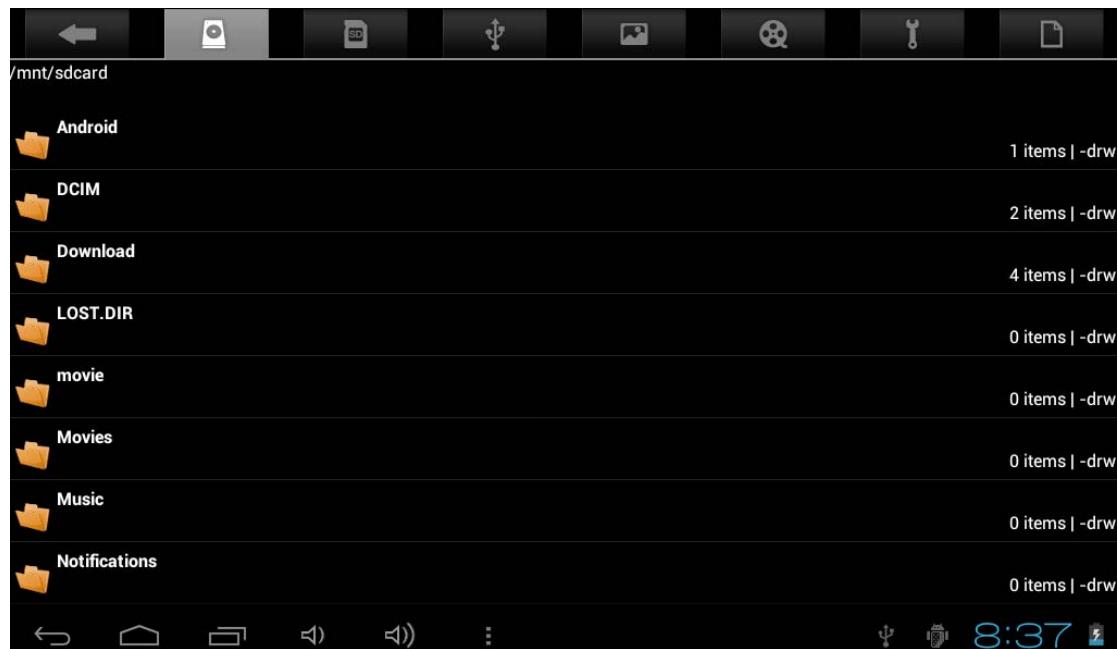

: Press to return to the last directory

: Press to display the files in the built-in memory

: Press to display the files in the TF card

: Press to display the files in the connected USB device

: Press to display all the image

: Press to display all the video

: Press to display the tool box for process info and Application backup

: Press to display the option paste, delete, copy and move

: Press to display the option for new directory, Search, setting and quit

### View photo

Click Gallery icon in the applications menu to enter the photo player interface as following.



Select one photo to start display.

 : Press to zoom in/ out the current image


: Press to start slideshow

: Press to display the menu

- a. Share photo
- b. Delete photo
- c. Plus( More details, define as, crop,rotate left,rotate right)

### **Listen to music**

Click music icon in the applications menu to enter the music player interface as following.

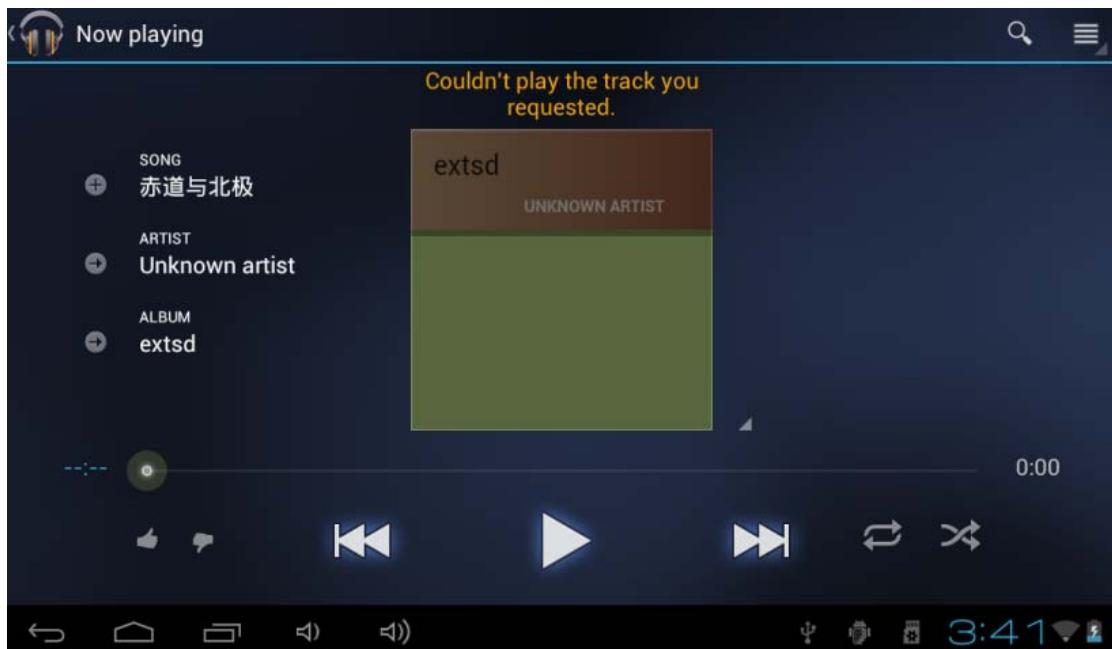


Slider finger across the screen from up to down to scroll the list of files to start.



## Video

Click Super HD player icon in the applications menu to enter the video player interface as following.

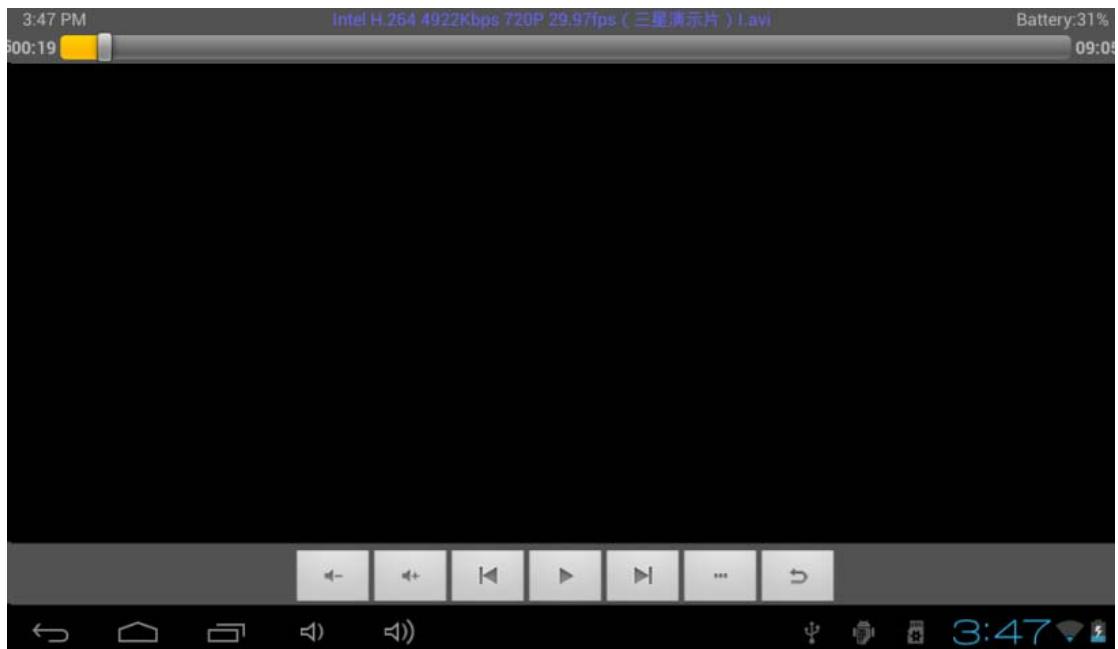

: Volume down/up

: Short press to last audio file and long press to rewind the video

: Press to start playback

: Press to pause the video

: Short press to next audio file and long press to forward the video

: Press to display the options for setting

:

Display the the playback time or move to a specific time of the video

## Browser

Click Browser icon in the applications menu to enter the web browser.



Press the remarked part to display the keyboard input. Click  to display the menu as below:

Refresh

New tab

New incognito tab

Share page

Find on page

Request desktop site

Save for offline reading

Page info

Setting

: Press to add bookmark

: Press to search or input the URL

: Press to display the bookmark/recently viewed page/save bookmark

## System specifications:

	Name	Parameter
1	CPU	ARM-Contex A8 1.5 GHz
2	3D GPU	Mail400
3	OS	Android 4.04
4	TV Out	HDMI1080P
5	LCD	TFT 7" HD 1024x680
6	Touch TP	capacitive
7	Memory expansion	Support Micro SD(TF) card expansion, support maximum32G
8	Internal storage	DDRIII 1GB
9	WiFi	802.11 b/g/n
10	USB	USB2.0
11	OTG	OTG/HOST
12	DC	2A ~ 230V
13	DV camera	1x 0.3mp + 1x 2mp
14	Joystick	360 degree 8 direction game control