

# Remote Operation

## SAT Mode

To use the features described in this section, make sure you are in SAT mode by pressing the SAT Mode button.

**Note:** Some features may not be available depending on your receiver model.



### Volume & Mute Buttons

Control TV volume  
Programming required (see C-4)

Press this button for SAT Mode



### Receiver Power & TV Power

Top button turns the receiver on/off,  
Bottom button turns the TV on/off  
Programming required (see C-4)

**Input**  
Press once for Input

**Receiver Menu**  
Access receiver features and settings

**Themes**  
Search for programs using Themes

**Recall**  
Go back to last channel viewed

**Info**  
Get info on programs

**Search**  
Search for a program

**Jump**  
Move cursor to another screen area

**Digital Video Recorder (DVR) Buttons**

Pause live TV and play or record programming

**Format**

Format the picture to the desired width to match the program you are viewing

**Picture-In-Picture (PIP) Buttons**

Watch two separate programs at once (in Solo PIP Mode)



### Page Buttons

Page up/down in menus and Guide

### Program Guide

Display current and future satellite program listings

### Browse

See what is on other channels while watching TV

### Arrows/Select Buttons

Channel up/down, navigate through menus and select a desired option

### View Satellite Programming

Exit out of any menu/guide and go back to viewing live TV

### Number Buttons

Enter a channel number to change to that channel

### System Wizard

Press and hold to sync remote and receiver data

### Dish

Explore DISH On Demand options