

Remote Operation

TV Mode

To use the features described in this section, make sure you are in TV mode by pressing the TV Mode button.

Remote programming is required. See **C-4** for instructions.

Note: If you have programmed the remote in Limited Mode (**C-5**), only the TV Power, Mute and Volume buttons will control your TV.



Note: Remote operation is different on DISH Network TVs. See your DISH Network TV User's Guide for proper operation.