

Remote Operation

DVD Mode

To use the features described in this section, make sure you are in DVD mode by pressing the DVD Mode button. You can use this mode to operate your VCR instead of a disc player. Remote programming is required. See page 2 for instructions.



DVD/VCR Power & TV Power

Top button turns the DVD player/VCR power on and off,
Bottom button turns the TV on and off

Input

Switch VCR between its TV & VCR mode

Back

Rewind a videotape or reverse a DVD

Stop

Stop playing a DVD, stop playing or recording a videotape

Record

Record on a videotape

Press this button for DVD Mode



Up/Down Arrow Buttons
Channel up/down on VCR

Pause
Pause a videotape or DVD

FWD
Forward a videotape or DVD

Play
Play a videotape or DVD

Number Buttons
Enter a channel number for VCR or a chapter title on a DVD