

Welcome to Fleetlink

Welcome to Fleetlink, FleetMind's fleet management solution. In this installation guide, you will learn about the Fleetlink Access Point 300, including how to install it. The guide is divided into three chapters (see "Using the Documentation" in this chapter), which will help you understand how the Access Point 300 works and the role it plays in the Fleetlink solution.

Important Safety and Compliance Information

Note This section applies to the Fleetlink Access Point 300 model, specifically model S-AP-300.

Before you install or use the Fleetlink product, read the FCC and other regulatory material found below, as well as in the other documents that accompanied your order.

This section provides information on the following topics:

- FCC compliance statement (USA)
- Industry Canada Certification

Warning To meet FCC/IC RF exposure guidelines, you must keep at least 8in. (20 cm.) from the antenna during operation.
