

0706 -2.4G Remote Control Wheeled Loader Instruction Manual



ROHS, 6P, EN62115, EN71.

Company: Hobbyengine Model Limited

Address: Rm 619, 6/F, Peninsula Centre, Tsim Tsui East, Kowloon, Hong Kong.

Website: www.hobbyengine.com.hk

PRODUCT FEATURES:

2.4G Radio control system on scale WHEELED LOADER model.
Hidden antenna on WHEELED LOADER & remote controller.
Aged decoration traces of oil rusted, muddled.
Full digital proportional control
Climb up to 20 degrees.
Independent loader control.

INCLUDED

1. 0706 WHEELED LOADER returned from site.....1
2. 2.4G Digital Radio Controller.....1
3. 7.2V X 800mAh Rechargeable Battery.....1
4. D.C 9V, 200mA, 1.8VA charger.....1

INSTALL BATTERY TO REMOTE CONTROL

1. Turn screw anti-clockwise on battery door to open.
2. Install batteries follow polarities crafted inside battery compartment.
3. Cover the battery door and tighten the screw clockwise.
4. Push the slide switch on front panel to "ON" mark. A Red LED below will be luminate to show installation was activated.



INSTALL BATTERY ON WHEELED LOADER

1. Turn screw anti-clockwise on battery door under WHEELED LOADER to open.
2. Plug with fully charged battery pack on socket in battery compartment.
3. Cover the battery door and tighten the screw clockwise.
4. Activate WHEELED LOADER by sliding switch to "ON".

REMARKS: Charge the battery pack 6 hours for the first time, 4 hours from 2" time.



MATCH THE REMOTE CONTROLLER TO THE WHEELED LOADER

 
1. Slide remote controller power switch to "ON". LED luminate to Red.
2. Slide WHEELED LOADER power switch to "ON".
3. Press "MATCHING" button on top deck of WHEELED LOADER. The LED on side will be flash for 5 seconds.
4. LED stop flashing, the WHEELED LOADER is already matched with controller and ready to work.



2.4G REMOTE CONTROLLER BUTTON MAP




MOTION CONTROL




Forward by pushing left joystick to the front. (image attached)



 Backward by pushing left joystick to the back. (image attached)



 Left turn by pushing right joystick to left. (image attached)



Right turn by pushing right joystick to right. (image attached)



Operating arm move up by pressing (L1) button. (image attached)



Operating arm move down by pressing (R1) button. (image attached)



lower down hook by pressing (L2) button. (image attached)



Lift up hook by pressing (R2) button. (image attached)

TROUBLE SHOOTING

1. Check the battery connection on remote controller or replace with new battery.
2. Check the battery connection inside WHEELED LOADER battery compartment or recharge battery.
3. Repeat matching procedure by switching remote and WHEELED LOADER on again. Press the matching button.
4. Contact us at our Email: info@hobbyengine.com.hk

SAFETY

1. Operation temperature 5°C-38°C
2. Recharge battery ONLY with charger included in packing.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



HOBBY
HOBBY ENGINE