

MINI RADIO CONTROL HELICOPTER



ITEM NO. 0205

STORM-IV



* Only one Decal set contain in each box, please see box for set indication.

KEY FEATURES

- > Digital Speed Control
- > Digital Proportional Control
- > 90 mah long lasting Battery
- > Fast Charging Function
- > Crush Resistance
- > With Lights
- > Easy Trimming Function

INCLUDED PARTS

- > 2 sets Of Main Rotors
- > 1pc Of Tail Rotor

IMPORTANT NOTES

1. Check the content list and all parts.
2. Study the instruction manual carefully before use.
3. Ensure all required batteries are ready.
4. Follow the instructions printed in manual when using the quick charger.
5. This product is intended for 8 years old and over.
(Adult supervision is required if user is below 8 years old).
6. Do not fly over or near people, power pylon, buildings, highways, train, rails, vehicles, trees, lake, and airport.

FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



BATTERY WARNING

Keep packaging as it contains important information.

CAUTION: To prevent battery leakage:

Be sure to insert batteries correctly and always follow the product and battery manufacturers instructions. Never mix old and new batteries (replace all batteries at the same time).

Never mix Alkaline, standard (Carbon Zinc) or rechargeable (Nickel-Cadmium) batteries.

Only batteries of the same or equivalent type as recommended are to be used.

Do not use RECHARGEABLE batteries, unless specified.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged (if removable).

Rechargeable batteries are only to be charged under adult supervision (if removable).

Always remove exhausted or dead batteries from the product.

Remove batteries from product before extended storage.

The supply terminals are not to be short-circuited.

Batteries are to be inserted with correct polarity.

Batteries may explode or leak if misused.

ATTENTION: Battery / Batteries should be installed by adult only.

SPECIAL CAUTIONS FOR LI-POLY RECHARGEABLE BATTERY:

- Keep the battery away from water, heat or fire.
- Charge the battery by the provided charging plug and transmitter only.
- Never put any objects into the helicopter charging plug.




PROPER PLACE FOR OPERATION

- Choose a place free from obstacles.
- For best performance, it is recommended to operate the helicopter indoor without air-flow caused by electric fan or air-conditioner.
- Strong light may interfere with the transmitting and receiving system.

WARNING

- When the helicopter continues to spinning in any one direction, first try to make adjustment by following the "TRIMMING INSTRUCTION". If the situation remains unchanged, then please check the Tail Rotor, and make change if necessary (follow the "TAIL PROPELLER REPLACEMENT")
- Do not operate the helicopter; when any of the rotors is stuck under any circumstances. Forcing any rotor to turn when stuck could damage mechanism of the helicopter.
- Keep the helicopter within 5 meters/26 feet from yourself as it is the maximum control range of your Sky Copter.
- Remember to switch off the power of the transmitter and helicopter when not in use.


PARTS DESCRIPTION

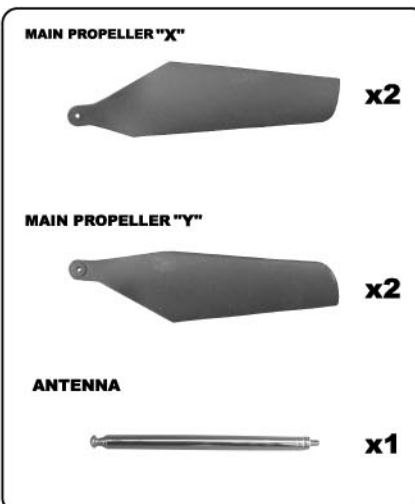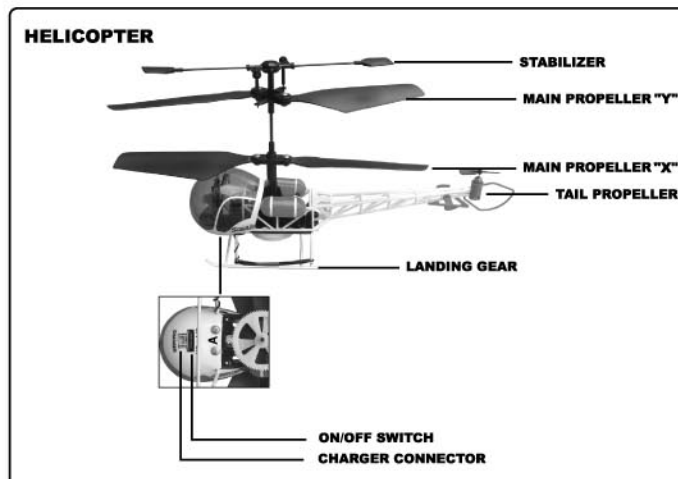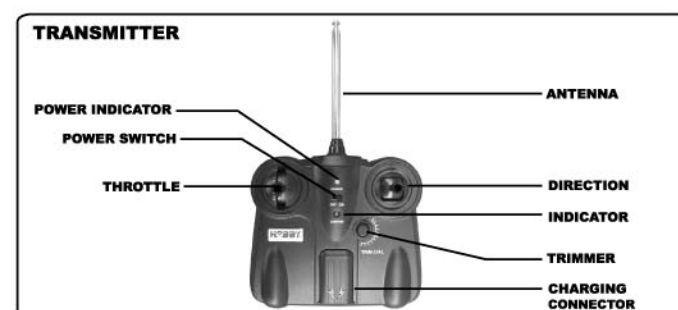


BATTERY INSTALLATION



CHARGING BATTERY

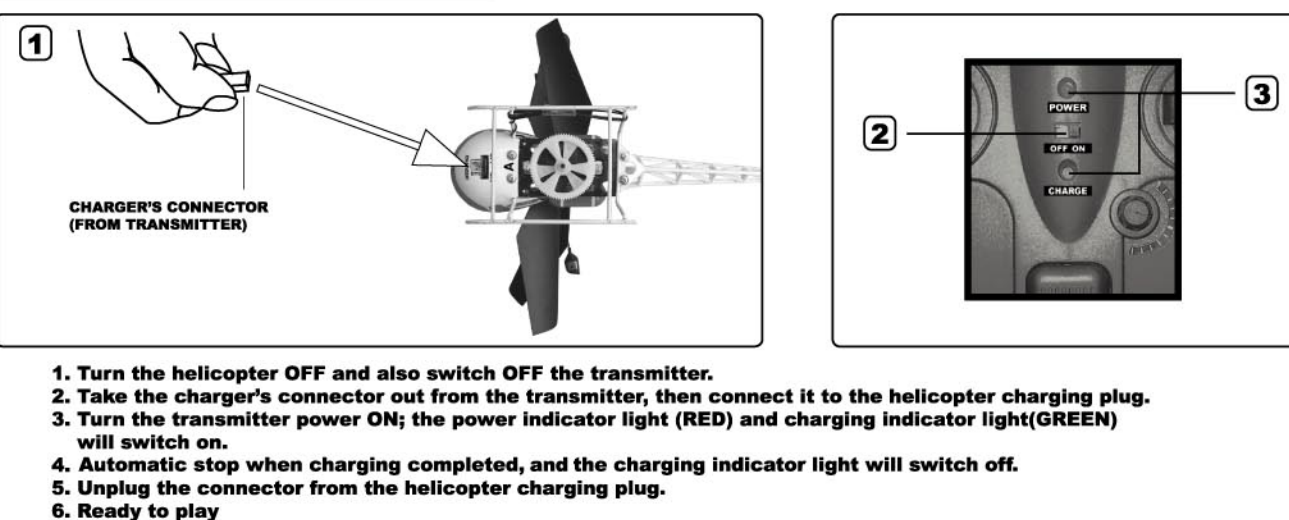

CONTROL INSTRUCTION

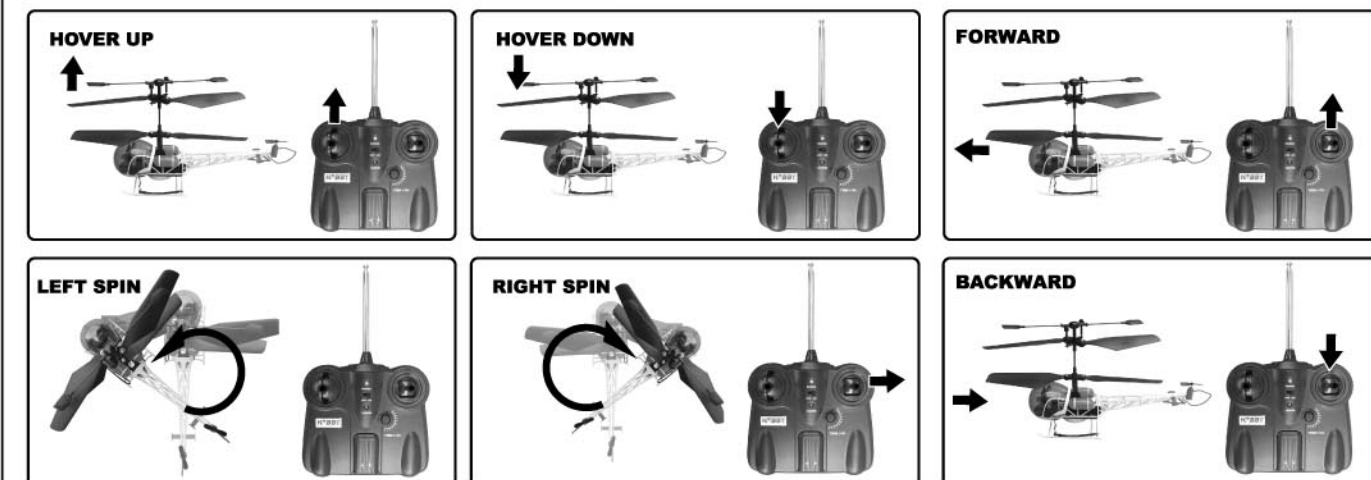

TRIMMING INSTRUCTION




IF the helicopter keep turning clockwise, turn the "TRIM BUTTON" on the transmitter clockwise until the helicopter stop turning and fly straight.



IF the helicopter keep turning COUNTER clockwise, turn the "TRIM BUTTON" on the transmitter COUNTER clockwise until the helicopter stop turning and fly straight.

BAND IDENTIFICATION

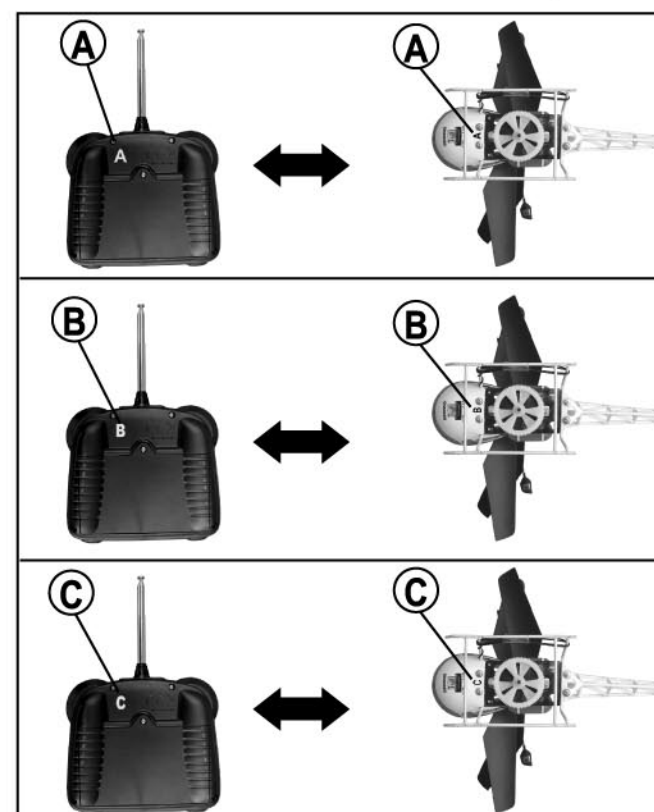

MAIN PROPELLER REPLACEMENT



To replace main propeller, please switch OFF the helicopter first. Then slowly pull out the main propeller away. And then carefully install a new propeller.