

SECTION 3: Photographs

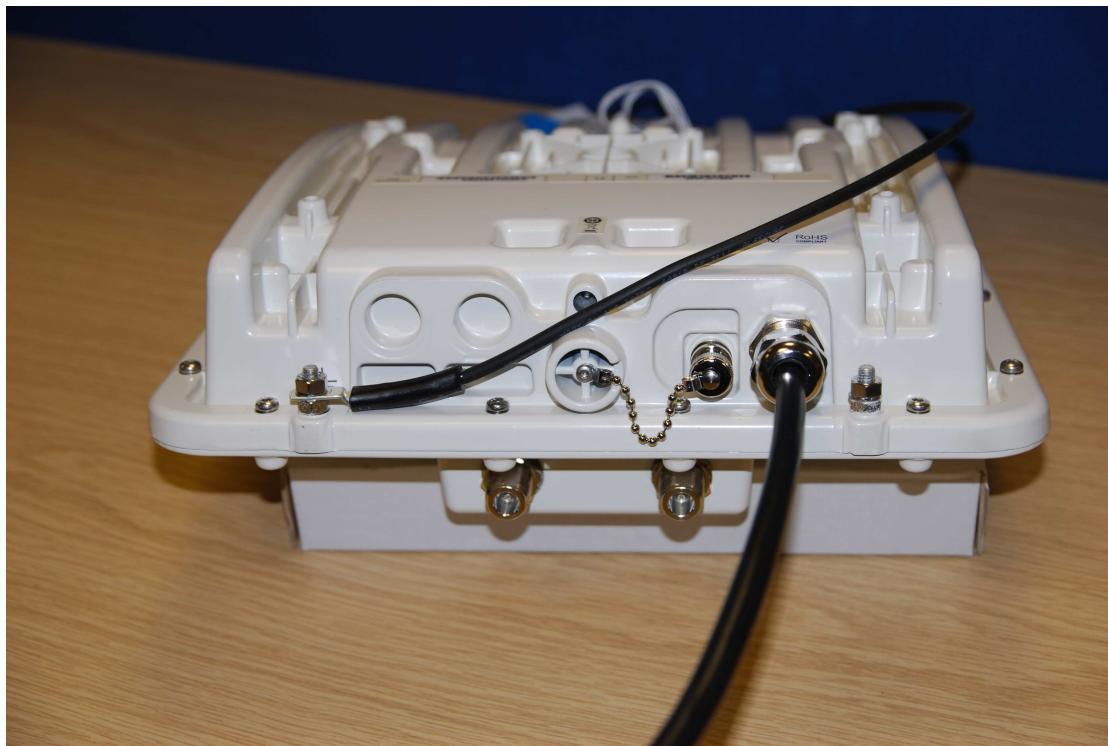


Figure 1: PTP 5xx00 terminal showing all interface connectors.

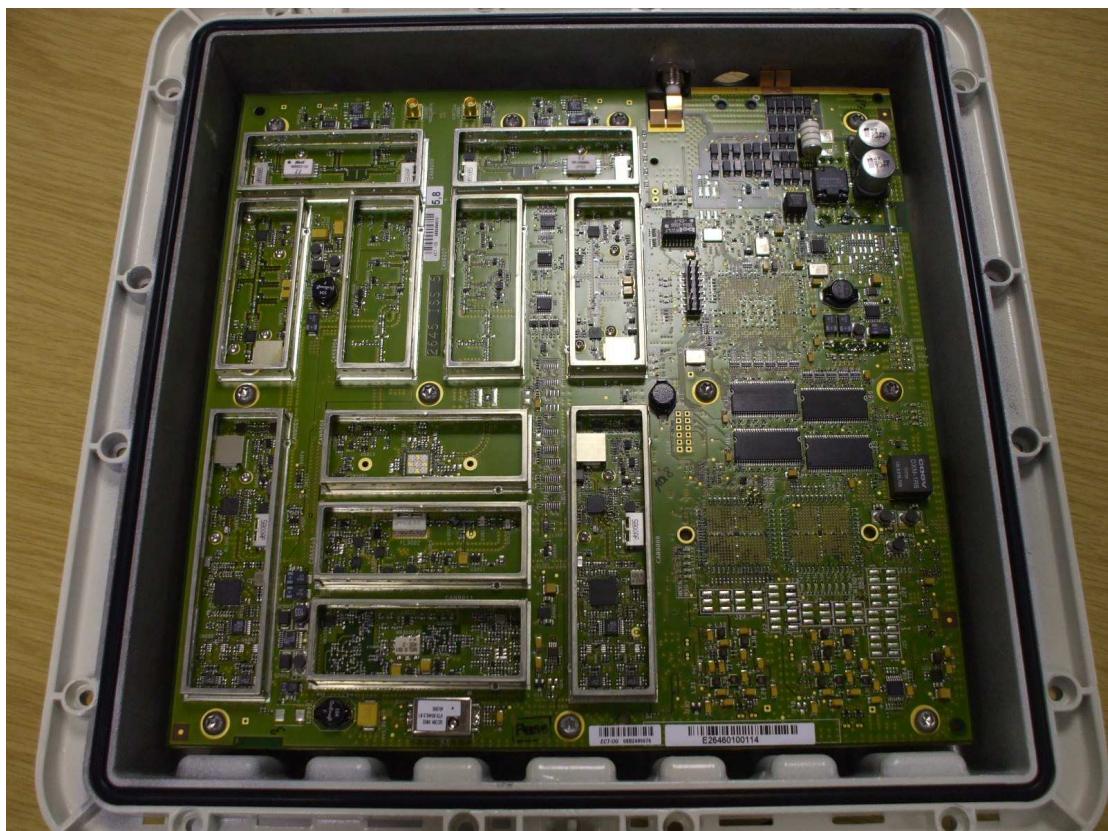


Figure 2: PTP5xx00 with cover plate and screening cans removed to show internal assembly.



Figure 3: PTP5xx00 with cover plate and screening cans removed to show internal assembly.

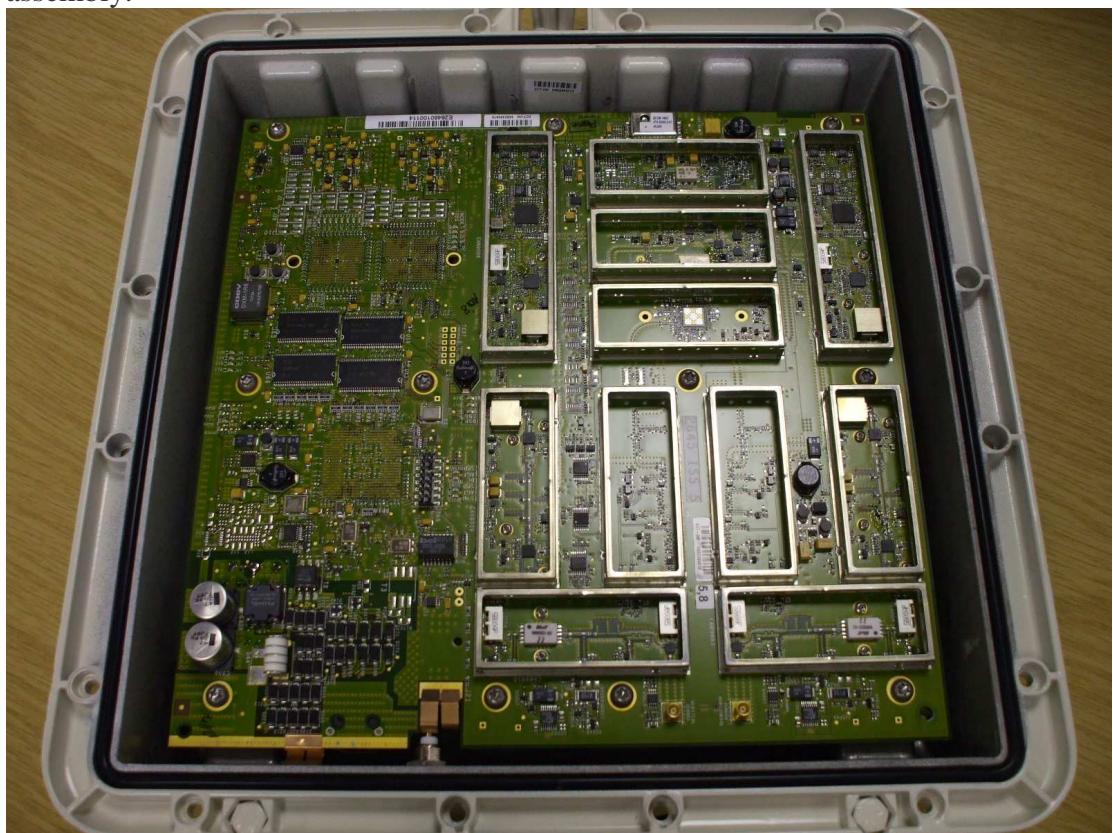


Figure 4: PTP5xx00 with cover plate and screening cans removed to show internal assembly

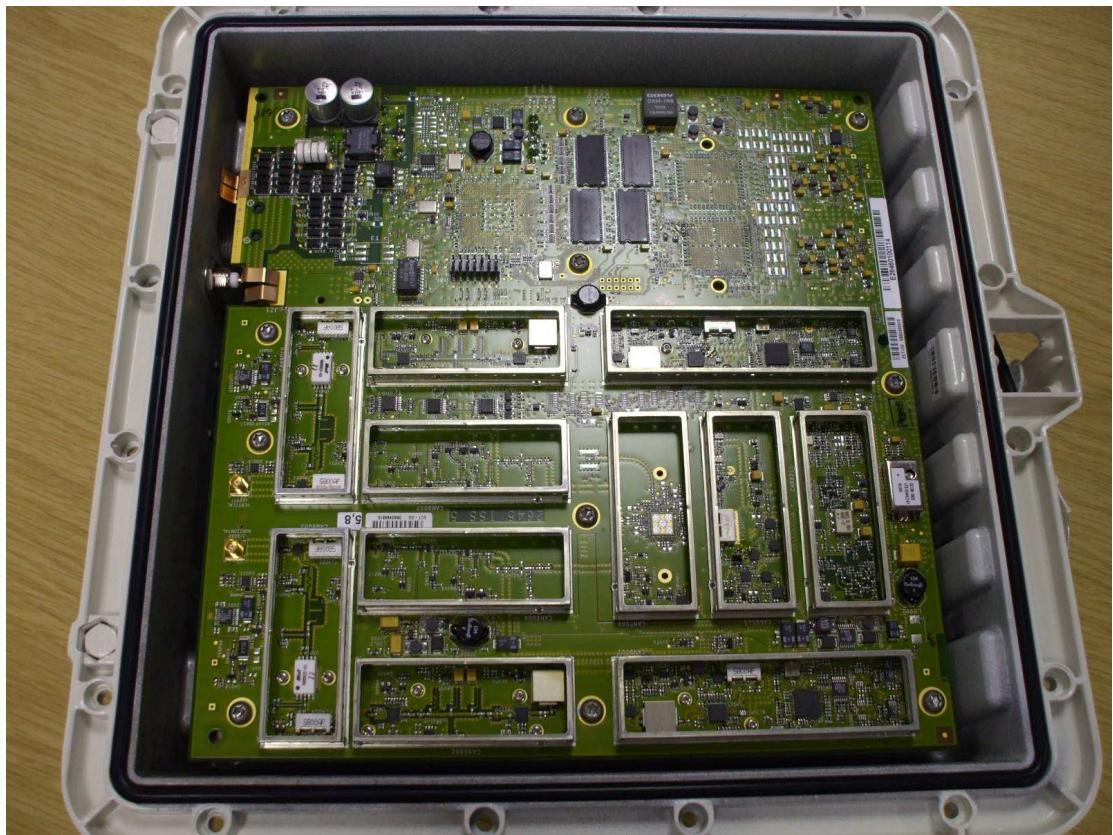


Figure 5: PTP5xx00 with cover plate and screening cans removed to show internal assembly