

User's Manual for VSS-5830 5.8GHz Wireless Video Server

Document Number : PSS08002

Page : 1 of 51
Revision : 1A
Date : 2008-04-13

CHUNG-HSIN ELECTRIC & MACHINERY MFG. CORP.
URL: <http://www.chemlink.com.tw/>

About this document

This software quick manual is intended for user of 5.8 GHz Wireless Video Server. The default IP setting of Wireless Video Server is **DHCP**. Please refer to user manual of Wireless Video Server, if there is not DHCP Server on your network.

IMPORTANT

- Check **PC specification requirements**

- Check **OS platform requirements**

- Install **IPSurveillance Application Software** before you start working with Wireless Video Server.

- Read special notes and important configuration information.

TABLE OF CONTENTS

1. PRODUCT OVERVIEW	5
2. PRODUCT CD	6
3. BEFORE YOU INSTALL SOFTWARE.....	6
4. LANGUAGE SUPPORT.....	6
5. HOUSING and CONNECTORS	7
Front side look	7
Back side look.....	9
6. FIRST TIME USE INSTRUCTIONS (read carefully)	11
INSTALL IPSURVEILLANCE APPLICATION SOFTWARE	11
WHICH BROWSER TO USE?.....	11
POWER ON Wireless Video Server	11
CONNECTING TO NETWORK.....	11
FACTORY SETTING - INITIAL IP ADDRESS	11
USING IPSCAN	12
CHANGE NETWORK SETTINGS BY IPSCAN	14
7. ACCESS Wireless Video Server.....	16
BROWSER	16
INSTALL AND RUN ACTIVEX CONTROL	17
INITIAL USERNAME & PASSWORD.....	18
VIEWING AND OPERATTING PAGE	18
CONTROL PANEL SETTINGS	20
8. WEB INTERFACE SETTINGS.....	21
STATUS.....	22
NETWORK.....	23
STATIC IP.....	23
DYNAMIC IP	24
PPPoE SETTINGS.....	25
VIDEO	26
VIDEO SETTINGS	26
COLOR SETTINGS	28
VIDEO PREVIEW	28
MAX CLIENT LIMIT	29
EVENT RULE	29
EVENTS HANDLED	30
ACTIONS TRIGGERED.....	31

RULE LISTS - ADDING/DELETING.....	31
MODIFYING RULE LISTS.....	31
CAPTURE	32
DATE & TIME	33
OSD.....	34
DWELL MODE SETUP (ATUO-SCAN MODE).....	35
PTZ CONTROL.....	36
PORT	36
DDNS.....	38
SMTP/FTP	39
E-MAIL – SMTP SETTINGS	39
FTP SETTINGS.....	40
TRIGGER SETUP	41
Digital INPUT.....	41
PERIODIC TIMER.....	41
MOTION DETECTION	42
Video Loss	44
PRE/POST SETTING	44
ACCOUNT	45
SECURITY	46
MAINTENANCE.....	48
9. FACTORY DEFAULT.....	49
10. REBOOT	49
11. LOGOUT.....	49
12. USB Config Port - FIRST TIME EXPERIENCE.....	50
SUPPORTED OS.....	50
NO SOFTWARE INSTALLATION REQUIRED.....	50
STEPS FOR USING USB config port (Windows XP PC).....	51

1. PRODUCT OVERVIEW

VSS-5830 is the first 5.8GHz wireless video server. By installing a 5.8GHz transmitter in each of your analog camera, and a built-in 8-channel receiver in VSS-5830, VSS-5830 can connect up to 8 cameras wirelessly without interference from all devices operating from 2.4GHz, such as Bluetooth and Wi-Fi. VSS-5830 also has a built-in video server that connects to the internet, enables you to view and record video from 8 cameras (one at a time), and set auto-scan time freely (from 1-120 seconds) on each channel either locally or over the internet.

Wirelessly remote control PTZ speed dome over the internet and remote control locally features are also available with additional purchase.

You can set up PTZ module function that show in page 36

When you finish the set up function then the screen will display

Control manu as shown page 19

2. PRODUCT CD

Product CD in the package contains the following:

- 📁 IPSurveillance Application Software NVR management software
 - 🕒 16CH Live View / Recording / Playback
- 📁 User Manuals

3. BEFORE YOU INSTALL SOFTWARE

- 📁 PC running Microsoft Windows XP Server Pack 2 or above is only capable of running IPSurveillance Application Software software.
- 📁 PLEASE go through IPSurveillance Application Software user's manual before installation to check further PC requirements in order to ensure smooth software operation.

4. LANGUAGE SUPPORT


- 📁 ENGLISH

NOTE

IPSurveillance Application Software™ setup will auto-run when inserting product CD. Pay attention to dialog box questions before you press **OK button.**


5. HOUSING and CONNECTORS

Front side look

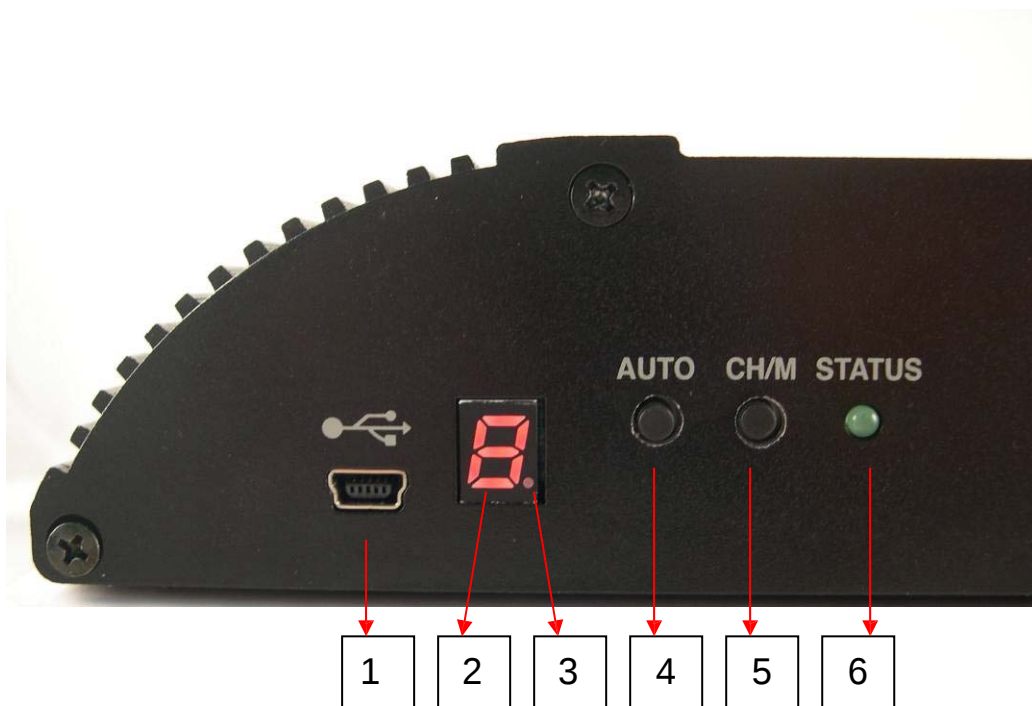


- 1: miniUSB Port for configuration (for IP address setting only)
- 2: Channel or mode number display. This indicates mode number (Mode 1 ~ 9), if it is flashing. Or, this indicates channel number (CH 1 ~ 8 for wireless receiver, CH 9 for wire input), it is bright.
- 3: Fixed channel mode or auto-scan mode display. This indicates auto-scan mode,

- if the dot display is bright. Or, this fixed channel mode, if the dot display is off.
- 4: Push button for changing fixed channel mode or auto-scan mode
 - 5: Push button is for changing channel number, if it is at fixed channel mode. And, it is for changing mode number, if it is auto-scan mode.
 - 6: LED for System Status

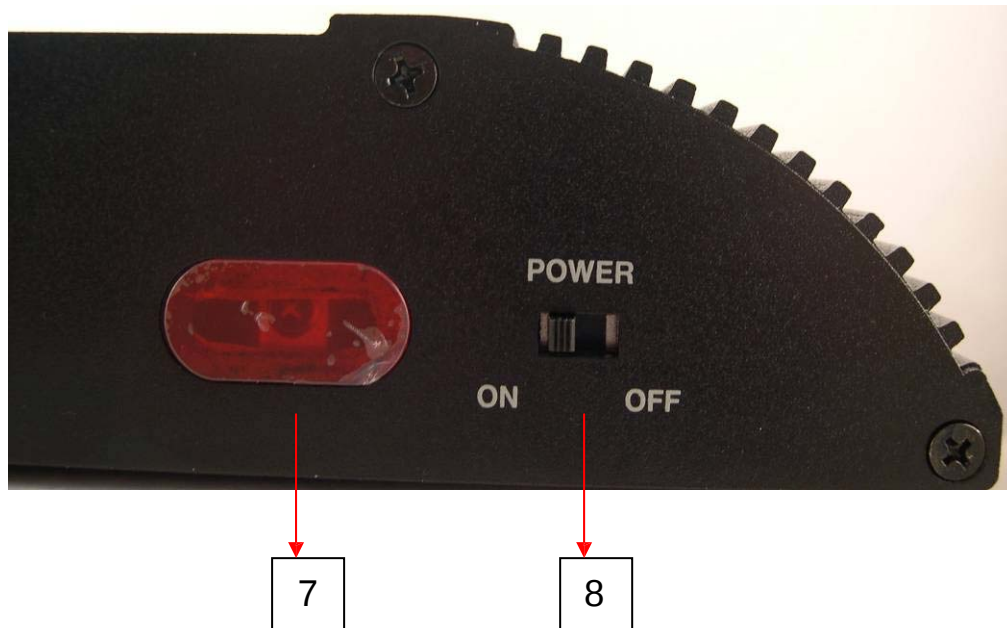

- 7: IR Receiver
- 8: Power switch

Back side look

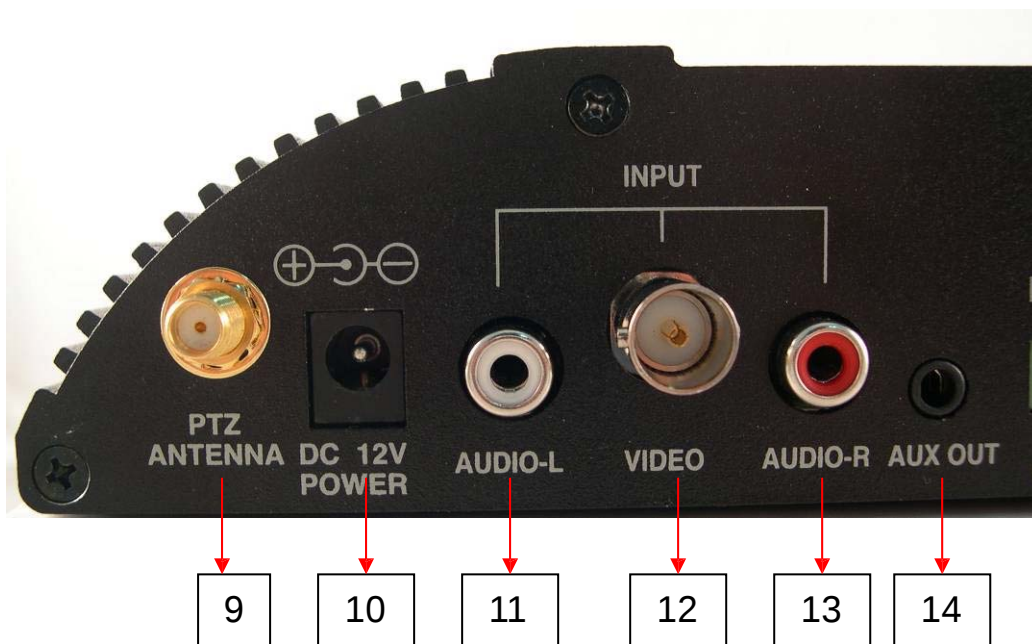

9: SMA connector for wireless PTZ antenna. It disappears, if wireless PTZ is not built in this device.


10: Power Jack for 8 ~ 32 VDC input

11: RCA connector for audio left input (CH 9)

12: BNC connector for video input (CH 9)

13: RCA connector for audio left input (CH 9)

14: A/V jack for audio and video output

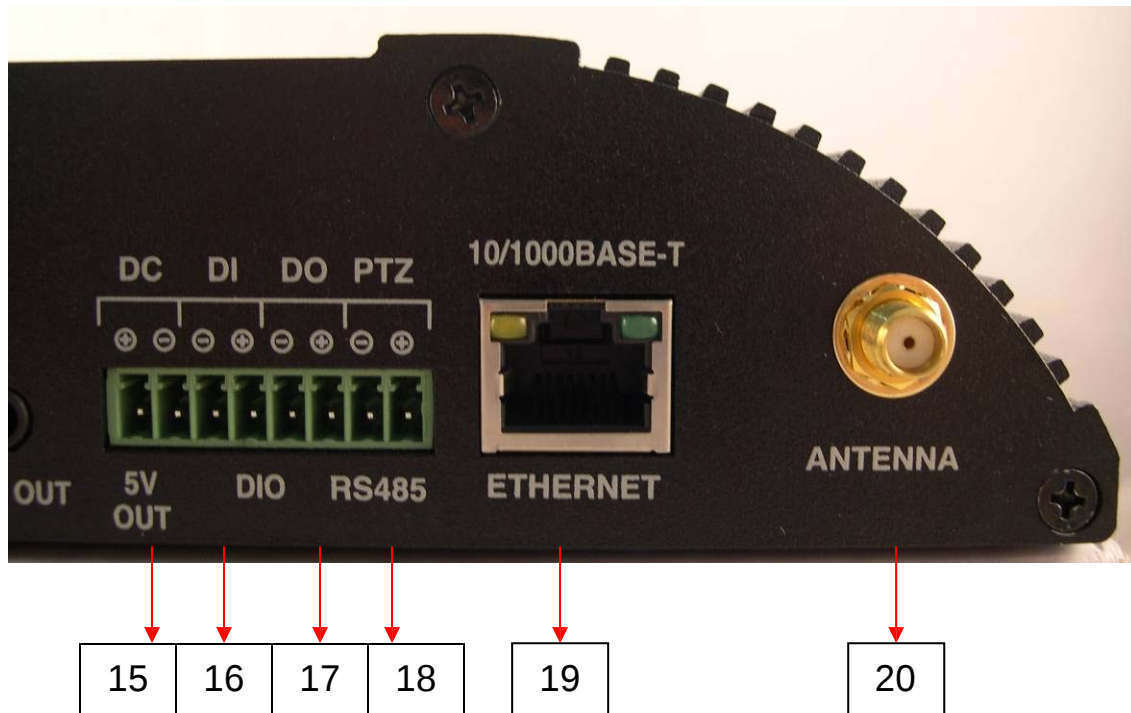

15: 5V DC output

16: Terminal block for digit input, if wireless PTZ is not built in this device. There is no function, if wireless PTZ is built in this device.

17: Terminal block for digit output, if wireless PTZ is not built in this device. There is no function, if wireless PTZ is built in this device.

18: Terminal block for RS-485, if wireless PTZ is not built in this device. There is no function, if wireless PTZ is built in this device.

19: RJ-45 connector for Ethernet

20: SMA connector for 5.8 GHz antenna

6. FIRST TIME USE INSTRUCTIONS (read carefully)

INSTALL IPSURVEILLANCE APPLICATION SOFTWARE

Install **IPSurveillance Application Software**. **IPScan** is a software utility to find your wireless video server on the network. It is a part of IPSurveillance Application Software.

WHICH BROWSER TO USE?

We strongly recommend Microsoft IE browser version 6 or higher. Mozilla Firefox and similar others are not guaranteed to work with Wireless Video Server.

POWER ON Wireless Video Server

Power on video server by using power adapter provided in the product package. Connect power adapter to AC socket.

CONNECTING TO NETWORK

Connect a standard CAT5 Ethernet cable to RJ45 socket on Wireless Video Server and connect other end to your network hub/switch. Make sure the PC you want to access Wireless Video Server is on the same network domain which has DHCP server.

FACTORY SETTING - INITIAL IP ADDRESS


IP Address: DHCP

USING IPSCAN

IPScan software is the quickest way to make sure we can find Wireless Video Server on your network. **IPSurveillance Application Software** setup will install two applications. You can see as shown below.




Select **IPScan**. The following window appears after you select “**IPScan**” from start menu.

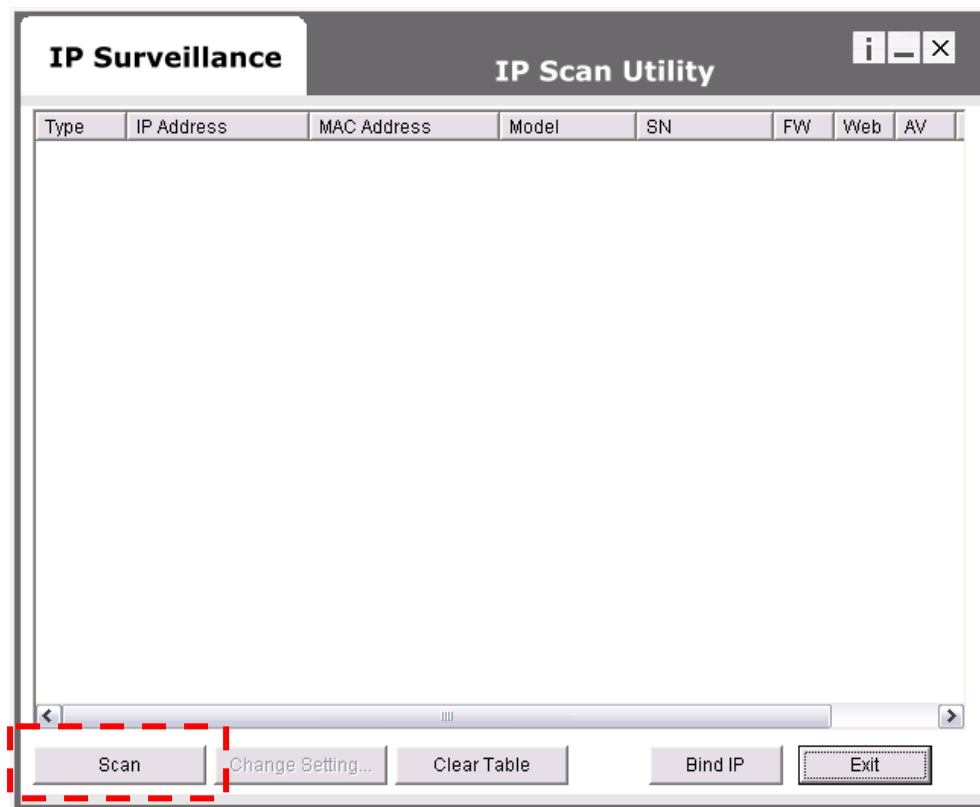

Press **Scan** button to list the IP and MAC address table. To refresh, press **Clear Table** and press **Scan** again.


You will find the list of IP and MAC address listed. To identify your Wireless Video Server you can check the label for MAC address.

To quit **IPScan** anytime, click **Exit**.

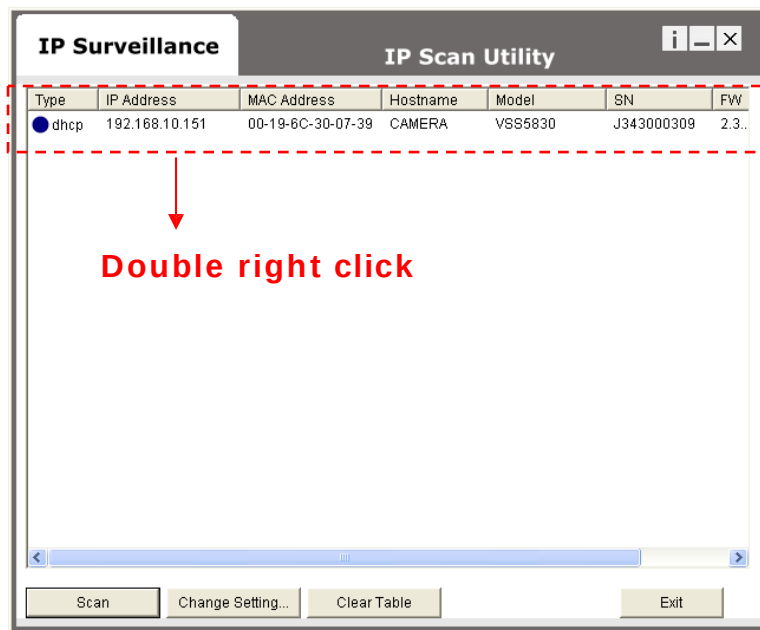


If you want to quickly open the IP you see on IPScan on your browser, select an IP and do a "double right click" on your mouse/touchpad. You can see the browser window open that IP.

CHANGE NETWORK SETTINGS BY IPSCAN

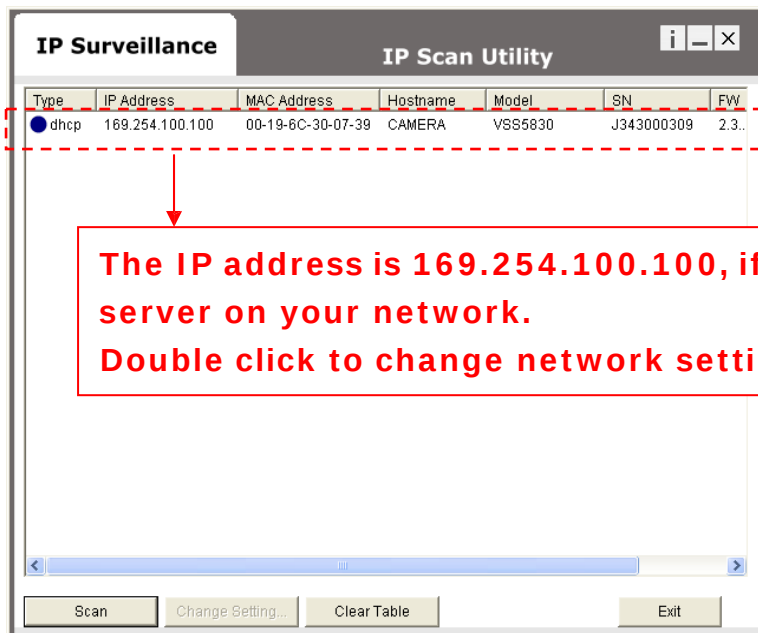

You can double click a specific IP address and change some basic network parameters. A dialog box will appear as follows.

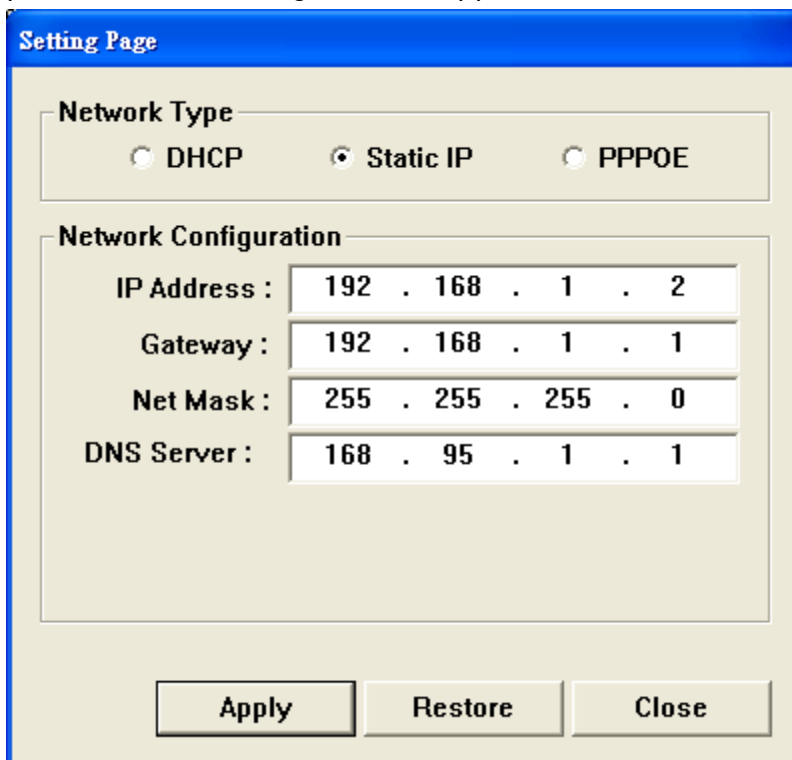

Change any settings you want to make and make sure you have correct values in all fields. Click **Apply**.

Within 10 seconds, the dialog box should disappear to indicate new


settings are accepted and being applied. Wait for around 30 seconds, before trying to refresh IP list. Click **Clear Table** and click **scan** again.

You should be able to find MAC address of video server under new IP address. Wireless Video Server is online on your network. Use **ping** command from Windows command prompt to double check if IP is reachable.

To quit **IPScan** anytime, click **Exit**.

7. ACCESS Wireless Video Server

BROWSER

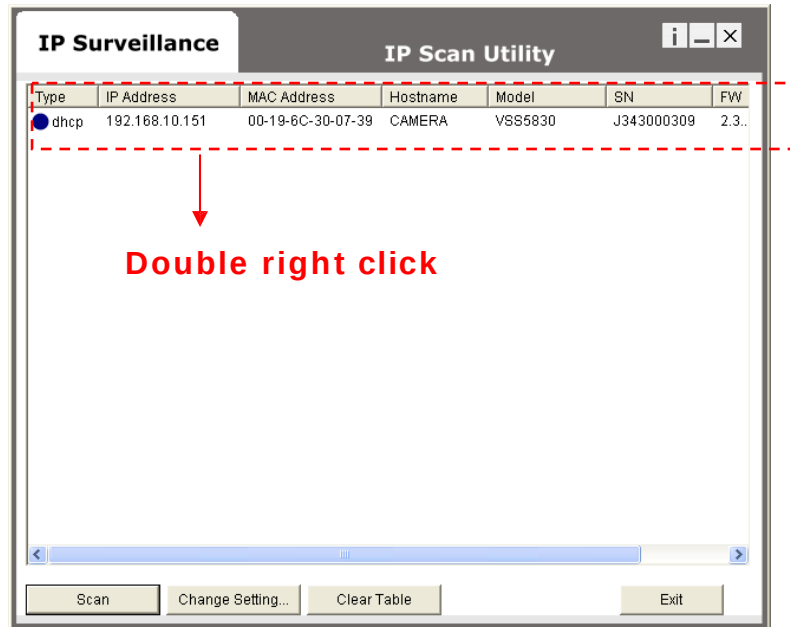


Or,

- ⦿ Open IE browser
- ⦿ Type IP address of video server that you found on **IPScan** software.
For example, <http://192.168.10.151/>
- ⦿ Initial username and password are...

ID: root

Password: pass


Click **Login** button to go to web view.

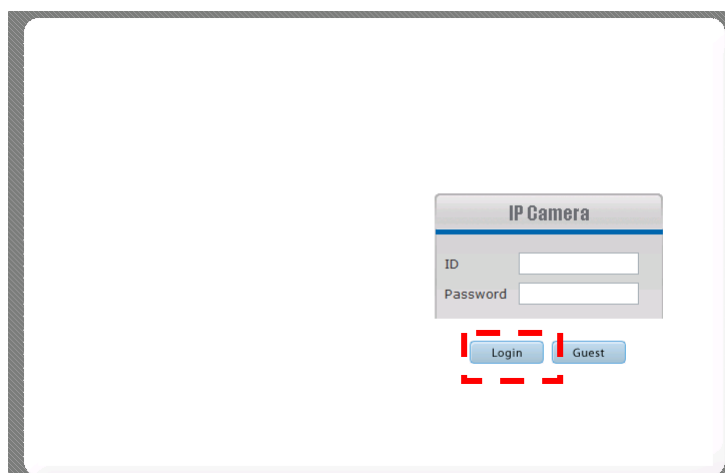

INSTALL AND RUN ACTIVEX CONTROL

After successful log in, the following pages will appear at first time.

 Click **Install** button to install ActiveX Control



Click **Run** button to run this ActiveX Control



INITIAL USERNAME & PASSWORD

Administrator

- ⌚ Default ID/Password = **root/pass**.
- ⌚ Only password is changeable.
- ⌚ Full access right to view, control system settings.


Guest accounts

- ⌚ ID/Password not necessary.
- ⌚ Basic view and some action buttons can work.

VIEWING AND OPERATING PAGE


After successful log in as **Guest**, the viewing page will appear as follows.

The “**camera info**” button when clicked shows FPS, camera name and resolution values.

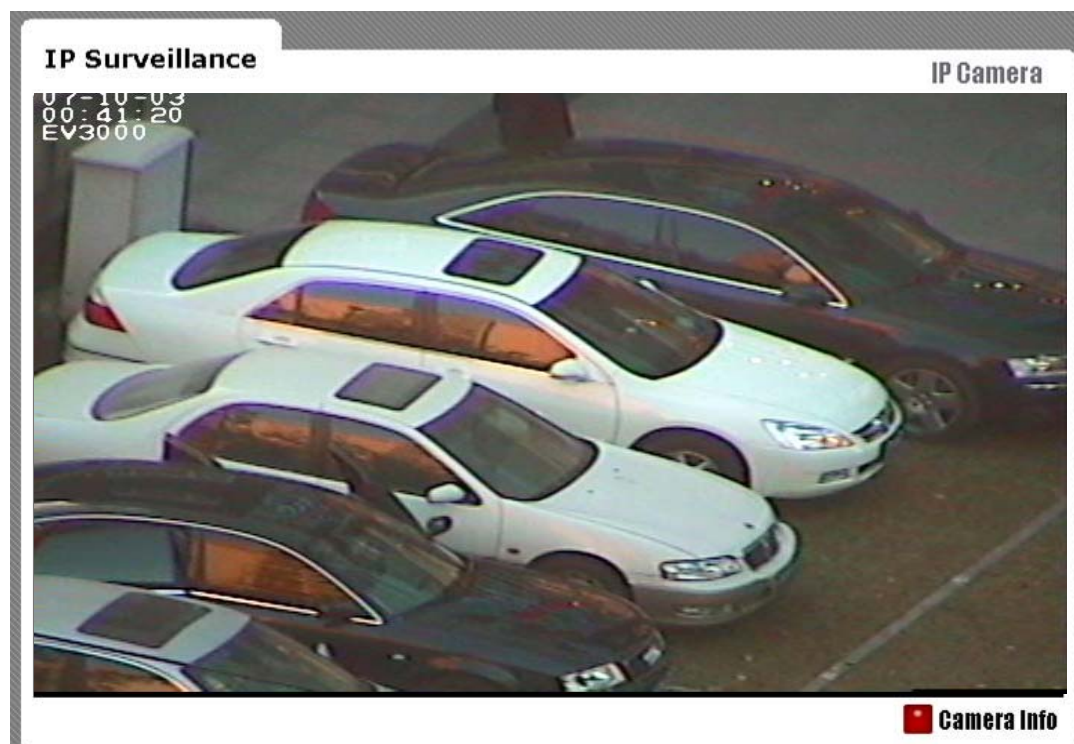

Guest Mode Viewer

When you log in successfully with ROOT/PASS as **administrator**, the viewer screen will display as shown below.

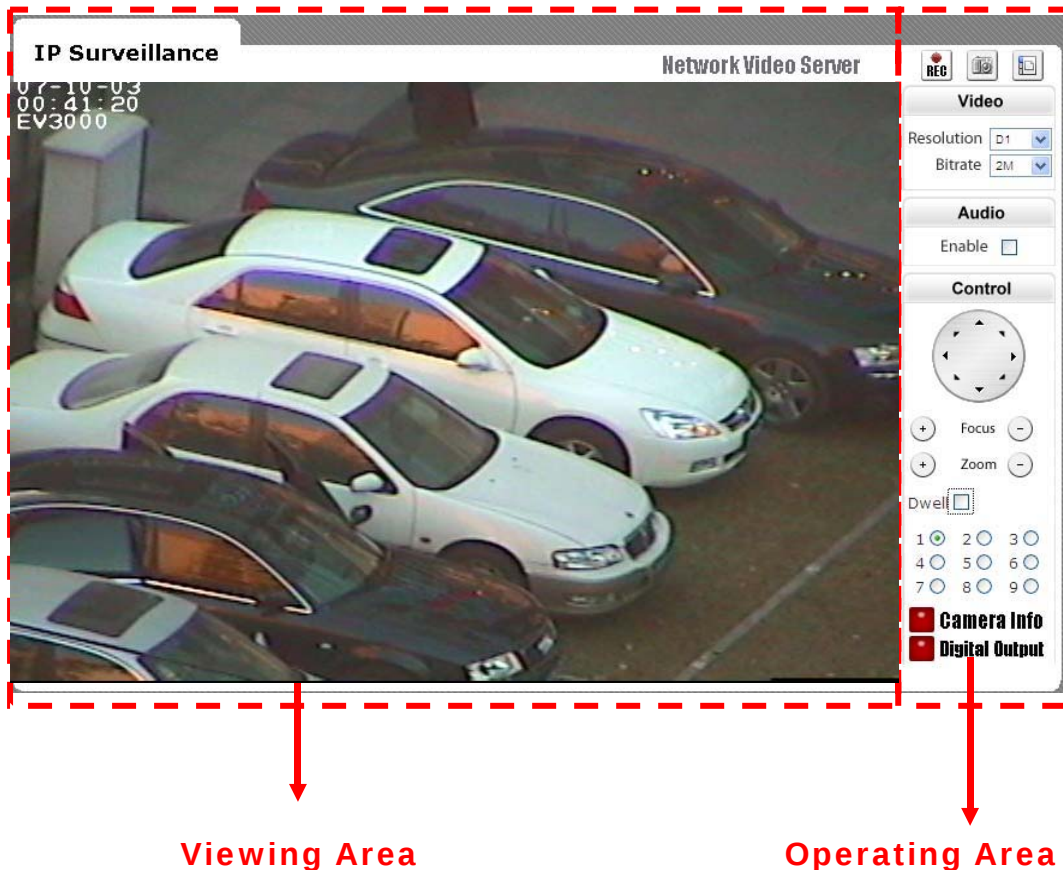

1. Notice top right corner of viewing page




has a toggle button to

take you between web configuration page & viewing page. Always click that if you want to move from one page to the other.

2. Several controls options are available on the right side.
3. OSD is displayed on top left corner of the screen (time, date, camera name)

Live recording : record live stream to local HDD

Snapshot

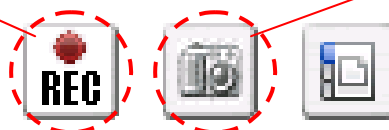


CONTROL PANEL SETTINGS

🕒 Video/Resolution

Following table describes resolution values for each video format


Resolution	CIF	QCIF	D1
NTSC	352X240	704X480	720X480
PAL	352X288	704X576	720X576

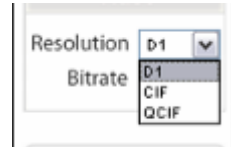

🕒 Video \ Bit rates


- ④ Choose a particular value and it is applied within few seconds. Video on the screen will pause briefly.

32K/64K/128K/256K/384K/500K/750K/1M/1.5M
/2M/3M (bps)

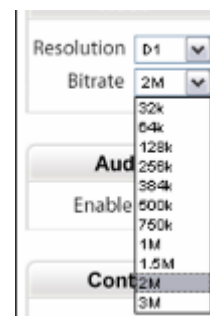


🕒 Audio \ Enable check box

- ④ Enable or disable function for audio will result in video flicker for a second and then return back to normal. This is not an error.

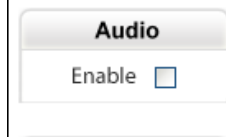


🕒 P/T/Z controls (will need PTZ controller)

- ④ Z (Zoom): zoom in (+) / zoom out (-).
- ④ Pan/Tilt.
- ④ F (Focus): focus in (+) / focus out (-).

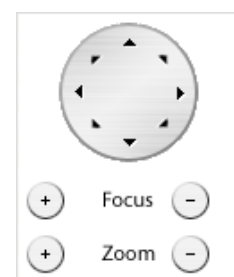


- ⌚ Select channel number in fixed channel mode.

The mode is fixed channel mode, if Dwell is unchecked. Channel number 1 ~ 9 could be selected.

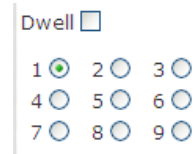


- ⌚ Select mode number in auto-scan mode.

The mode is auto-scan mode, if Dwell is checked. Mode number 1 ~ 9 could be selected.

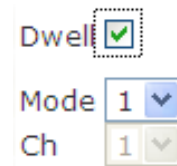

- ⌚ Camera Information.

 Shows video information of the transferred data on the upper left corner of the video screen such as frame rate (fps), channel name, resolution.



FPS Name Resolution



- ⌚ Digital Output

- ④ When enabled, DO provide contact close and acts purely as a switch.




8. WEB INTERFACE SETTINGS

Wireless Video Server built-in web interface offers more advanced settings. On the main viewing page, click icon located on top-right side to enter server settings page. It is a toggle button to switch between Config and viewer pages.

Network Video Server



STATUS

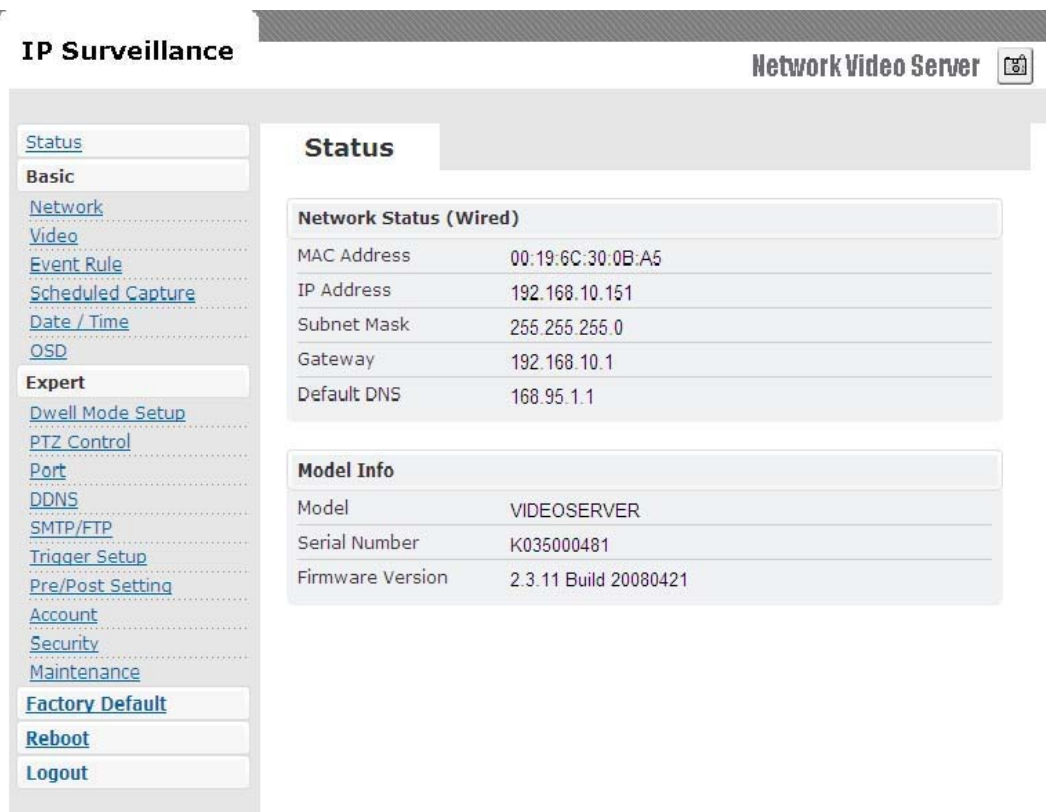

- ⌚ Initial view of web Config interface is status page.
- ⌚ Hardware & Firmware information along with network status such as current IP and related details are clearly shown.
- ⌚ on CCD IP CAMERAW and CMOS IP CAMERAW model

NOTE

Remember to press "OK" after you have changed settings in a particular settings page which has "OK" button. After few seconds, you can see a confirmation dialog box informing that settings have been updated. Pressing OK will return to the same page.



NETWORK

Three configuration types are available for wired network connection
STATIC, DYNAMIC & PPPoE.

STATIC IP

The screenshot shows the 'IP Surveillance' configuration page for a 'Network Video Server'. The left sidebar contains a menu with categories: Status, Basic, Network, Video, Event Rule, Scheduled Capture, Date / Time, OSD, Expert, and Factory Default. The 'Network' category is selected, and the 'Static IP' tab is active. The configuration fields are as follows:

Connection Method: Static IP	
IP Address	192.168.10.151
Subnet Mask	255.255.255.0
Gateway	192.168.10.1
Default DNS	168.95.1.1

An 'OK' button is located below the configuration fields.


- ⌚ IP Address
 - ④ Confirm with network administrator.
- ⌚ Subnet Mask/Gateway/Default DNS
 - ④ Confirm with network administrator.
- ⌚ Always click “**OK**” to save changes in a particular page.
- ⌚ Reboot is required and will be automatically triggered after you press “**OK**”. Wait for count down timer to finish and page will refresh automatically and you should see initial login page.

Note:

Always use IPScan to find the MAC address after reboot and double check the IP

address is correct. If IP was changed in web configuration, you cannot return to initial login page after reboot.

DYNAMIC IP

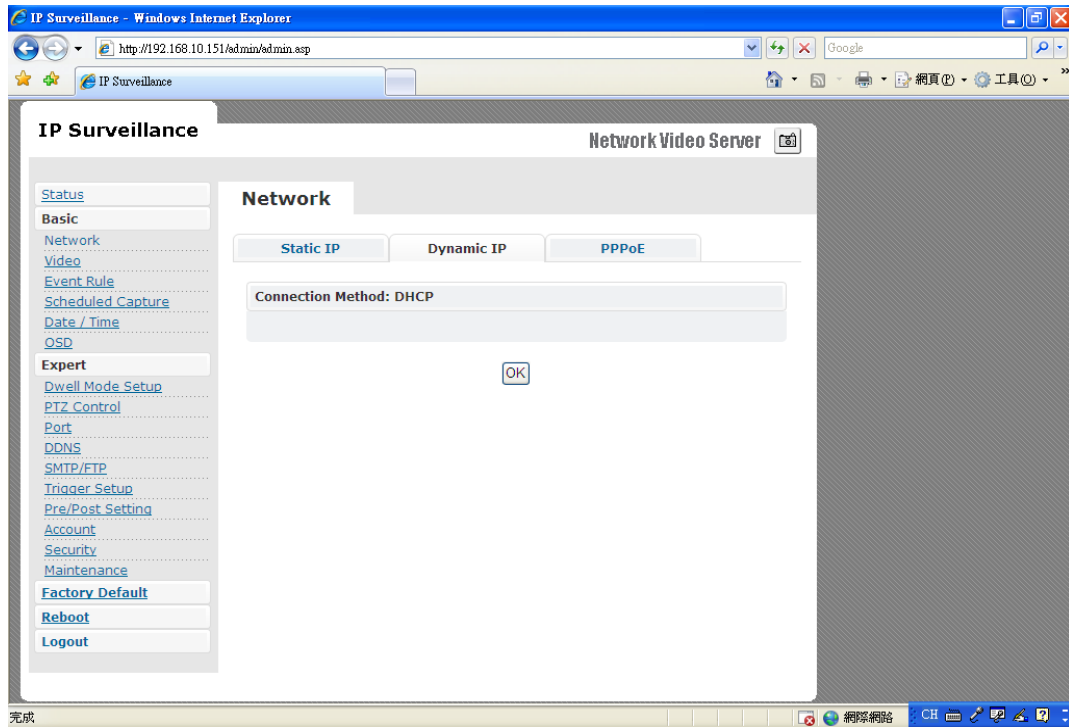

⌚ If DHCP server is on LAN and you want to allocate Dynamic IP

address, use DHCP.

⌚ Click “**OK**” button.

⌚ Reboot is required and will be automatically triggered after you press “**OK**”. Wait for count down timer to finish and page will refresh automatically and you should see initial login page.

Note:

Always use IPScan to find the MAC address after reboot and double check the IP address is correct. If IP was changed in web configuration, you cannot return to initial login page after reboot.

PPPoE SETTINGS

The screenshot shows the 'Network' configuration page of a 'Network Video Server'. The 'PPPoE' tab is selected, and the 'Connection Method' is 'xDSL'. The form contains the following fields and values:

Field	Value
User ID	pppoe_user
User Password	
Verify Password	
MTU	1412
DNS Server	Auto
DNS	168.95.1.1

An 'OK' button is located at the bottom of the form.

- ⌚ PPPoE is used in case network supports PPPoE like xDSL
- ⌚ Request Internet Service Provider for PPPoE ID/Password
- ⌚ User ID / Password
 - ④ PPPoE user ID / Password
- ⌚ Service Name
 - ④ Service name of ISP
- ⌚ MTU
 - ④ Maximum transmission unit of data
- ⌚ IP address of DNS sever can be set to be created automatically.
- ⌚ If xDSL does not use static IP, you should use DHCP.

VIDEO

IP Surveillance Network Video Server

Video

Video Setting

Video Compression Type: MPEG4

Resolution: D1

Frame Type: IP Only

Bitrate Type: ☒ Constant Bitrate ☐ Variable Bitrate

Bitrate: 2M

Frame Per Sec: 30

GOP Size: 60

Video Field Type: ☒ NTSC ☐ PAL

Color Setting

Brightness: 110 (0 ~ 255)

Contrast: 70 (20 ~ 127)

Saturation: 90 (0 ~ 127)

Hue: 0 (0 ~ 255)

VIDEO SETTINGS

🕒 Video Compression Type

④ MJPEG / MPEG4

🕒 Resolution

④ QCIF / CIF / D1

🕒 Frame Types

This setting deals with the Group of Pictures (GOP) structure - which could be a combination of I and P frames.

I - I frames - also referred to as Key frames contain information for a complete picture, and can be decoded independent of any other frame. I frames are the largest (and least compressed) frames. Therefore for same quality, they consume high bit rate.

P - P frames are encoded using information from the previous I or P frame, and can only be decoded correctly if the previous I / P frame is available. P frames are smaller than I frames.

④ I Only / IP Only

④ IP - Simple Profile - Medium bit rates for same quality.

I - Highest bit rates for same quality.

***When choosing MJPEG streaming, ONLY support "I Only" mode*

🕒 Bit rate Type

④ Constant and Variable bit rates control allows flexibility in choosing how much bandwidth is available on network and quality of video required.

🕒 Constant Bit rates

④ 3M / 2M / 1.5M / 1M / 750K / 500K / 384K / 256K / 128K / 64K / 32K

🕒 Variable Bit rates

④ 2 ~ 31 (quality is best in case value is "3")

🕒 Frame per Second.

④ 1 ~ 30

🕒 Group Size

④ Adjusts the ration between "I" frames and "P" frames. Lower the group size, better the quality.

④ 5 / 10 / 15 / 30 / 60

🕒 Video Type

④ NTSC / PAL

***System can automatically detect input video signal when clicking "detect" icon*

COLOR SETTINGS

Fine adjustments to video quality can be made using more detailed settings as shown below.

Brightness	-	130	+	(0 ~ 255)
Contrast	-	70	+	(20 ~ 127)
Saturation	-	90	+	(0 ~ 127)
Hue	-	0	+	(0 ~ 255)

BRIGHTNESS

Adjusts the image on a scale from darkness to brightness.

CONTRAST

Adjusts the extent to which adjacent areas on a video differ in brightness

SATURATION

Adjusts the chromatic purity of video thereby effecting vividness.

HUE

Adjusts the video by effecting color depth

VIDEO PREVIEW

Preview makes choices easier when tuning video settings for specific locations. By clicking the **View Video** button, you can see the following

Color Setting			
Stop	Test	Reset	☐ Enable Preview

Click **Stop** to exit preview. You could change other video parameters and press **TEST** to see how the changes look like. You can press **Reset** anytime to return back to the default settings. Click **Enable Preview** checkbox to save the current settings – and its takes effect right after settings have been changed.

MAX CLIENT LIMIT

Maximum users (client) limit allows users accessing the video stream. For higher bit rates and resolution, the client limit is much lower and vice versa.


🕒 Maximum number of clients can be restricted depending on how much video quality is required and network band with is available.

④ 0 ~ 10 (value 0 means maximum allowable)

DO NOT FORGET TO PRESS “OK” BUTTON TO SAVE YOUR SETTINGS.

EVENT RULE

1. Digit Input
2. Motion Detection
3. Periodic Timer
4. Network Loss
5. Video Loss
6. Power Loss

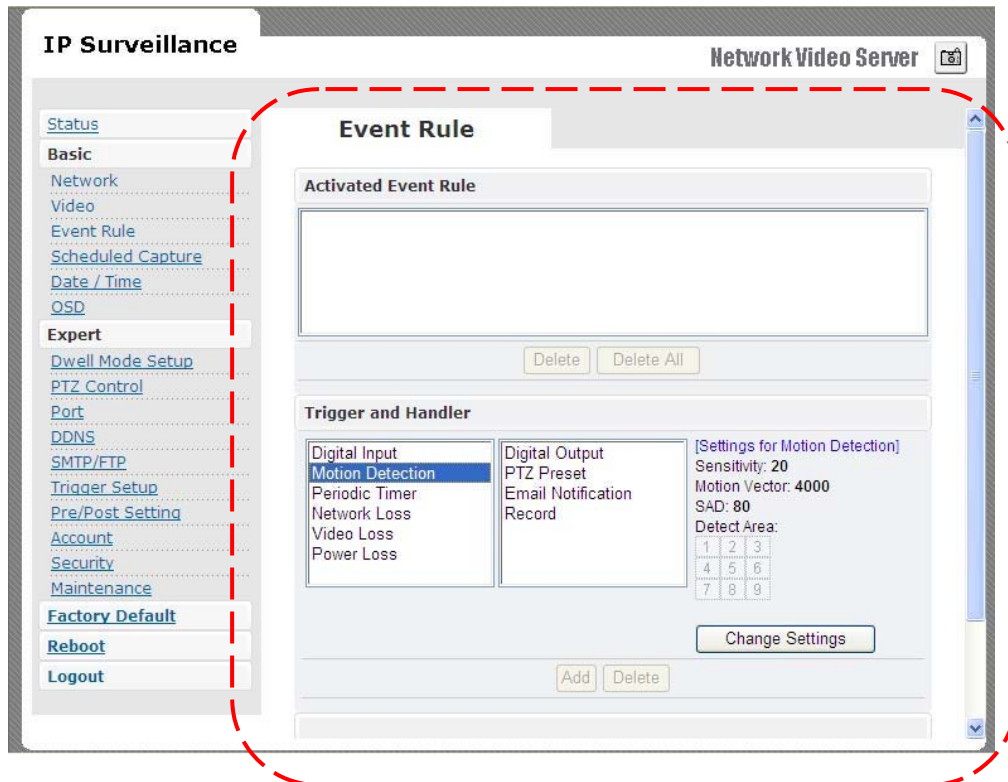

	Digital Output	PTZ Preset	Email Notification	Record to FTP Server
Digital Input	X	X	X	X
Motion Detection	X	X	X	X
Periodic Timer	X	X	X	
Network Loss	X			X
Video Loss	X		X	
Power Loss			X	

EVENTS HANDLED

Digital Input

Can choose sensor type either "Normal Open" or "Normal Close"

Motion Detection

If motion is detected on the areas defined on the video stream, an event will be triggered based on the rule lists.

Periodic Timer

In a pre-defined time interval, an event will be triggered based on the rule lists.

Network Loss

When system detect network loss, an event will be triggered

Video Loss

When system detect video loss, an event will be triggered

Power Loss

When system detect power loss, an event will be triggered

ACTIONS TRIGGERED

Digital Output

Can active digital output.

PTZ Preset

PTZ set to a particular preset value can be triggered based on occurrence of an event listed out in "**Rule Lists**".

E-mail Notification

E-mail can be sent based on occurrence of an event listed out in "**Rule Lists**".

Record to FTP server

When event triggered, system will record streaming to FTP server.

RULE LISTS - ADDING / DELETING

Select an event and select corresponding action. Click **add** button and notice that is added in the **Rule lists** Information box.

MODIFYING RULE LISTS

Rule list items can be deleted individually or wholly by clicking **Delete All** button.

CAPTURE

Choose **Enable** checkbox to record snapshot by schedule or event triggered way.

Schedule capture


- Select schedule day check boxes (can multi-select)
- Define start and end time
- Choose output type as "FTP upload"
- Define related output parameter, such as interval time, save path ...

The screenshot shows the 'IP Surveillance' configuration window for a 'Network Video Server'. The left sidebar contains a menu with options: Status, Basic, Network, Video, Event Rule, Scheduled Capture (highlighted), Date / Time, OSD, Expert, Dwell Mode Setup, PTZ Control, Port, DDNS, SMTP/FTP, Trigger Setup, Pre/Post Setting, Account, Security, Maintenance, Factory Default, Reboot, and Logout. The main panel is titled 'Scheduled Capture' and contains the following settings:


- Enable:** A checkbox that is currently unchecked.
- Schedule:** A dropdown menu set to 'Schedule'.
- Trigger By:** A label for the trigger configuration.
- Schedule Day:** A list of days with checkboxes: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, and Sunday. All are currently unchecked.
- Start Time:** Set to 8:00.
- End Time:** Set to 18:00.
- Output Type:** A dropdown menu set to 'FTP Upload'.
- Interval Time(secs):** A text input field containing '30'.
- Filename Prefix:** A text input field containing 'CAMERA'.
- Save Path:** A text input field containing 'CAPTURE'.
- Settings for FTP Upload:** A sub-panel showing 'FTP Server: 192.168.1.1', 'FTP Port: 21', and 'Login User: ftpuser'.
- Buttons:** 'Change Settings' and 'OK'.

The 'Scheduled Capture' section is highlighted with a red dashed border.

DATE & TIME

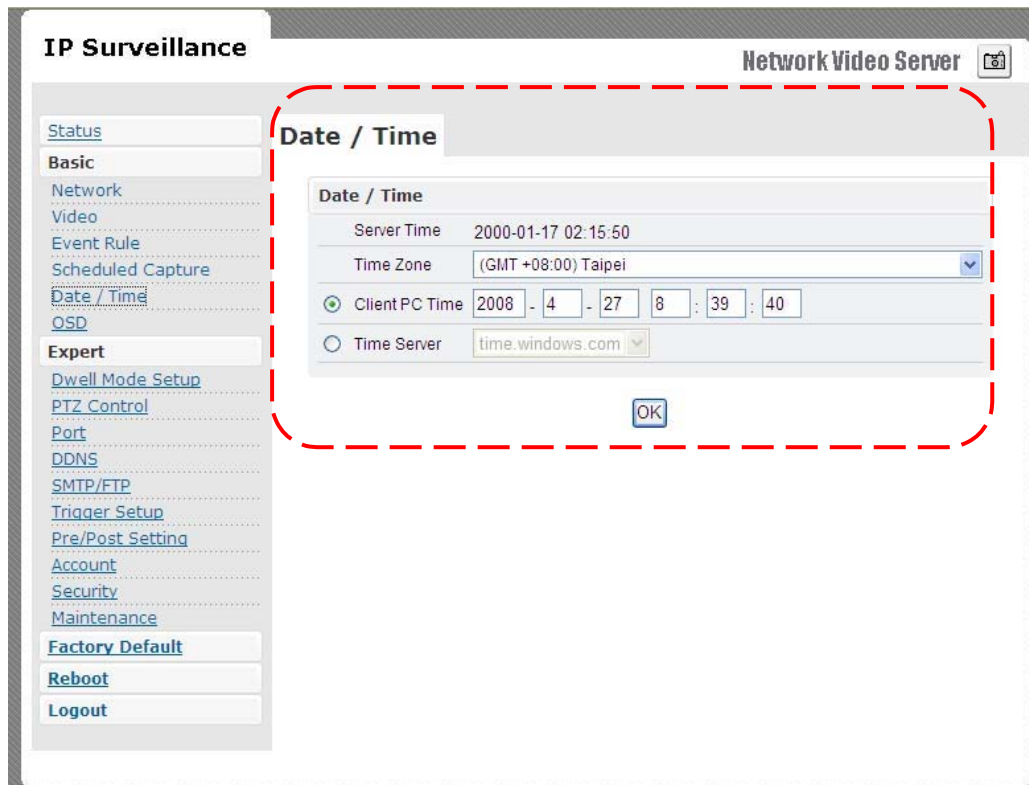

 - ⌚ Date and time settings can be synchronized with PC directly by clicking “Client PC time” check box. Click “**OK**” after you have made selection.



- ⌚ Time zone can be chosen by choosing either of the two time servers listed
- ⌚ Either of the two time servers can be chosen to synchronize video server time. They are listed as follows should you choose **Time Server**. Click “**OK**” after you have changed settings.




- ⌚ If you want to manually input time server, choose “**Other**” then you can find a manual input edit box appear. Key in your preferred time

server and click “**OK**”.



OSD

Click on your desired choice of color. Values will change accordingly for R, G, and B. If you desire some other color, you can manually define those corresponding R, G, B values in the boxes as appropriate. Position of OSD can be changed by defining the X, Y values. Date & Time can be individually enabled/disable by “Date” & “Time” checkboxes.

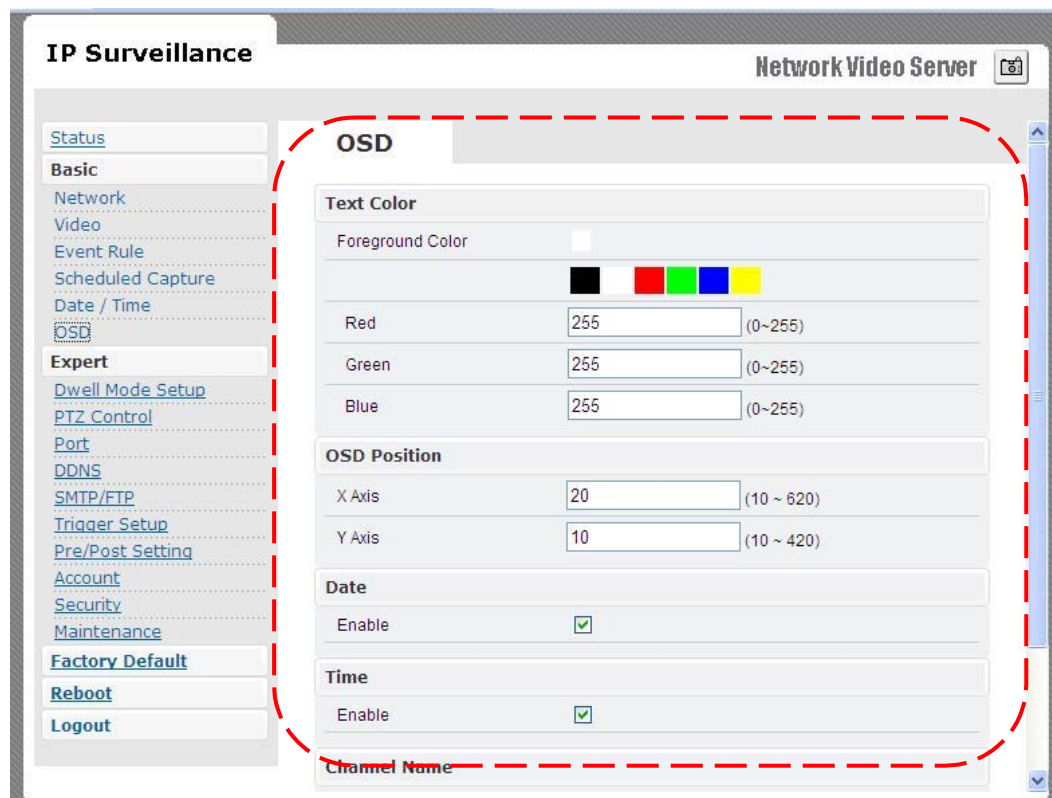

Channel name can be shown/hidden by the channel name “**Enable**” checkbox. It can be manually typed in the “**Channel name**” text box and changes can be noticed.

Channel Name	
Enable	☒
Channel Name	IPCAMERA

OK

DWELL MODE SETUP (ATUO-SCAN MODE)

The setting values of mode of auto-scan mode can be changed by “Set” button.

IP Surveillance
Network Video Server

[Status](#)

Basic

[Network](#)

[Video](#)

[Event Rule](#)

[Scheduled Capture](#)

[Date / Time](#)

[OSD](#)

Expert

[Dwell Mode Setup](#)

[PTZ Control](#)

[Port](#)

[DDNS](#)

[SMTP/FTP](#)

[Trigger Setup](#)

[Pre/Post Setting](#)

[Account](#)

[Security](#)

[Maintenance](#)

[Factory Default](#)

[Reboot](#)

[Logout](#)

Dwell Mode Setup

Set and display dwell mode

Mode	1	
CH 1	2	secs
CH 2	2	secs
CH 3	0	secs
CH 4	0	secs
CH 5	0	secs
CH 6	0	secs
CH 7	0	secs
CH 8	0	secs
CH 9	0	secs

Set

Mode 1 to 9 could be support in auto-scan. And, dwell time 1 to 120 seconds of each channel could be set. The channel number is removed from auto-scan model, if dwell time is set to 0 sec.

PTZ CONTROL

IP Surveillance Network Video Server

PTZ Control

Channel Setting

Channel Model (PTZ Model)	none
Channel ID(Rx Address)	Ch 1 1
Baud Rate	B9600
Data Bits	8
Parity	none
Stop Bits	1

OK

- ⌚ Channel Mode (PTZ model)
 - ④ Default is none.
 - ④ PelcoP/ PelcoD/ Transparent can be chosen.
- ⌚ Channel ID
 - ④ Give address value for channel 1 to 9.
- ⌚ Baud rate / Data bits / Parity / Stop bits
 - ④ Depending on the protocol used, the values of baud and related settings are to be assigned accordingly.

PORT

The values of WEB and AV port can be changed as necessary.

IP Surveillance **Network Video Server**

[Status](#)
Basic
[Network](#)
[Video](#)
[Event Rule](#)
[Scheduled Capture](#)
[Date / Time](#)
[OSD](#)
Expert
[Dwell Mode Setup](#)
[PTZ Control](#)
[Port](#)
[DDNS](#)
[SMTP/FTP](#)
[Trigger Setup](#)
[Pre/Post Setting](#)
[Account](#)
[Security](#)
[Maintenance](#)
[Factory Default](#)
[Reboot](#)
[Logout](#)

Port

Web

Web Port

Video + Audio

AV Port

Web

- 🕒 Web Port default is 80

Video + Audio

- 🕒 Default is 1852 for video/audio data transmission.

DDNS

The screenshot shows the 'DDNS' configuration page of a Network Video Server. The page is titled 'IP Surveillance' and 'Network Video Server'. A red dashed box highlights the 'DDNS' section. The 'IPv4 DDNS' section has 'Enable' checked and 'dyndns.org' selected. The 'dyndns.org' section has 'Hostname' and 'DDNS ID' set to 'ddnsuser' and 'DDNS Password' left empty. An 'OK' button is at the bottom.

DDNS is the function that maps an IP address to a host name. If

Wireless Video Server are set to dynamic IP address, the host name by DDNS (Dynamic Domain Name Service) must be used instead of the IP address for credibility of network connection.

IPv4 DDNS

- ⌚ Check **“Enable”** and select a service out of available two.
- ⌚ Both services are required to register some items on each DDNS service site.
- ⌚ For use of **“ddns.nu”** register at www.ddns.nu and for **dyndns** find the information at dyndns.org

SMTP/FTP

The screenshot displays the 'IP Surveillance' configuration window for a 'Network Video Server'. A red dashed line highlights the 'Remote SMTP Setup' and 'Remote FTP Setup' sections. The left sidebar contains a menu with options: Status, Basic, Network, Video, Event Rule, Scheduled Capture, Date / Time, OSD, Expert, Dwell Mode Setup, PTZ Control, Port, DDNS, SMTP/FTP (selected), Trigger Setup, Pre/Post Setting, Account, Security, Maintenance, Factory Default, Reboot, and Logout. The 'Remote SMTP Setup' section includes fields for SMTP Server (smtp.mail.com), SMTP Port (25), Authentication (checked), Auth User (smtp), Auth Password (masked), Sender's Email (user@smtp.mail.com), Recipient's Email (user@smtp.mail.com), and an unchecked 'Enable Attachment' checkbox. The 'Remote FTP Setup' section includes fields for FTP Server (192.168.1.1), FTP Port (21), Auth User (ftpuser), and Login Password (masked). An 'OK' button is located at the bottom center of the highlighted area.

Remote SMTP Setup	
SMTP Server	smtp.mail.com
SMTP Port	25
Authentication	☒
Auth User	smtp
Auth Password	
Sender's Email	user@smtp.mail.com
Recipient's Email	user@smtp.mail.com
Enable Attachment	☐

Remote FTP Setup	
FTP Server	192.168.1.1
FTP Port	21
Auth User	ftpuser
Login Password	

An e-mail notification & FTP upload service offered by Wireless Video Server notifies events or uploads snapshots to a remote FTP server.

E-MAIL – SMTP SETTINGS

Fill in the details of SMTP server such as port number, user name, password, server name information. If you would wish to send attached snapshots, please check the appropriate check box.

Sometimes Authentication is not always required by SMTP servers.

Wherein only the SMTP server name and e-mail address details are enough to be input.


Remote SMTP Setup	
SMTP Server	smtp.mail.com
SMTP Port	25
Authentication	☒
Auth User	smtp
Auth Password	••••••••
Sender's Email	user@smtp.mail.com
Receipient's Email	user@smtp.mail.com
Enable Attachement	☐

FTP SETTINGS

Fill in the details of remote FTP server, port number and user name, password.

Remote FTP Setup	
FTP Server	192.168.1.1
FTP Port	21
Auth User	ftpuser
Login Password	••••••••

TRIGGER SETUP

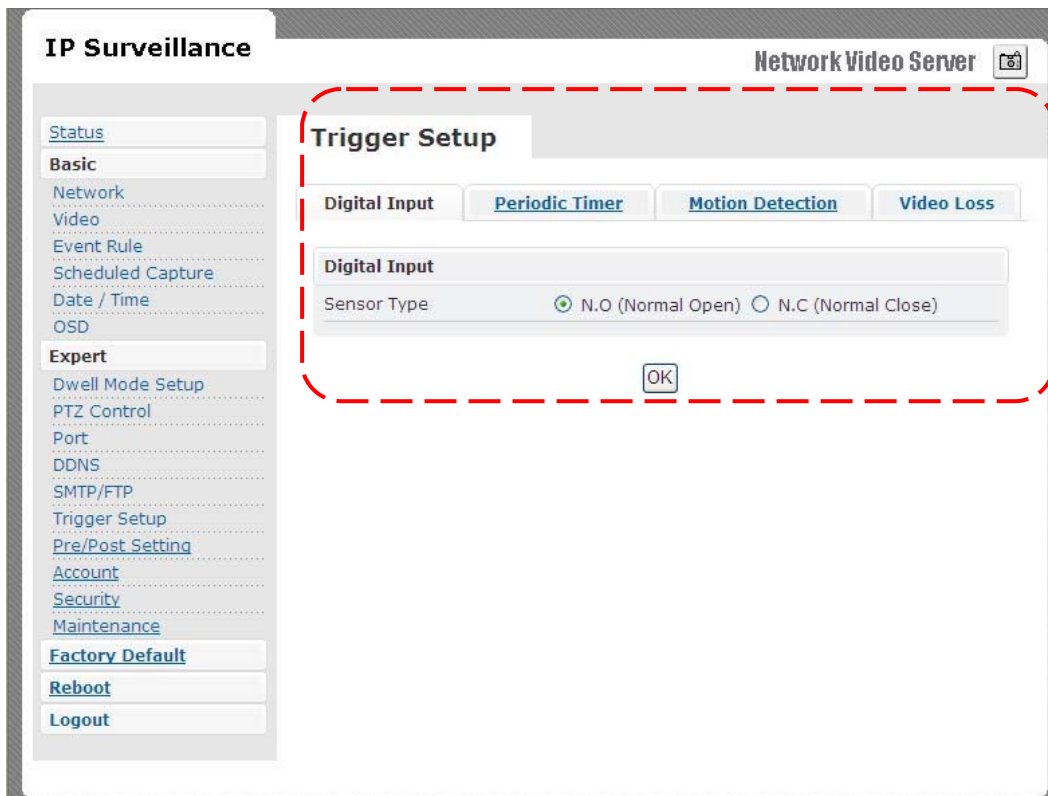

Three different types of EVENTS can be configured.


Digital INPUT

Can be **Normal OPEN (N.O)** or **Normal Close (N.C)**

Choose based on the type of input and press **OK** to save the settings.


PERIODIC TIMER

Timer interval can be set in terms of seconds. This will trigger an event when the time out is achieved.

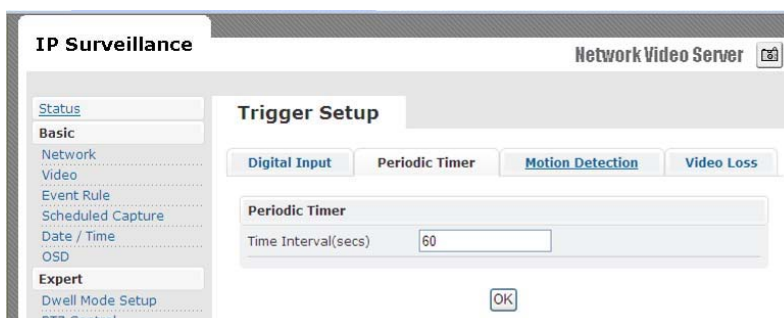

MOTION DETECTION


- ⌚ Enable type
 - ④ Can enable motion detection by “always” or “schedule” mode
 - ④ When choosing schedule mode, define schedule day and start/end time

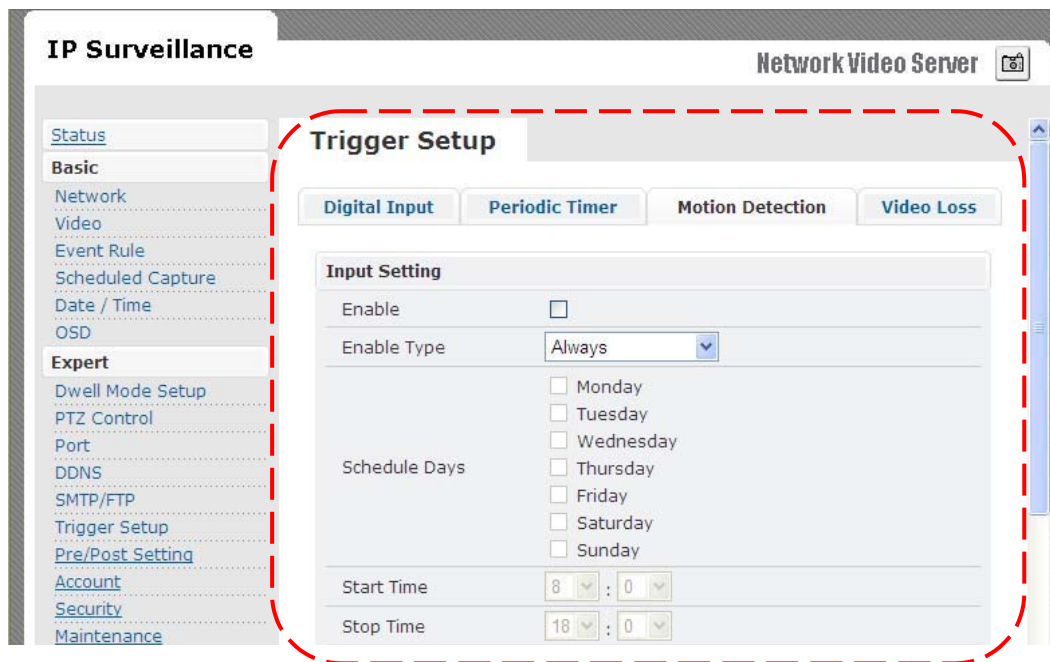

- ⌚ Detection Area
 - ④ Total viewing screen area is divided into 9 square blocks and each of them is called area 1, area 2 etc., Click specific areas you want motion detection to be enabled. If a detection area is selected color changes to dark gray.

Stop time: 10 : 0

Detect Area

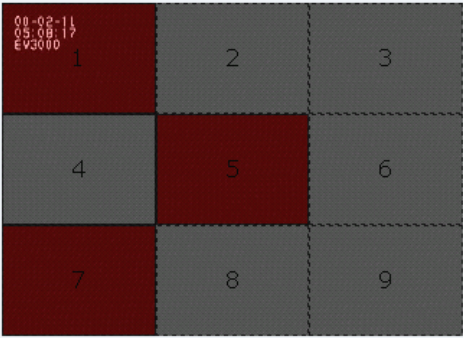

Selected (Red)

Sensitivity	20	(1 ~ 100)
Motion Vector	4000	(3750 ~ 4650)
SAD	80	(20 ~ 150)

⌚ Sensitivity value

- ④ Defines sensitivity of the motion detection. The range of the value is 1 to 100.

⌚ Motion Vector value

- ④ To detect even slightest movement for objects in selected area, please select a lower motion vector value. The range of the value is 3750 to 4650.

⌚ SAD value.


- ④ To only detect flashing light or any such significant activities on immovable objects, low SAD value should be chosen. In most cases, high SAD level is recommended. The range of the value is 20 to 150.

Sensitivity	20	(1 ~ 100)
Motion Vector	4000	(3750 ~ 4650)
SAD	80	(20 ~ 150)

Motion detection enabled areas look as shown below. A simple click can select any of the boxes on detect area.

Video Loss


Can config how much time system should trigger an event for video loss

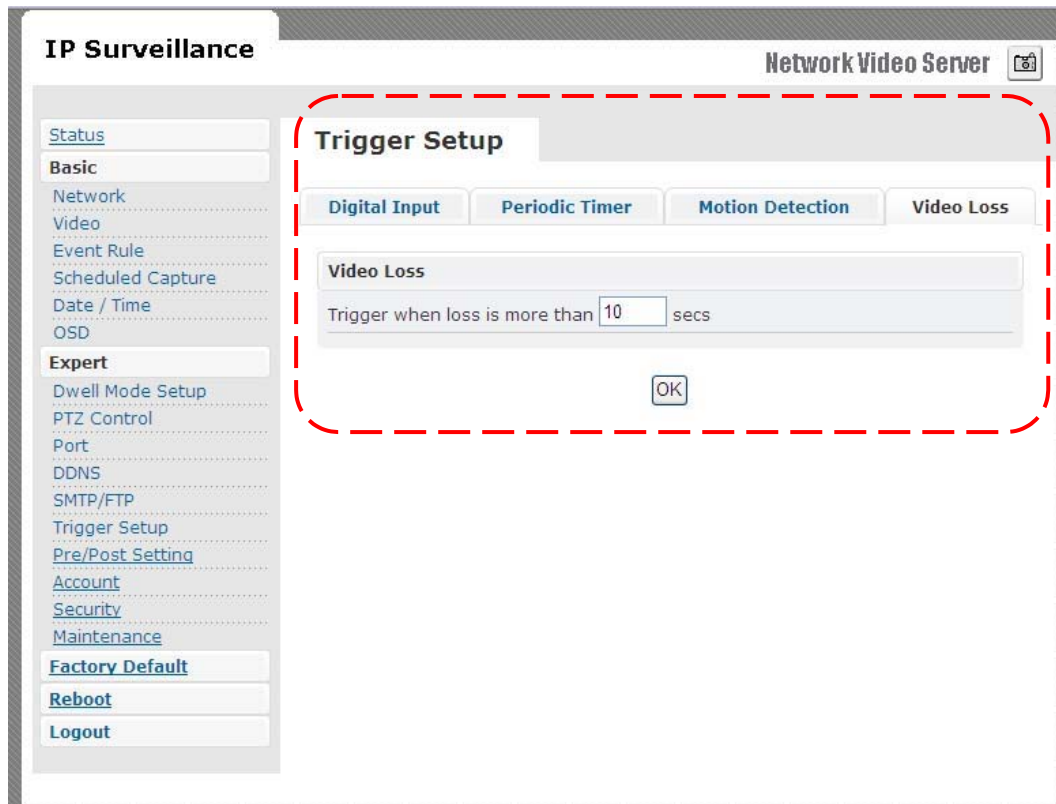

PRE/POST SETTING

These parameters decide Pre/Post buffer stream format and duration.

Administrator can choose format as “AVI Video” or “JPEG Picture” with Pre/Post time duration

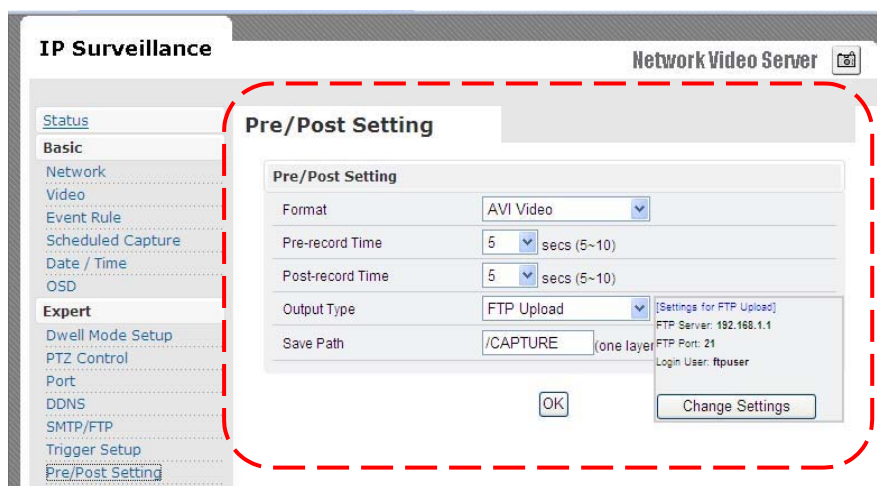

ACCOUNT

IP Surveillance Network Video Server

Account

User ID	PTZ	V/S	D/O
root	☒	☒	☒

* Password length must be 4~12 characters

User ID	Password	Confirm	PTZ	V/S	D/O
			☐	☐	☐

Add

Guest Permission

Enable ☒ **OK**

Administrator can create user accounts. Login as an administrator and create user accounts by pressing **"Add"**. Each account has PTZ, Video settings and Digital Out privileges. They can be turned on or off anytime by the administrator.

There are limits on user name and password length and will be notified by dialog boxes if the user name/password exceeds or under-runs that limit.

For each account, guest permissions can be turned ON/OFF. Any time, an account's settings can be modified by pressing the **"Modify"** button.

Account

User ID	PTZ	V/S	D/O	
root	☒	☒	☒	<button>Password</button>
aaa	☒	☐	☐	<button>Modify</button> <button>Remove</button> <button>Password</button>

User ID	Password	Confirm	PTZ	V/S	D/O
			☐	☐	☐

* Password length must be 4~12 characters

Add

Guest Permission

Enable ☐

OK

Administrator account password can also be modified by “Password” button. Changing password needs confirmation.

Modify

Modify Password

ID	root
Old Password	
New Password	
	* Password length must be 4~12 characters
Confirm	

Modify

Account Limitations


- ⌚ Administrator can add up to a maximum of 5 users and assign properties for each of them.

Guest Permissions

- ⌚ Guest account can be turned ON/OFF anytime.

SECURITY

The basic settings are **LOW** by default.

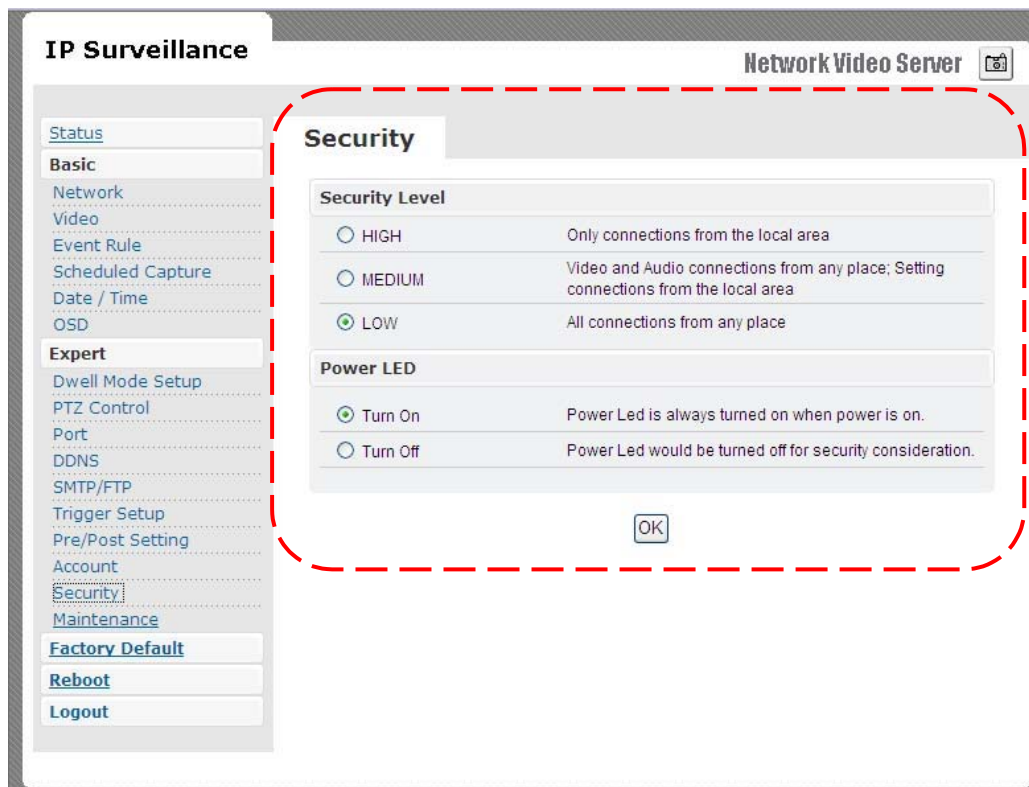

⌚ Security Level

④ HIGH

- 👁️ ONLY LAN connections are allowed.

④ MEDIUM

- 👁️ Video and audio connections from any location and settings from LAN are permitted.

④ LOW

- 👁️ All connections from any location are permitted.

⌚ Power LED


④ Turn On

- 👁️ Default value, power LED will always be on during operation.

④ Turn Off

- 👁️ Config power LED as off during operation.

MAINTENANCE

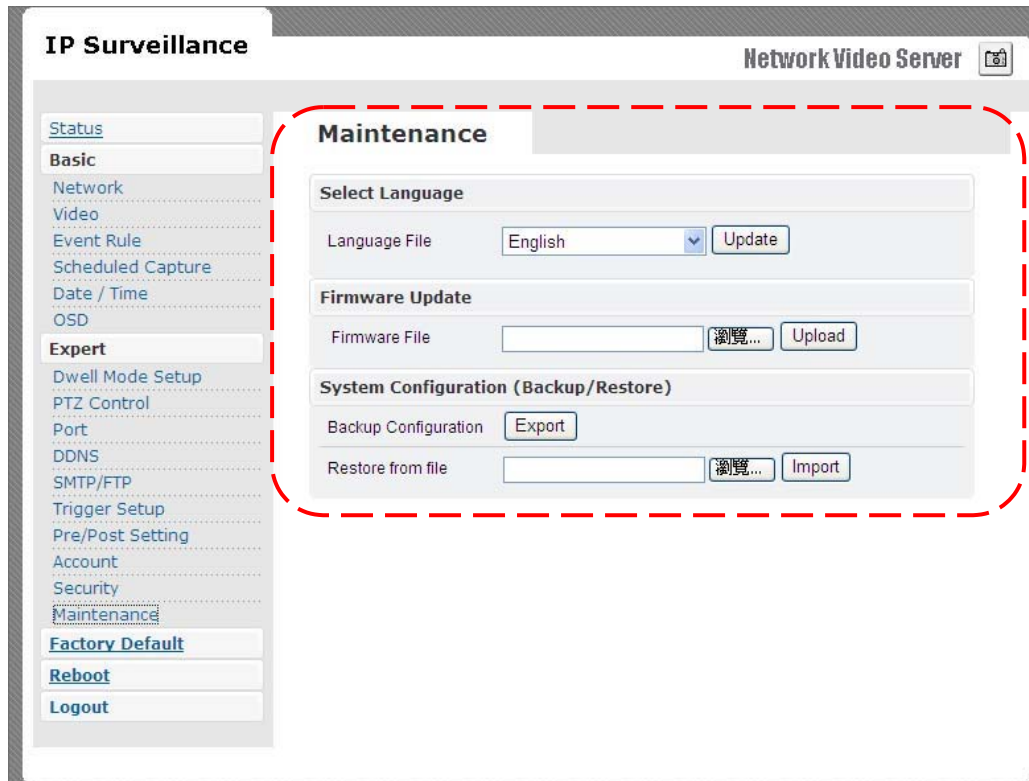

Language

- Default settings are in English. A choice of Traditional Chinese is available.

Firmware update

- Firmware update binary file can be obtained your reseller. Choose that and click **upload**. When uploading is done, reboot is required and will be automatically triggered.

CAUTION


DO NOT power off during upgrade process, follow system dialog to finish upgrade procedure

System Configuration (Backup/Restore)

- You can backup current configuration profile as a file and restore any stored configuration profile.


9. FACTORY DEFAULT

After a confirmation dialog box, clicking **OK** button, will load default settings and do a reboot. You will see the reboot countdown timer running. Once done, you will see the login page. Please login with root/pass.

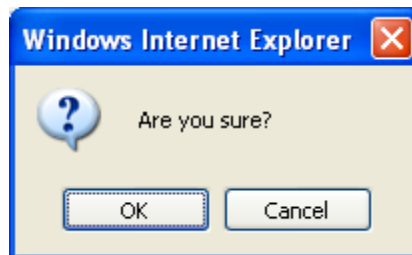

10. REBOOT

If you click **OK** on the dialog box, you will see the reboot countdown timer running. Once done, you will see the login page. Please login with root/pass or other appropriate login information.

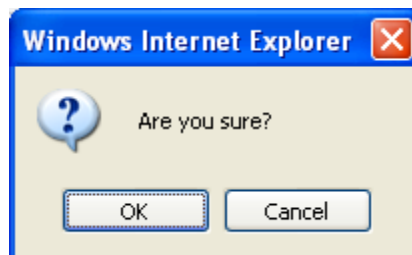


11. LOGOUT

To return to the login screen, simply click **logout**. You should see yourself in the login page within seconds.

12. USB Config Port - FIRST TIME EXPERIENCE

If Wireless Video Server has to be quickly configured or has to be set to factory default settings, USB config port is used to achieve that. USB config port is a special USB port.

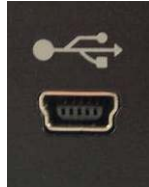

Insert mini USB cable onto USB config port and connect other end to PC. When video server is powered on, such port will not be operational. Once you are done working with USB config port, remember to unplug USB cable from USB config port.

NOTE

REMOVE USB CABLE WHEN YOU ARE FINISHED WITH QUICK CONFIGURATION.

SUPPORTED OS

PC running the following operating systems can support auto run of **Quick Config** application.

1. Windows Vista - auto run.
2. Windows XP - auto run.


NO SOFTWARE INSTALLATION REQUIRED

There is no installation or setup of any software for Windows Vista/XP


platforms.

STEPS FOR USING USB config port (Windows XP PC)


1. Disconnect **power cable** connected to Wireless Video Server.
2. Use mini-USB cable and connect appropriate end to USB config port and connect other end to PC USB port.
3. After 5 ~ 10 seconds depending on how fast your PC is, you can notice "**Disk drive**" being detected.

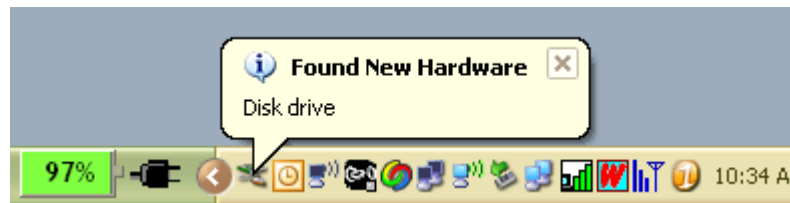



4. A POP-UP dialog shows "**Config Wizard**" is ready to run. Press OK.

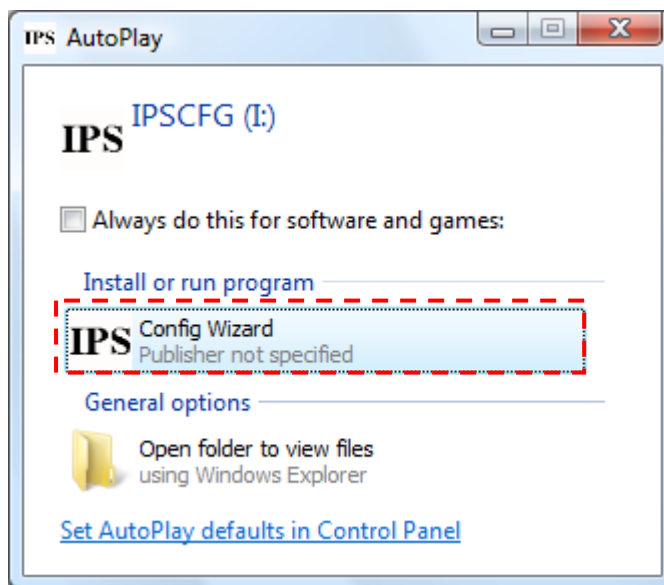


Double click Config Wizard. You will see a screen as follows.

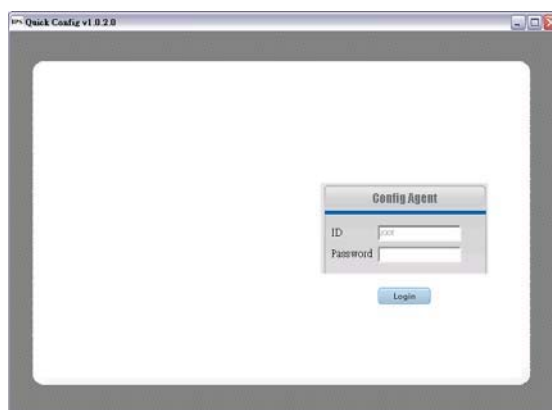

You will be asked for password. Earlier, if you have never changed the password for user **root**, please type **pass** as the password. Then click **login** button. If you input wrong password, you will get this dialog box.

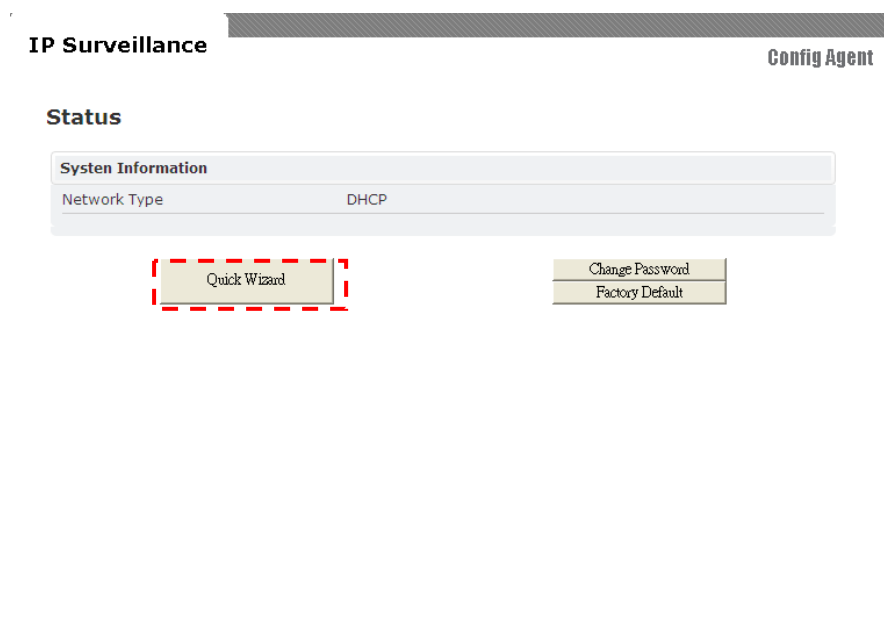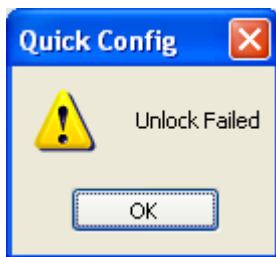

You will see the network status of Wireless Video Server .To navigate through Quick Wizard, click it and you will find a window appear as below.

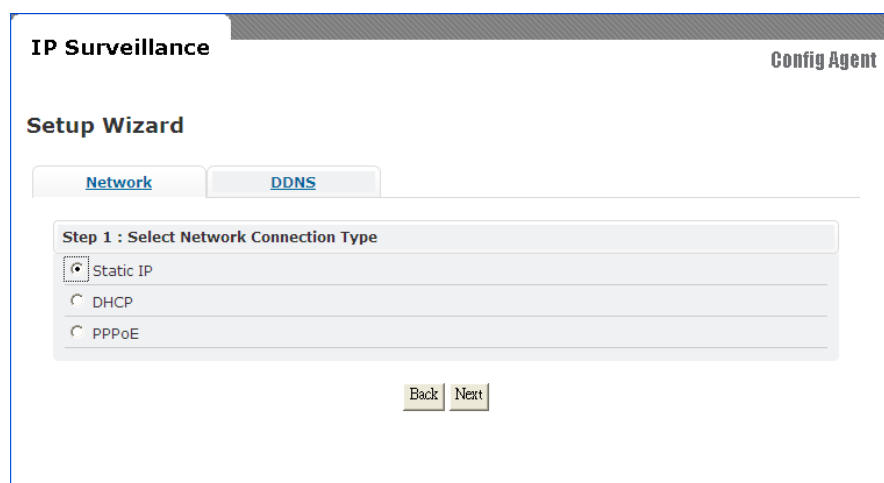

If you would wish to change network settings of either
STATIC / DHCP / PPPoE

If you would want to setup **DDNS**, please click on the same for detailed configuration.

The screenshot shows a web interface titled "DDNS Setup". At the top, there are two tabs: "Network" (in blue) and "DDNS" (in red). Below the tabs, there is a section for "IPv4 DDNS". It includes an "Enable" checkbox which is currently unchecked. Below that, there is a "Which Service" section with two radio buttons: "ddns.nu" (unselected) and "dyndns.org" (selected). Under the "dyndns.org" section, there are three input fields: "Hostname" with the value "ddnsuser", "DDNS ID" with the value "ddnsuser", and "DDNS Password" with a masked password "*****".

Return to Network page to setup network further.

Please choose and click **next** for detailed configuration page. For instance, shown below is a screen which has **STATIC** network configuration page. Click next to proceed.

The screenshot shows a window titled "IP Surveillance" with a subtitle "Config Agent". Inside, there is a "Setup Wizard" section with two tabs: "Network" (in blue) and "DDNS" (in blue). Below the tabs, there is a section titled "Step 4 : Port Information". It contains two input fields: "Web Port" with the value "80" and "Stream Port" with the value "1852". At the bottom of the wizard, there are two buttons: "Back" and "Next".

Please input web port and stream port if default value does not match your requirement



Clicking next will show that settings are saved. You can click finish if you are done or go back or change other settings. Similarly you can change other settings at ease.

Note:

④ Connect CCD IP CAMERA/CMOS IP CAMERA to your network by using a standard

Cat-5 cable.