



BlueTree 4000 / 5000 CDMA Modems

User's Guide

June 2006
(Rev 1.0)





BlueTree Wireless Data, Inc.
2425 46th Avenue
Lachine, QC, Canada H8T 3C9

Tel: +1 (514) 422-9110
Toll Free: 1-877-422-9110
www.bluetreewireless.com

Copyright © 2004/2005 by BlueTree Wireless Data, Inc.
All Rights Reserved
Printed in Canada
BlueTree™, the BlueTree logo, and BlueVue™ are trademarks of BlueTree Wireless Data, Inc.
All other trademarks are the property of their respective owners.

Declaration of Conformity

FCC Compliance and Industry Canada Statement

FCC & Industry Canada IDs for the 4200/5200: O9EQ2438 & 3651C-Q2438

FCC & Industry Canada IDs for the 4600/5600: QWV-BTX600 & 4420A-BTX600

The device complies with Part 15 of FCC rules and with ICES-003 of Industry Canada Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.



Caution: Unauthorized modifications or changes not expressly approved by BlueTree Wireless Data, Inc. could void compliance with regulatory rules, and thereby your authority to use this equipment.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause interference harmful to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



Warning: "Antenna must not exceed 3 dBi for Cellular band and 4 dBi for PCS band. This device must be used in mobile configurations. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 30 cm or 12 inches from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. Users and Installers must be provided with antenna installation instruction and transmitter operating conditions for satisfying RF exposure compliance"

Liability Notice

While every effort has been made to achieve technical accuracy, information in this document is subject to change without notice and does not represent a commitment on the part of BlueTree Wireless Data, Inc., or any of its subsidiaries, affiliates, agents, licensors, or resellers. There are no warranties, express or implied, with respect to the content of this document.

Safety

Do not operate the BlueTree Wireless Data modems in areas near medical equipment, where blasting is in progress, where explosive atmospheres may be present, or near any equipment that may be susceptible to any form of radio interference.

CONTENTS

Chapter 1: Package Contents.....	6
Chapter 2: Product Description.....	7
Introduction.....	7
Modem Views.....	9
Summary of Specifications.....	9
Indicators Lights (LED).....	10
Data Interface Specifications: Serial, USB, Ethernet	11
General Purpose Input and Outputs Specifications	11
Power Specifications	12
Chapter 3: BlueVue Device Manager	14
Chapter 4: Wireless WAN Setup.....	15
Activation.....	15
Connection Profile Setting	19
Test your connection.....	20
Chapter 5: LAN Setup	21
Dialup Networking	21
Setting the LAN configuration.....	22
Ethernet.....	23
USB RNDIS.....	23
Chapter 6: IP Networking Features	24
Port Forwarding.....	24
VPN Support	25
DHCP Settings	25
IP Registration	26
Chapter 7: Serial IP – Packet Assembly Disassembly	28
Chapter 8: GPS Settings.....	30
GPS Destinations.....	30
GPS Configuration	31
GPS Store & Forward	33
Chapter 9: IO Management.....	35
Digital Output Control	35
Digital Input State Query.....	35
Analog Input Value Query.....	35
Chapter 10: Event Reporting	36
Digital Input Monitoring.....	36
Ignition ON/OFF Notification.....	36
Analog Input Monitoring	36

Low Voltage Notification	36
Time Interval Event Reporting	36
GPS-driven Event Reporting	36
Excessive Speed Notification	36
Engine Idling Notification	36
Odometer Measurement	36
Chapter 11: Firmware Upgrade.....	37
Chapter 12: Hardware Installation	38
Cellular antenna	38
GPS antenna.....	39
Serial cable	40
Ethernet cable.....	40
USB cable.....	40
Power source	40
IO Cable Wiring.....	42
Mounting the modem	43
Appendix A: Warranty and Support	44
Warranty.....	44
Customer Support	44

Chapter 1: Package Contents

When the modem arrives, the package should contain the following items:

1

One BlueTree modem:
4200, 4600, 5200 or 5600




1

One 15-foot power cable
with 2A in-line fuse



1

One extra serial number
label

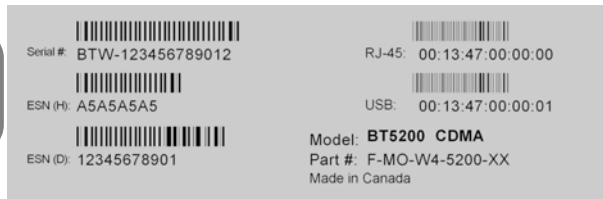

1

One Quick Start Guide






Any items missing from this list, please call your local representative.

Chapter 2: Product Description


Introduction

BlueTree 4000/5000 series modems are rugged wireless modems built to provide simple and reliable communications over the CDMA wireless data network to applications such as Public Safety, Field Force Automation, Asset Tracking, Telemetry, Meter Reading and WAN backup.

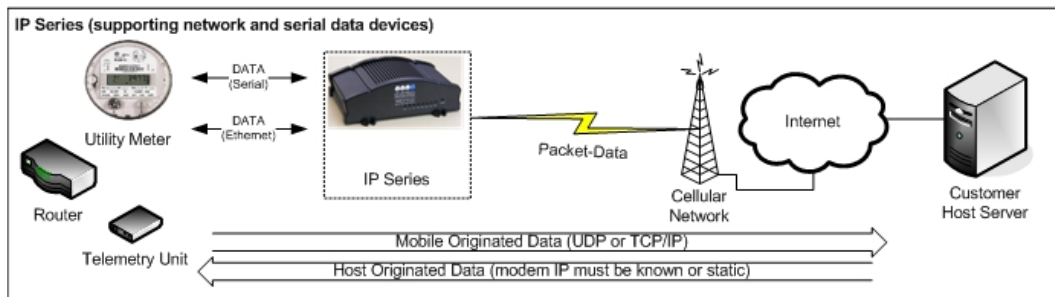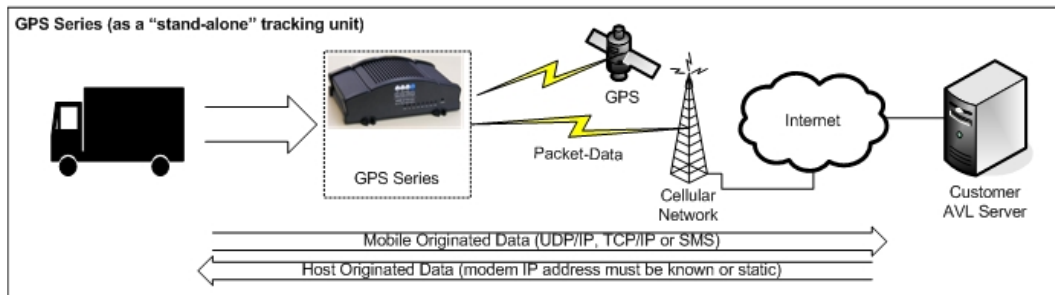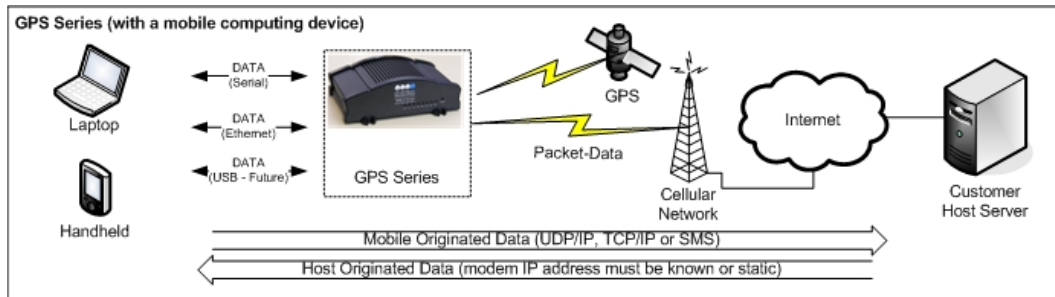

The modem manages two connections at the same time, thus acting as a gateway/router:

- **Wireless WAN connection:** this is the Wide Area Network connection to the wireless network. The modem is typically configured to autonomously establish a packet data connection to the wireless carrier and acquire a WAN IP address.
- **The LAN connection:** this is the Local Area Network connection between the modem and any terminal attached to its serial/USB/Ethernet ports. The modem in this case acts as a server and assigns a private LAN IP address to the attached terminal.

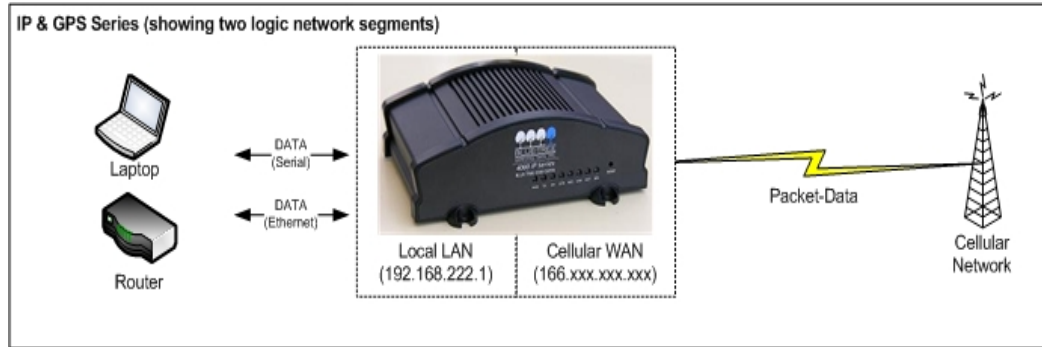

The modem then routes packets back and forth between its WAN and LAN connections by performing Network Address Translation (NAT'ing).

Summary of Features

3 different data connection interfaces	Serial/RS-232, Ethernet, and USB.
Autonomous connection management	Fully integrated TCP/IP protocols allowing the modem to connect autonomously to the packet network (internet). This feature enables capabilities such as: In-call diagnostic, Serial-IP, stand-alone GPS, remote configuration, and remote firmware upgrade.
Network Address Translation (NAT)	Remote applications use the WAN IP address of the modem as the destination IP address. The traffic received by the modem on various ports is forwarded according to their ports and their corresponding port forwarding rules to a LAN IP address
In-call diagnostic	Allows the user to get modem status information while in a data call, without interrupting the data session.
Serial-IP	Encapsulates data coming from the serial port into a TCP or UDP packet and sends it to a remote server on the packet network. Decapsulates IP packets coming from the network and sends raw data to the serial port.
Remote configuration	Using the BlueVue Device Manager or terminal session, this feature allows the administrator to remotely configure or perform remote diagnostics on the modem.
Remote firmware upgrade	Using the BlueVue Device Manager, this feature allows the administrator to remotely upgrade the modem's firmware.
Integrated GPS Receiver	A Trimble GPS receiver is embedded into the modem for Automatic Vehicle Location (AVL). The modem can report this positioning data locally to any of the data interfaces (serial, Ethernet, USB), or also remotely to a predefined server (see stand-alone). Available on the 5000 series modems only.

Stand-alone GPS	Available on the 5000 series modems only. This feature allows remote asset tracking by sending GPS data to a remote server without the need for a client application on the data terminal.
GPS Store and Forward	Available on the 5000 series modems only. This feature allows GPS data storage. If a unit loses communication, the data being collected through GPS will be stored in memory and forwarded when communication is reestablished.
Inputs and Outputs	Sensors can be connected to the I/O port of the 4000/5000 series modems (4 digital inputs, 3 digital outputs and 3 analog inputs). The modem is capable of monitoring its digital input sensors for any change in state and sending a report to a remote server based on an event trigger. The analog inputs allow monitoring of gradient data sources.
Event Reporting	4000/5000 series modems send a report to remote server based on an event trigger. The modem has an intuitive embedded Event Reporting Protocol that automatically formats the messages reported to the remote server.

Modem Views

Front Panel



Rear panel



Summary of Specifications

CDMA Dual-band	Supports both North American frequency bands: 800 and 1900 MHz
CDMA 1xRTT and 1xEvDO	Compatible with CDMA IS-2000 (1xEvDO) Wireless data services. Backward compatible with IS95 protocols.
Data Rates	1xRTT: 153.6 Kbps up and down streams EvDO : 2.4 Mbps downstream & 153.6 Kbps upstream
Programming / Setup	BlueVue Device Manager software, AT commands
LED Status Indicators	PWR, TX, RX, DTR, REG, LNK, ACT, SER or GPS

Enclosure & Weight	Extruded Aluminum 166 × 127 × 56 mm (6.55" × 5.00" × 2.20") 500g (1.1 lbs)
Cellular Antenna Connection	4200/5200 modems: TNC Female Connector, 50 Ohms 4600/5600 modems: 2x SMA Female Connector, 50 ohms
GPS Antenna Connection	SMA Female Connector (3.3 Volts active antenna)
Power Consumption	Active call: ~170mA Idle: ~50mA Ignition off: ~1mA
Environmental Specifications	Operating Temperature: -30° to +70° C (-22° to +158° F) Storage Temperature: -40° to +85° C (-40° to +185° F) Humidity: 95% non-condensing

Indicators Lights (LED)

The modem has 8 green LEDs on its front panel providing fast and efficient information on the state of the modem:


LED	Indication	Status	Corresponding State
PWR	Power	OFF	Modem is turned OFF.
		ON	Modem is ON.
TX	Transmit	OFF	Terminal is not transmitting data to modem.
		Flashing	Terminal is transmitting data to modem.
RX	Receive	OFF	Terminal is not receiving data from modem
		Flashing	Terminal is receiving from modem
DTR	Data Terminal Ready	OFF	No terminal is detected
		ON	Terminal host is detected
REG	Registration	OFF	RF module not responding
		Flashing	Registered on network
		ON	Not registered
LNK	RF link	OFF	Not in a call
		ON	In a data call
ACT	RF activity	OFF	No transmit/receive from network

		Flashing	Transmitting/receiving data from network
GPS	GPS	OFF	No position fix available
		Flashing	Once for every GPS message received

Data Interface Specifications: Serial, USB, Ethernet

Serial Port (DB9)

The modem's serial port is an RS232 DCE, compliant with EIA-232 standard. The connector used is DB9 female and is shown in the illustration below.

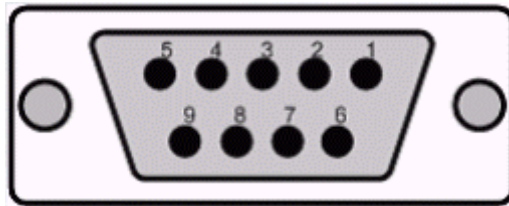

Pin number	Name	Description	Direction
1	DCD	Data Carrier Detect	Modem to PC
2	RXD	Receive Data	Modem to PC
3	TXD	Transmit Data	PC to Modem
4	DTR	Data Terminal Ready	PC to Modem
5	GND	Ground	Common
6	DSR	Data Set Ready	Modem to PC
7	RTS	Request To Send	PC to Modem
8	CTS	Clear To Send	Modem to PC
9	RI	Ring Indicator	Modem to PC

USB Device Port

This is a USB2.0 Device interface on a Type B connector.

Ethernet Port

The modem 10/100Mbps Ethernet port is compliant to EIA-568 standard, and requires a crossover cable to connect to host terminals.

General Purpose Input and Outputs Specifications

The modem has 4 digital inputs, 3 digital outputs and 3 analog inputs for remote control and monitoring.

AI2	GND	O2	DI2	DI4
AI1	AI3	O1	DI1	DI3

3x Digital Outputs (O1, O2, O3) – O3 available on Power connector

Configuration	Open Collector, reference to ground
Absolute Maximum IDC	500mADC (Vce = 750mVDC)
Absolute Maximum VDC	30VDC (open circuit)
Absolute Minimum VDC	0.4VDC (open circuit)

4x Digital Inputs (DI1, DI2, DI3, DI4)


Configuration	Non-isolated level detection, reference to ground
Active level	1.6VDC to 30VDC
Inactive level	0VDC to 1.3VDC
Absolute Minimum VDC	0.3VDC
Absolute Maximum VDC	33VDC
Leakage IDC at 5VDC	150uADC

3x Analog Inputs (AI1, AI2, AI3) – AI3 only available on 4600/5600

Configuration	Not isolated input, reference to ground
Resolution	1024 (ADC 10-bit)
VDC per step	4.8875855mVDC
Full scale level	5VDC
Zero level	0VDC
Absolute Minimum VDC	-0.3VDC
Absolute Maximum VDC	8.3VDC
Leakage IDC at 5VDC	265.96 uADC TYPE

Power Specifications

Power is supplied to the modem via the 4-pin connector on the rear panel. The pins are described as follows:

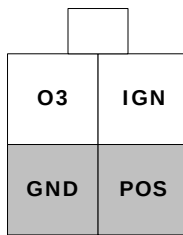

Pin number	Name	Description
1	GND	Ground
2	POS	Power supply input 8 to 30 Vdc
3	IGN	Ignition sense input – turns ON/OFF the modem
4	O3	Digital Output 3

- Power input to the modem is protected against reverse polarity and over-voltage.
- The POS input is also monitored by the modem as a dedicated analog input. The IGN input is also monitored by the modem as a dedicated digital input.

Current consumption

Active mode:

- the modem is in a call and is transmitting or receiving data
 - Average of 169mA @ PCS 1900Mhz (Peak: 286 mA)
 - Average of 154mA @ Cellular 800Mhz (Peak: 268 mA)

Idle mode:

- the modem is either not in a call, or is in one but is Dormant
- Dormant is the state the modem is in after 20sec of inactivity
 - 49mA

Ignition OFF:

- the modem is turned OFF but still has power from its POS input
- all circuitry is shutdowns except for Non-Volatile memory and Real Time Clock
 - 1mA

Chapter 3: BlueVue Device Manager

The 4000/5000 series modems are configured with BlueVue Device Manager (BVDM) software utility. BVDM allows users to:

- Provision modem on wireless network (WAN Setup)
- Configure operation parameters (LAN Setup and GPS)
- Monitor diagnostic and status information
- Perform a firmware upgrade on the modem

Note: Refer to BlueVue Device Manager manual for full details.

BVDM is available on BlueTree's website, under the Support section:

<http://www.bluetreewireless.com/support/downloads>

Chapter 4: Wireless WAN Setup

Activation

Getting an account for your modem

Contact your wireless service provider and request a CDMA account activation with the "packet data" service option for 1xEvDO or 1xRTT.

You will need to provide the service provider the Electronic Serial Number (ESN) of the modem you wish to activate. The ESN is located on a label under the modem.


The wireless service provider should give you the following credentials for you to complete the activation:

- Mobile Directory Number (MDN): the 10-digit telephone number assigned to your unit, including the area code
- Master Lock Code (MSL): the 6-digit number representing the Service Provisioning Lock Code, if not provided then assume it's 000000
- Mobile Station ID (MSID or IMSI or MIN): the 10-digit or 15-digit number required for Local Number Portability, if not provided then assume it's the same as the MDN
- Username/Password for packet network access


Note: Keep a written record of the account information that your wireless service provider gives you. Store it in a secure location. You will need this information if required to re-enter the account information.

Provisioning the account credentials into the modem


A serial connection is required between your PC and the modem for this process. Run BVDM, and from Tools > Settings, make sure you select the PC's COM port to which the modem is attached (as shown in the figure below):

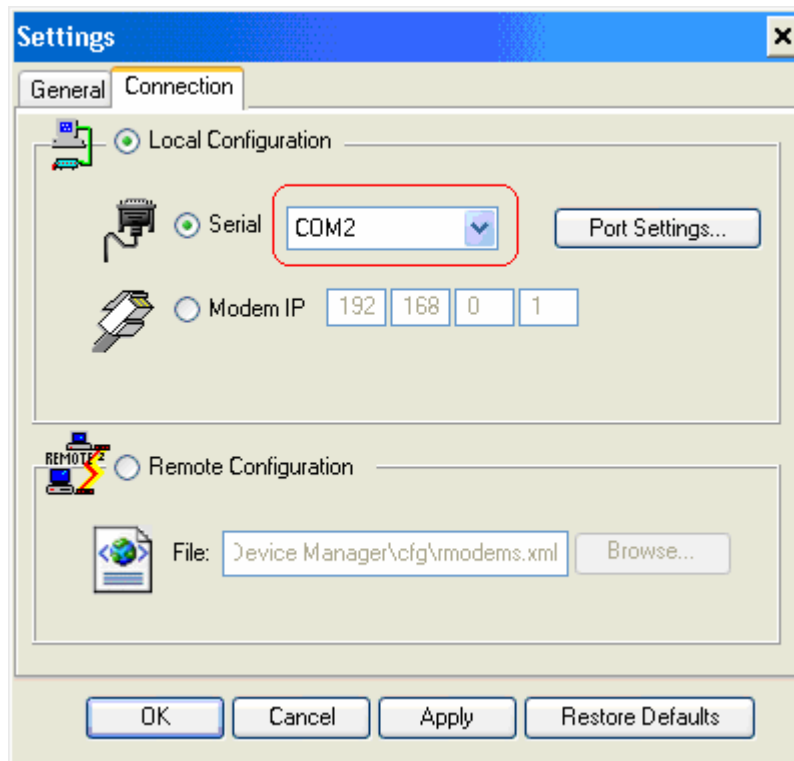

BVDM will automatically detect the modem and read its configuration. After which, it will display the modem diagnostic page as follows:

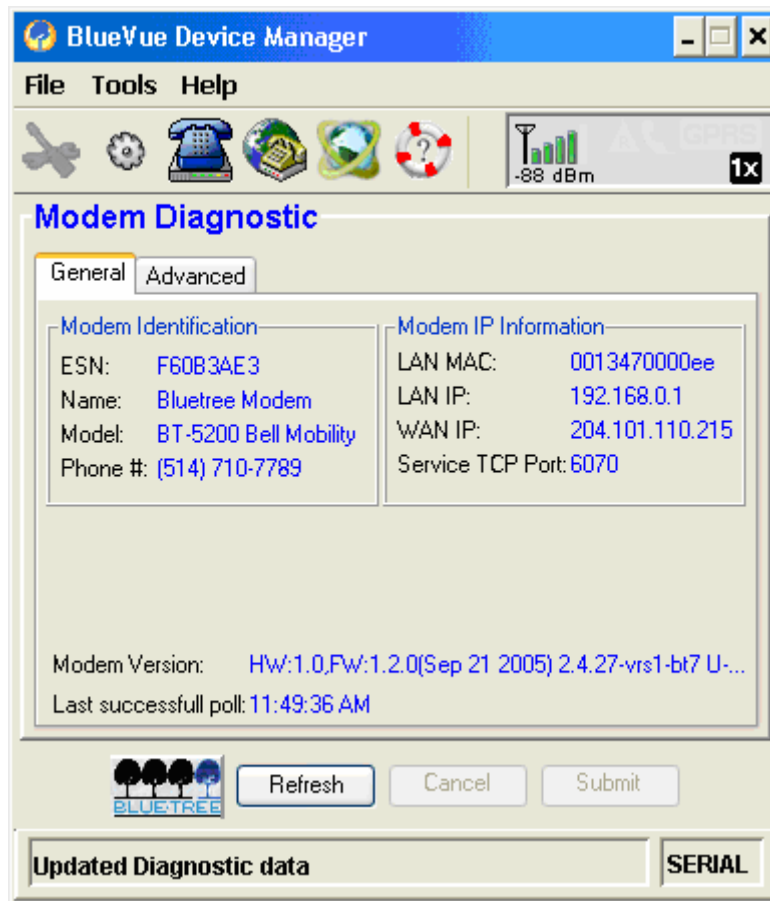

Go to File > Activation

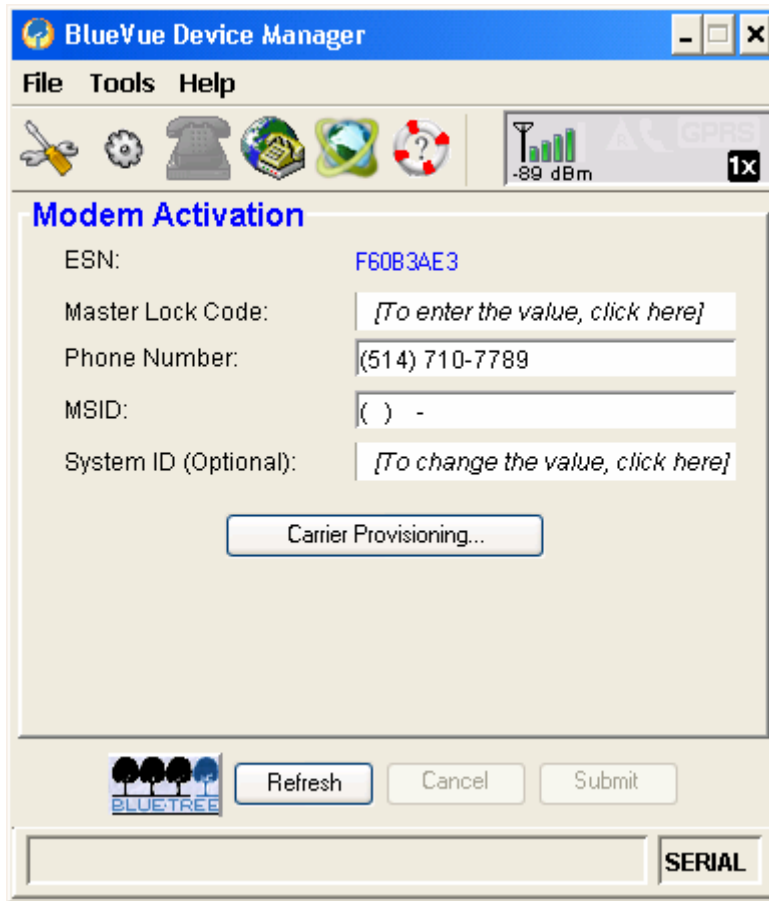The image shows a screenshot of the "BlueVue Device Manager" application window. The title bar is blue with the text "BlueVue Device Manager" and standard window controls. Below the title bar is a menu bar with "File", "Tools", and "Help". A toolbar contains several icons: a pair of scissors, a gear, a telephone, a globe, a question mark, and a signal strength indicator showing "-89 dBm" and "1x". The main area is titled "Modem Activation" in blue. It contains the following fields: "ESN:" with the value "F60B3AE3"; "Master Lock Code:" with a text box containing "[To enter the value, click here]"; "Phone Number:" with a text box containing "(514) 710-7789"; "MSID:" with a text box containing "() -"; and "System ID (Optional):" with a text box containing "[To change the value, click here]". Below these fields is a button labeled "Carrier Provisioning...". At the bottom of the window, there is a "Refresh" button, a "Cancel" button, and a "Submit" button. To the left of these buttons is the BlueTree logo. To the right of the buttons is a label "SERIAL" above a text box.

Bell Mobility

Enter the **Master Lock Code**, the **phone number**, and the **MSID**, then hit **Submit**. Note that has to be entered, even if it's the same as the phone number.

Verizon

Click on **Carrier Provisioning** then select **OTASP** to initiate over the air service provisioning.

Sprint

Enter the **Master Lock Code**, the **phone number**, and the **MSID**, then hit **Submit**. Note that has to be entered, even if it's the same as the phone number.

IOTA: once the account info submitted, initiate over the air activation process (IOTA) by clicking **Carrier Provisioning** then **IOTA** buttons.

Datalink: if you have acquired a Datalink account, make sure you load the appropriate access credential parameters provided by Sprint by clicking **Carrier Provisioning** then **Datalink** buttons.

Alltel

Enter the **Master Lock Code**, the **phone number**, and the **MSID**, then hit **Submit**. Note that has to be entered, even if it's the same as the phone number.

If Mobile IP settings are to be set, then click on Mobile IP and verify the right settings needed. The RF module is set to operate in **Mobile IP Preferred** mode. Typically, a user could alter that setting to **Mobile IP Only** mode if desired.

Telus


Enter the **Master Lock Code**, the **phone number**, and the **MSID**, then hit **Submit**. Note that has to be entered, even if it's the same as the phone number.

Test your activation

Once the process above is completed, go to **File > Diagnostic**: you should see the valid modem's phone number displayed.

Connection Profile Setting

Go to **File > Connection Profile** in order to configure the Modem's WAN connection.

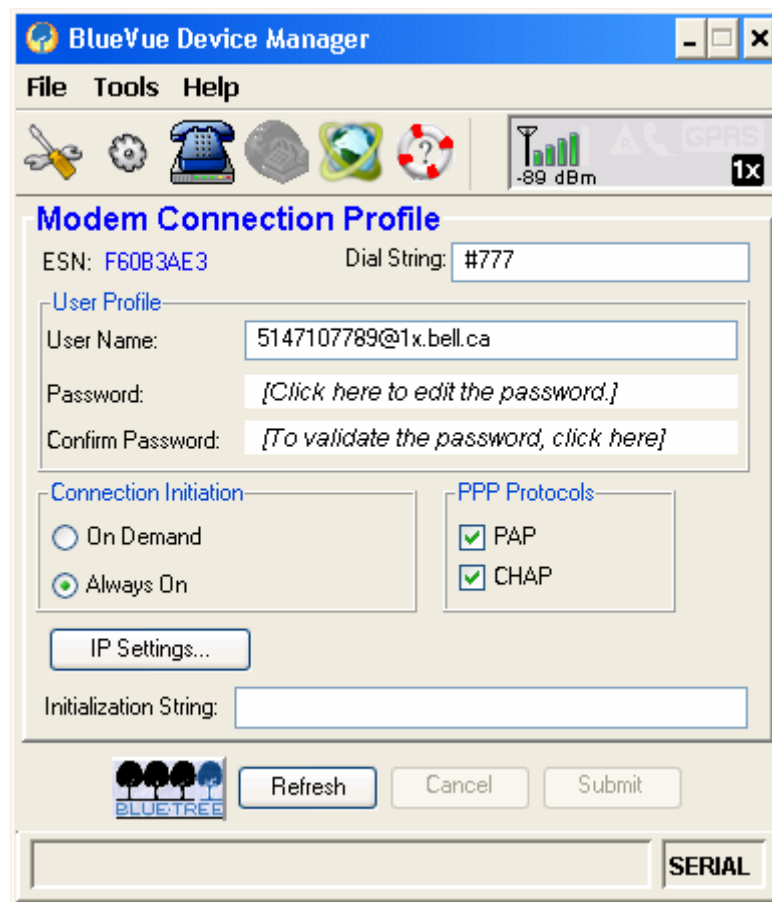The image shows a screenshot of the "BlueVue Device Manager" application window. The title bar says "BlueVue Device Manager" with standard window controls. Below the title bar is a menu bar with "File", "Tools", and "Help". A toolbar contains several icons: a wrench and screwdriver, a gear, a telephone, a modem, a globe, a question mark, and a signal strength indicator showing "-89 dBm" and "1x". The main area is titled "Modem Connection Profile". It contains several fields and sections: "ESN: F60B3AE3" and "Dial String: #777" (with a text box). A "User Profile" section has "User Name: 5147107789@1x.bell.ca", "Password: [Click here to edit the password.]", and "Confirm Password: [To validate the password, click here]". A "Connection Initiation" section has two radio buttons: "On Demand" and "Always On" (which is selected). A "PPP Protocols" section has two checked checkboxes: "PAP" and "CHAP". There is an "IP Settings..." button. An "Initialization String:" field is at the bottom. At the very bottom of the window are three buttons: "Refresh", "Cancel", and "Submit". A "SERIAL" button is also visible in the bottom right corner.

Enter #777 as a **Dial String** to establish a packet data call (1xRTT or EVDO).

Enter **Username** and **Password** as provided by your wireless service provider.

For **PPP Protocols**, make sure both **PAP** & **CHAP** are selected.

Select **Always On** in order to set the modem to connect automatically to the network upon power up and maintain this connection.


Always On versus On Demand

When the modem is set in Always On mode, it performs as a separate entity in relation with the wireless network. Thus, the modem is managing its own connection and an attached host must use the modem as a point of access to the wireless network.

When set in On Demand mode, the modem is no longer in autonomous connection mode. Connection management in that case is performed by an attached terminal. The most common scenario is to use the serial port in order to establish a PPP session.

Test your connection

Once the process above is completed, go to File > Diagnostic: you should see the valid modem's WAN IP displayed, this is the IP address that has been assigned to the modem by the wireless carrier.

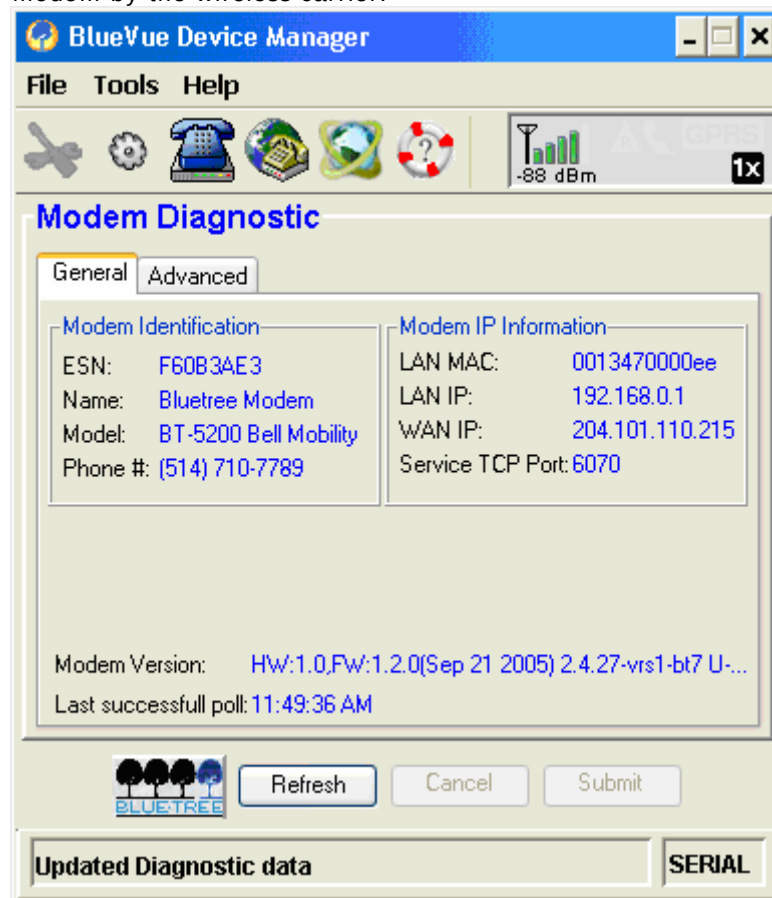

At the same time, you should see the modem's LNK light solid ON.

Chapter 5: LAN Setup

Dialup Networking

Some attached terminals do not have RJ45 Ethernet connectors and demand using a DB9 RS232 standard serial connector for proper interface with the modem. The most common use of this is in a PC environment and what is commonly referred to as dial-up networking. A user must install a standard modem driver at the appropriate COM port at which the modem is physically connected then create a dial-up connection running on that driver. The dial-up connection dials #777 to reach to the modem so that a PPP session is established between modem and PC. In the mean while, an already established PPP session between modem and wireless network is underway.

There are 2 steps in setting up a PPP connection from your PC. They are described here using Windows XP OS.

Adding a modem driver

3. Click Start > Settings > Control Panel > Phone and Modem Options
4. On the Phone and Modem Options box, click the Modems tab and then click Add
5. Check the box labeled Don't detect my modem... and then click Next
6. Select the Standard 33600 bps Modem and click Next
7. Select the COM port that the modem is attached to then click Next
8. Click Finish to complete the addition of the modem in Windows
9. Click the Modem tab and confirm that the Maximum Port Speed is set to 115,200
10. Click OK


The modem profile is now configured.

Creating a DUN session

11. Click Start > Settings > Control Panel > Network Connects > New Connection Wizard
12. On the New Connection Wizard welcome box click Next
13. On the Network Connection Type box select Connect to the Internet, and then click Next
14. On the Getting Ready box select Set up my connection manually, and then click Next
15. On the Internet Connection box select Connect to a dialup modem, and then click Next
16. On the Select a Device box select the Standard 33600bps modem and then click Next
17. On the Connection Name box, type in a name for the connection (for example: CDMA) and then click Next
18. On the Phone Number to Dial box type the phone number, as supplied by your wireless service provider. For example, type #777 for 1xRTT or 1xEvDO packet data connections
19. On the Internet Account Information box, type the username and password in the corresponding fields and then click Next

The DUN connection is now set up and ready to connect to the wireless network.

Setting the LAN configuration

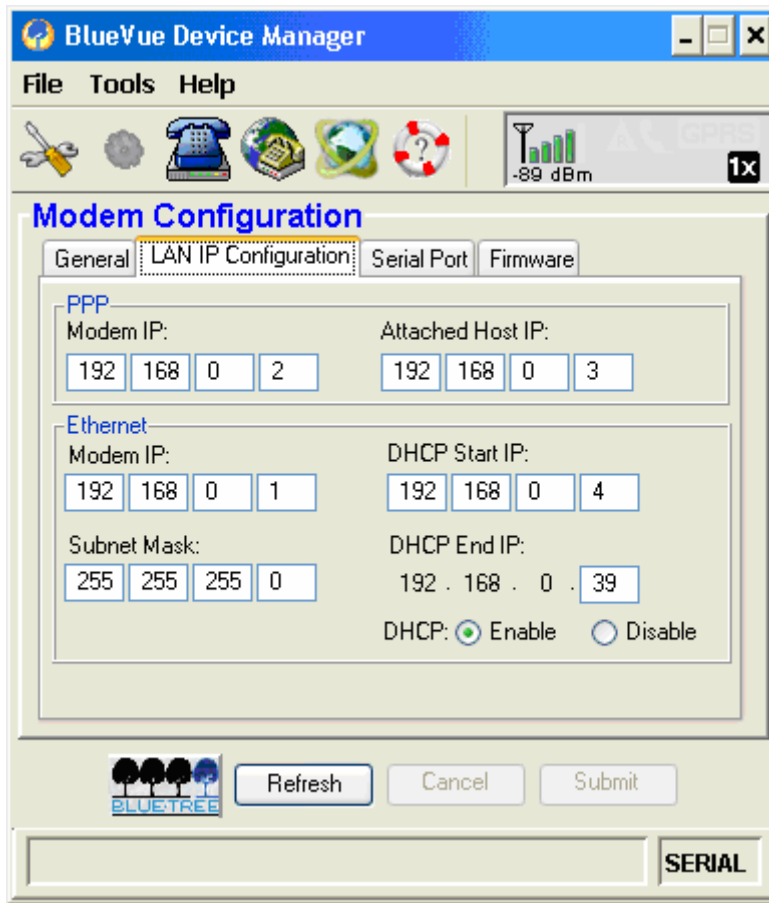

BlueVue Device Manager

File Tools Help

Modem Configuration

General **LAN IP Configuration** Serial Port Firmware

PPP

Modem IP: 192 168 0 2 Attached Host IP: 192 168 0 3

Ethernet

Modem IP: 192 168 0 1 DHCP Start IP: 192 168 0 4

Subnet Mask: 255 255 255 0 DHCP End IP: 192 . 168 . 0 . 39

DHCP: ☒ Enable ☐ Disable

Refresh Cancel Submit

SERIAL

Modem in Always On mode

Having been set in Always On mode, the modem is managing its own connection and an attached host must use the modem as a point of access to the wireless network.

If an attached terminal intends to establish a PPP session using a serial interface, it has to launch a dial up session using a #777 dial string. There is no need for username and password to be entered on the attached terminal side. In this case, a PPP session is established between the attached terminal and the modem; while another PPP session between modem and wireless network has already been established. This is commonly referred to as double PPP. Note that if the wrong dial string is sent to the modem, the modem would drop the current connection with the wireless network and defer to On Demand mode.

It is essential that both the modem and the attached terminal be within the same LAN in order for proper IP communication to take place. In order to verify correct LAN IP configuration settings on the modem, go to Modem Configuration page and check the PPP section. By default the IP address of modem is 192.168.0.2 and that of attached host is 192.168.0.3. These settings are configurable. Verify that attached terminal is allowed to accept an IP address automatically; if not, set the IP address of modem to accommodate the IP address of attached terminal so as both would lie within the same subnet.

Modem in On Demand mode

The modem at this point is not managing its own connection. The attached terminal should run a dial up session where the proper username, password, and dial string need to be entered. The modem at this point is behaving just like any other dial-up modem.

Ethernet

If an Ethernet interface is available on the attached terminal side, there is no need to establish a PPP session. Plugging in an appropriate Ethernet cable would guarantee IP layer-3 communication. However, it is essential to set the LAN IP configuration on the modem so that both modem and terminal lie within the same subnet. Go to **Modem Configuration** page and click on **LAN IP Configuration** tab. The default LAN IP address of the modem on the Ethernet side is 192.168.0.1 and that of the attached host is 192.168.0.4. Confirm that attached terminal is set to accept an IP address automatically. If it has been assigned a static IP address, then set the modem such that it has a LAN IP address that lies within the same subnet as that of the terminal. In this case, it is preferable to disable the DHCP server on the modem or set the DHCP range such that the attached host will only acquire the same IP address from the modem at all times.

USB RNDIS

Chapter 6: IP Networking Features

As briefly mentioned in Chapter 1, the modem acquires an IP address from the wireless network upon establishing a connection. The modem runs its own IP stack, thus allowing a remote user to communicate with the modem or an attached terminal behind the modem accordingly. This could be done via any terminal session, BVDM, or any software application that is using the WAN IP address of the modem and the appropriate port number as destination parameters.

It is important to note that some carriers limit this feature and a user has to particularly ask the carrier for allowing incoming IP data traffic. Also, if the intended party to be reached is a terminal behind the modem, the appropriate **port forwarding** and **LAN IP configuration** settings have to be set.

Remote connectivity feature also is vital for remote modem diagnostics or AT command interface.


Port Forwarding

Port forwarding (also referred to as tunneling) is the act of forwarding a network port from one machine to another. One use of this technique can allow an external user to reach a port on a private IP address from the outside via a NAT (network address translation) -enabled router. This allows remote computers to connect to a specific computer within a private LAN, depending on the port used to connect.

Since the 4000/5000 series modem is a NAT enabled router. The WAN device connecting to the modems wireless WAN IP can not access devices/servers on the LAN without specifically configuring the modem to forward the port(s) to the LAN devices/servers. Applications running on remote hosts or servers connect to the modem via the internet and the 1xRTT network.

Below is an exemplar sketch of how different applications running on various servers are able to reach their intended destinations (PCs in this particular case). The PCs are connected to the BlueTree modem – via Ethernet crossover cable, hubs and patch cables, wireless router or a wireless access point. In the case below a wireless access point is used and is connected via an Ethernet cable to the BlueTree modem. The remote applications use the wireless IP address of the modem (the WAN IP assigned by the wireless network carrier) as the destination IP address. The traffic received by the modem on various ports are forwarded according to their ports and their corresponding port forwarding rules to a LAN IP address.

To set Port Forwarding, click on the **Port Forwarding** tab. The **WAN Port** is the destination port number used by the remote application. The **LAN Port** is where the data is forwarded to; typically the WAN port and LAN port are the same. Select the appropriate protocol (TCP or UDP). Submit the new settings after editing this page.

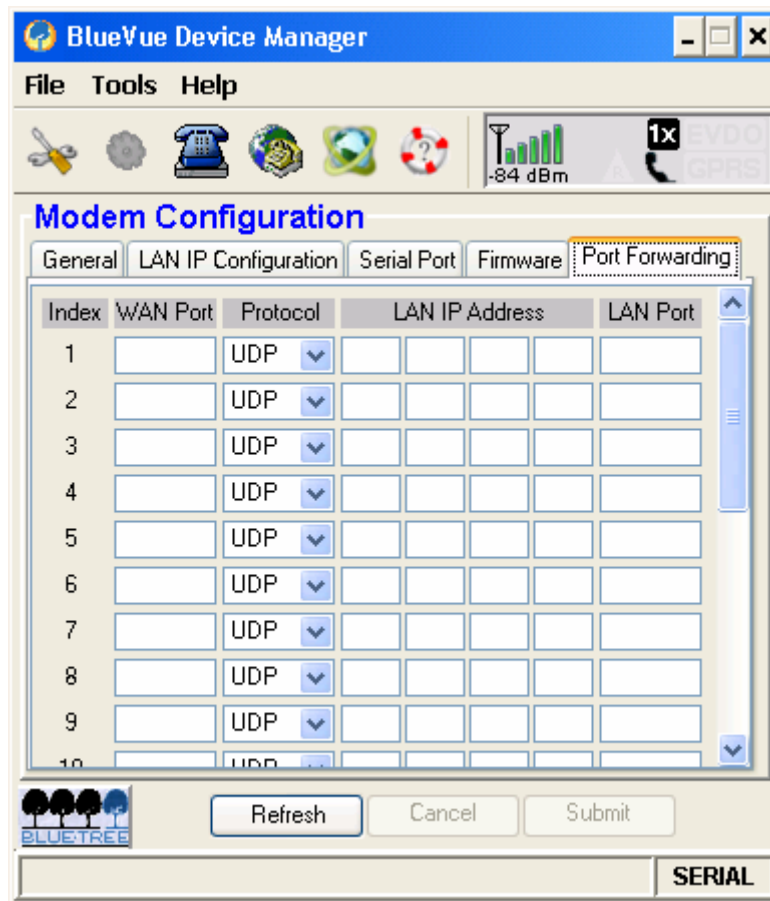

Examples of commonly used ports:

HTTP - TCP port 80
 FTP - TCP port 21
 TFTP UDP – port 69

VPN Support


The modem acts as pass-through for the standard VPN types (Virtual Private Network) allowing your client VPN to connect through the modem to your VPN server:

- PPTP
- L2TP
- IPSEC
- GRE Tunnel – in this case, the modem needs to be configured with this feature enabled using AT+BGREIP (refer to the BlueTree AT Command Reference document)

DHCP Settings

4000/5000 series modems have a **Dynamic Host Configuration Protocol** (DHCP) server enabled by default. DHCP enables TCP/IP client automatic configuration. The DHCP server stores IP information and disperses it to client systems on the network.

In BlueVue Device Manager, click on **File** then **Configuration** to display the **Modem Configuration** page. Click on the **LAN IP Configuration** tab to see the default LAN IP configuration of the modem. In the Ethernet section, the DHCP settings are displayed.

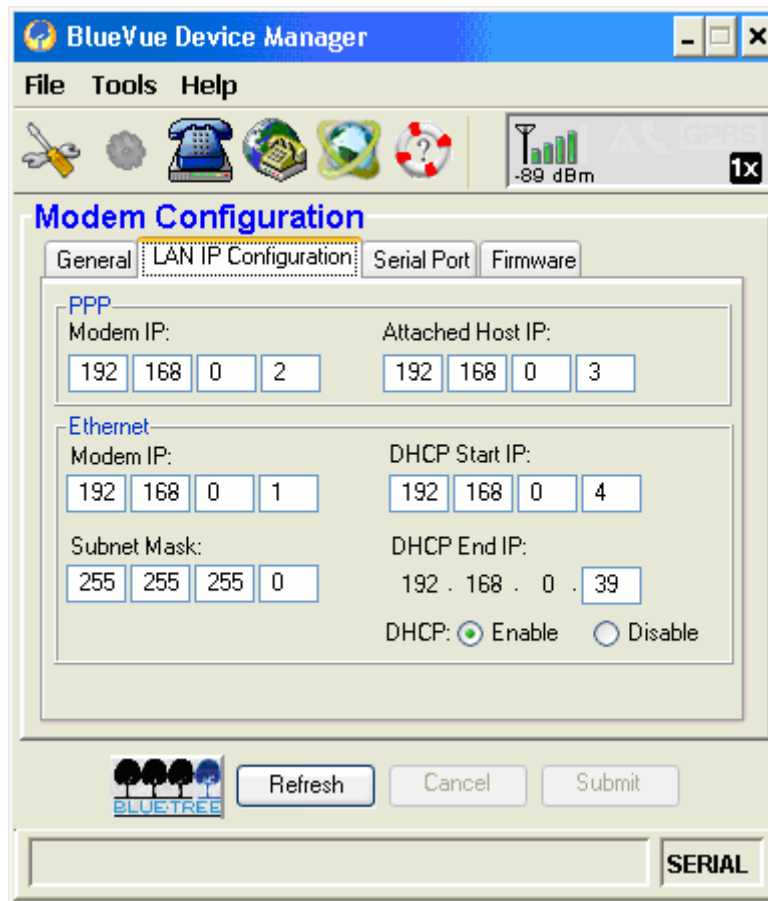


By default the DHCP server is enabled. If connecting a terminal to the modem via Ethernet, the terminal should acquire an IP address of 192.168.0.4. The DHCP range could be set accordingly or disabled if the attached host requires a particular IP address. If the IP address of the terminal is hard coded, then the modem DHCP server settings are overridden; in that case it is necessary to verify that both the modem LAN IP address and the IP address of the terminal are within the same subnet for successful communication between both.

IP Registration

The modem is configurable to report a message to a user-configurable IP destination every time its WAN IP address is changed. This is the IP address assigned by the wireless carrier.

The benefits of this feature are mainly when CDMA accounts have a dynamic IP address. Certain applications require exchanging IP data traffic with the modem, typically over TCP or UDP. In that case, the application needs the WAN IP address (public) of the modem before such data exchange. If the CDMA account is not equipped with a static IP address, the modem can be set to report its WAN IP address to an IP destination of choice, over TCP or UDP. In BlueVue Device Manager, click on **File** then **Configuration** to display the **Modem Configuration** page.

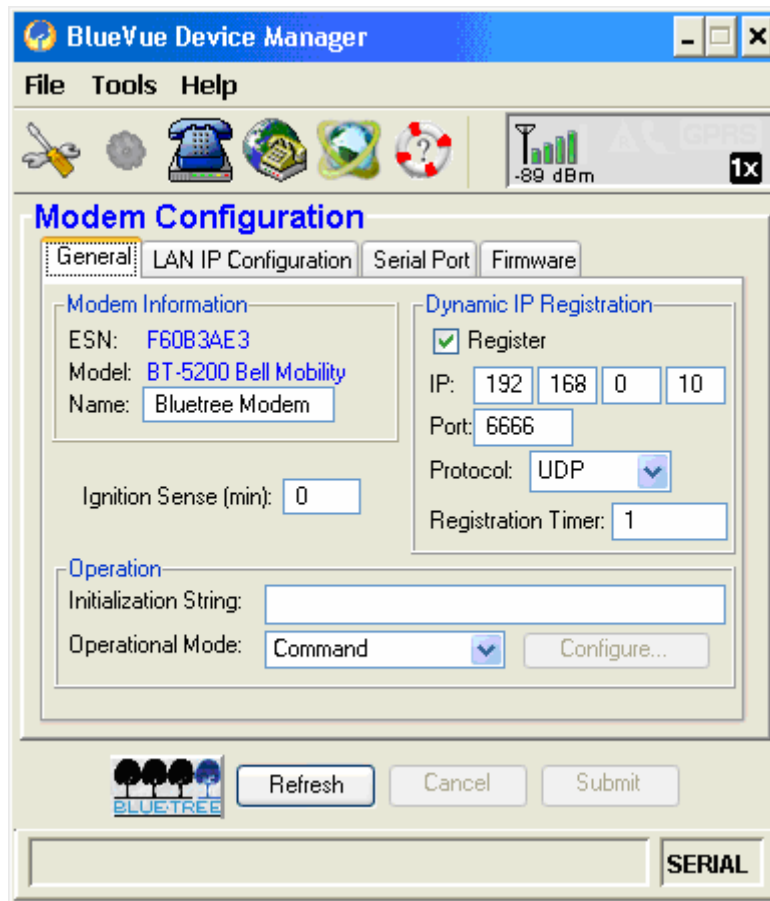


Select Dynamic IP Registration and populate the necessary information for the modem to report its WAN IP address. The reporting timer is defaulted to zero, which allows the modem to report its WAN IP address upon boot up or upon losing the wireless connection for any apparent reason or upon acquiring a new IP address from the wireless carrier. The reporting timer is in minutes. Minimum timer is one minute.

Chapter 7: Serial IP – Packet Assembly Disassembly

The purpose of this feature is to enable access to remote legacy devices (with no TCP/IP stack) over the wireless packet network.

This feature is particularly used in telemetry applications such meter reading and SCADA devices. In case of a serial connection between an attached terminal and the modem, there are instances when data exchanged between the terminal and modem is not IP traffic but raw serial data (typically layer 2 data). In this case, the modem operational mode should be set to Serial IP.

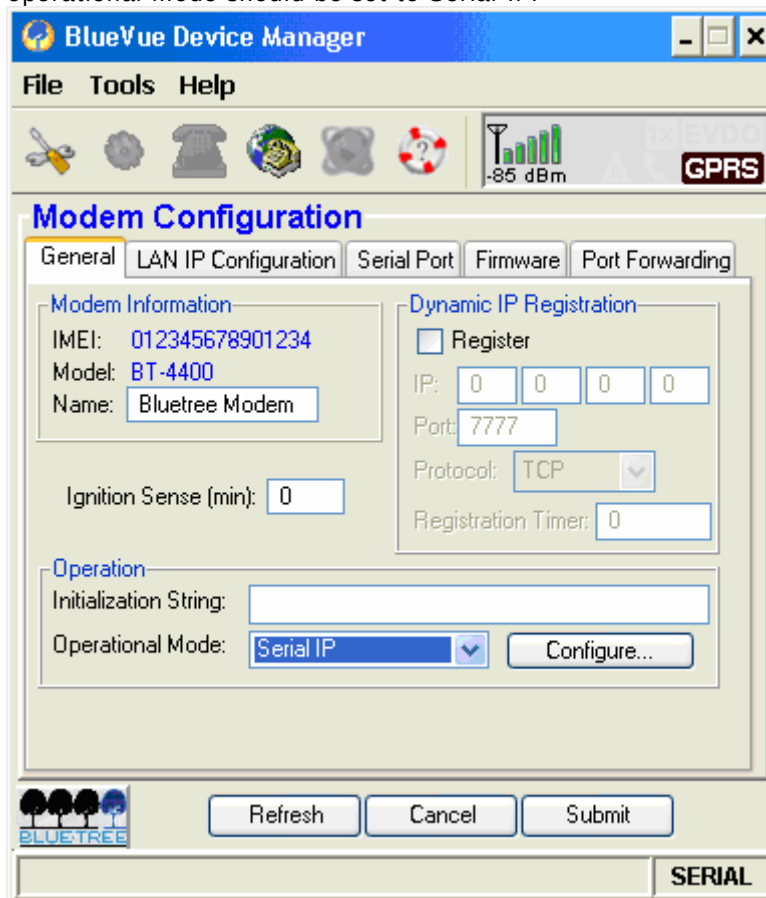


When set in Serial IP mode, upon reception of the IP packets, the modem strips off the IP headers from those packets and sends them to the attached device as raw data perceived correctly by the device. When the device is sending data, the modem encapsulates the data in IP packets to be transmitted over-the-air to an assigned destination. Flush parameters are essential for precise local serial communication. Such parameters are directly related to the type of protocol running on the attached device at the data link layer level. Depending on the type of application (direction of data traffic) and type of IP protocol used, the modem should be set accordingly.

If the attached terminal is queried by a remote application, the **Serial IP Listening Server** on the modem should be configured accordingly. The modem performs socket handling on its own end according to IP packets received from the remote application.

The flush parameters determine the encapsulation of data received from attached terminal. **Flush on time out** parameter is a multiple of 100 milliseconds, which is the

time out between serial packets sent by the terminal. **Flush on byte count** is in bytes determines the number of bytes received before the modem encapsulate data in IP packets. When the number of bytes in a packet is unknown, it is typical to set this parameter to zero. **Flush on special character** is utilized when there is a particular character that designates the end of a received packet. If any one of those three conditions is met, the modem flushes data by encapsulating it in IP packets then sending it over the air to a remote application.

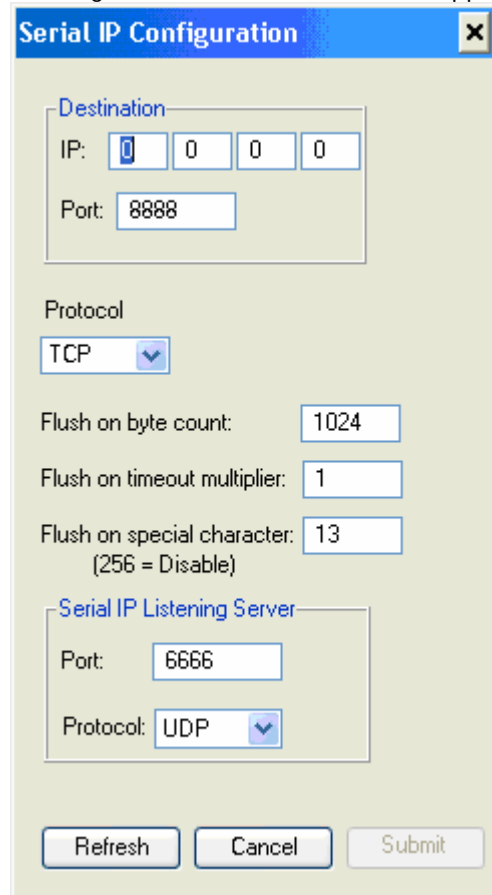A screenshot of the "Serial IP Configuration" dialog box. The dialog has a title bar with a close button. It contains two main sections: "Destination" and "Serial IP Listening Server". The "Destination" section has fields for IP (0.0.0.0) and Port (8888). The "Serial IP Listening Server" section has fields for Port (6666) and Protocol (UDP). There are also three buttons at the bottom: Refresh, Cancel, and Submit. The "Flush on byte count" field is set to 1024, "Flush on timeout multiplier" is set to 1, and "Flush on special character" is set to 13 with a note "(256 = Disable)".

Serial IP Configuration

Destination

IP: 0 0 0 0

Port: 8888

Protocol

TCP

Flush on byte count: 1024

Flush on timeout multiplier: 1

Flush on special character: 13
(256 = Disable)

Serial IP Listening Server

Port: 6666

Protocol: UDP

Refresh Cancel Submit

If the attached terminal is sending data on its own initiative without being queried, a destination IP address, port number, and protocol have to be set on the modem.

Chapter 8: GPS Settings


This is an available feature in 5200/5600 modems only. These modems have an embedded GPS receiver from which the processor on the modem retrieves GPS data. GPS data retrieved is not processed by the modem. The interface, available in BlueVue Device Manager, to control GPS reporting communicates directly to the GPS module. For construction of customized reports of GPS data, a user has to leverage the AVL (Automatic Vehicle Location) and **Event Reporting** firmware capabilities of the modem. Firmware 2.0.3 and above allow AVL capabilities. Refer to Blue Tree's website for latest firmware updates.

In BVDM, click on **File** then **GPS** to access the modem GPS page.

GPS Destinations

It is possible to select two GPS Destinations by populating IP Destinations 1 & 2; selecting the IP Transport protocol for each destination; filling in the Port number; then checking the IP Destination box.


It is also possible to report GPS data on a serial port by checking the Serial Port box. Execute and save settings by clicking on **Submit**.

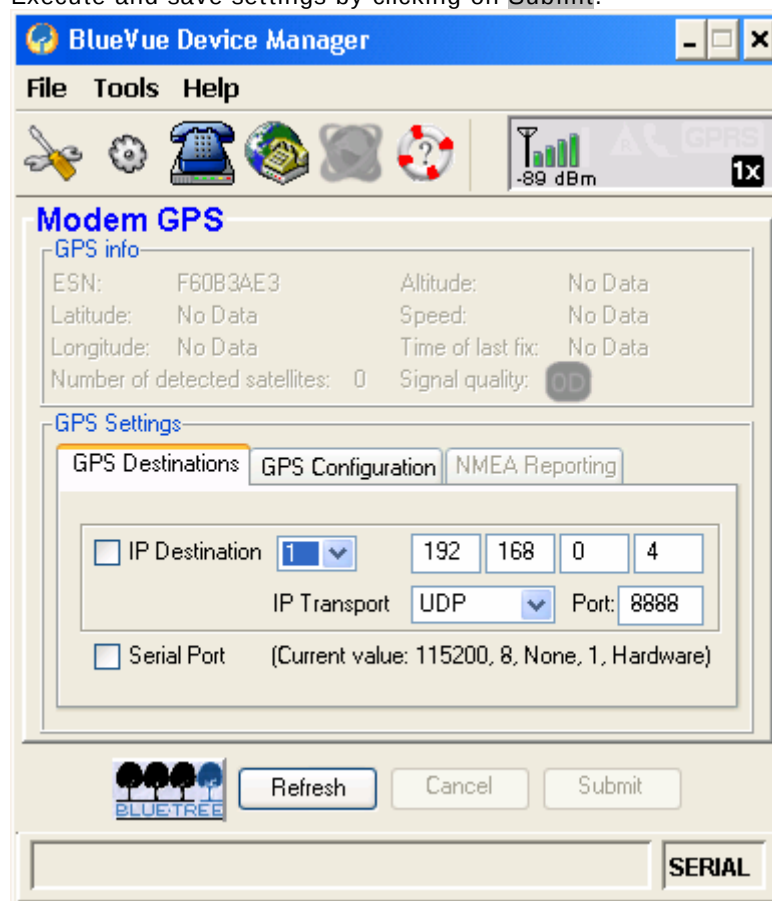

GPS Configuration

Select a protocol type, TAIP or NMEA.

Populate the corresponding Acquisition Time (sec) and Reporting frequency (sec). Reporting Timer can not carry a value smaller than the Acquisition Timer. Typically, both timers should be set to the same value. If not, the modem reports the number of fixes it has acquired before the reporting timer has expired.

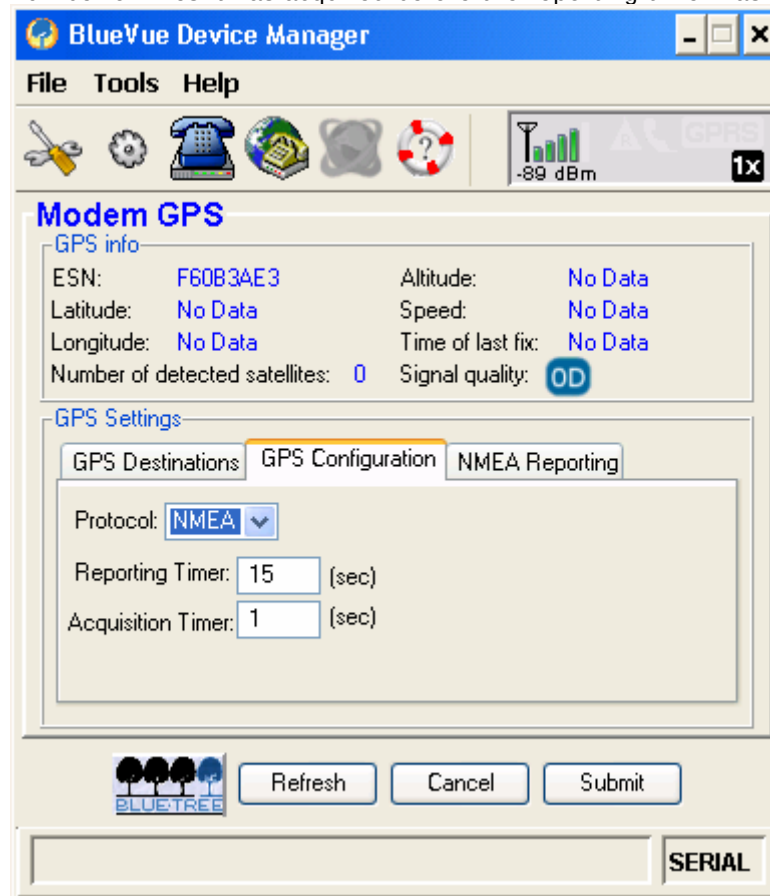

BlueVue Device Manager

File Tools Help

GPS info

ESN:	F60B3AE3	Altitude:	No Data
Latitude:	No Data	Speed:	No Data
Longitude:	No Data	Time of last fix:	No Data
Number of detected satellites:	0	Signal quality:	00

GPS Settings

GPS Destinations GPS Configuration NMEA Reporting

Protocol: NMEA


Reporting Timer: 15 (sec)

Acquisition Timer: 1 (sec)


Refresh Cancel Submit

SERIAL

In case of NMEA, select the NMEA messages to be transmitted. A user can select which messages to be reported and set the reporting based on time interval. It is important to note that in NMEA standards there is no unique identifier for the NMEA message. If a unique identifier is necessary, the user has to either utilize TAIP GPS reporting protocol or leverage the AVL firmware capabilities of the modem. By default, the modem reports GGA and VTG messages. Refer to Trimble NMEA documentation for format of reported NMEA messages.

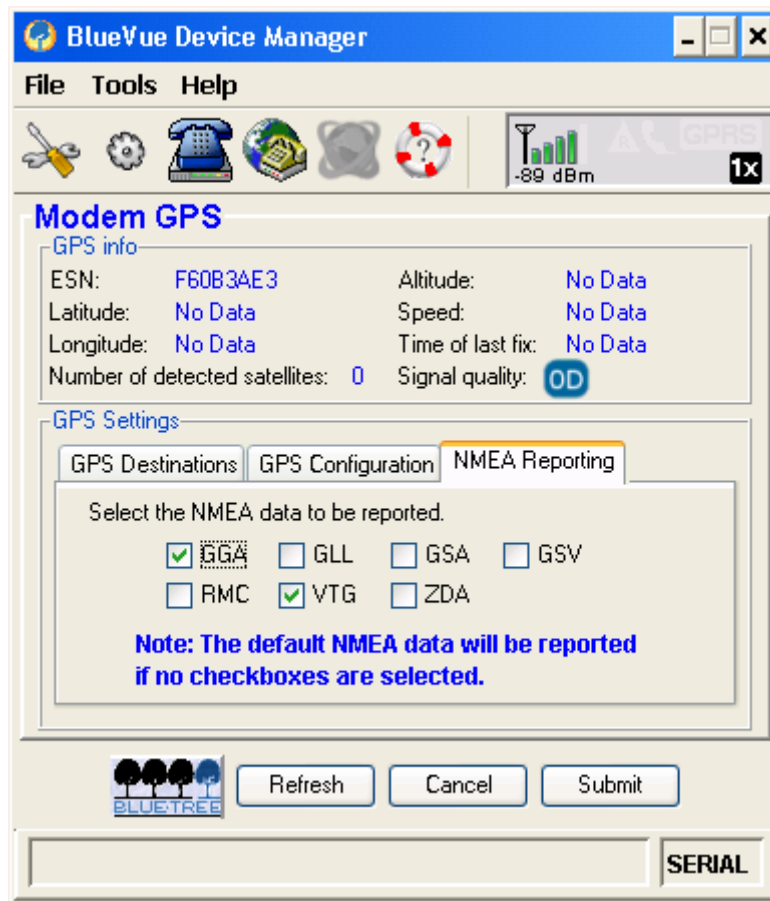

In case of TAIP reporting, a user can set a complete TAIP command. Reporting could be set based on time interval or distance traveled. A vehicle ID could be entered. This entry will be incorporated in the TAIP initialization string which could be configured manually. Refer to Trimble TAIP documentation for format of TAIP reported messages.

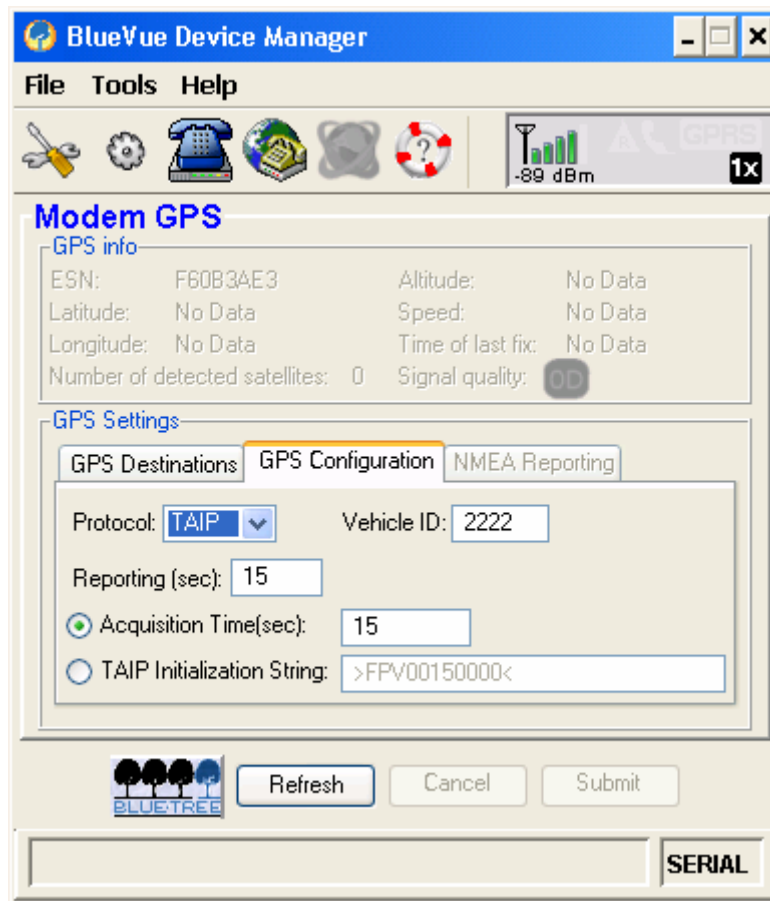

GPS Store & Forward

The 5000 series modems have an integrated 512Kbytes Static RAM memory dedicated to storing GPS fixes. It can store an average of 5000 points (position fixes), depending on the protocol selected. Its purpose is to keep a record of the vehicle's route when the reporting destination is unreachable. Under such circumstances, the modem stores GPS data in a static memory in a **First In First Out** (FIFO) manner. When the wireless connection is re-established or when the socket at the reporting destination is re-established, the modem resumes sending GPS packets. If the memory is full, the new fixes overwrite the oldest stored ones based on a FIFO process.

Refer to the table below as a guide in calculating the total storage time and size of related packets.



	NMEA	TAIP
	Content = RMC Message Size = 67 Bytes Number of recorded points = 8,000	Content = PV Default Message Size = 35 Bytes Number of recorded points = 14,900
Acquisition Interval	Total Storage Time (in hours)	Total Storage Time (in hours)
5 sec	11	20.69
15 sec	33	62.07
30 sec	66	124.14
60 sec	132	248.28
15 min	1980	3724.2
30 min	3960	7448.4
60 min	7920	14896.8

NMEA Message Packet Size

When selecting NMEA as the reporting protocol, you can choose which specific message(s) to report:

GGA	GPS Fix Data	75 Bytes
GLL	Geographic Position Longitude/Latitude	48 Bytes
GSA	GPS DOP and Active Satellites	63 Bytes
GSV	Active Satellites in View	70 Bytes
RMC	Recommended Minimum Specific	67 Bytes
VTG	Track Made Good and Ground Speed	37 Bytes
ZDA	Time & Date	35 Bytes

Chapter 9: IO Management

BlueTree offers a complete set of AT commands to query/set its general purpose and dedicated input and output pins. These commands can be sent to the modem:

- Locally via the serial, USB or Ethernet ports
- Remotely over the air

Please refer to BlueTree's AT Command Reference document for more details:

<http://www.bluetreewireless.com/support/downloads/documents/>

Digital Output Control

The three outputs on the modem can be used to turn ON or OFF peripheral equipment such as light, a siren, a valve, lock/unlock a door, enable/disable a starter,...

Example of turning ON digital output 2: AT+BDOSSET=DO2,1.

Digital Input State Query

The modem monitors all of its 4 general purpose digital inputs for a change in state, along with the dedicated ignition input. The state of these inputs can be queried as follows:

```
AT+BDIGET?  
+BDIGET: DI1,0  
+BDIGET: DI2,0  
+BDIGET: DI3,0  
+BDIGET: DI4,0  
+BDIGET: IGN,1
```

OK

Analog Input Value Query

The modem has an 10-bit ADC (analog to digital converter) allowing it to monitor all of its 3 general purpose analog inputs for a change in state, along with the dedicated power input. The value of these inputs can be queried as follows:

```
AT+BAIGET?  
+BAIGET: PWR,13.553  
+BAIGET: AI1,3.056  
+BAIGET: AI2,1.987  
+BAIGET: AI3,0.000
```

OK

Chapter 10: Event Reporting

Digital Input Monitoring

The modem can be configured to monitor any or all of its 4 digital inputs for a change in state. Once the change in state is detected, the modem would send a report to the user configurable IP destination.

Ignition ON / OFF Notification

The modem can be configured to monitor this input for a change in state. Once the vehicle's ignition is turned ON or OFF, the modem would send a report to the user-configurable IP destination.

Analog Input Monitoring

The modem can be configured to monitor any or all of its analog inputs. Once the set threshold is reached, the modem would send a report to the user-configurable IP destination. The report event can be based on:

- Input value is equal to the set threshold
- Input value dropped below the set threshold
- Input value exceeded the set threshold

Low Voltage Notification

The modem continuously monitors this input, and is configurable to report a low voltage alert to a user-configurable IP destination once the voltage drops below a certain threshold.

Time Interval Event Reporting

The modem is configurable to report a GPS, IO info, or diagnostic message every x seconds to a predetermined IP destination.

GPS-driven Event Reporting

The user can set the reporting system to trigger whenever the GPS receiver reports a fix. In effect, this makes the reporting system follow the settings of the embedded GPS receiver.

Excessive Speed Notification

The user can define a speed threshold and trigger a notification whenever the speed reported by the GPS receiver exceeds that threshold.

Engine Idling Notification


The user can define an event to notify of an engine Idling state. This can be accomplished by defining a trigger that combines a low speed threshold (e.g. ≤ 5 km/h) with IGN=1 (i.e. ON) for a certain duration.

Odometer Measurement

The modem can calculate and report the odometer value in Kilometers to destination by event reporting.

Chapter 11: Firmware Upgrade

Firmware upgrades are recurrent for maintenance or new feature purposes.. To perform a firmware upgrade, go to **Modem Configuration** page, then click on the **Firmware** tab, click on the **magnifier** to browse for the related file; then click on **upgrade**. Note that firmware upgrades are only possible if communicating with the modem using an Ethernet cross-over cable locally or over the air if using a static IP address. The two necessary files to upgrade the firmware are **abt.upd** and **kbt.upd**. It is recommended to upgrade the **abt.upd** file before the **kbt.upd** file. For the latest firmware check the BlueTree website.

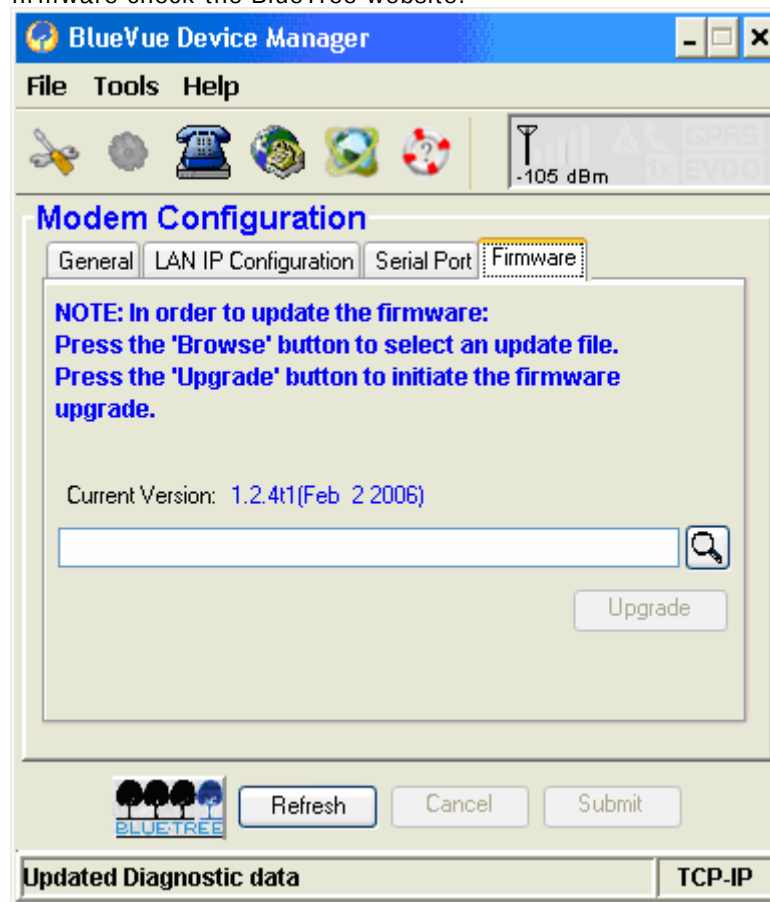

Chapter 12: Hardware Installation

Cellular antenna

The cellular antenna(s) you select must meet the following specifications:

- Maximum rated gain of 3dBi for Cellular band and 4dBi for PCS band
- Dual-band 800 & 1900 MHz
- Nominal 50 ohm impedance
- VSWR less than 2.5:1
- Male SMA connector for 4600/5600 modems
- Male TNC connector for 4200/5200 modems

For 4600/5600 modems, there are 2 antenna connections available: RF1 and RF2. RF1 being the main transmit/receive cellular antenna, and RF2 the diversity one for improvement on signal quality of up to 3dB.

- Final design must maintain a minimum isolation between antennas of 10dB
- Separation distances of 50-60mm is usually sufficient even for like antennas
- Polarity and spatial diversity are all suitable options if space is available
- Placing antenna near opposite corners will usually create sufficiently different responses to satisfy diversity requirements
- Main antenna should be the dominant antenna. I.e. best performance
- Diversity antenna should perform within 3dB of main antenna.



Warning: "Antenna must not exceed 3 dBi for Cellular band and 4 dBi for PCS band. This device must be used in mobile configurations. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 30 cm or 12 inches from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. Users and Installers must be provided with antenna installation instruction and transmitter operating conditions for satisfying RF exposure compliance"

On top of the FCC and Industry Canada guidelines, make sure you:

- Mount the antenna(s) more than 30 cm (12 inches) from other antennas
- Do not install the antenna in a closed metallic enclosure (such as a cabinet or the trunk of a car).


The length of the antenna cable may affect the signal strength. Choose the appropriate cable type and length. Refer to table below.

Cable type	Loss per 100 feet
8216 (RG58)	31 dB
8267 (RG213)	7.6 dB
LMR-400	3.9 dB
LMR-500	3.15 dB
LMR-600	2.5 dB
LMR-1200	1.26 dB

Test


- REG light on the modem should be flashing, indicating that the modem is registered on the wireless network (in coverage)
- Using BVDM, you can also read the modem's diagnostic where received signal strength (RSSI) is shown in bars and dBm

→ You should have at least one signal bar or -98dBm

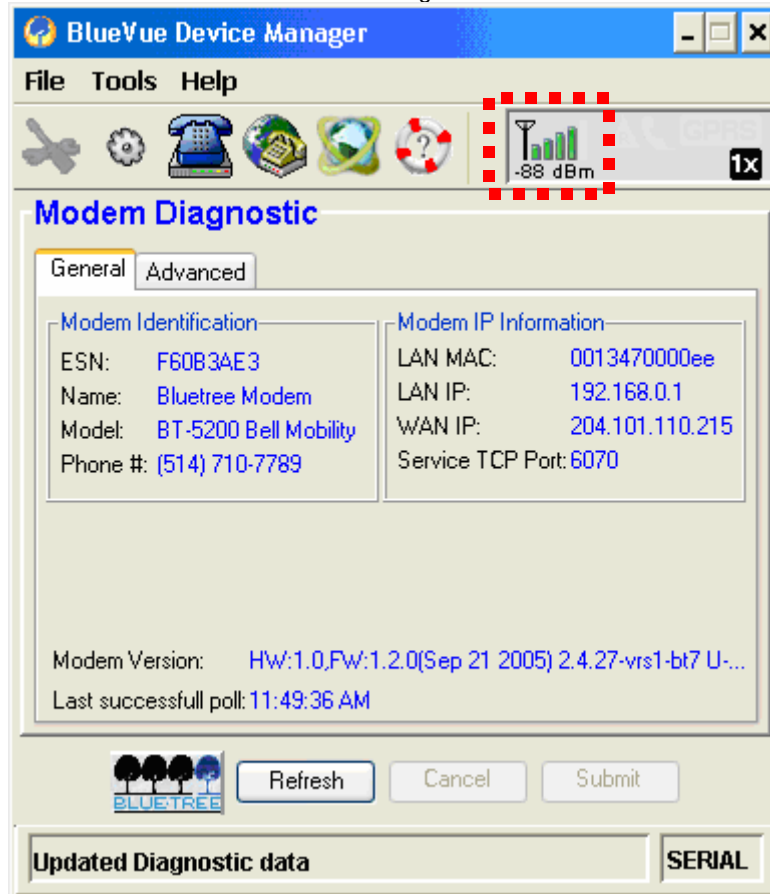

- Another important parameter is the E_c/I_o value available from BVDM > Diagnostic > Advanced. BVDM shows the a numeric value that converts in dBm by multiplying by -0.5.

→ You should have at least -15dB

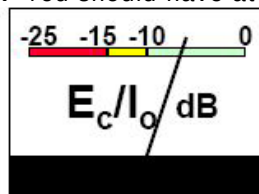

GPS antenna

If you're using a 5200 or a 5600 modem model, it has an additional SMA connector for the GPS antenna. The selected GPS antenna must meet the following specifications:

- Active antenna with 3.3 volts preamplifier
- Nominal 50 Ohms impedance
- Male SMA connector
- Frequency band: 1575 MHz

Note: Combined GPS and Cellular antennas are available. Contact your local representative for more details.

To install, make sure you position the antenna so it has line-of-sight with the sky. Thread the antenna cable so it can reach the front plate of the modem. Then connect the cable's connector into the modem's by screwing it in finger tight. Do not use tools.

Test

To test your installation, open BVDM and go to File > GPS Settings, then select NMEA protocol. BVDM will display the GPS information and whether a fix is available or not.

Serial cable

If you are connecting to the modem via serial port, you will need a standard straight through RS-232 cable with DB9 male to DB9 female connectors.


Ethernet cable

If you are connecting to the modem via the Ethernet port, you will need a crossover category 5 cable with two 8-pin RJ45 connectors on each end.

Test

In order to visually confirm appropriate usage of cable, check the LED indication on the Ethernet port located at the rear panel of the modem. The **Link** LED should be on when the right cable is used.

If you're plugging into a standard PC running Windows XP, Windows will automatically detect the presence of the modem on its Ethernet port and will popup a message accordingly:

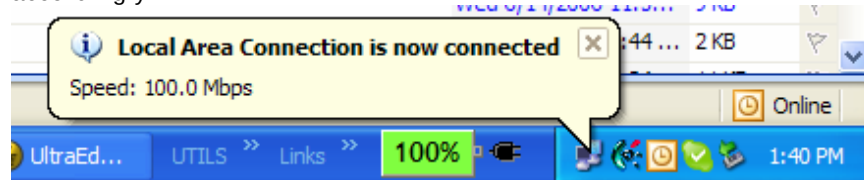


USB cable

Power source


You will need to provide a 12 VDC nominal power source to the modem (8Vdc to 30Vdc). Please see electrical specifications for more details.

The modem includes a 15-foot power cable with 2A in-line fuse with, on one end, a 4-pin Molex MiniFit connector that connects to the modem, and stripped wires on the other end to connect to your power source.

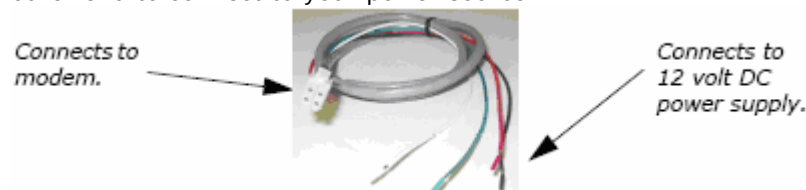


The ignition sense line (white wire) acts as an ON/OFF power switch. The modem will turn on when the ignition sense line is set between 8 and 30 volts DC. The modem will turn off if the ignition sense line is less than 5 volts DC.

Pin designations for the connector are shown below.

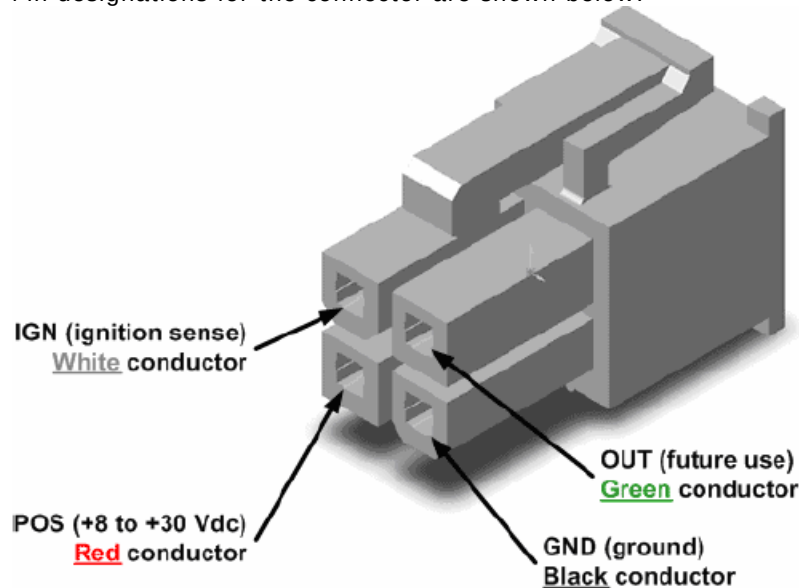


Powering up the modem

Note: *It is recommended to have the cellular antenna connected to the modem before applying power.*

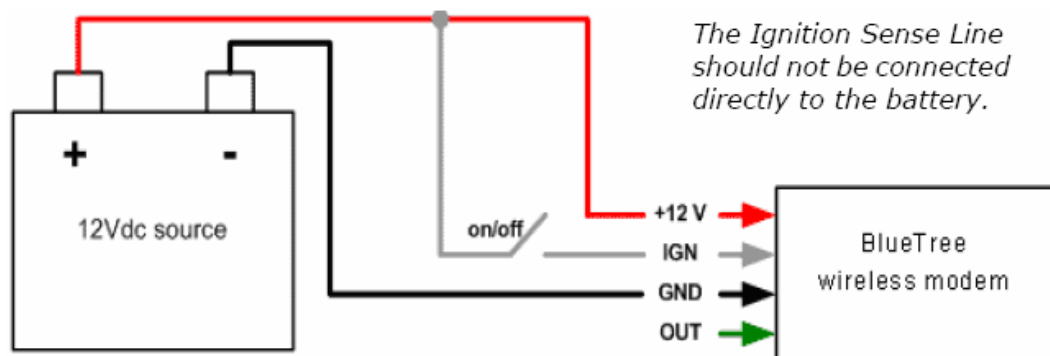

- Connect the red wire directly to the battery's positive (+) terminal or to a source of 8-to-30Vdc
- Connect the black wire directly to the battery's negative (-) terminal or to ground (GND)
- The white wire must be connected to either:
 - a. A switch for manually turning on and off the modem
 - b. The vehicle's "Accessory for position 2", for turning ON the modem without turning on the engine
 - c. The vehicle's "Accessory for position 3", for turning ON the modem only when the engine is turned on.

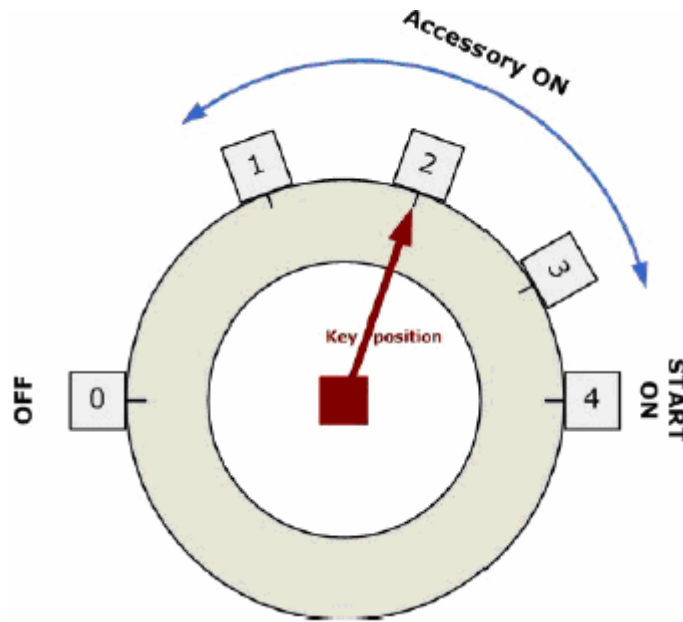


Test

To test the power connection, check the PWR light on the modem: if it is turned ON then the modem is powered. If it's OFF, review the installation procedures.
If LED indicators are not accessible to the installer a personal computer can be used to verify it's functionality by running BVDM.

IO Cable Wiring

The 15-foot 10-pin IO cable is available for purchase from BlueTree.
On one end of the cable is the Molex plug as shown in the figure below, on the other end, the wires are stripped for easy connection to your equipment or sensors.

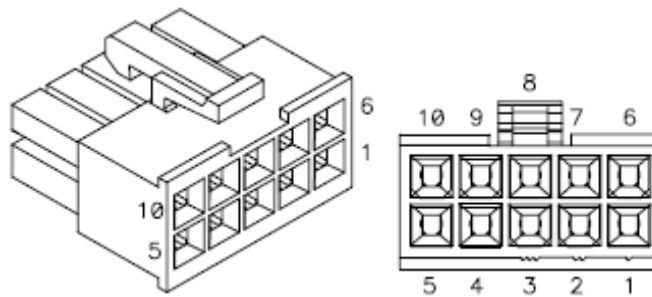

Pin	Color	Label	Description
1	BLUE	DI3	Digital Input #3
2	ORANGE	DI1	Digital Input #1
3	GREEN	O1	Digital Output #1
4	BROWN	AI3 (4600/5600 only)	Analog Input #3
5	GRAY	AI1	Analog Input #1
6	VIOLET	DI4	Digital Input #4



7	YELLOW	DI2	Digital Input #2
8	RED	O2	Digital Output #2
9	BLACK	GND	GROUND
10	WHITE	AI2	Analog Input #2

Mounting the modem

For mounting, the modem requires four #4 screws (3/16") pan or fillister head, as well as corresponding lock washers

Appendix A: Warranty and Support

Warranty

BlueTree Wireless Data Inc. warrants its cellular modems against all defects in materials and workmanship for a period of one (1) year from the date of purchase. The sole responsibility of BlueTree Wireless Data Inc. under this warranty is limited to either repair or, at the option of BlueTree Wireless Data Inc., replacement of the cellular modem. There are no expressed or implied warranties, including those of fitness for a particular purpose or merchantability, which extend beyond the face hereof. BlueTree Wireless Data Inc. is not liable for any incidental or consequential damages arising from the use, misuse, or installation of the BlueTree cellular modem. This warranty does not apply if the serial number label has been removed, or if the cellular modem has been subjected to physical abuse, improper installation, or modification. The unit is automatically registered for warranty at the date it is purchased and/or shipped.

Customer Support

Toll-free	(877) 422-9110
Phone	(514) 422-9110
Hours	08:30 - 19:00 Eastern Time
Fax	(514) 422-3338
Email	support@bluetreewireless.com
Web	www.bluetreewireless.com
Address	BlueTree Wireless Data, Inc. 2425 46th Avenue Lachine, QC, Canada H8T 3C9