

Main Feature:

1. Talking time (continuous) to 10 hours.
2. Standby time to 30 days.
3. Available distance for transmission around 3 meters.
4. Beaming power<5dBm.

How to use:

1. Tune the Car Radio to the right station.
2. Switch on the power and the LED will be on.
3. Switch off the power after conversation to avoid the battery being driven off.
4. Slight tune the frequency of the radio station if any slight cacophony is heard.