



Tablet PC Quick Guide

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received,
including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without RF striction.

Switch on/off

Switch On and unlock :when the device is in the OFF mode ,press and hold "Power" key for 3 seconds to enter the Android startup progress bar, it need about 100seconds enter to the system desktop ,the LCD is under locked mode, please press and pull the  icon to the green point ,then the LCD will unlock automatically. See the figures below,

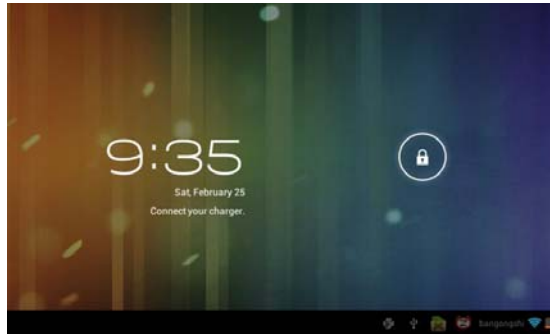

Power Save Modes and Lock screen: Press the "POWER" key shortly after starting up, system enter to SLEEP power save and lock screen mode .Press the "POWER" key or tap the touch screen .For example : playing music ,movie, etc

Switch OFF: when the device is in the OFF mode, press and hold the "POWER" key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically

【Notice】 When the device with low battery, it will alarm continuously and shut automatically without charging. If the device can not start up,

Please check if the battery is low, and try it again after the battery is charged.

Battery Management and Charging

- a. Charge the battery at about 8-12 hours to make sure the battery is fully charged at the first time.
- b.
- c. Insert the micro port of the battery adapter into DC slot on the device, and connect the other side with the power socket. Then the Power indicating lamp of the device is in high light blue color, the desktop icon of the battery  keeping rolling which shows it is charging, please wait until the battery is fully charged, and do not disconnect the power when charging. Once the battery is fully charged, the indicating lamp will change into dark blue, the icon  on the desktop will stop rolling. When the battery is exhausted completely, please charge at least one minute before start it up.

【Notice】 In order to keep the battery working in best condition, please pay attention as below:


- ◆ Please do not charge the power in high temperature.
- ◆ No need to release the power for this Li- battery, you can charge the power even there is still some power in the battery, no need to charge the power when it runs out.
- ◆ In order to keep the battery in good condition makes sure to charge the power once per two weeks if you do not use this device for a long time.



Operation of the Function Icons
a . Definition of the Function Icons

Icon	Function Instruction	Icon	Function Instruction
	Back to Home menu		Note when the system finds new devices
	Show current power status		Menu for function block
	back		wifi/Ethernet Connection status
	menu		Remain your last task

Product Appearance

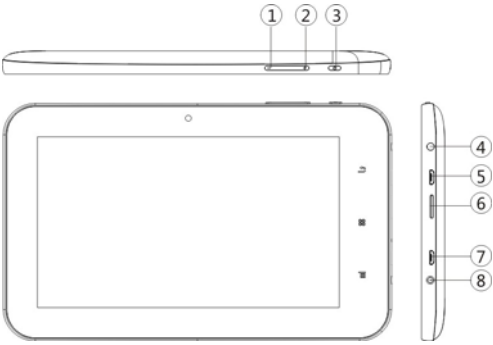

Instructions on Keys

Symbol	Name	Description
1	Volume Key	Press Left to Vol -
2	Volume Key	Press Right to Vol+
3	POWER Key	Press the button shortly to enter sleeping/wake up mode, press long to switch ON/OFF
4	Earphone Slot	Stereo earpieces Jack
5	USB Slot	MINI 5Pin USB Port,connect pc
6	TF card Slot	TF card slot
7	OTG Slot	OTG Slot to make USB Connection
8	DC Socket	Connect with 5V DC charger

WIFI Setting

- a. **Turn on the Wifi setting:** tap the module icon  enter into function menu list ;press "setting" enter into the setting interface; press "wireless and network" to setup, just select the Wifi as below:



- b. **Set the Wifi and connect to the network:** press "Wifi setting" to enter into the Wifi ,the system will find the Wifi name automatically. Please refer to the picture as below, it has found two Wifi network name:



You can see the network connecting status when you press the network name. There will be a Wifi icon "  ". Showing the level of Signal

USB Function:

a. Read U-disk:

Insert the U-disk with OTG Cable into the Mini USB port, press the "Resource manager" in the desktop, press "USB" enter into U-disk. See the figure as below:



b.External 3G USB Dongle:

Insert the 3G USB Dongle with OTG Cable into the Mini USB port, connect with the internet directly.

TF Card Storage

There is a TF card slot in this device. It supports reading the files in TF card. Insert the TF card into the card slot in right way, when take it out ,just push the TF toward to the inside, then the slot will release the TF card ,the TF card will pop out automatically, then take it out.

A. Please insert the TF into the card slot in the right side of the device.

B. Do not pull out the card when operating (reading, copying) otherwise, it may cause data error.

- C. Do not use the TF card under high temperature condition
- D. Keep the TF card far from the liquid and erosive materials

APK Installer

This device supports the third part Application Program based on Android .Many Application programs can be got from internet, just copy into the flash of this device or TF card, and then proceed to install and use.


- Press the APK installer “” and the APK installer interfaces will popup:

Install, Manager, Exit



- Install: Press install, enter into the APK installer interface
Internal Memory means built-in flash, SD card means F-flash;
After entering, select the APK format setting program in the right side, tap to install, back to the main interface when complete this operation, then it finished the installing, and there is a relevant software menu.


- Manage: Tap manage and enter into the third part software interface.

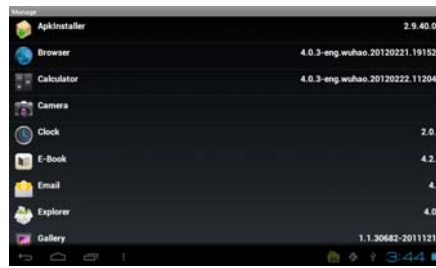

- Exit: Back to the main interface

Advanced task manager -action


- Launch: run the software
- Export: export the software to the TF card
- Uninstall: Uninstall the software
- Cancel: Back to the main interface

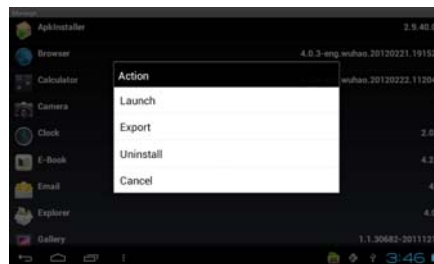

Camera Function

You can use camera to choose video or take photoes as you

Need, through  to confirm.


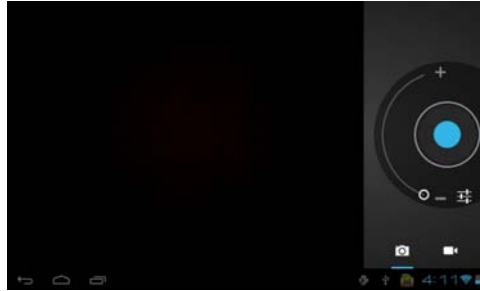


5 Desktop System1 (Multimedia Music/Video/Picture/Record/E-book)

Music

In the main menu or desktop, click the icon  to play the audio

- When no music files in the audio play list ,the system will automatically load the music files from the card to the audio player play list after turning on the audio player (the device supported audio file format:MP3,WAV ,MIDI,WMA).The play list as shown in the above figure
- If too more songs in the music play list area ,slide up/down the touch screen to page up/down
- Double-click the favorite in the list to play music as shown in the following picture

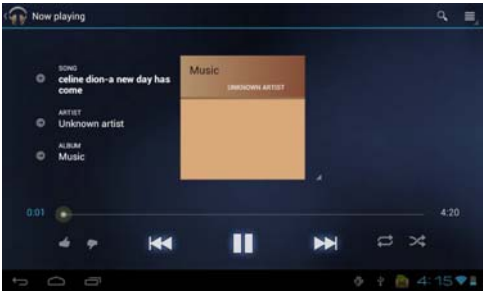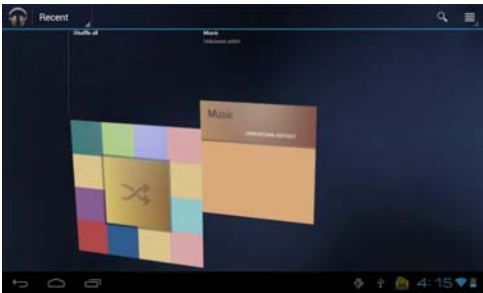

- In the music playing interface, tap  and then enter the audio playing list
- Drag the playback by progress bar  to adjust audio playback progress
- Audio player buttons description

Note: audio player can play WAV record files

Video

In the main menu or desktop, tap the icon  to enter the video player interface, open the video files, and double click the favorite in the list to play as shown in the following pictures






- The device support audio file format:MKV,AVI,RM,RMVB,MP4,MOV,VOB,DAT,FLV,3GP
- When no video files in the video player play list ,the system will automatically load the video files from the card to the video player play list after turning on video player
- Drag the playback progress




- bar to adjust video playback progress
- Video player buttons description:

Button	Description	Button	Description
	Adding video bookmarks		Bright Adjusting
	Forward to previous video		Back to next video
	Play and pause a video		Video format16:9/4:3
	Quit		Menu
	Volume down		Volume up

Click the button to set deleting bookmark, play mode, help , etc.
See the figure as below

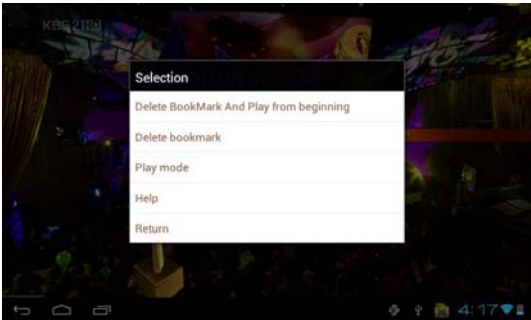

- a. Tap play mode to select one of play mode: single, repeat one, repeat all, or tap back to A menu

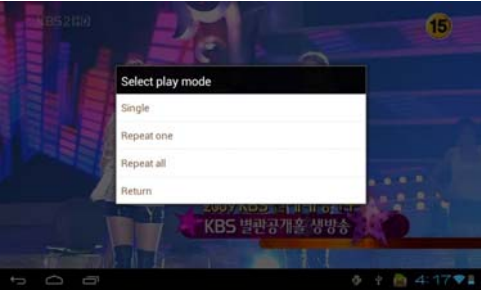

Photo

- In the main menu or desktop, tap the picture browsing icon Gallery 



Photo Browser Button Description:

- Add Picture(This device supports BMP、JPG、JPEG、PNG、GIF format)

Open the corresponding folder, find the image file and add the picture you want.

- Tap photo setting button, the photo can be set as wallpaper:




Record

In the main menu or desktop, tap the record icon  to enter the record interface, tap record button  to

start record ,tap this button  to stop record, the system will remind you to use this record or give up, please select manually.

Record play: please select audio player to play the record, firstly select the record files from the explorer and then click it and play. Further details please refer to 5.1.1(audio player)

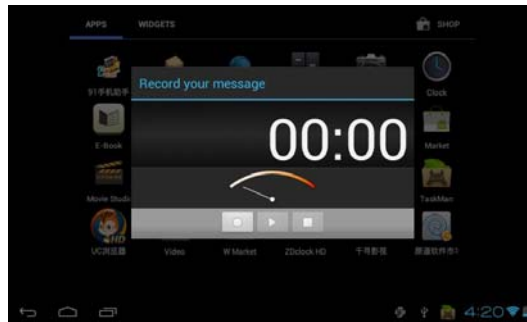

Explorer

In the main menu or desktop, tap the explorer icon to enter the Management Interface, tap **【TF Card】**, **【Internal Memory】** and **【USB】** to open


their root directory folders to copy , paste ,add, ,delete, remove and rename operations options ,then tap previous /next folder or A menu to finish the copy ,delete ,paste ,remove and rename to the correct directory.



E-Book-Shelves

Support formats of E-book : TXT、LRC、PDF、Html、Htm、EPUB etc. Support automatic browsing, zooming, bookmarks, pages etc.



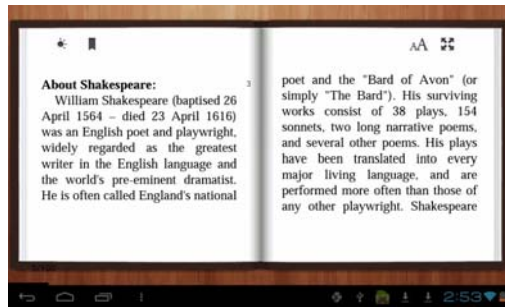


6 Desktop System 2(Network Applications)



IE Browser

When WiFi connection is in normal (details refer to chapter 4.5 WiFi Setting), tap the main menu or desktop's IE browser icon  to enter to the IE interface, click the address bar and input website and click "Go" to

enter a corresponding website information.

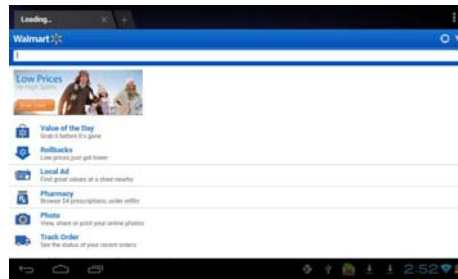


Note:the IE explorer uses the popular third-party IE explorer software,please follow the IE explore's standard operating mode to operate.

Email

When Wifi connection is in normal (details refer to chapter 4.5 WiFi

setting), tap the mail icon  in main menu or desktop to enter Email.

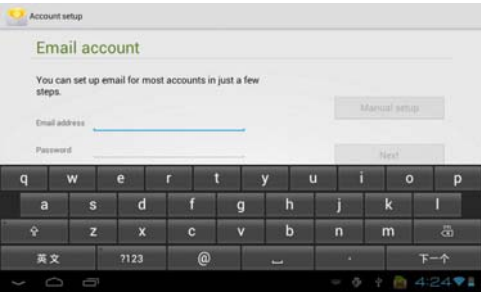

7 Desktop System 3(Other Functions)

Calculator

Click Calculation icon  on the desktop to open calculator



APK Installer

Tap APK installer icon on  in menu or desktop enter installing interface to get details from 4.9APK chapter

8 Device Setting

Tap of main menu or desktop to set wireless and network, sound and backlight, location and safety, application and so on, slide on screen to page up/down





Wireless and Network Settings

Details please refer to Wifi setting in Chapter 4

Voice and Display Settings

- Tap **【 Sound 】** enter to settings interface



a Media Volume Settings:

【media volume】to enter setting interface, then to set up music and video volume:



b Set operating sound (screen choosing) and SD card notifications as

optional, tap and tick  till highlight display.

- Display Settings:



【Orientation】

The display screen will change the direction automatically when it rotating

【Brightness】 Drag to  adjust brightness, tap “Ok” and “cancel”



【Screen Timeout】



Location and Security Settings

Tap "Location and Security" to enter the setting interface



Application Settings

Tap "Application" to enter setting interface



- **Manage Application Settings:**
Tap "Manage Application" to manage or delete installed applications



- **Running Service Settings:**

Tap "Running Service" to see and control the running service




Develop Setting: advise to use factory defaults ,or any change will make some function not available



Language Keyboard Setting

Tap "language keyboard" to enter setting interface:

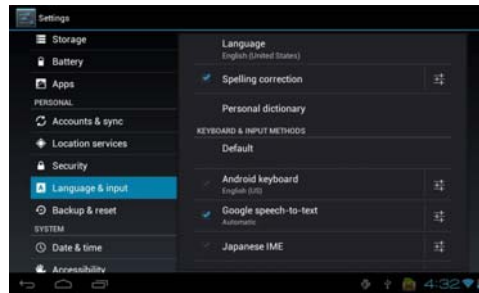


- **Language Setting:**
The device support multi-languages, you can select operation interface of different languages according to your needs. Select matching language option, tap  to confirm and back



Time and Date Setting

Select Setting Menu "Date and Time" into setting interface, select the  behind the Automatic option, to modify the Date, Time Zone & Time.

- **Date Setting:**
Tap  to select Day, Month & Year, and tap icon  to confirm ok

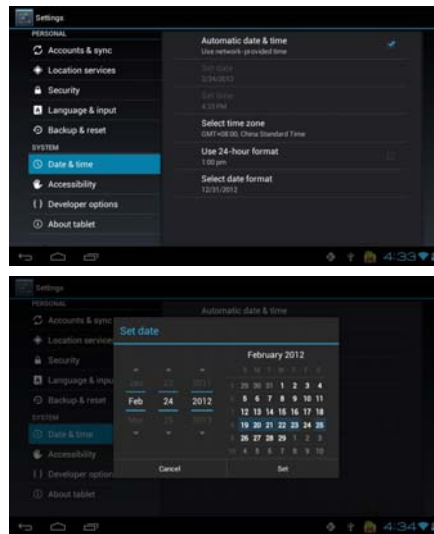

- **Time Zone Setting**
Select the time zone you locate and tap



- **Time Setting**
Tap   to select hours & minutes, e.g.: 14:50, and tap icon

 to confirm ok



About the device

- Check system information, legal information, device state & software version, etc.




Desktop Function Icon Setting

Wallpaper Setting

Tap icon  to change the wallpaper and select the picture you want, tap , and wallpaper setting successes



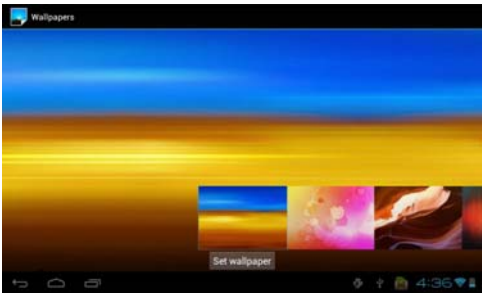

Tap icon  Shortcut to Search Engine



Add, Move or Delete Desktop Icon

Tap icon  at the main interface, into function menu list, display the entire application icon by pages. Press and drag the application icon to copy to current desktop i.e. set the shortcut on the desktop.



- Long press the application icon the desktop, enter into editing status and you can move the icon .When you drag the icon to **long** ,it turns to delete function, and release the icon you can delete it .

9 Troubles Shooting

1. Can not turn on the device

- ◆ You can not turn on the device when the battery is below the critical level, please charge the battery connect to the computer via USB cable or charge via AC charger, try to turn on again while ensuring quantity of electricity.

Press the "Reset" button on the top of the device and check if the restarting is normal or not.

Check if the charger is connected well or not.

2. The stand-by time of the MID is too short

- ◆ The duration of the lithium battery varies with environmental temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature.
- ◆ From the usage of the device, larger screen of the device cost more electricity .In addition, affected by volume increase, sound field special effects, and other factors such as frequent operation, the actual duration may be different from specified one to a certain extent.

3. No Sound of Earphone

- ◆ Please check if the volume setting is 0
- ◆ Please check if the audio file is broken, and try to play other audio files to confirm .If the audio file is broken ,it may cause severe noise

4. Can not copy files

- ◆ Please check if the device is connected to the computer correctly
- ◆ Please check if the memory space is full
- ◆ Please check if the USB cable is broken