



INTERNAL PHOTOS OF TESTED EUT

1.1 Internal photos of HCR 800/805

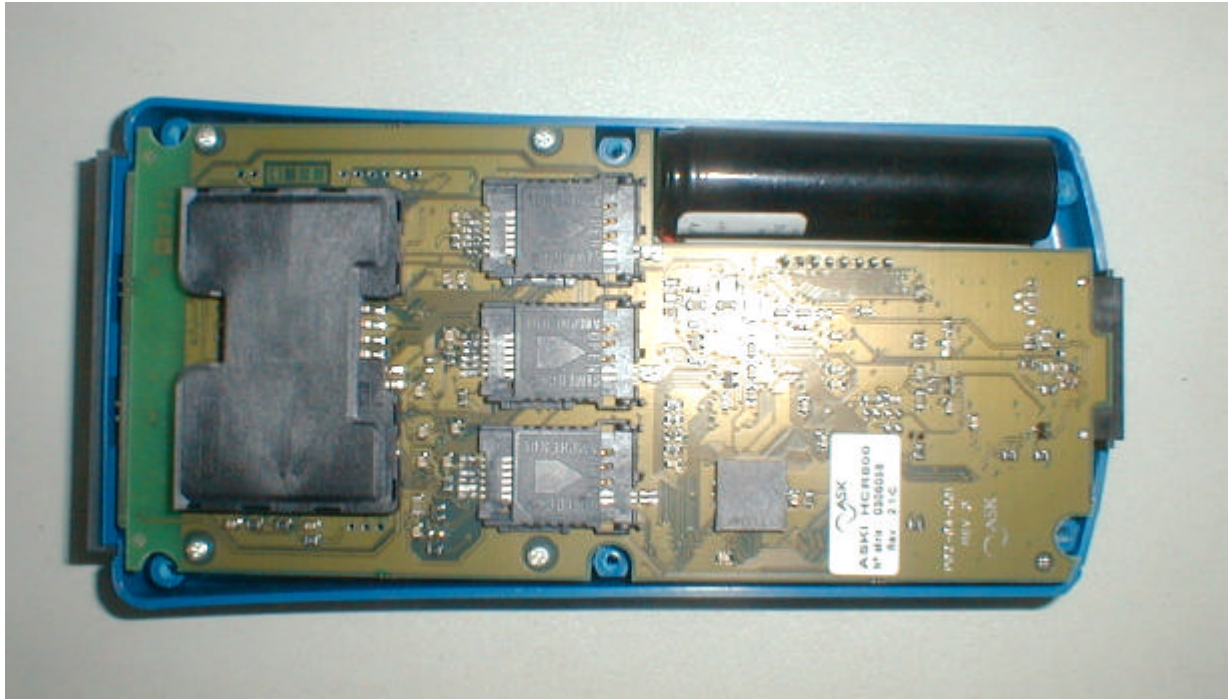


HCR 800/805 reader (Rear cover removed)

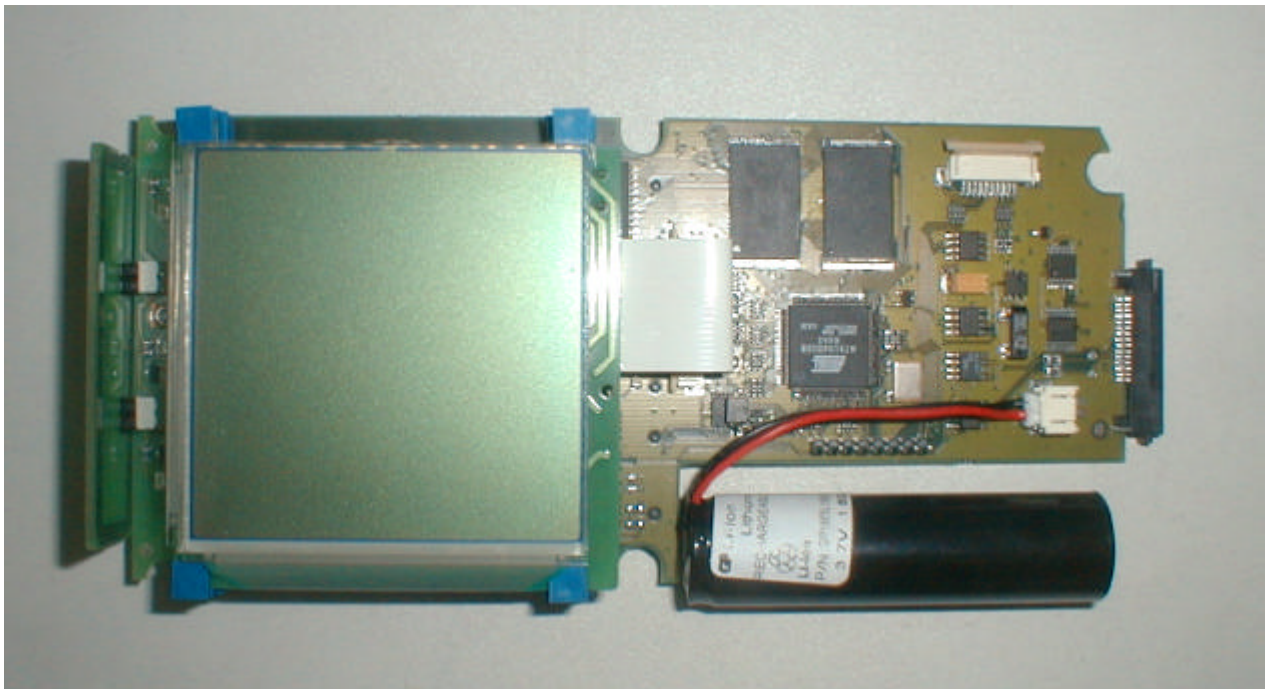


HCR 800/805 reader (without front and rear plastic housing)




HCR 800/805 reader (Antenna board)

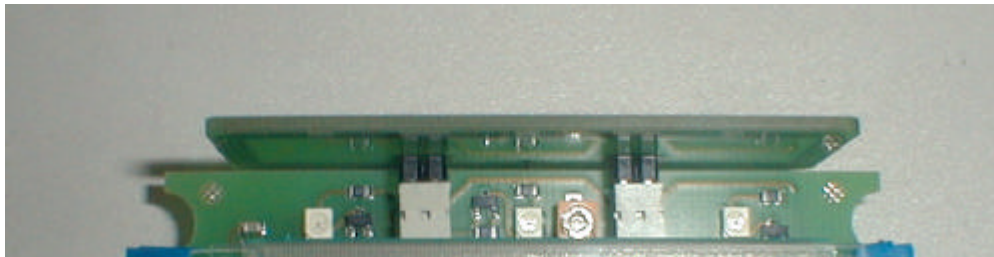


HCR 800/805 reader (Antenna connectors)

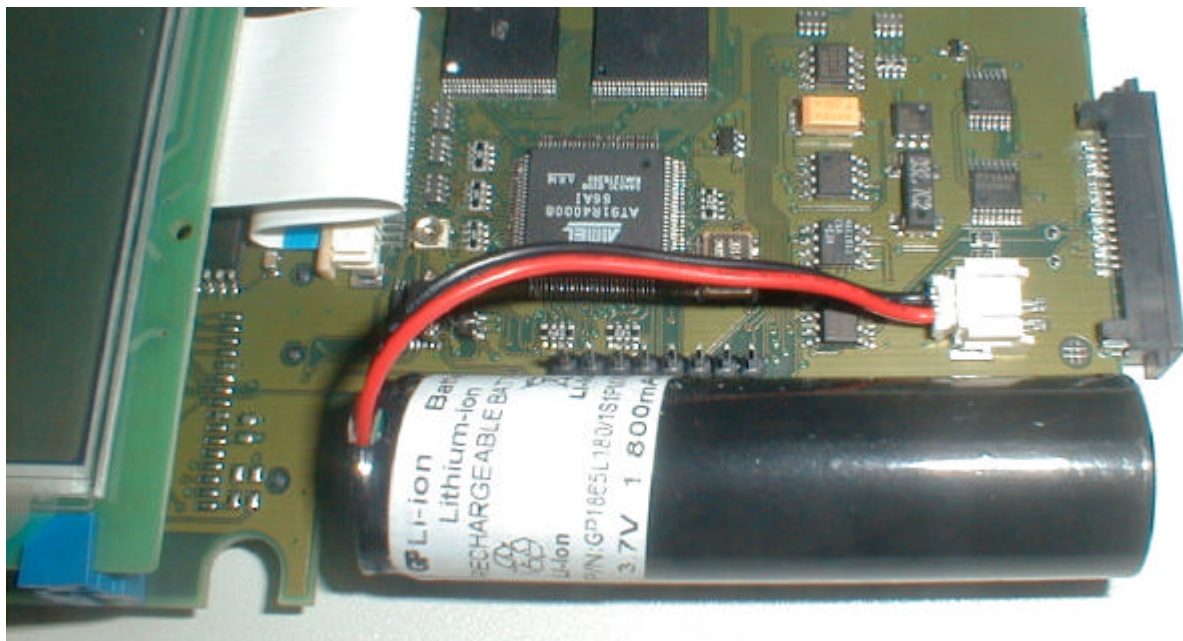


HCR 800/805 reader (Battery connector)

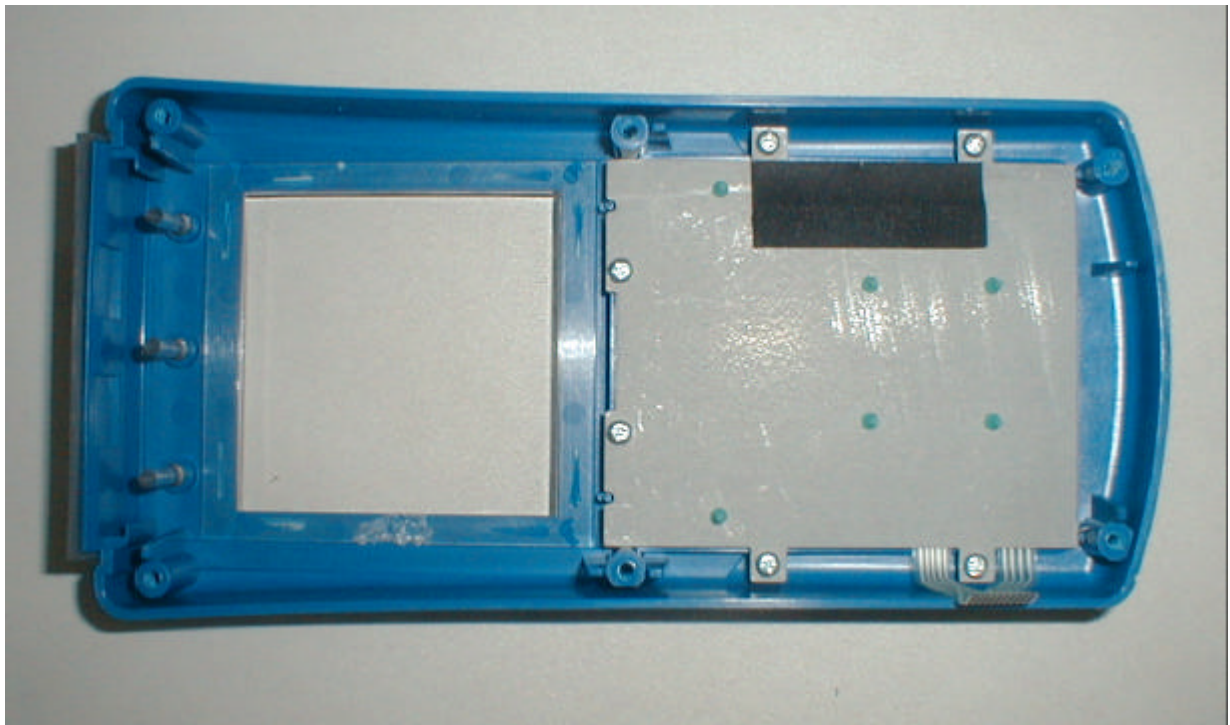

HCR 800/805 reader (Plastic housing – Front part with keyboard)

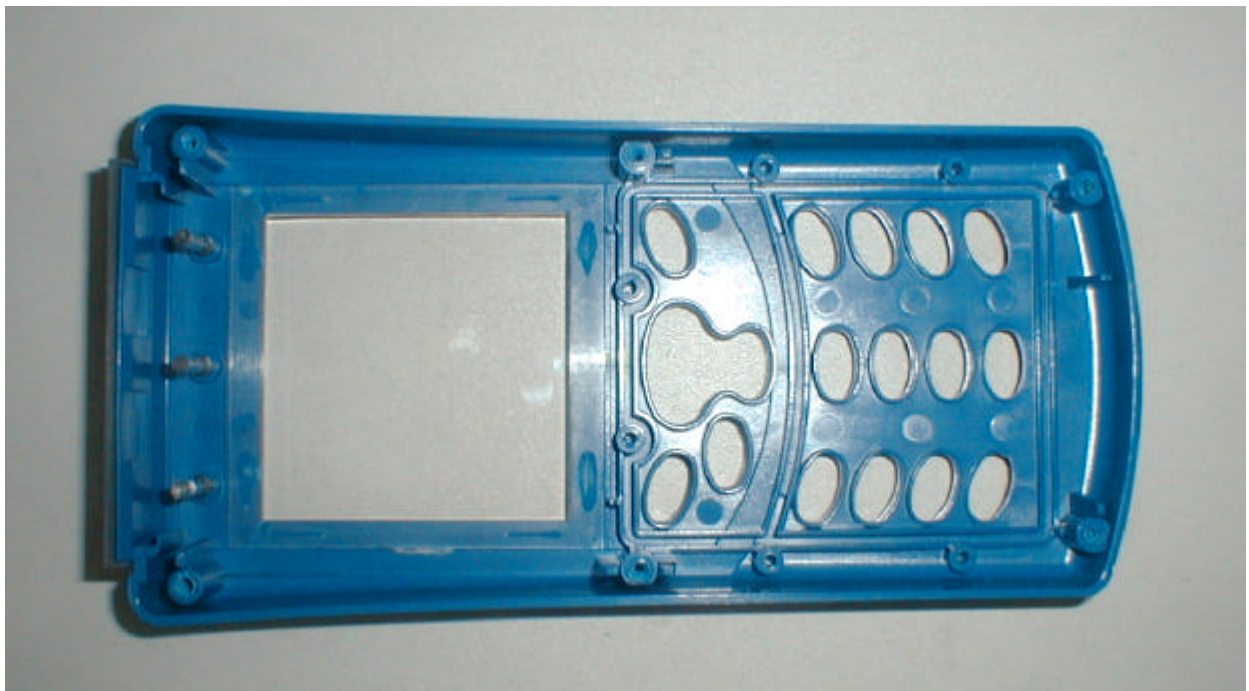

HCR 800/805 reader (Plastic housing – Front part without keyboard)

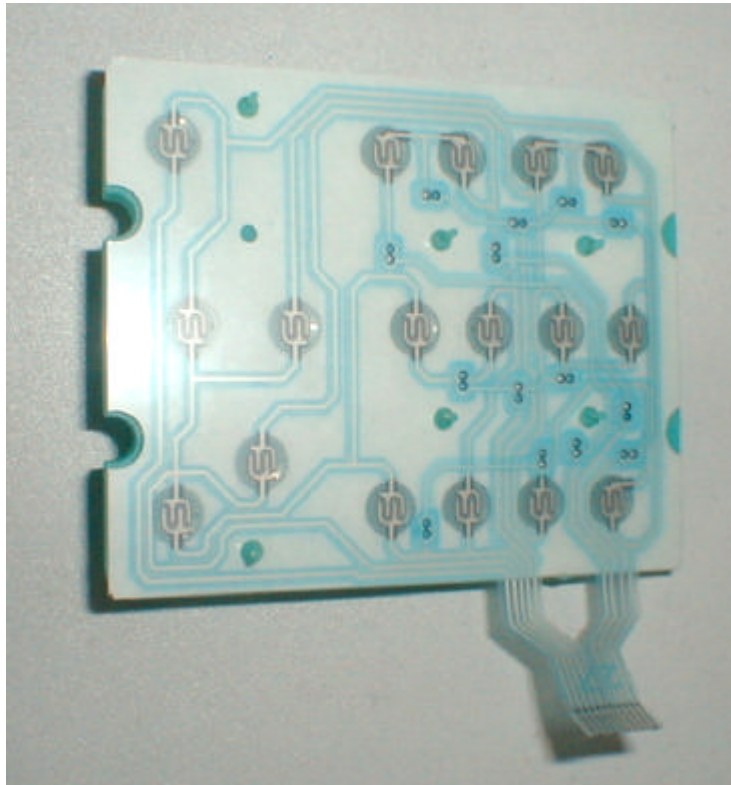


HCR 800/805 reader (Keyboard)




HCR 800/805 reader (Keyboard)


1.2 PCB photos of HCR 800/805

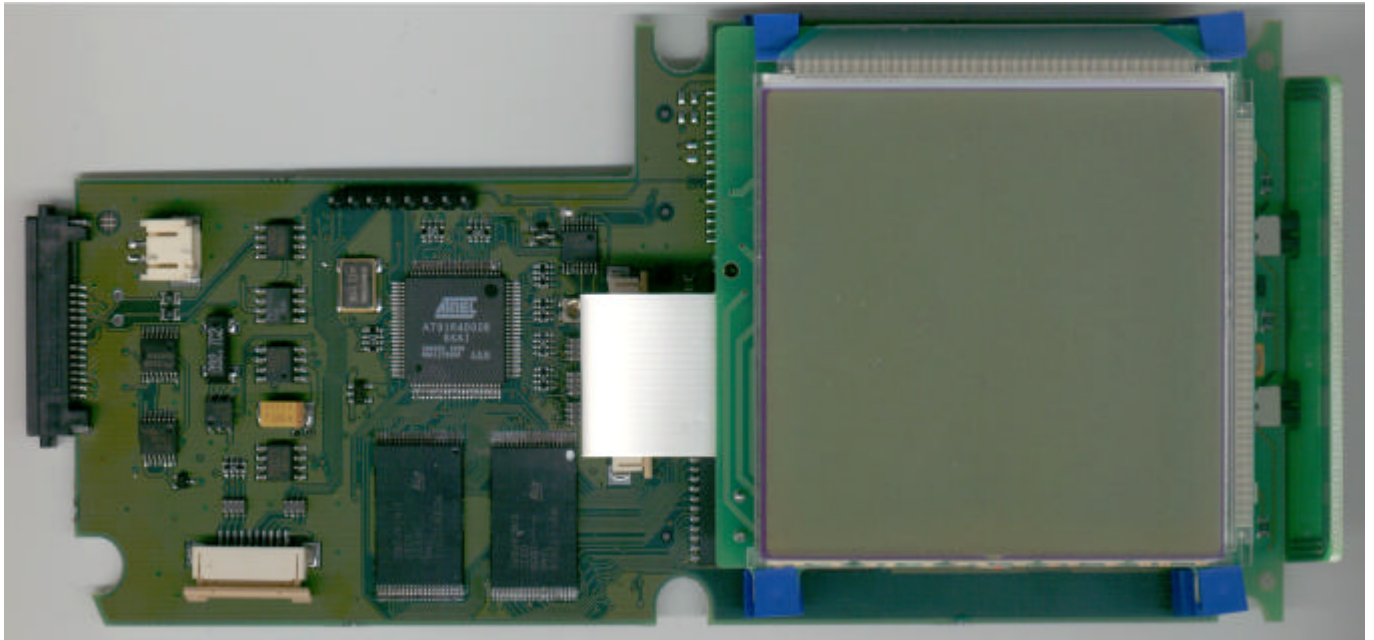


HCR 800/805 reader (Main board with display and antenna board)

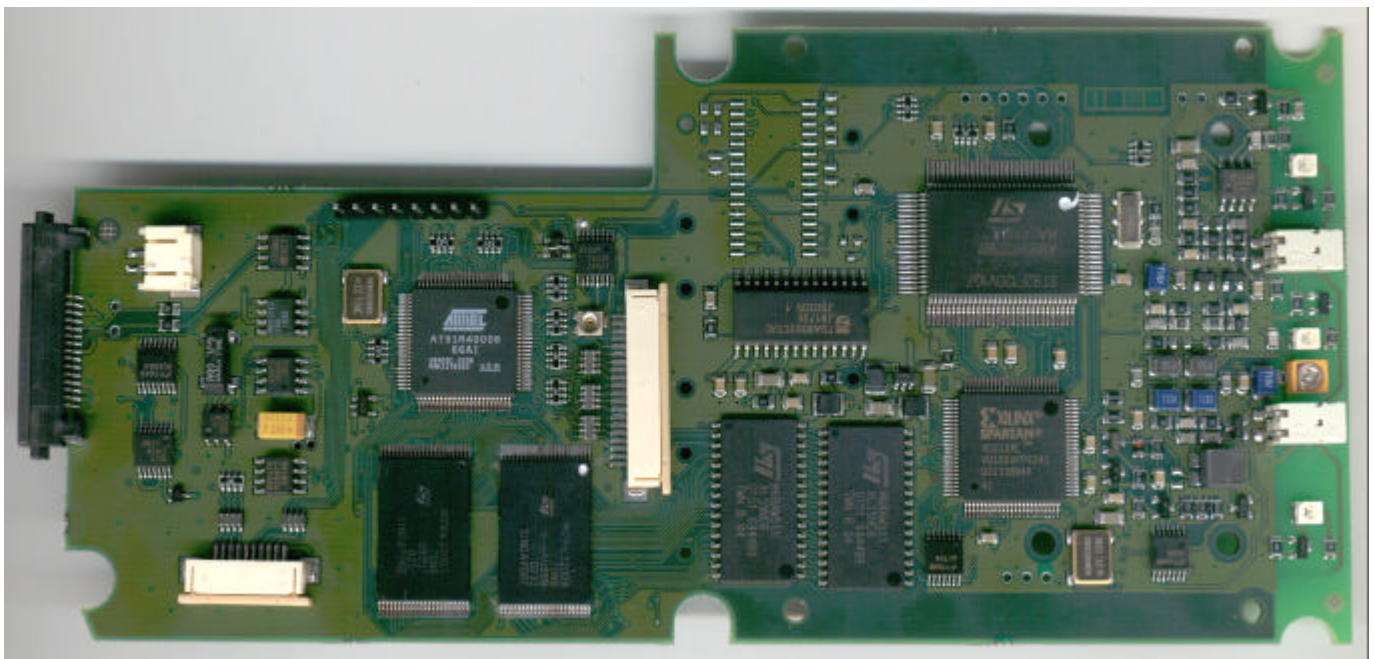


HCR 800/805 reader (Main board without display and antenna board)

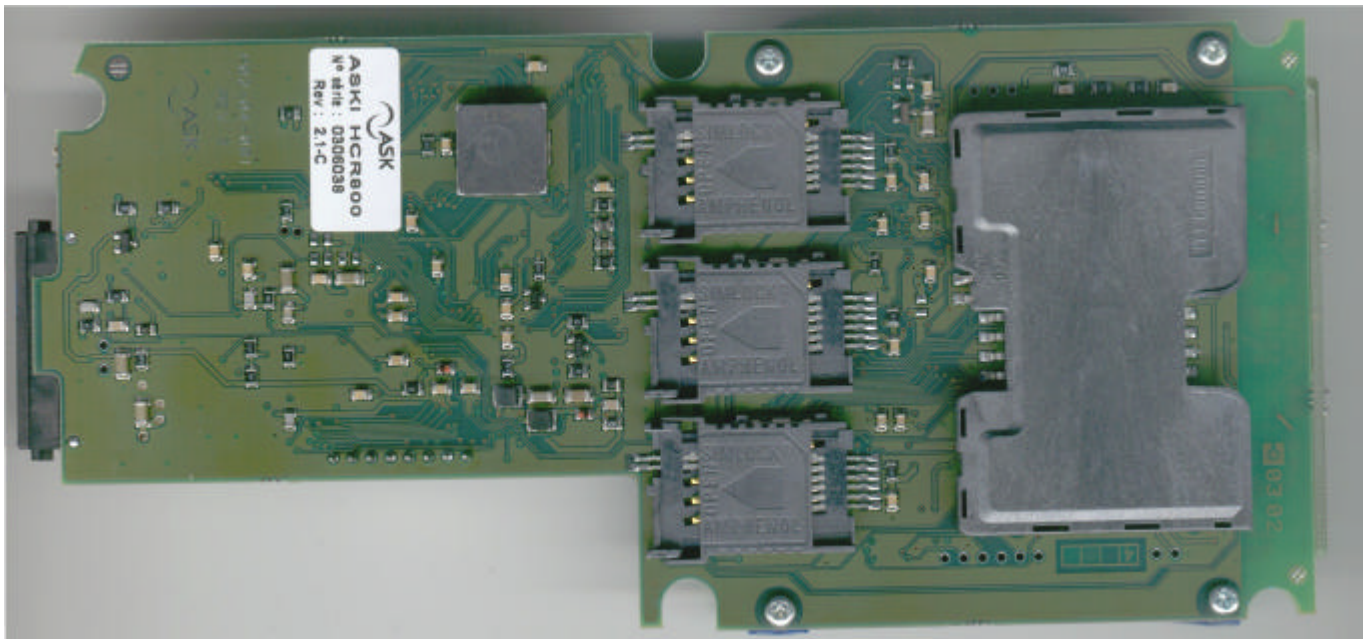


HCR 800/805 reader (Main board – Smart card connectors side)

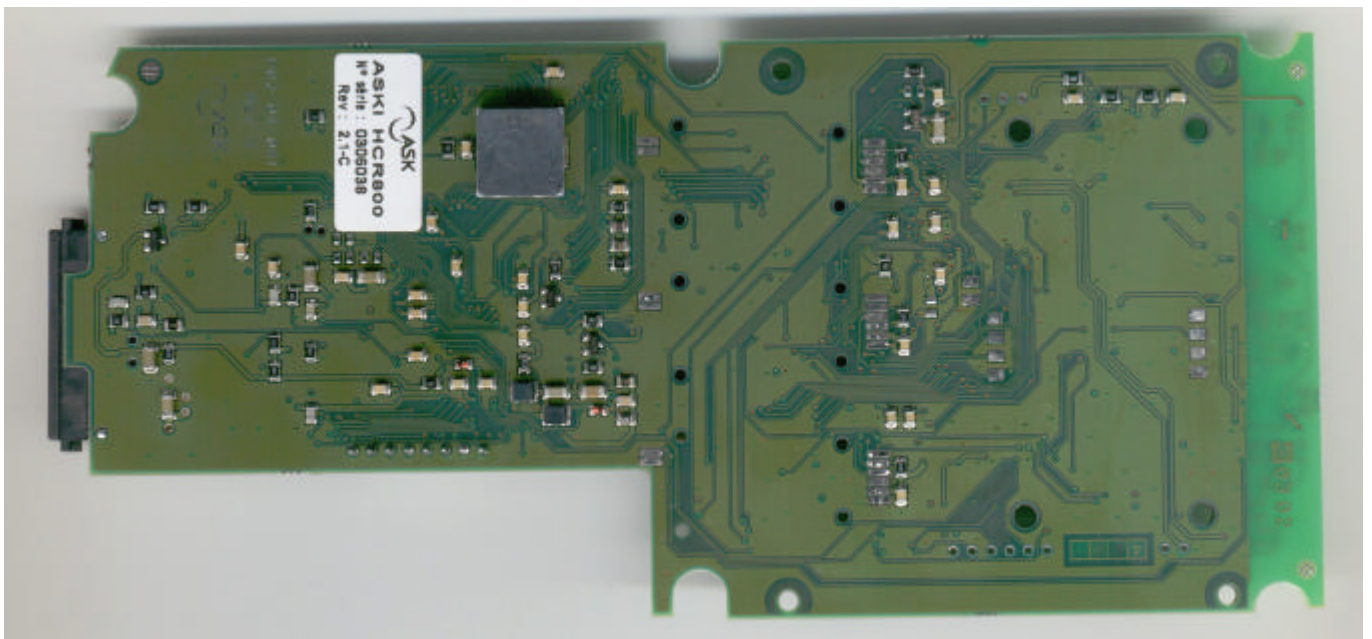


HCR 800/805 reader (Main board without smart card connectors)

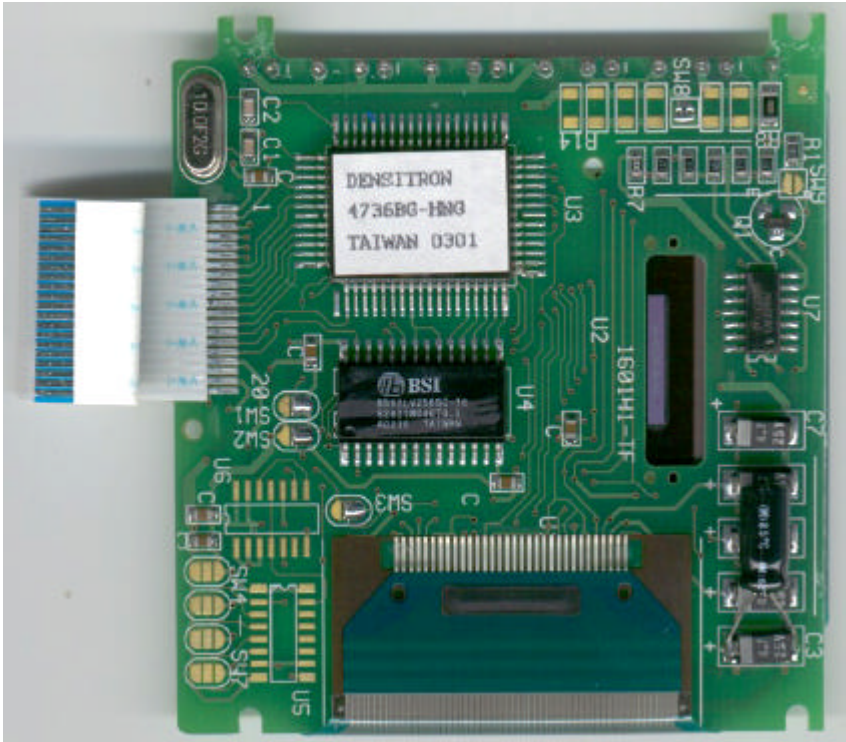

HCR 800/805 reader (Display board)

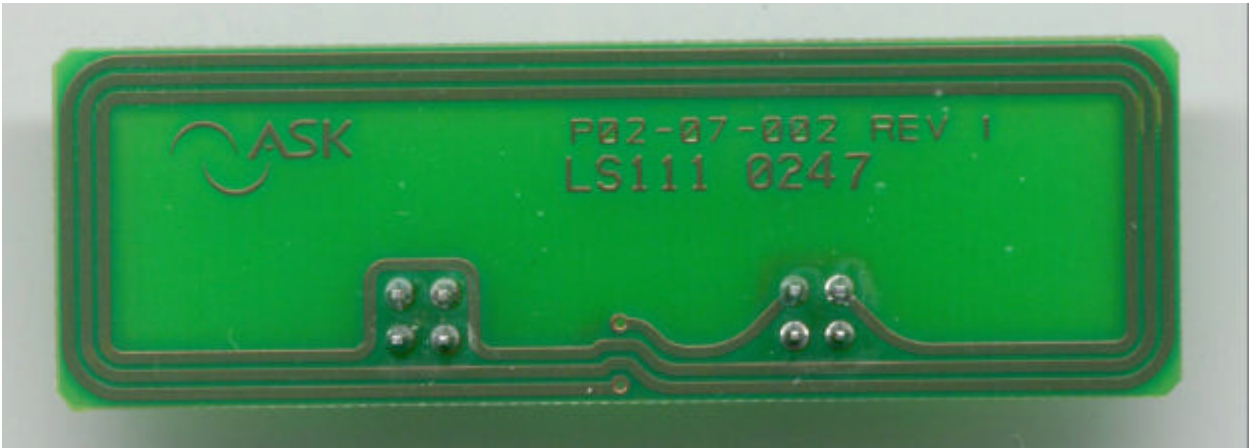

HCR 800/805 reader (Antenna board)

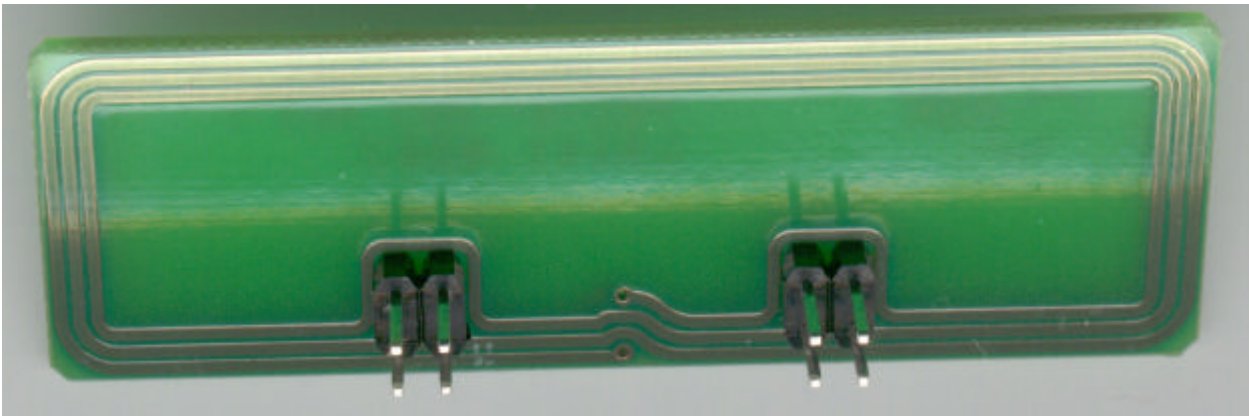

HCR 800/805 reader (Antenna board)

1.3 Internal photos of HCC 100 docking station



HCC 100 docking station (Lower part of plastic housing removed)




HCC 100 docking station (Lower part of plastic housing)




HCC 100 docking station (Upper part of plastic housing)

1.4 PCB photos of HCC 100 docking station

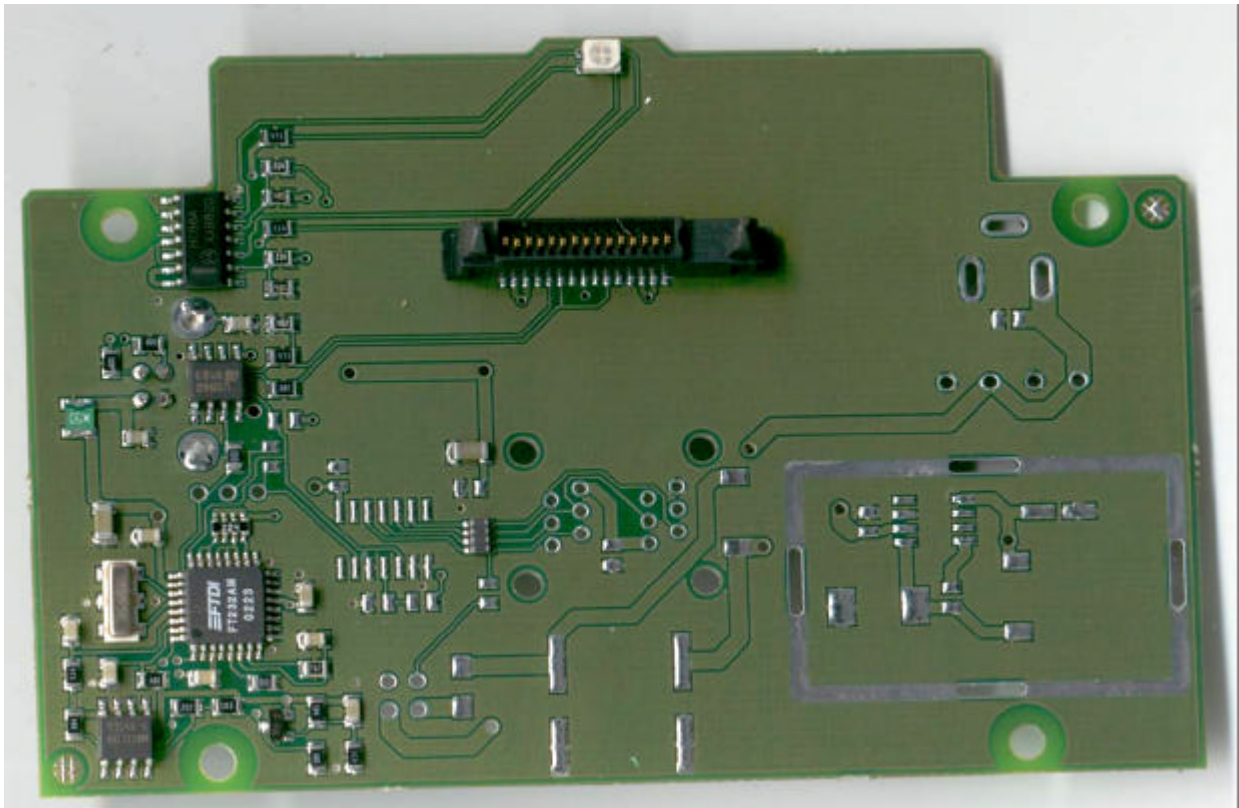

HCC 100 docking station (PCB – Interface connector side)

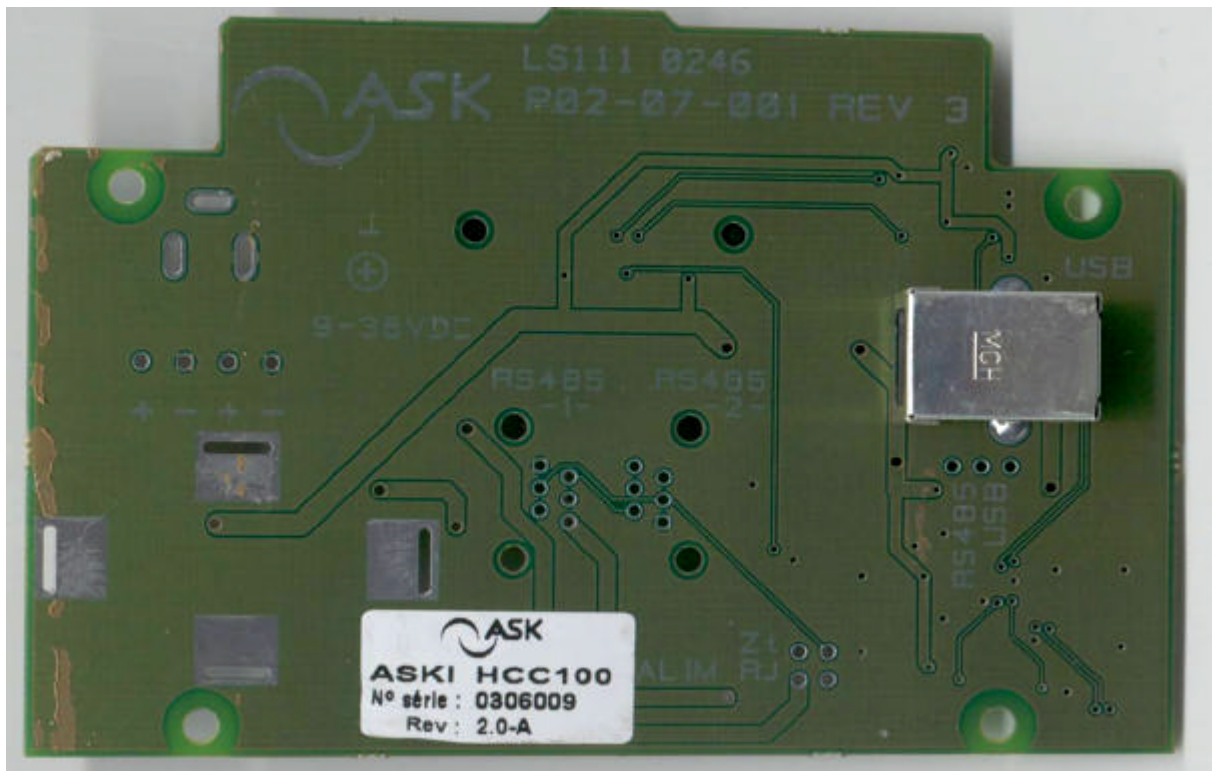

HCC 100 docking station (PCB – USB connector side)