


# Back of the EUT

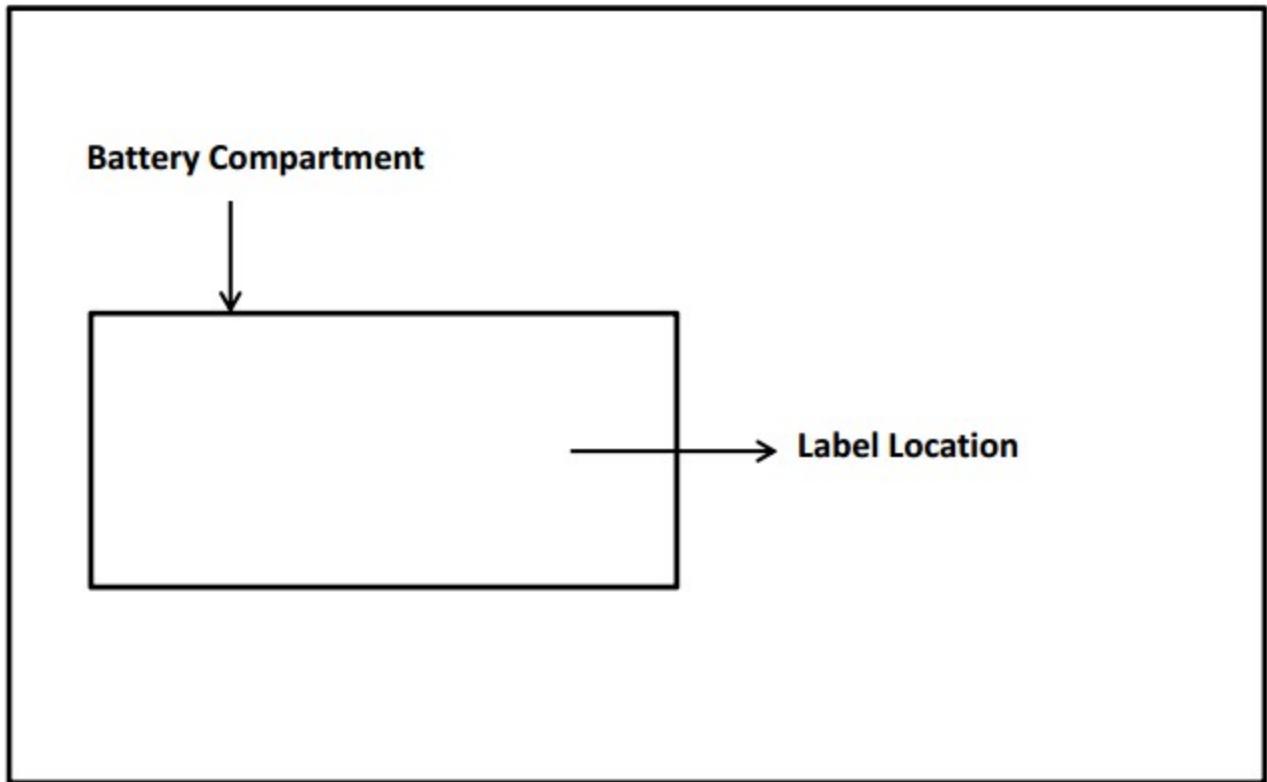

Label located in the battery compartment and label is visible to the users as the install the battery.