



## VORTEX HUNTING SYSTEM



Bass Pro Shops®  
2500 E. Kearney • Springfield, MO 65898

ALWAYS OPEN 24/7  
[BASSPRO.COM](http://BASSPRO.COM) | [CABELAS.COM](http://CABELAS.COM)

## WARNING

Read and understand all instructions before assembling and using this Vortex Decoy Spinner. Failure to follow the warnings and precautions may result in serious injury or death.

## WARNING

Always connect red battery connector to positive battery terminal on battery first. Then connect the black battery connector to the negative battery terminal.

Inspect the power cable for visible damage before connecting to battery. Do not connect to battery if damage is visible.

Do not connect to battery in the presence of flammable liquids, gases, or other combustibles.


The motor used in the Cabela's Vortex is water resistant and will not be bothered by rain and use around water. However, it is not designed to be totally submerged in water.

This Cabela's Vortex hunting system was designed to be used with any of the spinning-wing decoys on the market that have the operating battery installed in the decoy. If you want to use it with the wind-driven models of spinning-wing decoys, you will have to replace the support strings with solid wire, to keep your decoy from spinning.

## SET UP

Pick a spot to place your vortex. (Keep in mind the Vortex will spin your decoys in a 12 ft circle.)


**NOTE:** Your Vortex decoy spinner comes with an adjustable stake. However, an ordinary steel T-Post may also be used. When installing the stake in the ground, the top of the post should be at a minimum of 4 ft above the ground or surface of the water.

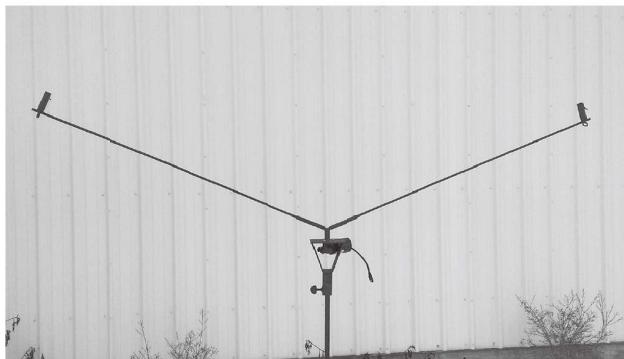

## STAKE ASSEMBLY


1. Press the lower stake section into the ground. This can be accomplished by stepping or pounding on the step on the side of the stake.
2. Install the upper stake section into the lower stake and pin using the included wire pin so that the top of the stake is a minimum of 4 feet above the surface of the ground or water.

**NOTE:** There are 4 possible positions to pin the upper stake.

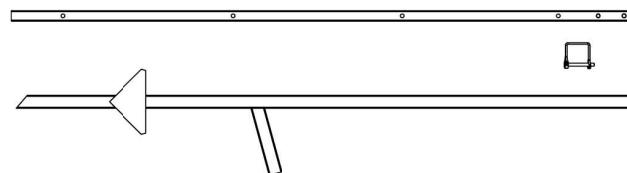


## VORTEX ASSEMBLY

1. Attach the motor bracket to the top of the stake or T-Post and tighten the two thumb screws.

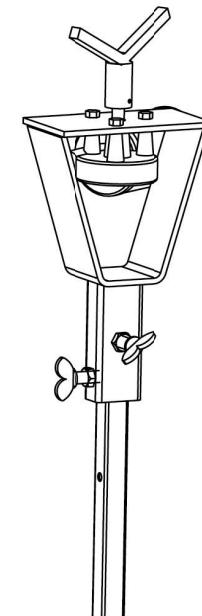

2. Slide the square end of the 5 – foot arms over the square ends of the yoke at the top of the motor bracket.

**NOTE:** Be sure to keep the metal loops at the end of the bar on the bottom.

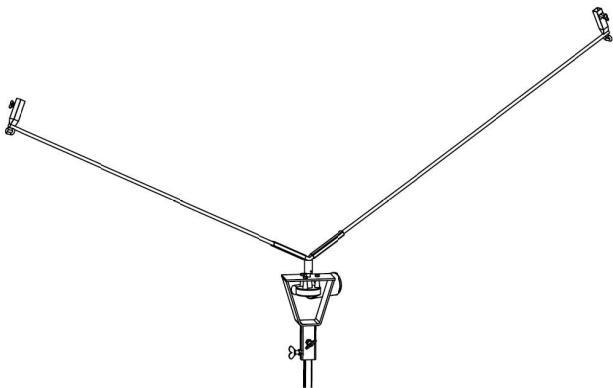

3. Attach the wiring harness to the motor by pushing the connector together. Run the wire to your battery.

**NOTE:** The wiring harness is 75 feet long, so you must be able to place your battery within 75 feet of the Vortex.



### ATTACHING DECOYS

There are two options for connecting decoys to the Vortex arms. It is recommended that you use two decoys of similar size and style for best performance.

### DECOS WITH SQUARE MOUNTING POST

1. Loosen the wing screw on the square post at the end of the 5 foot arms arm. Insert post of decoy into square tube and secure using the wing screw. Note - The Vortex will rotate in a clockwise direction so make sure to install your decoy so it will fly the correct direction.



### DECOS WITHOUT MOUNTING POST

In order to attach decoys without a molded post you will need to drill the decoys and attach to the arms using the supplied string.


1. In the top center of your decoy, drill 2 – 3/16" holes. One at the base of the decoy's neck and the other at the rear of the decoy.



2. Thread the end of one of the support strings through the front hole and into the decoys body, then thread on one of the flat washers and tie an overhand knot below the washer.



3. Now thread the other end of the support string through the rear hole in the decoy and through a flat washer. Adjust the length of line so that the top of the loop is approximately 7 inches from the decoy.

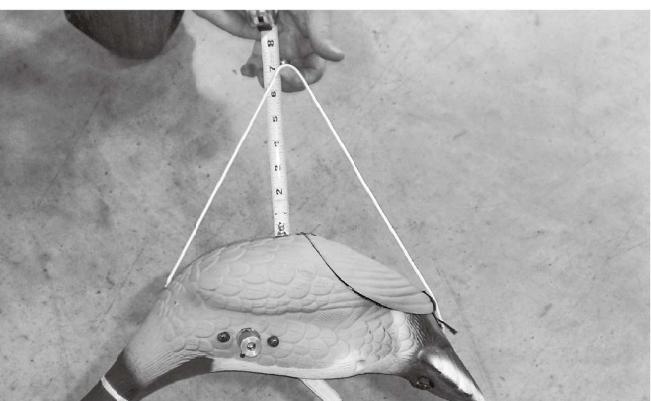

4. Attach the decoys to the ends of the 5 foot arms by making a loop in the decoy support string, threading it through the metal loops on the end of the 5 foot arms and wrapping it up and over the square post.

**NOTE:** Be sure that both decoys are attached so they will fly in a clockwise direction.



#### TURNING ON THE VORTEX

1. Turn on your spinning wing decoys.
2. Connect the black battery connector to the negative post on your battery. Connect the red battery connector to the positive post on your battery.
3. Use remote to turn on/off Vortex. Remote has range of up to 150 ft. (remote battery not included).

**NOTE:** Make sure the area around the vortex is clear and nothing is in the way of the arms before connecting the vortex to the battery.

Even though the Vortex is very capable of attracting ducks all by itself, the use of additional decoys in the area of the Vortex will increase your odds even more.

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:QYV-BPD

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment