

Mailing Address (please print):

The Designer's
EDGE

ENGLISH

Qty.	Item No.	Description	Each (1)	Each 2 or more	Extended Price
	L-765	65 watt, Mogul Base Fluorescent Bulb	9.99	8.99	
The Designer's Edge 11730 N. E. 12th Street Bellevue, WA 98005 Ph: (425) 637-9601 Fax: (425) 637-9603 www.designersedge.com		Subtotal			
		Sales Tax (Washington State Only) 8.8%			
		Shipping and handling	1.50		
		TOTAL (Amount of check)			

USE OF IMPROPER BULB WILL VOID YOUR WARRANTY!
Prices subject to change without prior notice.

COOL  ZONE™

**PORTABLE
WORKLIGHT
OPERATING
INSTRUCTIONS**

- Fixture design may vary

Model# L-2300

2 Year Warranty on fixture

(Does not apply to bulbs, which have no warranty)

Congratulations and Thank You from The Designer's Edge!

The fixture you have purchased should give you years of trouble free service. We take pride in the design and construction of each of our products and work to maintain the quality of our materials and craftsmanship to assure your satisfaction.

This product is warranted to be free of defects in workmanship and materials for a period of 2 years from the original date of purchase. If any problems appear (other than burnt out bulbs, which carry no warranty) within 2 years, the purchaser may return the item, freight prepaid, together with a copy of your original purchase receipt to:

The Designer's Edge
11730 N. E. 12th street
Bellevue, Washington 98005

Upon receipt of the item prepaid with a letter describing the problem, and a check for \$7.50 to cover return postage and handling, the company will at its option either repair or replace the defective part or fixture at no charge to the purchaser. This warranty does not apply to fixtures that have been used for rental or commercial purposes. It does not cover fixtures that have been altered in any way or fixtures that have been subject to misuse, accidents or damage in transit.

IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. NO CHARGES WILL BE ACCEPTABLE FOR UNAUTHORIZED REPAIRS, PARTS OR SERVICE.

Some states do not allow limitations on how long an implied warranty lasts and do not allow exclusions or limitation of incidental damages, so parts or all of this warranty limitations or exclusions may not apply to you. Legal warranty rights will vary from state to state and you may have other rights.

IMPORTANT NOTICE:

Every attempt has been made to deliver a quality product that will give you years of trouble free service. In the event that you have problems with the fixture. Please DO NOT RETURN TO PLACE OF PURCHASE. PLEASE CALL THE NUMBER BELOW FOR BULB OR PARTS PROBLEMS:

(425) 637-9601

8-5 PM West Coast Time. All warranty problems are handled directly through The Designer's Edge.
www.designersedge.com

The Designer's
EDGE

REPLACEMENT BULB ORDER CARD

To replace our unique, fluorescent light bulb please complete the information on the reverse side and send check or money order payable to:

The Designer's Edge
11730 N.E. 12th Street
Bellevue, WA 98005-2458
(425) 637-9601
FAX: (425) 637-9601
www.designersedge.com

Method of Payment:
All prices stated in
US Dollars.

Check enclosed (US funds only)

Charge to my:

Visa
Mastercard
Discover

Please indicate credit card number and expiration date with
charge orders.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Expiration date

--	--	--	--

 Month

--	--	--	--

 Year

I hereby authorize the amount of _____ to be charged
against my above card.

Cardholder Signature (as shown on credit card)

FCC Warning

This equipment has been tested and found to comply with the limits for a Consumer device, pursuant to Part 18 of the FCC Rules.

Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If interference problems do occur, please consult the system equipment owner's manual for suggestions. Some of these suggestions include relocation of the computer system away from the television or radio or placing the AC power connection on a different circuit or outlet.

Change or modifications to this product without the express approval of The Designers Edge could result in non-FCC compliance, and void the user's authority to operate this equipment.

READ ALL INSTRUCTIONS - WARNING:

When portable fixtures are used outdoors basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- A. Use only three wire outdoor extension cords that have three prong grounding plugs and grounding receptacles that accept the appliances plug.
- B. Ground fault circuit interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for the wet location portable fixture.
- C. Use only with extension cord for outdoor use, such as an extension cord type SW, SW-A, SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A, SJOW, SJOW-A, SJTW, SJTW-A, SJTOW, SJTOW-A.

Safety Instructions for Fluorescent Worklights


- When replacing the bulb in this lamp always turn off and give ample time for lamp to cool. Also unplug lamp from power source. Always close face of lamp securely before turning power back on.
- Never operate the lamp with missing glass safety shield.
- This lamp is not intended for use nor safe to use in potentially dangerous locations such as places with explosive or flammable atmospheres.
- Do not handle this lamp when standing on wet or damp surfaces or in water. To reduce the risk of electrical shock, this light should always be plugged into properly grounded outlet. Do not remove the ground wire or grounded plug from the lamp.
- Always use a grounded cord with electrical capacity to properly handle this light and other tools you might be using. Never use light around swimming pool, hot tubs or saunas.
- Never use around heavy volatile fluids such as gasoline.
- This product may cause interference with radios, cordless phones, or devices which use a wireless remote control, such as televisions. If interference occurs move the product away from the device, plug the product into a different outlet, or move the product out of the line of sight of the remote control. Complies with part 18 of FCC.
- Always handle fluorescent bulb by plastic base. Glass gets hot!
- Use only L-765 65W Florescent bulb. Any other bulb may damage unit and create hazard.
- This unit has a polarized plug. One blade is wider than the other. As a safety feature this plug will fit in a polarized outlet only one way. If plug does not full fit in outlet, reverse the direction. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.

Trouble Shooting

If light does not work check the following:

- A. Be sure you have power at the source and fixture is properly plugged into the power source.
- B. Be sure that bulb is properly and screwed in all the way.
- C. Bulb may have been damaged in shipment. Check lamp with another bulb or check bulb with a continuity tester. If bad, replace bulb with a new bulb.
- D. Depress on/off switch on rear of unit.

SAVE THESE INSTRUCTIONS!

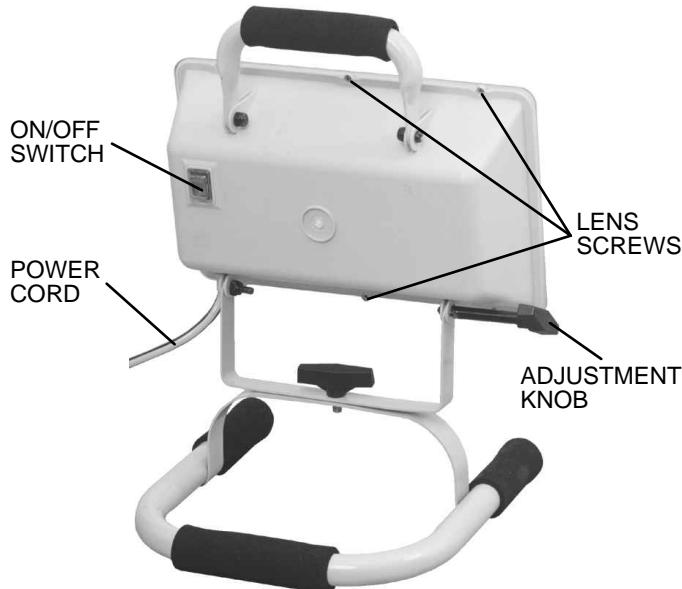

Using Fixture

INSTALLING BULB

Always unplug fixture before installing/changing bulb.

On rear of fixture unscrew three screws on top edge, and three screws on bottom edge, remove lens. Take lamp out of box and screw into mogul base socket. Grip bulb only at base, to prevent breaking glass tubes. Do not screw in too tightly. Use Designers Edge model number L-765 65 watt bulb for L-2300. Replace lens by fitting in place and replacing screws.

SET UP

Always use fixture with power cord pointing down. Housing attaches to U-base with straight black knob. Plug unit into 120V 60 Hz AC outlet only, depress toggle switch in upper left corner on rear of housing, light will come on. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

POSITIONING

You can direct beam of light by loosening straight knob on side of housing. Aim light to desired angle and tighten. Always hold light by carry handle.

SAFE USE

Do not ever point in anyone's eyes as bright light could damage sensitive eyes.