



TRANSMITTER CONTROL FUNCTIONS

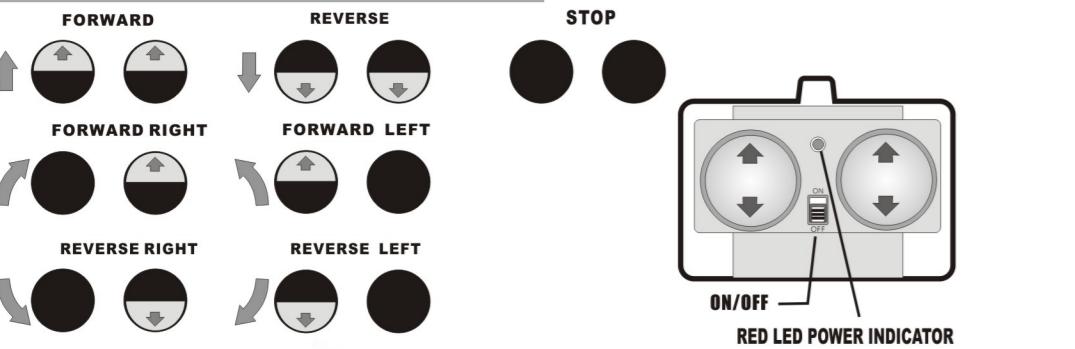

CONTROL RANGE

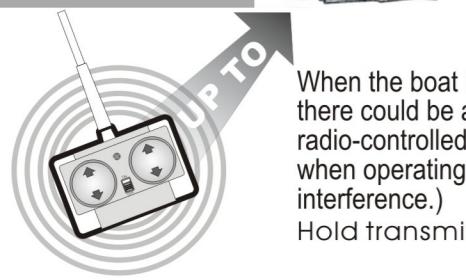

INTERFERENCE

Erratic behavior or loss of control of boat is sometimes caused by other boats operated on the same frequency channel in an area surrounded by high-tension wires, telephone poles with high-voltage transformers, boats operating CB radios, or even certain buildings. If you encounter this type of behavior, move to a better location to captain your boat.




Built-in Ni-Cd Battery

This product utilizes dual built-in Nickel Metal Hydride(Ni-Cd)rechargeable batteries. Under normal operating conditions, this product could be recharged up to 300 times.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

“Warning! Use under the direct supervision of an adult.”
OPERATING AND CARING FOR YOUR BOAT


1. Extend transmitter antenna to its full length.
2. Turn ON the transmitter by operating the transmitter.
3. Start operating the boat.
4. After playing, bring the boat to a dry place. Remove the batteries from the transmitter, drain all the water out of the hull, and dry the boat well before putting it away.

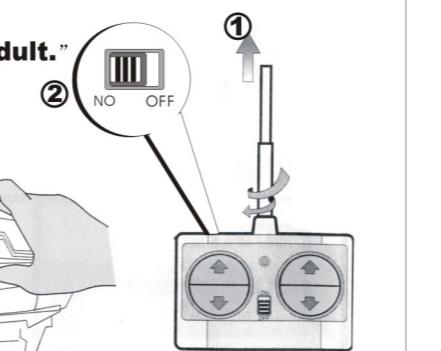


Any of the following conditions may interfere with the behavior and function. The transmitter signals can easily be interrupted. Caring for your transmitter and boat is illustrated on these pages. Improper handling may hamper the performance of the boat.

CAUTION

 - ✗ Don't operate your boat where there are water plants, rubbish, or other obstacles in the pond. This could impair propeller and cause damage.
- ✗ Don't play when there is a strong water current or when the wind is blowing strongly on the pond.
- ✗ Never play in ocean(salt)water. This will cause rusting of parts.
- ✗ Don't play outdoors during thunderstorms.
- ✗ It is extremely dangerous to touch the propeller while it is spinning.
- ✗ When lifting your boat, make sure you hold the body securely.
- ✗ Bring the boat back to shore(out of water)before the battery power is running out.
- ✗ Remember to avoid water, heat, sand and high impact crashes!
- ✗ The toy contains tiny parts. Never put it inside the mouth to avoid choking danger.
- ✗ Never give the toy to children under 3.
- ✗ The toy is designed for indoor use only. Outdoor use may lead to malfunction caused by dirt or waste.



Wipe clean with something like a towel after playing.

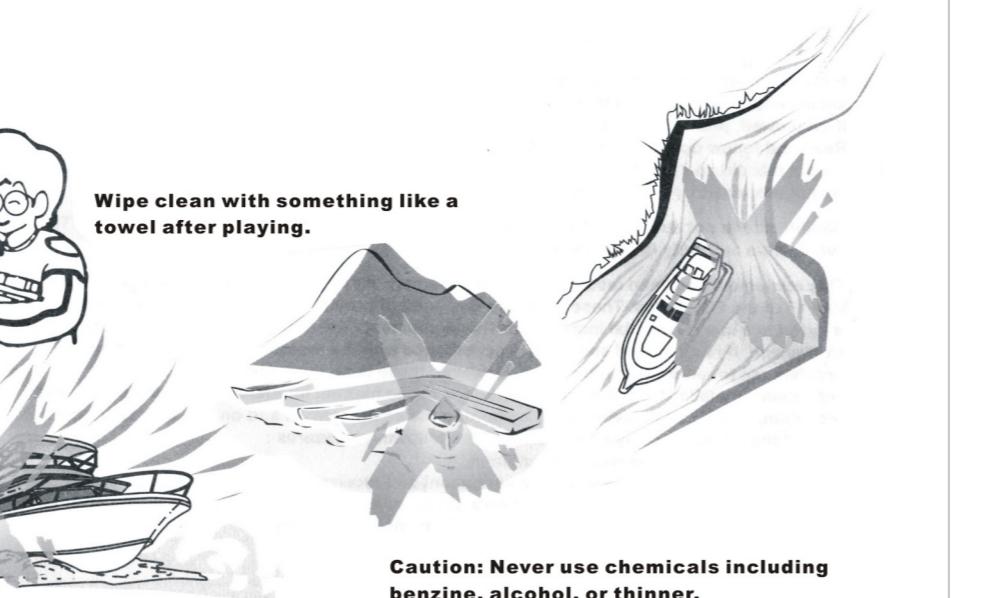

Save Battery Life
Make sure the transmitter and charger are turned off when not in use.

TROUBLE SHOOTING

PROBLEM	CAUSE	CORRECTION
BOAT DRIVES SLOWLY	WEAK RECHARGEABLE BATTERIES IN BOAT	PLEASE CHARGE THE BOAT WITH THE CHARGER
POOR STEERING CONTROL	WEAK 9 VOLT TRANSMITTER	REPLACE 9 VOLT BATTERY
POOR RANGE CONTROL	WEAK BATTERIES IN TRANSMITTER STRONG INTERFERENCE AT THE SURROUNDED AREA TRANSMITTER ANTENNA IS NOT SCREWED IN SECURELY TRANSMITTER ANTENNA IS NOT EXTENDED TO THE FULL LENGTH	REPLACE WITH NEW BATTERIES MOVE TO A BETTER LOCATION TO DRIVE YOUR BOAT SCREW THE TRANSMITTER ANTENNA SECURELY EXTEND TRANSMITTER ANTENNA TO FULL LENGTH

CLEANING AND MAINTENANCE:

This toy boat needs periodic maintenance and cleaning.

CAUTION-ELECTRICALLY OPERATED PRODUCT. NOT RECOMMENDED FOR CHILDREN UNDER 3 YEARS OLD
ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

Batteries used with this toy should be kept away from small children who still put things in their mouth. If swallowed, promptly see a doctor. Read and follow operating Instructions. Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries.


Modifications not authorized by the manufacturer may void users authority to operate this device.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.


1. Do not use old and new batteries or batteries of different types at the same time. When changing batteries, always replace with a new set of batteries.
2. Do not use non-rechargeable batteries with rechargeable batteries or rechargeable batteries of different capacities.
3. Observe the polarity marks on the batteries and match them according to the battery compartment markings.
4. Remove all batteries from the Transmitter when not in use for an extend period of time.
5. Misuse of the built-in rechargeable battery may lead heat, break, fire or leak of electrolyte. Please pay enough attention to the following caution.
6. Please charge the battery only when it's fully stopped. Never charge a boat that has been fully charged to avoid danger caused by excessive charging.
7. Stop using whenever it's wet to avoid short-circuit.
8. Never throw the battery into water or fire or disassemble or weld it.
9. Do not use, charge or store the toy near a fire source or in hot and humid place.
10. Use only special charger for charging purpose.

SPEED BOAT A-1002 USAGE MANUAL [1:64 SCALE] FULL FUNCTION RADIO CONTROL


BATTERY INSTALLATION

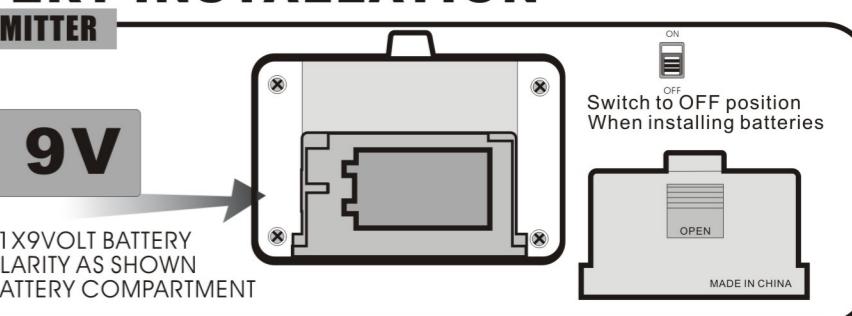

CHARGER

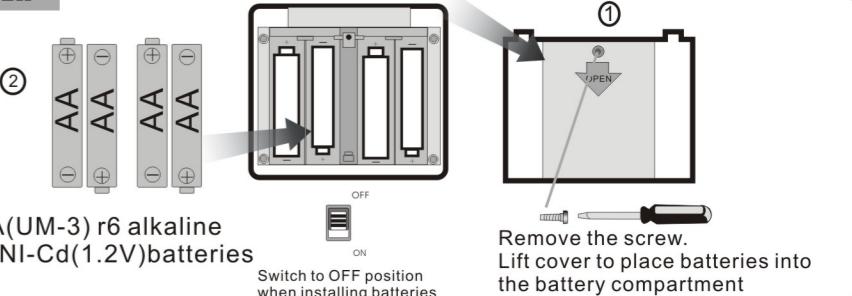

TO CHARGE

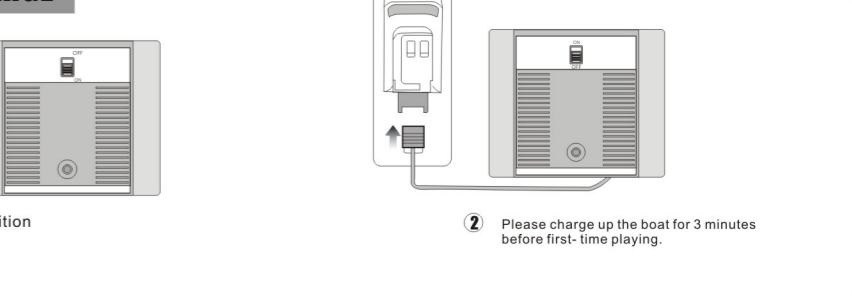

1. Do not use old and new batteries or batteries of different types at the same time. When changing batteries, always replace with a new set of batteries.
2. Do not use non-rechargeable batteries with rechargeable batteries or rechargeable batteries of different capacities.
3. Observe the polarity marks on the batteries and match them according to the battery compartment markings.
4. Remove all batteries from the Transmitter when not in use for an extend period of time.
5. Misuse of the built-in rechargeable battery may lead heat, break, fire or leak of electrolyte. Please pay enough attention to the following caution.
6. Please charge the battery only when it's fully stopped. Never charge a boat that has been fully charged to avoid danger caused by excessive charging.
7. Stop using whenever it's wet to avoid short-circuit.
8. Never throw the battery into water or fire or disassemble or weld it.
9. Do not use, charge or store the toy near a fire source or in hot and humid place.
10. Use only special charger for charging purpose.