

Tune-Up Procedure

1. Transmitter Part

Connect with RF cable between RF output port(PCBA) and HP8920A in/out port. Press SW1 key and make it work on transmitting status. Then adjust L1(Variable inductor). Frequency range is 462.6625M Hz+/-1KHz.

2. Receiver Part

Connect with RF cable between RF output point(PCBA) and HP8920A in/out port. It is on receiver mode when you turn on power supply. Then adjust L2 (Variable inductor). Frequency range is 462.2125M Hz+/-1KHz.