 



UNIVERSAL REMOTE CONTROL

PROGRAMMING THE UNIVERSAL REMOTE CONTROL

According to the Device Brand Code List at the end of this manual, find out the device brand name and code of the device that you want to control (For example, you can find codes for "Radio Shack" TV: 008,013,014 etc). Then follow steps as below:

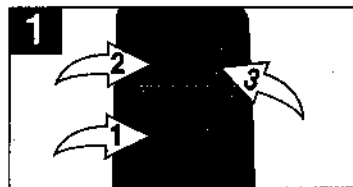

 Press and hold the SET button ❶ and the desired button, TV ❷ or VCR ❸, for the unit you would like to operate until the LED indicator stays lit, then release.

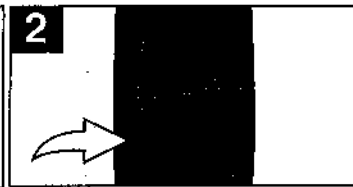


Enter the three-digit code from the chart at the end of the manual; the LED Indicator will turn off after the last digit is entered. If the wrong code is entered, the LED Indicator will blink twice and then remain lit; try another code.

UNIVERSAL REMOTE CONTROL (CONTINUED)

MANUALLY PROGRAMMING THE REMOTE CONTROL

 
If you tried all the codes under the brand name and the remote still does not work or you can not find the correct brand in the Device Code List, you can use Manual Search to find out the correct code.

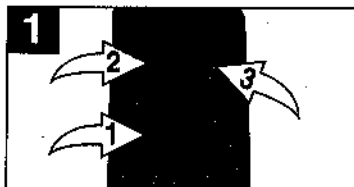


Turn on the unit you want to control and insert a tape (if using a VCR). Press and hold the SET button  and the desired button, TV  or VCR , for the unit you would like to operate until the LED indicator stays lit, then release.



 Press the POWER button, then release it. The remote control will enter the Manual Search Mode and the LED will keep flashing.

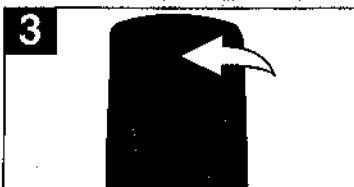

 Point the remote control to the device and then press the POWER button. See if the device turns off. If it does not, repeat this step every one second.

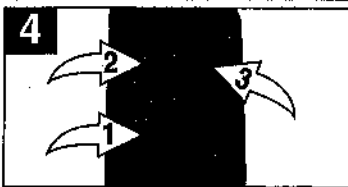

If the unit does turn off, test the other buttons. If they do not work return to step 1.

 
NOTES:

- While searching, you can press the SET button to switch between Forward and Backward to change search direction and find the right code quickly.
- To exit Search mode, press the device button and the LED will turn off.
- In the Search mode, besides the POWER button, all other key's function can be checked normally. That is to say you can test other keys without leaving search mode.
- The remote will exit the search mode automatically if no key is pressed in 30 seconds.


UNIVERSAL REMOTE CONTROL (CONTINUED)

AUTO SEARCH

This search is similar to Manual Search but the remote control will transmit the power signal automatically instead of manually pressing the POWER button.

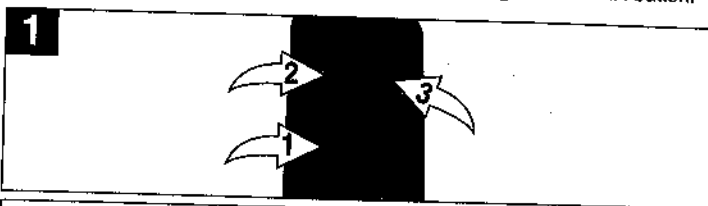

 Turn on the unit you want to control and insert a tape (if using a VCR). Press and hold the SET button ❶ and the desired button, TV ❷ or VCR ❸, for the unit you would like to operate for three seconds, then release and the auto search will begin; the LED indicator will flash and the remote control will transmit the power signal once every 2 seconds automatically.

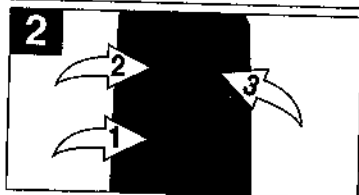

When the device turns off, test the other buttons. If they do not work return to step 1.

NOTE:

- To exit the Auto Search mode, press any button (except SET) to quit.

UNIVERSAL REMOTE CONTROL (CONTINUED)

DEVICE LOCK/UNLOCK

This function will make one device code fixed and unable to be changed by code setup by Manual Search or Auto Search:

1. Press the device button that you want to lock such as TV, etc.
2. Press and hold the SET button, then press the 7 button. Release both pressed buttons, the LED indicator will blink twice then turn off and the code of the current device will be locked.
3. If you want to unlock the current code, press and hold the SET button, then press the 8 button. Release the pressed buttons, the LED indicator will blink twice and then turn off and the current code will be unlocked.

NOTE:

- The locked code can be changed by unlocking or resetting only.
- Only one code can be locked in all devices. If you try to set this function on different devices, the system would reserve the last setup only. You can make the operation of unlock under any device.

RESET

This will erase all the set-up data you programmed.

1. Press and hold the SET button.
2. Press the 0 button.
3. Release both pressed buttons, the LED indicator will blink twice then turn off and the remote control will reset.

PUNCH-THROUGH FUNCTION:

When you change the device from one to another, if the new device does not have a volume button and mute button, the remote control will remain set to the volume button and mute button of the last device.

DEVICE CODE DISPLAY:

The device code is a 3-digit number and any one of the digits can be recalled:

1. Press and hold the SET button, then press the digit that you want to display, such as 1, 2 or 3.
2. Count the times that the LED blinks as the blinking will represent the digit's number. If there is no blink, the digit is zero.

UNIVERSAL REMOTE CONTROL (CONTINUED)

NOTES:

- After you have finished set-up and you want to use the remote control, first press the desired device button (i.e. VCR, etc) that you want to control, then operate your remote control normally.
- All settings (i. e. device code) will be memorized until changed or reset.
- If the remote control acts improperly, take out the batteries for a few minutes, then replace the batteries. Your remote control should act normally now.

UNIVERSAL REMOTE CONTROL DEVICE CODES

TELEVISIONS

Abex	014	Daewoo	008,017,029,030,074
Admiral	031	Daytron	008
Adventura	018	Denon	033
Aiko	030	Dumont	006,008
Akal	013	Electroband	001
Alaron	052,056	Electrohome	068,070
A-Mark	004	Emerson	008,016,017,040,044, 050,051,052,053,054,055, 056,059,062,065,066,075
Ambassador	050	Envision	013
Anam	053	Fisher	040
Anam National	024	Fujitsu	052
AOC	004,008,013,021	Funai	049,052,053
Archer	004	Futuretech	053
Audiovox	004,030,053,074	GE	009,011,019,020,024, 031,051,064,066,074,078,080
Baysonic	053	Gibraltar	006,008,013
Belcor	008	Goldstar	002,003,008, 013,014,025,051, 070
Bell&Howell	005,040	Gradiente	022,025
Bradford	053	Grunpy	052,053
Brockwood	008	Hallmark	051
Broksonic	004,059,075	Harley Davidson	052
Candle	013,018,025,057	Harman/Kardon	023
Carnivale	013	Harvard	053
Carver	023	Hitachi	014,016,025,033,038, 064,070,071
CCE	058	Infinity	023
Celebrity	001	Inteq	006
CXC	053	Janeil	018
Cineral	030,074	JBL	023
Citizen	013,017,018,025,026, 030,057,065	JCB	001
Concerto	025	JVC	015,022,027,045,048,055
Contec	043,044,053	Kawasho	044
Craig	053	Kaypanl	021
Crosley	023	KEC	053
Crown	017,053	Kenwood	013,008
Curtis Mathes	005,013,017, 019,020,023, 025,026,031, 033,040,047,074,078,080	Kloss	010,018
		KTV	013,017,053,056,058,065

UNIVERSAL REMOTE CONTROL DEVICE CODES

LG.....	025	Portland	008,017,030
Logik.....	005	Prism	020
Luxman.....	025	Proscan	019
LXI.....	019,023,035,040,042,051	Proton	004,021,051
Magnavox.....	010,012,013,015,	Pulsar	006,008
.....	023,032,052,057,069	Quasar.....	020,024,046, 061
Majestic.....	005	RadioShack	008,013,014,
Marantz.....	013,023		017,019,025,040,
Matsushita	061		046,051,053,070
Megatron	004,033,051	RCA.....	007,008,016,019,020,
Memorex.....	005,013,025,037,		028,031,063,077,078,079,080
.....	040,051,061	Realistic.....	008,013,014,
MGA	008,013,037,041,051		017,025,040,046,051,053
Midland.....	006,014,017,019,020	Rhapsody	056
Minutz.....	009	Runco	006,013
Mitsubishi/MGA	008,031,037,	Sampo	013,014,017,021
.....	041,051	Samsung	008,013,014,
Motorola.....	024,031		025,026,051,072,076
MTC.....	008,013,025,026,029	Samsux.....	017
Multitech	053,058	Sansai.....	074
NAD	042,047,051	Sansul.....	075
NEC.....	008,013,015,025	Sanyo	034,040
Nikko.....	013,030,051	Scimitsu	008
Noblex	073	Scotch.....	051
Noshi	007	Scott	008,051,052,053,059
NTC	030	Sears	019,023,025,034,035,
Onwa	053		036,040,042,049,051,052
Optimus	040,047,061	Semivox.....	053
Optonica	031,046	Semp	042
Orion.....	052,059,075	Sharp	017,031,039, 043,046,069
Panasonic.....	020,024,061	Shogun	008
Penney	003,004,007,008,009,	Signature	005
.....	011,013,014,017,019,020,	Simpson.....	057
.....	025,026,036,042,051,080	Sony	001
Philco.....	008,012,013,	Soundeslgn.....	051,052,053,057
.....	023,032,033,075	Spectricon.....	004
Philips	023	Squareview.....	049
Pilot.....	008,013,017	SSS	008,053
Pioneer	016,047	Starlite	053

UNIVERSAL REMOTE CONTROL DEVICE CODES

Supre-Macy	018	Bell&Howell	032
Supreme	001	Broksonic....002,036,041,045,047,	
Sylvania.....012,013,023,032,068		056,057,063	
Symphonic.....049		Canon.....008	
Tandy.....017,031,070		Capehart.....004	
Tatung.....004,024		Carver.....031	
Technics.....020,061		CCE.....030,053	
Technol Ace.....052		Cineral.....053	
Techwood.....004,020,025		Citizen.....053	
Teknika.....005,008,017,023,		Colt.....030	
.....025,026,030,037,052,		Craig.....018,030,050,052	
.....053,057,067		Curtis Mathes.....008,013,024,038	
Telefunken.....025		Cybernex.....021,050	
TMK.....025,050,051		Daewoo.....004,016,053	
Toshiba.....015,026,036,040,042		Daytron.....004	
Totevision.....017		Denon.....014	
Trical.....043		Dynatech.....001	
Universal.....011		Emerex.....005	
Vector Research.....013		Emerson.....001,002,009,015,	
Victor.....022		025,029,036,041,044,045,	
Vidikron.....023,060		047,048,053,055,056,057,063	
Vidtech.....008,015,051		Fisher.....018,023,027,032	
Viking.....018,067		Fuji.....006,008	
Wards.....005,008,009,		Funai.....001	
.....011,012,013,023,025,032,		Garrard.....001	
.....046,051,052		GE.....008,019,024,042,050	
Yamaha.....008,013		Goldstar.....010	
Zenith.....005,006,030,034		Go Video.....049,054,061	
Zonda.....004		Gradiente.....001,003	

VCRs

Admiral	019	Harley Davidson.....001	
Adventura.....001		Harman/Kardon.....010,031	
Aiko.....053		Harwood.....029,030	
AIWA.....001		Headquarter.....017	
Akal.....013,020,022,025,034		Hitachi.....001,013,014,033,039,060	
American High.....008		Hi-Q.....018	
Asha.....050		Jensen.....013	
Beaumarck.....050		JVC.....003,013,028,043	
		KEC.....053	
		Kenwood.....010,013,028	

UNIVERSAL REMOTE CONTROL DEVICE CODES

KLH.....	030	Protec.....	030
Kodak.....	008	Pulsar.....	011,021
Lloyd's.....	001,044	Quarter.....	017
Logik.....	030	Quartz.....	017
Magnasonic.....	053	Quasar.....	008,038,062,067
Magnavox.....	001,008,011,031,	RadioShack.....	001,064
.....	035,037	RCA.....	008,014,019,024,
MagnIn.....	050		033,034,037,042,050
Marantz.....	008,031	Realistic.....	001,008,017,018,
Matsushita.....	008,038,062		019,026,027,032,050
MEI.....	008	Ricoh.....	007
Memorex.....	001,008,011,017,018,	Runco.....	011
.....	019,032,038,050	Samsung.....	016,021,022,050
MGA.....	015,025,050	Sanky.....	019,011
MGN Technology.....	050	Sansul.....	001,013,028,052,063
Minolta.....	014,033	Sanyo.....	017,018,032,050
Mitsubishi/MGA.....	015,019,025,	Scott.....	015,016,036,041,
.....	028,040		046,047,048
Motorola.....	008,019	Sears.....	001,008,014,017,
MTC.....	001,050		018,023,027,032,033
Multitech.....	001,030	Semp.....	016
NEC.....	010,012,013,028,032	Sharp.....	019,026
Nikon.....	007	Shintom.....	030
Noblex.....	050	Shogun.....	021,050
Olympus.....	008	Singer.....	030
Optimus.....	019,032,038,050,061,	Sony.....	001,005,006,007,008
.....	062,065,066,067,068	STS.....	014
Optonica.....	026	Sylvania.....	001,008,015,031,035
Orion.....	002,041,056,063	Symphonic.....	001
Panasonic.....	008,038,051,059,	Tandy.....	001,032
.....	062,067	Tatung.....	013
Penney.....	008,010,012,014,023,050	Teac.....	001,013
Pentax.....	014,033	Technics.....	008,038
Philco.....	008,045,063	Teknika.....	001,008
Philips.....	008,026,031,035	Thomas.....	001
Pioneer.....	028	TMK.....	009,044,050
Portland.....	004	Toshiba.....	015,016,027,046,048,058
Profitronic.....	050	Totevision.....	050
Proscan.....	024,042	Unitech.....	050

UNIVERSAL REMOTE CONTROL DEVICE CODES

Vector016
Vector Research010,012
Video Concepts012,016,025
Videosonic050
Wards001,008,014,018,019,
.....024,026,030,031,037,048,050,
White Westinghouse053
XR-1000001,008,030
Yamaha010
Zenith001,006,007,011

CARE AND MAINTENANCE

CLEANING

To prevent fire or shock hazard, disconnect your unit from the power source when cleaning. The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Mild soap and a dampened cloth may be used.

MAINTENANCE

Do not expose this unit to an excessively hot environment for extended periods of time. Extreme heat could cause component failure or reduce component life.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, please refer to the following chart before requesting service.

Problem	Cause	Remedy
I can not find the transmitted picture	Check your TV input mode	Your TV input (or source) mode should be set to the same mode as when you use your VCR. This is usually the Video mode (it may be Video, Video 1, Video 2, or Input).
	Check your VCR Mode	Your VCR should be set to the VCR mode, not the TV mode. This button can usually be found on the VCR or the VCR remote. Make sure your TV is set up to receive the signal from the video input mode that you have selected. If your camera is hooked up to Video 2, your TV has to be set up to receive the signal from Video 2. Check your TV manual for further instructions.
I cannot find picture on my TV when using the VCR input jacks on the FRONT of my VCR	Your VCR may be set up to receive from the REAR Video Input	Make sure your VCR is setup to receive the signal from the FRONT Video Input. Check your VCR manual to select the FRONT Video Input jacks.
I cannot find the picture on my TV when using the VCR input jacks on the REAR of my VCR	Your VCR may be set up to receive from the FRONT Video Input	Make sure your VCR is setup to receive the signal from the REAR Video Input. Check your VCR manual to select the REAR Video Input jacks.
Picture has interference	Channel Selector switch	Change the position of the "A/B" Channel Selector Switch on your VideoCam and Camera base (inside battery compartment). Make sure that the VideoCam and Camera Base "A/B" Channel Selector switch are set to the same position (A or B).
Poor picture quality	Weak batteries	Install new alkaline batteries.
If your TV display is in black and white (not color picture)	Weak batteries	Install new alkaline batteries.
If your TV display has vertical lines	Weak batteries	Install new alkaline batteries.
TV speakers have feedback	Your TV volume may be too high	Press MUTE or lower the volume on your TV.

SPECIFICATIONS

Camera Power Source9V DC (6 "AA" Size Batteries)
Receiver Power Source.....AC Adapter: Input Voltage: AC 120V 60HZ
.....Output Voltage: DC 12V 300mA Positive Center
Remote Control Power Source.....3V DC (2 "AAA" Size Batteries)
Camera Dimensions4.5 (D) x 7 (W) x 5 (H) inches
Receiver Dimensions4 (D) x 5.5 (W) x 2 (H) inches
Remote Control Dimensions.....1.8 (D) x 5.5 (W) x 1 (H) inches
Total Weight1.5 lbs

**TO OBTAIN SERVICE ON YOUR PRODUCT,
PLEASE CALL:
1-888-321-7191**

TM & © 2004 MARVEL AND © 2004 CPII. ALL RIGHTS RESERVED.

LIMITED WARRANTY

Kids Station warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$10.00 (to cover shipping and handling costs) payable to Kids Station Toys International Ltd. Ship your product freight pre-paid. Your unit will be repaired, replaced or a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Kids Station Toys International Ltd
P.O. Box 694660
Miami, Fla. 33269

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Kids Station service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Kids Station be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

Printed in China
KSS9004EE01