



Kids Station Toys International Ltd.

 
Date: 6-Aug-09

ARTWORK RELEASE INFORMATION

描述: KS723 IB-English 語言: ☒ 英 ☐ 法 ☐ 西 ☐ 其他: _____
Part Number: KS723-IB-E0DC1-A0US 客名: Fingerhut
尺寸: 105(W) x 150(H) mm 廠名: Kar Lok
物料: 100 gsm ☒ 書紙 ☐ 單粉咭 ☐ 雙粉咭 ☐ 裱E坑 ☐ 貼紙 ☐ 其他 _____
顏色: ☐ 4色 ☒ 黑白 ☐ 專色 PMS _____ ☐ 其他 _____
Finishing: ☐ 單面印刷 ☒ 雙面印刷 ☐ 過uv油 ☐ 磨光面 ☐ 其他 _____
☒ 說明書 共 6 頁 ☒ 風琴摺 ☐ 騎馬釘 ☐ 其他 _____
Remarks: _____


GB = Gift Box, IB = Manual, IS = Insert, LB = Label, SS = Silk Screen, CS = Clam Shell, BC = Blister Card, WC = Warranty Card

Prepared by: EY
Design Department

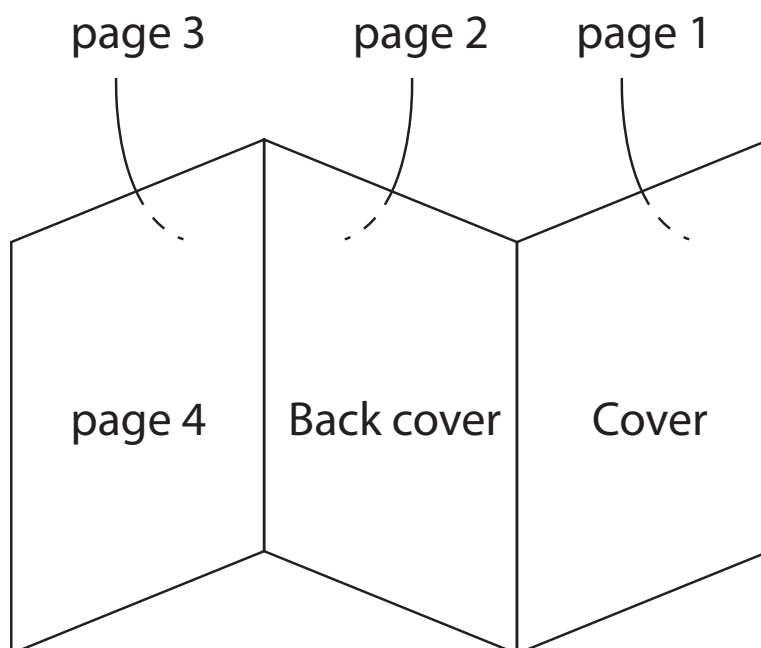



OWNER'S MANUAL

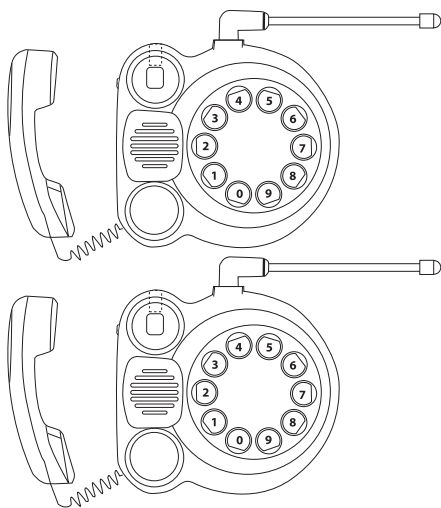 

"CHIT CHAT" TWO WAY COMMUNICATOR PHONE"

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

 
Model: KS723

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LOCATION OF CONTROLS

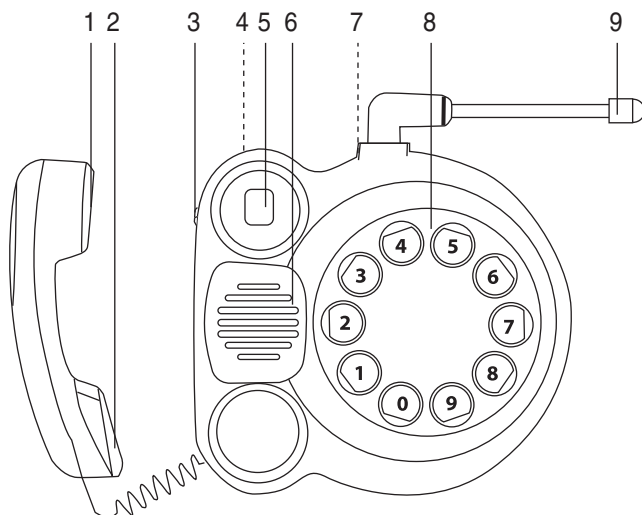


1. Handset Speaker
2. Microphone
3. ON/OFF/VOLUME Control
4. DC Jack $\oplus \ominus$ (rear of unit)
5. Control Switch
6. Base Speaker
7. Battery Compartment (bottom of unit)
8. Keypad
9. Flexible Antenna

POWER SOURCES

BATTERY OPERATION

 1. Remove the Battery Compartment cover on the bottom of the unit by removing the screw and then lifting it out.
2. Insert a 9V battery into the compartment following the diagram shown.
3. Replace the Battery Compartment cover and screw.

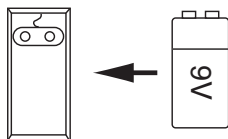

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of batteries in fire; batteries may explode or leak.

AC OPERATION

To operate the unit using AC power, connect a UL approved AC adapter (not included) having a 9V negative center (⊕⊖) to the DC jack on the rear of the unit and to a wall outlet having 120V, 60Hz AC only. The battery is automatically disconnected when an AC adapter is used.

OPERATION

1. Rotate both ON/OFF/VOLUME controls clockwise until a click is heard to turn the units on. Continue to rotate to adjust the volume.
2. Lift Handset (which will release the Control switch) and press the "7", "8", "9" or "0" keys on the Keypad to ring the other unit.
3. Lift the second Handset to answer.
4. These units are designed so both parties can talk at the same time. When transmitting, speak in a normal tone.
5. After use, rotate both ON/OFF/VOLUME controls counter-clockwise until a click is heard to turn the units off.

NOTE: When the sound becomes weak, replace the battery.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

Printed in China

KS723-IB-E0DC1 -A0US