


User Manual

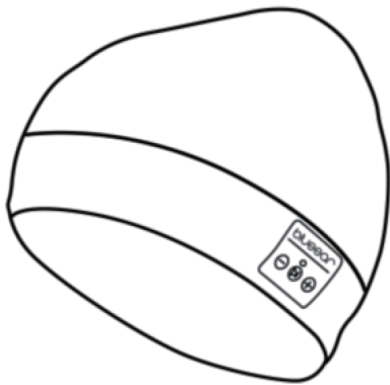

Music Beanie


Thank you for choosing our products. To make sure you can use the product correctly, please read the following directions carefully before using, then follow it strictly.

SAFETY WARNING:

- The device is not waterproof, please do not put it under water or using it in the rain
- Please do not expose the product into acid, alkaline or hard and pointy objects when using.
- If the products was caught in rain, affected with damp, or went moldy, please keep it in dry place, and do not expose it to sunlight directly or bake it in fire or high temperature, if the product is wet or damp by rain, or moldy, please place it in a low-temperature dry place, do not insolate or put into the oven and other high-temperature places.
- Please do not throw the device and its battery into the fire.
- Please do not disassemble, repair or refit the product.
- Please do not toss or throw the product.
- Please take out the device when you wash it.

SPECIFICATIONS:

1. Bluetooth Version: V5.0+EDR
2. Frequency Response: 2.402GHz-2.480GHz
3. Bluetooth Distance: 15M
4. MIC distance: ≤1M
5. Lithium Battery: 3.7V/200mA
6. Charging Time: 2 hours
7. Standby Time: 200 hours
8. Working Time: 12-15 hours
9. Bluetooth Matching Name: Music Beanie

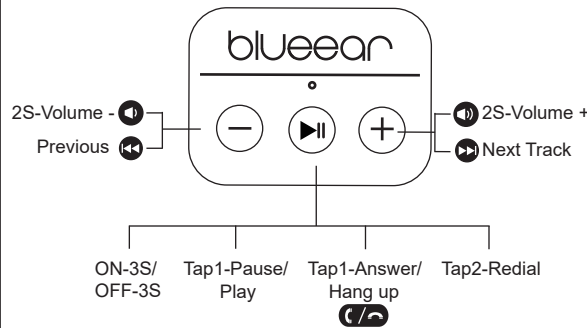

FUNCTION & OPERATION

Charging

Plug micro USB port into earphone, then connect it to the computer or adapter by the USB cable, at the time, the LED light will turn red, when the LED light turn blue, it means the speaker is fully charged, please pull out the cable.

Notice

- 1) First time using this product, please fully charge the product for 2 hours.
- 2) When it is charging, device can not play music or answer the phone call

Power on

Press the “▶||”button 3 seconds until hear“power on”, the device is on once “Blue” LED slowly flash

Power off

Press the “▶||”button 3 seconds again until hear“power off” , the device is off while the“ LED” is off

Paring

Press “▶||” for 5 seconds until the LED light flash blue and red until hear “pairing”, please try to search the

Bluetooth name of“Music Beanie” on your phone, set-in the password of “0000”if it is the first time to pair the device, when you hear “connected”means paired successful and the Blue LED slowly flashing. If you hear “disconnected”, means your device beyond the Bluetooth source

Automatically Re-pair

Your device can be automatically re-pair promptly once both device not cancel the paring, and hear “connected” means the device is repaired.

If you hear “disconnected”, means your device beyond the Bluetooth source

Play/Pause

Press “▶||”button to pause the song, press it again to continue the song

Previous Song/Next Song

Press“-”button one time for previous song
Press“+”button one time for next song

Volume Increase/Decrease

Decrease the volume: Press and hold “-” button to decrease the volume
Increase the volume: Press and hold “+ ”button to increase the volume, sound of “Dong” while volume max

Phone Call Answer

1. Phone call answer: when phone call coming in, press “▶||” to answer the call.
2. Refuse call: press “▶||” two seconds to refuse the call when phone call coming in.
3. End Call: After phone talking, short press “▶||” button to end the call
4. Re-dial phone call: Press “▶||” two times to re-dial the latest phone number directly.

Low Power Warning

The device sound “low battery, please charging”warning voice while working, it means the power is low, please charge it.

Power save mode

The device will be off automatically after 5 minutes no working device pairing it.

Specification

Bluetooth	V5.0+EDR
Operating 2hours of Bluetooth	Up to 15m
Operating Range of microphone	≤1m
Battery	Li-ion 3.7v/200mAh
Charging time	
Stand-by time	200 hours
Continuous working time	12-15hours
Bluetooth name	Music Beanie

Troubleshooting

Problem	Solution
Won't turn on.	Please charge the Music Beanie
Can't find the Music Beanie	Confirm the Music Beanie is in pairing status and within 15 meters from the device.
Can't install the driver for Music Beanie on a computer.	Update the driver of the Bluetooth module on your computer.

The sound quality is intermittent in Bluetooth mode.	Disable the Wi-Fi on your source device.
No sound.	Check the volume on both the source device and the Music Beanie
The earphones do not align with my ears.	Please gently adjust the speaker position by squeezing a long the edge of earphones to line up with your ears

ACCESSORIES

1. Music Beanie*1pc
2. USB Charging Cable*1pc
3. User Manual *1 pc

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,may cause harmful interference to radiocommunications. However, there isno guarantee that interference will notoccur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the followingmeasures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

<https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: R5B-BWH10