

OT-203C Mobile Phone

Contents

1. Your mobile	2
2. Getting started	5
3. Basic functions.....	6
4. Messages	7
5. Entertainment.....	8
6. Profile.....	9
7. Contacts.....	9
8. TATA Zone.....	10
9. Display	10
10. Call Manager.....	11
11. Organiser	12
12. Settings.....	13
13. FAQ.....	14
14. Safety and use	15

Friendly reminder:

This user manual applies to the OT-203C mobile phone. If there are minor differences in the description or illustrations between the manual and the actual product the actual product shall take precedence. Customers will not be notified separately of any upgraded model of this mobile phone. Please contact our Customer service.

We reserve the right to revise anytime the contents of this manual without prior notice.

1. Your mobile

1.1 Basic specifications

Item	Specifications
Mobile Phone	Size: 108.5mm[L]×45.2mm[W]×14.5mm[Thickness]
	Weight: 61g approx.(Including lithium battery)
Screen resolution	128×128
Contacts	1000 entries
Call Memory	60 entries
Message	Inbox: 1000; Outbox: 30; Drafts: 30
Li-ion battery	Rated capacity: 670mAh
	Nominal voltage: 3.7V
	Talk time: 180 to 240 minutes
	Standby time: 60 – 120 hours (approx.)
	Operating temperature: -10℃ to +55℃


Explanation:

Standby time refers to the time when the phone although in operating mode is not used for making calls or remains idle. Standby time and call time are both related to the conditions of use, the network situation and the environment.

The SAR standard is 2.0W/Kg. This phone's highest actual value: 0.86W/kg

Please make appropriate use of the product to reduce the effects of EMF.1.2 Key pad indications

1.2 Keypad

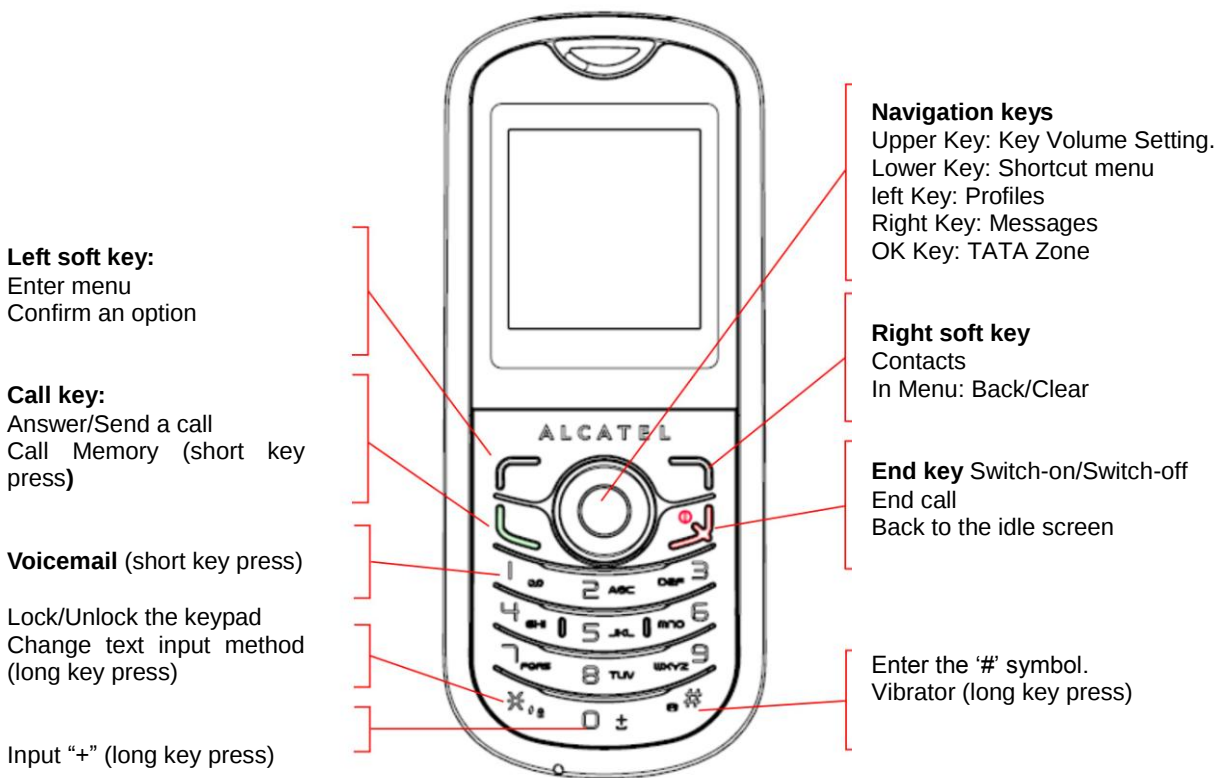

1.3 Main Menu

From the main menu, use the navigation key to select the item you want. After selection, press the left soft key to confirm.



Messages:

Read, write and send SMS messages, view the Inbox and the Outbox. Manage the settings applied to the messages



Entertainment

Listen the FM radio, play game and make new record and play it.



Profiles

You can set the phone's profile.



Contacts

Enter the contact list where you can check or create a contact (the person data) and

select a contact's phone number.



TATA Zone

Access TATA Zone Brew Service to download exciting ring tones, wall papers and other applications offered by TATA Indicom



Display

You can set the wallpaper. Clock, Time, and the time of LCD Backlight.



Call manager

Access the Call Memory.



Organiser

You can you can set alarm, scheduler, add new memo and use some little tools.



Settings

Set the Language, Key guard, Airplane and security modes in your phone

1.4 Screen Icons



Network signal strength.



No network.



Calling.



Unread message



Alarm clock on



Battery power level



Keypad lock



Profile - outdoor.



Profile - general.



Profile - silent.



Profile – vibrate



Profile – headset.




Airplane mode on.



Display CDMA 1X


2. Getting started

2.1 Removing the back cover

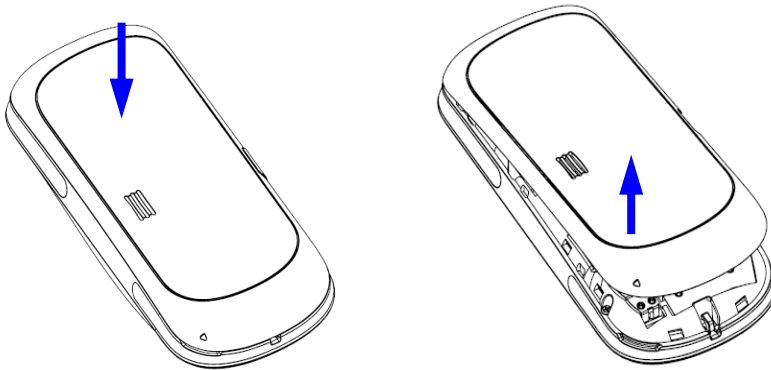


2.2 Inserting the UIM card

The mobile phone can only be used with the UIM card inserted. Press and hold the end key. Insert the UIM card with the metallic contact downwards, sliding it into the slot as shown by the arrow, paying attention to the position of the slanted angle. To remove the UIM card, slide the card out in the direction shown.

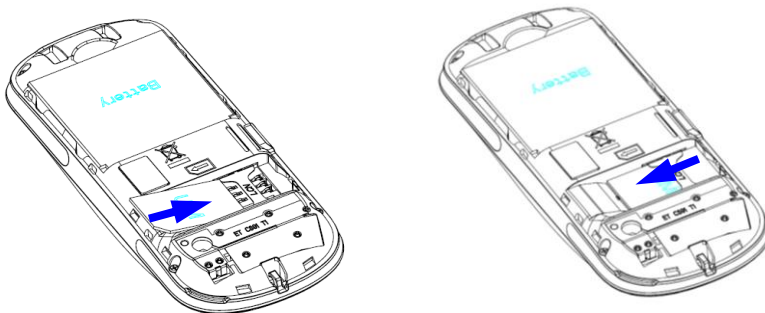

2.3 Installing / Removing the battery

Remove the back cover and remove the battery as shown (direction of the arrow).

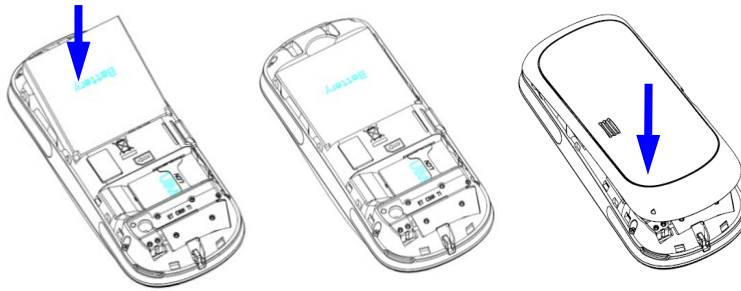

3. Basic functions

3.1 Switch-on/off

When power is sufficient, press and hold the end key to switch on. If you have activated a password or a PIN code, you will be prompted to enter it. Normally the phone is ready for use as soon as you enter the password or the PIN code. For details on the use of the PIN code and password, please refer to Menu> Settings> Security> Card settings. When the phone is on, press and hold the key end to turn it off.

3.2 Making a call

- 1) Type the phone number or select one contact in the phone book, then press Call key.
- 2) To end the call, press END/PWR key.

3.3 Loud Speaker

This function is a convenient feature which enables you to call using loud speaker. When you need, press [OK] key in the call could switch to using loud speaker.

3.4 Receiving a call

- 1) When the phone rings or vibrates (if the Vibrate Mode is enabled), press Call key to answer. Press [Left Soft] key, mute ringing or vibrating or pressing END/PWR key to cancel the coming call directly.
- 2) To end an answered call, press END/PWR key.

3.5 Call waiting

While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you can put the active call on hold while you answer another call.

This service should be provided by your service provider.

- 1) Press Call key to receive a waiting call during the first call.
- 2) Press Call key again to switch between two calls.

3.6 Input method

In text input process, press [Left Soft] key to select Options> Entry Mode, then you could select the input mode from T9Hindi, Hindi, T9English, Abc, 123. Use [*] to change all input Mode. Your phone has supplied five modes for entering text, numbers, special characters.

T9Hindi Mode: Type text using one keystroke per letter in Hindi with the help of T9 Hindi dictionary function.

T9English (T9En) Mode: Input a letter you want with the help of T9 English dictionary.

Hindi Mode: Use Hindi mode to input text in Hindi language.

Abc (Multi-tap) Mod: Use Abc mode to input text in English language.

123 (Numbers) Mode: Type numbers using one keystroke per number.

- ❖ **Note:**
1. The current Input Mode will be showed on the right-top of the screen.
 2. In Hindi or ABC Input Mode, you should press the appropriate key several times until the character you want appears on the screen.

4. Messages

Text message and voice mailbox become available in the handset.

New message: You can send a text message more than 160 characters at a time. If there is any interruption by a call while composing a message, messages automatically will get saved in the Drafts.

Inbox: You can view the received text messages in the inbox.

Outbox: Sent and unsent text messages can be saved in the outbox.

Voice Mail: Voice mail notification indicates the quantity of new voice mail message in your mailbox. Only the recent voice mail notification will be stored in your phone, previous message will be overwritten.

To listen or delete information, select Options. Then select Listen or Erase.

While you are answering another call, if you have a new message, the sender's number will

be displayed on the screen.

✧ **Note:** Check with service provider for availability of this feature.

Templates: There are 9 predefined phrases in the Templates. You may edit the templates and add new templates.

Drafts: You can save the messages you edit in the drafts.

SMS Groups: You could organize the contacts into the SMS Groups, and send a message to the group. 5 Groups can be saved.

Erase Msgs: You can delete all stored messages from different folder and make them empty.

Msg Settings: You can customize your phone's message facility according to your requirement by configuring various options.

Memory Info: You can view the available memory in Inbox, Outbox, UIM Card and Drafts.

5. Entertainment

5.1 Radio

Before start to enjoy FM radio, please install the headset which is provided in the package.

After access FM radio operation interface, multiple FM control function will present to you,

Access to Radio: You can enjoy radio broadcasting through this phone. On standby screen, select Menu> Entertainment> Radio.

Selecting a Channel: When the radio is switched on, the channel you listened to last time is selected or if there is no latest channel, the first channel with signals is selected or if all channels are empty, the frequency is selected by default. In the broadcasting screen of the radio, press [LEFT]/[RIGHT] to change to the next channel and press [UP]/ [DOWN] to adjust the volume. You also can press the number key to jump to the corresponding channel directly.

Listen to the Radio: Select Hide to play radio in the background, you can do other things (New message, Add Names, etc.).Select Options to select from: Switch Off, Edit, Auto Scanning, Reset, Reset All. Switch Off, Edit Channels, Channel Frequency . You can edit channels' name and frequency, the channel frequency is from 85.0MHz to 110.0MHz.And you also press [LEFT] or [RIGHT] to move the cursor to your wanted frequency and select Save to save your frequency to channel list.

5.2 Games

Play Tetris:

Start: start a new game.

Game level: Select the levels of the game.

Rank: view the former of score.

Keys	Function
OK key	Start the game
2/Up key	Change shape
4/Left key	Left
6/Right key	Right
8/Down key	Down
Left soft key	Pause/Replay the game
Right soft key	Exit the game

5.3 Voice recorder

Record New: Record the voice you want.

Voice Records: In the recorder list, you can play the recorder, and rename or delete them.

6. Profile

Customize the phone's profiles.

Vibrate Only: Set the phone profile to Vibrate mode.

Silent: Set the phone profile to Silent mode.

General: Set the phone profile to general mode. In General mode, you can set the details:

Ring Alert: you can set the alert type and ring tone of incoming calls.

Message Alert: you can set the alert type and tone of new messages.

Volume Setting: you can set the volume of Ringer, Earpiece, Speaker, key, Messages alert, Game, Popup, Power on/Off.

Service Alert: you can set the system service alert to On or Off.

Outdoor: Set the phone profile mode to Outdoor mode.

Headset: when you plug in the headset, the phone profile is set to be Headset automatically.

You can set detail information. in the menu.

7. Contacts

Keep records of your contacts, search, add, modify or delete.

Add new: You can store multiple contact details under a name: Group, Mobile Number, Office

Number, Home Number, Other Number, E-mail and Memo. Input the details, press Select key to save the new contact.

Find: You can find contact you want you have stored in the Phone and the UIM card.

Groups: you can set contacts in some groups. Your phone have supplied twelve groups, you can set ring tone and rename for these groups.

✧ **Note:** The contacts in UIM card just only in [No group] you can not change their group.

Speed dial: You can make a call faster by just pressing a corresponding number. Select an unused Speed Dial number, then press [OK] or select Options> Assign, assign the number you want. Memory locations 1 to 99 should be used for your most frequently used phone numbers. Basically allocated speed dial is as follows;

- (1) *89 (Voice Mail)
- (2) 12900 (Voice Station)
- (3) 12524 (Customer Care Prepaid)
- (4) 121 (Customer Care Post-paid)
- (5) 197 (Directory Assistance)

Copy: You can copy contact you want from phone to UIM or copy them from UIM to Phone.

Move: You can move contact you want from phone to UIM or move them from UIM to Phone.

Erase: You can erase contact you want from phone to UIM or erase them from UIM to Phone.

My Phone Num: You can input you phone number and save it.

Memory Info: You can view the quantity of contacts in the phone and UIM storage.

8. TATA Zone

TATA Zone: This function you can access TATA Zone Brew Service to download ring tones, wallpapers and other applications offered by TATA Indicom.

✧ **Note:** All Brew Services may not be available to every subscriber. Please contact your service provider for further information.

SMS Service: Use a variety of additional services offered by TATA Indicom. This menu is available only when you use a UTK UIM card that provides additional services. You will see help information if you enter this function for the first time.

✧ **Note:** Contact TATA Indicom to get the list of services available.

9. Display

In this function you can select:

Wallpaper: You can set the picture in idle status your phone has already supplied 4 pictures and you can download from web. And you can select enable or disable to show the banner, you also can change the banner.

Clock: You can select type of clock, your selection will be displaying on idle.

Time: You can select time format from 12 hr or 24 hr.

LCD Backlight: You can set the time of LCD backlight when you haven't operated your phone.

10. Call Manager

From the standby screen, press the call key to display the list of all calls numbers.

10.1 Dialed, Received, Missed

Select Dialed Calls/ Received Calls/ Missed Calls from the Call Manager Menu to access the submenus of the various call logs. Use the left soft key to access the options such as View, Message, Edit Number, Save, Erase, Erase All.

View: Check the data on the selected number.

Message: Send a message to the selected number.

Edit Number: you can change selected number.

Save: Save the selected number in Contacts.

Erase: Erase the selected number.

Erase All: Erase all the records in the list.

10.2 Call Duration

Select Menu> Call Manager> Call Duration to display the time record of Last Call, All Dialed calls and All Calls. The call time of all calls can be set to zero any time by resetting the timer.

10.3 Erase History

You can erase all records of missed calls, received calls, dialed calls, even all calls.

10.4 Call settings

Answer Mode: You can determine how to answer a coming call.

Auto Redial: You can set auto redial On or Off.

Call Forward: You can configure the call forward service which diverts incoming calls to a special number.

Call Waiting: You can configure the call waiting services which hold Incoming call that you can answer or not

Voice Privacy: Use an encrypted high security line so that people can not eavesdrop on your conversation, or use a standard line.

Smart Sound: If you set this function on, it can eliminate the noise around when you answering a call.

Call Connect Alert: With this feature on, you will hear the reminding sound when the mobile connect to the mobile station during the originating call.

Int'l Call Prefix: Set the international call access code to Manual or Automatic, The long press "0" shall serve as "+" and the User Interface shall display "+" on the screen.

11. Organiser

11.1 Alarm

Users can edit up to three alarm clocks. From the standby screen, press Menu> Organiser> Alarm to display the Alarm clock editing screen. Press the left soft key you can select Off, Once, Daily, Mon-Fri, Mon-Sat, Weekends via left/right key. Or you can select these modes via **List** in option menu. When you select Once/ Daily/ Mon-Fri/ Mon-Sat/ Weekends mode you can set alert time, Snooze time, and ring tone, After you set you can save your selection via Save in the option menu. Or press left soft key to save you selection.

Snooze function: When no key is input when alarm alert, Snooze function is set automatically one minute later, and the alarm will sound again 5/10/15 minutes later. Snooze alarm will repeat 3 times if no operation on the phone.

11.2 Scheduler

Move highlight via up/down/left/right keys on you want day, you can do:

View: You can view your all agenda on the day, then you can select a schedule and view its detail information.

Add: You can add new schedule on the day you select, you can set the date and the content, turn On/Off the alert.

Go to Date: You can input the date you want and the highlight will be arriving the date you input.

Erase to Date: You can select one week or one day to delete the schedule you select.

Erase All: You can delete all schedules.

Your phone will alert when the schedule time is coming. You can press right soft key to stop it.

11.3 Memo Pad

In this function you can add new memo and save it. You can View /Add/Erase/Erase All.

11.4 Tools

In this function your phone has supplied 4 little applied tools: Stopwatch, Calculator, Unit Converter, World Clock.

12. Settings

12.1 Languages

You can select the language as shown in the interface.

12.2 Key guard

Enable Key Guard, the keypad will be locked automatically in the standby screen.

You can pressing and holding [*] on standby screen could lock /Unlock the keypad manually.

12.3 Airplane Mode

You can choose On/Off the airplane mode. When you select on, the phone will be in no network status, you can't receive/dial calls or receive/send messages.

12.4 Security

You have to input lock code to enter this function.

The default lock code is 0000.

Card Settings: You can set UIM Card's PIN Code Request and Change PIN Code. If you know the UIM's PIN code, you could use this action.

- ✧ **Note:** 1) The initial default PIN Code could be supplied from the UIM card provider.
- 2) If you type in the wrong PIN Code three times continuously, the UIM card will be locked automatically. You should get the PUK code from the card provide to unlock the UIM card.

Lock Mode: Keep your phone from unauthorized use. You can select Lock Mode, such as Off, Now, On Power Up. If you select Now the phone will be locked immediately, and if you select On Power Up, the phone will be locked after power on.

Change Lock Code: You can change to a new four-digit lock code number. For confirmation, your phone will prompt you to enter the new lock code twice.

Reset: Reset all settings to the default options. Reset all items in the phone.(Delete all contacts, all messages and other records in the phone)

✧ **Warning:** Please confirm the important contacts, messages, photos and other records in the phone are backup before.

Shortcut Menu: You can select one item from the list to add or remove it in the Shortcut Menu. In the idle, you can press the Down Key to show the Shortcut Menu.

Version: You can see the version of the software and the hardware.

13. FAQ

If an anomaly occurs when you are using your mobile phone, please refer to the following table. If the problem remains unsolved, please contact the phone vendor.

FAQ	Item to be checked
The telephone does not charge properly	Make sure that the charger is correctly connected to the phone and the power socket. Make sure you are using a charger specifically designed for this phone.
The phone does not switch on	Check the battery charge level. Make sure the battery is properly installed. Press and hold the ON key until the screen comes on.
The phone card has been inserted but the card information cannot be read	Make sure the UIM card is properly inserted. Make sure your UIM card is valid. Make sure the card's contact face is not dirty, if it is, wipe it with a clean cloth.
The phone displays "Enter PUK number"	Contact the network operator for a PUK number. Unlock the phone using the PUK number.
Unable to dial a number	Make sure you have dialled a valid phone number. Check if your phone is connected to the network.

FAQ	Item to be checked
Poor sound quality	Check if the reception signal is strong enough. If you are inside a building, rotate the phone or move close to a window.
The other party cannot hear you during a call	Make sure the mouthpiece is not blocked.
The receiver volume is low	Check if the receiver volume is set to maximum.
The phone signal is poor or switches off frequently	Make sure the phone antenna is not damaged. Check the phone signal strength. If there is no signal, use your phone in a location where the signal is strong.
The phone displays “out of network” or “network failure”.	Check if you are in an area where the signal is weak (in a tunnel or surrounded by building). Move to another location and try again. Make sure you are not trying to use a service that you haven’t subscribed to. If you require this service, contact the network for details.
When you cannot connect to the network normally	(1) The network provider does not provide this service or you have not subscribed to this service. Please contact your provider for details on the subscription and use of these services. (2) Incorrect setting. Please set the correct parameters

14. Safety and use

Please read carefully and observe the following regulations to avoid damaging your telephone or using it against the law.

Electronic devices/Health care facilities.

Turn off your phone when you are near high-precision electronic devices in use to avoid causing malfunction or interfering with their operation (fire alarms, automatic doors and automatic control equipment).

Turn off your phone in hospitals or places where the use of mobile phones is restricted. Mobile phones affect the normal operation of electronic devices and medical instruments,

such as pacemakers, hearing aids and other electronic medical devices.

Pacemaker manufacturers recommend that mobile phones are kept at least 15 cm away from pacemakers to prevent the phone interference. When using the phone, you should hold it against the ear on the opposite side to the device, to reduce interference.

Mobile phones should be forbidden inside an operating theatre, Intensive Care Unit (ICU) or Cardiac Care Unit (CCU).

Pay attention to the settings of the sound volume and the vibration to avoid disturbing the patients.

Flammable or explosive areas

Turn off your phone near flammable or explosive areas. Do not install/remove or charge the battery or use the phone in these areas to prevent any explosion or fire. Flammable and explosive areas include: chemical plants, facilities with chemical substances or particles in the air (grains, dust and metal powder), petrol stations and fuel depots, fuel storage areas (for example, under a ship's deck), areas with explosion warning signs, areas with "turn off two-way radio equipment" signs and places where you are usually recommended to switch off car engines.

Safety of use in a vehicle

Please observe the relevant local or national regulations related to the use of mobile phones in a vehicle. Please refrain from using the phone while driving. If you are driving and need to use the phone in an emergency, use a hands-free device (optional purchase) to be safe. Otherwise, park the car before using the phone.

Do not place your phone on the dashboard or within an airbag deployment area to avoid causing injury to passengers in the car when the bag inflates or bursts.

Using the phone on an airplane is strictly forbidden. Turn off your phone before you board an aircraft. It is recommended to remove the battery to avoid the phone being turned on accidentally.

Storing environment

To avoid demagnetizing problem, keep the phone away from magnetic materials, such as magnetic discs and credit cards.

Ensure that the phone does not come into contact with liquids. If it does, turn it off immediately, remove the battery and quickly contact the vendor.

Do not store the phone, battery or charger in an environment with a strong magnetic field,

such as an electromagnetic pot or a microwave oven, to avoid causing the phone to malfunction, catch fire or explode.

Do not subject the phone, battery or charger to heavy impact or vibration to avoid battery leakage, phone malfunction, overheating, fire or explosion

Do not place sharp metallic items such as needles, near the receiver because the receiver will attract them and you may be injured when using the phone.

Do not place the phone in the back pocket of your trousers or skirt to avoid damaging it when you sit down

Child health

Keep the phone, battery and charger out of the reach of children. Do not let children use the phone, battery or charger without supervision.

Do not let a child put a battery in his/her mouth to avoid electrolyte poisoning.

Keep children away from small phone accessories to prevent suffocation or blocking of the oesophagus as a result of swallowing.

Operating environment

This phone is equipped with a built-in antenna. When the phone is on, unless necessary, do not touch the antenna area (top of the phone) for optimal communication quality.

Do not use your phone while it is being charged during thunderstorms, or use it outdoors to avoid being struck by lightning or other injury.

Do not use your mobile phone in dusty, wet, dirty places or places near magnetic fields to prevent malfunction of its internal circuits. Keep the phone as dry as possible. Keep the phone, battery and charger away from water and water vapour and do not clean the phone with a wet cloth to avoid short circuits, malfunction due to corrosion and electric shocks.

Do not turn in or off the phone against your ear to avoid your ears and body from being impaired.

To comply with regulations on radio frequency exposure, keep the antenna at least one inch (2.5 cm) away from your body when holding your phone or using its data functions.

If you feel unwell (epileptic seizures or blackouts) after playing the games with your phone for a long period of time, please seek medical assistance immediately.

Move your mobile phone away from your ear while using the hands-free mode, because the amplified volume might cause hearing damage. Make sure you switched off your phone in areas where mobile phone use is prohibited!

Cleaning and maintenance

Switch off the phone before cleaning and maintenance. The charger should be unplugged from the power socket and the phone and charger disconnected to prevent any electric shock or short circuiting of the battery or charger.

Do not wipe the phone or charger using chemical substance (alcohol benzene), chemical agents or abrasive cleaning agents to avoid damaging its parts or causing a malfunction. You may clean with a slightly damp anti-static soft cloth.

Do not scrape or alter the phone case as paint substances may cause an allergic reaction. If such a reaction occurs, cease using the phone immediately and seek medical help.

Wipe dust off the power plug and keep it dry to avoid risk of fire

If the phone or accessories do not work properly, contact your local vendor

Do not dismantle the phone or its accessories yourself.

Protecting the environment

Please observe the local regulations on phone packaging, battery and used phone disposal and bring them to the collection point for proper recycling. Do not dispose of used phones or batteries in a household rubbish bin.

Please take your used, unwanted lithium batteries to a designated place. Do not dispose of them in a rubbish bin.



Emergency call

In an emergency situation, if the phone is on and you are within the network range, it can be used to make an emergency call. However, emergency call numbers may not be reachable on all networks; you should never rely on your mobile phone for emergency calls.

Using the battery/charger

Only use batteries and chargers approved by the manufacturer. Do not use batteries or chargers that are not compatible with your model to avoid any explosion. Do not throw a battery in a fire as it might catch fire or explode. Do not cause a short circuit to the charger as it might result in malfunction, smoke or fire. Do not place conductors like metals, keys or jewels, against the battery poles or allow them to touch the ends of the battery to avoid short circuiting the battery and causing injury (burns, for example) as a result of battery overheating. If the power cable is damaged (wires exposed or broken) or the connection to the plug is loose, do not use it to avoid electric shock, short-circuit of the charger or a fire. Do not dismantle the battery or weld the two poles of the battery to prevent the battery from leaking, overheating, catching fire or exploding. Keep the charger away from any container of water or

other liquids. Infiltration of liquid may cause electric leakage or other malfunction to the charger. If the battery leaks, emits smoke or a strange odour, cease use immediately and move it far away from naked flames or people to avoid a fire or injury from explosion.

Do not charge the battery in a dusty or damp environment and keep the cable away from heated objects. The battery is not fully charged when leaving the factory. Therefore, you should charge the battery for two hours before use. Before charging, make sure the charge plug is correctly inserted in the power socket. If it is incorrectly inserted, electric shock might occur and the phone or battery may catch fire or explode. When charging is completed, pull out the charger plug from the power socket, and do not pull the cable.

If the liquid in the battery splashes into your eyes, do not rub the eyes to avoid damaging your vision, rinse the eyes immediately in clean water and go to a hospital for assistance.

Do not place heavy objects on the charger cable. Do not damage, twist or pull the cable to avoid causing electric shock or fire.

When the battery cannot be installed correctly in the phone, do not press down on it heavily to prevent it from leaking or exploding. Do not remove the battery when the phone is on.

If the battery is distorted, has changed colour or is unusually hot when charging or when it is stored, remove immediately the battery and stop using it or it may leak, become overheated, explode or catch fire.

If a battery is not used for a long period of time after charging, store it at room temperature

Do not touch the power socket, power cable or charger with wet hands to avoid electric shock.

If water or other liquid enters the charger, immediately disconnect the charger plug from the power socket to prevent it from overheating, catching a fire or malfunction.

Explanation: The instructions in this user manual apply to Traditional Chinese language mode. In other language operating modes, slight differences may appear.

Warning: The manufacturer disclaims any liability for damage, which may result as a consequence of improper use of this mobile phone or use contrary to the instructions contained in this manual.

Alcatel logo and Alcatel name are Trademark of Alcatel-Lucent used under license by TCT Mobile Limited All rights reserved © Copyright 2008 TCT Mobile Limited
--

TCT Mobile Limited reserves the right to
Alter material or technical specification
without Prior notice.

FCC statement :

Section 15.105 (b)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CJA2060ALAAA

FCC Section 15.21 Information to the user

Changes or modifications not expressly approved by the party responsible for compliance could operate the equipment.

FCC Section 15.19 Labelling requirements

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received, including interference that may cause undesired operation.

SAR INFORMATION

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types (FCC ID: R5C203C) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use at the ear is 1.21 W/kg and when properly worn on the body is 0.134

W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.