
USER MANUAL

ALCATEL OT-356C



ALCATEL
mobile phones

Contents

Contents	0
1. Your mobile	1
2. Getting started	5
3. Basic functions.....	6
4. Messages	7
5. Contacts	10
6. Recent Calls	13
7. Camera	13
8. TATA Zone.....	14
9. Music Player	15
10. Opera	16
11. Facebook.....	16
12. Twitter	16
13. Entertainment	16
14. Settings	17
15. Tools	20
FAQ	21
Safety and use.....	23

Friendly reminder:

This user manual applies to the OT-356C mobile phone. If there are minor differences in the description or illustrations between the manual and the actual product, the actual product shall take precedence.

Customers will not be notified separately of any upgraded model of this mobile phone. Please contact our Customer service.

We reserve the right to revise anytime the contents of this manual without prior notice.

1. Your mobile

1.1 Basic specifications

Item	Specifications
Mobile Phone	Size: 103mm[L]×58mm[W]×12.8mm[Thickness]
	Weight: 80g (Battery included)
Screen resolution	160*128 pixels
Contacts	500 entries
Recent calls	20 entries
Messages	500 entries
Operating temperature	-20℃~50℃
Battery	Type: Lithium
	Capacity: 800mAh
	Talk time: 240 minutes (approx.)
	Standby time: 180 hours (approx.)
	Charging time: 3.5 hours (approx.)

Explanation:

Standby time refers to the time when the phone although in operating mode is not used for making calls or remains idle. Standby time and call time are both related to the conditions of use, the network situation and the environment.

The SAR standard is 1.6mw/g. This phone's highest actual value: 1.0mw/g

Please make appropriate use of the product to reduce the effects of EMF.

1.2 Key pad indications



Number	Item	Function
1	Left Soft Key 	Enter menu Confirm an option
2	Send Key 	Recent Call Answer/Send a call
3	Right Soft Key 	Contacts List In Menu: Back/Delete
4	END--PWR Key 	Power on/Power off End a call Back to the idle screen
5	Navigation Keys 	➤ Left: Schedule ➤ Right: Messages ➤ Up: TATA Apps Store ➤ Down: FM Radio ➤ OK: T World/Confirm an option
6	QWERTY 	Enter numbers and characters and choose menu items.
7	Q Key 	When standby, holding [Q] Key 2 seconds to enter Meeting mode.
8	T Key 	When input numbers in standby, holding [T] Key 2 seconds to input T after main number and then extension number.
9	SYM Key	When you edit a message, press this key to select symbol.

		
10	Shift Key 	When you edit a message, press this key once/twice to switch between the upper chars and lower chars.
11	Space Key 	Lock/unlock the phone. When you edit a message, press this key to enter space.
12	Del Key 	When you edit a message, short press this key to delete the character one by one; long press this key to delete the characters with the speed of about 10 characters per second.
13	Enter Key 	When you edit a message, press this key to switch to a new line.
14	Fn Key 	When you edit a message, press this key to switch input methods.

1.3 Main Menu

From the main menu, use the navigation key to select the item you want. After selection, press the left soft key to confirm.

Messages	Received Calls	Black Jack
Create	Dialed Calls	Settings
Inbox	Call Time	Profiles
Outbox	Last Call	Display
Draft	Delete All	Phone
Reserved Messages	Camera	Call
Templates	Camera	Gallery
Delete Messages	Photo Gallery	Auto power on
Settings	TATA Zone	Auto power off
Memory Status	T World	Security
Voice Mail	TATA Apps Store	Phone Information
Contacts	SMS Services	Tools

 
Contacts List	Music Player	Notes
Search	Opera	Stopwatch
Add New	Facebook	Alarm
Groups	Twitter	Schedule
Speed Dial	Entertainment	Calculator
Contacts Management	FM Radio	World Time
Recent Calls	Tetris	Recorder
Missed Calls	Brick Attack	

1.4 Screen Icons


	Battery power indicator. More bars indicate a higher power level.
	The more bars, the stronger signal
	No service
	You have received one or more text messages
	Indicate the message box is full
	You have received one or more voicemail messages
	Indicate the phone is in meeting state
	Indicate the phone is in silent state
	Indicate the phone is in normal state
	Indicate the phone is in outdoors state
	Your phone is connected with a earphone
	Indicate the phone is making a call
	You have missed one or more calls
	Alarm has been set
	Indicate the phone have set Voice privacy
	You are using FM radio
	The memory card has been plugged in the handset
	Indicate the phone is roaming

2. Getting started


2.1 Removing and installing the back cover

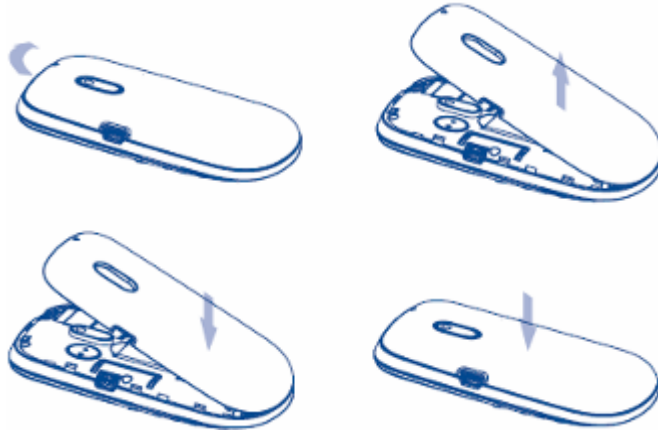

 2.2 Inserting and removing the UIM card

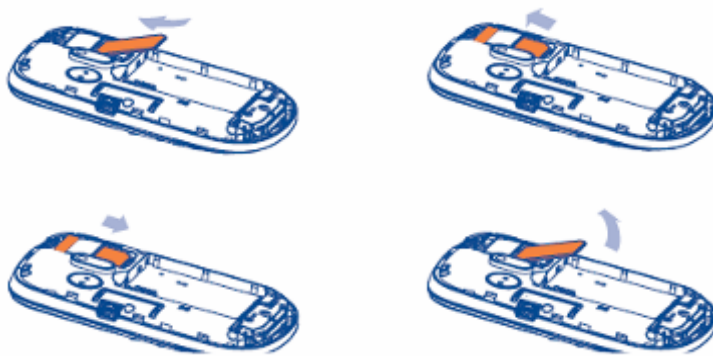

 2.3 Installing and removing the battery

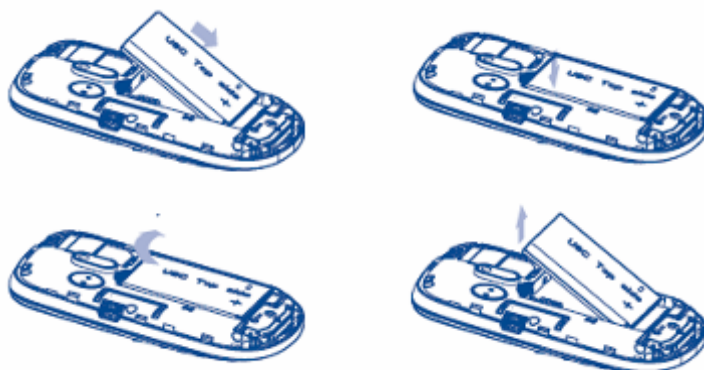

3. Basic functions

3.1 Power on/off

When power is sufficient, press and holds the end key to power on. If you have activated a password, you will be prompted to enter it. Normally the phone is ready for use as soon as you enter the password; please refer to Menu/Settings/Security settings. When the phone is power on, press and holds the key end to turn it off.

3.2 Making a call

3.2.1 Enter the number directly

In the standby mode, use the number key to enter a phone number, and then press the send key to make the call.

3.2.2 Dial a number in the Call Memory

In the standby mode, press the send key to access recent calls list, and press send key again to dial the selected number.

3.2.3 Speed dial

In the standby mode, make a long key press on keys 1 to 9 to speed dial a number. You also can press the number keys and then press the Send key to speed dials a number. For details regarding speed dial setting. Please refer to "Contacts/Speed dial". Key 1 is a default setting for voice mail number. Key 2 is a default setting for Voice Station, Key 3 is a default setting for Customer Care Prepaid, Key 4 is a default setting for Customer Care Postpaid, Key 5 is a default setting for Directory Assistance.

3.2.4 Emergency call

Enter emergency number, and then press the send key. In any situation, with or without phone lock activated, your phone can still make an emergency call.

3.3 Functions available during a call

During a call, access the Menu by pressing the left soft key.

3.4 Input mode

You may enter letters, numbers and symbols in the Contact, SMS, Note and other menu functions.

3.4.1 Entering letters

There are six text modes: Abc, abc, ABC, En, en, EN.

Please use the Fn key to change input modes.

3.4.2 Entering numbers

Press Shift Key once to input one number, and twice to lock in number input status. Or press Shift key and the number key you want to insert at same time.

3.4.3 Entering symbols

Press SYM key to enter symbol list.

Press Shift key once to switch to upper chars once.

Press Shift key twice to lock on upper chars, then press Shift key again to unlock.

4. Messages

Press the Right key or press the left soft key to select Messages to access the Messages menu.

4.1 Create

Select Menu/Messages/Create to access the message editing screen. Please refer to "Input mode" section for instructions on message editing.

In the message editing screen, press the left soft key for the following options: Send, Insert Contacts, Insert Templates and Insert Emotion Symbol, Settings.

Send: access recipients, you can input up to 100 recipients.

Insert Contacts: Add different contact details from Contacts to a message.

Insert Templates: Add commonly-used terms to a message.

Insert Emotion Symbol: Add an expression to a message.

Settings: Set the send mode, priority, delivery report and Message Validity.

4.2 Inbox

Select Menu/Messages/Inbox to access the list of messages in this box. Press the left soft key for the following options: View, Reply, Forward, Delete, Copy to UIM Card/Copy to Phone, Move to UIM Card/Move to Phone.

View: Review the contents of the current messages. From the contents, press the left soft key for the following options: Reply, Forward, Delete, Extract Details, Copy to UIM Card/Copy to Phone, Move to UIM Card/Move to Phone.

Reply: Send a message to the sender of the current message.

Forward: Modify the contents of a message and send it.

Delete: Delete a message.

Copy to UIM Card/Copy to Phone: Copy a phone message to UIM card or copy a UIM card message to phone.

Move to UIM Card/Move to Phone: Move a phone message to UIM card or move a UIM card message to phone.

4.3 Outbox

Select Menu/ Messages/Outbox to access the list of messages in this box. Press the left soft key for the following options: View, Resend, Forward, and Delete. About the operations, please refer to the related options in the "Inbox".

4.4 Draft

Select Menu/ Messages/Draft to access the list of messages in the draft box. Press the left soft key for the following options: View, Forward and Delete. About the operations, please refer to the related options in the "Inbox".

4.5 Reserved Messages

Select Menu/Messages/Reserved Messages to access reserved messages submenu with below options:

Create: Create a new reserved message. Different from common message, when you

create a reserved message, you can only input one recipient and you have to set the date and time for it.

Reserved Messages: When you create a new reserved message, it will be saved here.

Failed Messages: If reserved messages can't send successfully, they will be saved here.

When the reserved time is arriving, the phone will register to send the message.

4.6 Templates

Select Menu/ Messages/Templates to access the list of messages template. Press the up/down key to select the message you want.

Press the left soft key for the following options: Send, Edit and Add (Edit options will be visible for new templates).

It has 10 message templates in factory reset mode, and you may edit it optionally or add more templates accordingly.

4.7 Delete Messages

Select Menu/ Messages/Delete Messages to access delete function. You may delete the messages in Inbox, Outbox, Draft and Reserved Messages and also clear all the messages.

4.8 Settings

Select Menu/ Messages/Settings to access submenu with below options: Send Option, Priority, Delivery Reports, Save Location, Message Validity, Reserved Messages, Auto Delete, SMS on Call Reject and Input Mode.

Send option: Choose a default send mode when create and send a new message, such as Send and Save, Send Only or Save Only.

Priority: Choose the priority sequence such as Normal, Urgent, and Emergency.

Delivery Reports: You may activate/deactivate this function. The mobile phone will receive the information message notification that inform message sent or unsent.

Save Location: Choose a save position when receive a new message. You can choose phone or UIM card.

Message Validity: Choose the validity of message.

Reserved Messages: You can set reserved messages auto send or not when alert time out.

Auto delete: You can turn on the function. When the inbox is full, the newest message will instead the oldest message.

SMS on Call Reject: You can activate it, and edit the message when you reject others' call.

Input Mode: You can select the input mode such as Abc, En or none.

4.9 Memory Status

Select Menu/Messages/Memory Status to check SMS storage status in Phone (Inbox, Outbox, and Draft) and UIM Card.

4.10 Voice Mail

Select Menu/Messages/Voice Mail to enter the voice mail submenu, the following options are available: Voice Mail, Listen Voice Mail, Voice Mail Number and Voice SMS.

Voice Mail: Check how many voice messages are in the phone, press 1 to access to the voicemail, press 2 to clear voice mail.

Listen Voice Mail: Dial the voice mail number.

Voice Mail Number: Set the voice mail number.

Voice SMS: You can send the voice SMS to others.

5. Contacts

The phone can store up to 500 contacts. From the idle screen press the right soft key to display the list of contacts. The contact list can also be accessed through Menu/Contacts.

5.1 Contacts List

Select Menu/Contacts/Contacts List to access the contacts list. Select the left soft key for

the following options: View, Edit, Add New, Send Messages, Send Contacts, Copy/Move to UIM Card (for phone contacts), Copy/Move to Phone (for UIM card contacts), Delete, Send Voice SMS, Make Fun Call and Make Music Call.

View: Check the contact's personal information.

Edit: Edit the contact data.

Add New: Add a new contact.

Send Messages: Send a text message to the contact.

Send Contacts: Create a new text message and add the contact details to the content.

Copy to UIM Card/Copy to Phone: Copy a phone contact to UIM card /Copy a UIM card contact to phone.

Move to UIM Card/Move to Phone: Move a phone contact to UIM card /Move a UIM card contact to phone.

Delete: Delete the contact details in Contacts.

Send Voice SMS: Send Voice SMS to the contact.

Make Fun Call: Make fun call to the contact.

Make Music Call: Make Music call to the contact.

5.2 Search

Select Menu/Contacts/Search, input contact's name, you can find out all contacts which contain the name you input.

5.3 Add New

Select Menu/Contacts/Add New, to add a new contact to phone or UIM card. If the default save position is phone memory, you can enter Name, Mobile number, home number, office number, fax number, email address, address, website address, memo, group and ring tone.

5.4 Groups

Select Menu/Contacts/Groups to access groups list, Contacts are separated by the following groups: All, No Group, VIP, Family, Colleague, Friends, Schoolmates, and

Business. You can select any group to view all the contacts in that group; you can also rename the group.

5.5 Speed Dial

Select Menu/Contacts/Speed Dial to set keys 1 to 9 for speed dialing. If the number key has not been set, press the left soft key and select a phone number from Contacts. If the number key has been set, press the left soft key and the following options will be available: Add New, Delete.

Add New: You can add a number as speed dial number.

Delete: Delete the speed dial number.

5.6 Contacts Management

Select Menu/Contacts/Contacts Management to access contacts management option. You can see the following menu: Move Contacts, Copy Contacts, Delete Contacts, Save Location, View Mode, and Memory Status.

Move Contacts: Move all the phone contacts to UIM card or move all the UIM card contacts to phone.

Copy Contacts: Copy all the phone contacts to UIM card or copy all the UIM card contacts to phone.

Delete Contacts: Delete batch contacts in phone or delete batch contacts in UIM card or delete all the contacts in phone and UIM card. You need to enter the phone password if you select to delete all contacts.

Save Location: Make default position when add a new contact. You can select: Phone, UIM Card or Select When Save.

View Mode: Select one mode to view contacts list. If you select Phone, you can view only phone contacts when you open contacts list, and you can view only UIM card contacts if you select UIM Card. When you select Phone and UIM Card, you can view all the contacts every time you open contacts list.

Memory Status: View the number of entries stored and check the memory used up for the contact in the phone memory and UIM card.

6. Recent Calls

From the idle screen, press the send key to display the list of dialed numbers. Press the left and right keys to toggle between: Dialed Calls, Missed Calls and Received Calls. In the “Recent calls” menu you can also access the following options: Missed Calls, Received Calls, Dialed Calls, Call Time, Last Call and Delete All.

6.1 Missed Calls, Received Calls, Dialed Calls

Select Missed calls/ Received calls/ Dialed calls from the Recent Calls Menu to access the submenus of the various call logs. Use the left soft key to access the options such as View, Edit, Save, Send messages, Send contacts and Delete.

6.2 Call Time

Select Menu/Recent calls/Call time to display the time record of all received calls, dialed calls and all calls. The call time of all calls can be set to zero any time by resetting the timer.

6.3 Last Call

Select Recent Calls/Last Call you can find the details information for your last call.

6.4 Delete All

Select Recent Calls/Delete All you can clear all Missed Calls, Received Calls, Dialed calls and All Calls.

7. Camera

Your mobile phone has a 0.3 mega pixel camera that can take a photo up to 640*480 pixels resolution.

7.1 Camera

OK key to capture.

Press the Left soft key to set some parameters: environment, fun (fun frame), quality, size, shutter tone, self timer, color effect, storage and banding.

When a picture is captured, you can press the Left Soft Key to save the picture, and the Right Soft Key to delete the picture.

7.2 Photo Gallery

From this menu, you can view the images (in the memory card) and phone images. Then press Left Soft Key can view the option:

View: View the selected file.

Set as wallpaper: Set the selected photo as wallpaper.

Delete: Delete the selected file.

Delete all: Delete all files.

8. TATA Zone

8.1 T World

You will enter the T World to download the hottest ringtones& wallpapers (reminder: The download is paid per time).

8.2 TATA Apps Store

Through it you can see your applications and manage them. You can also download new applications such as games, music and pictures.

8.3 SMS Services

You can find the services which your UIM Card supports through it.

9. Music Player

Access this feature from the main menu by selecting Music Player. You will have full flexibility of managing music from your memory card.

Inserting the memory card:



You should add songs manually to the playlist, then press:

- OK Key to play and pause the song.
- UP/Down Key to increase volume and decrease volume.
- Left/Right key to previous and next song.

Press the Soft Left Key to the options:

Play/Pause: Play or Pause the music.

Playlist: 10 playlists can be shown in total. A default playlist with 50 songs in MAX from the music file in your memory card, and you can add another 9 playlists with MAX 50 songs in each playlist. After entering the playlist, you can press left soft key to View, Play, Create list, Add new, Rename and Delete.

Set as Tone: Set the selected song to be ringtone for incoming call and alarm.

Play Mode: Set the mode of playing songs in the playlists as order, random, cycle, single and repeat one.

Minimize: The music player is playing on background, meanwhile you can use other functions (SMS, Games, Add names, and etc.).

 The handset only can read the music in the music file, and music must be put into the music file.

 If the default playlist is not empty and you changed to another memory card, the default playlist can not update automatically, and you must to delete all the songs manually.

10. Opera

Once press Opera Mini icon, you can browse websites from bookmarks and also you can input your favorite websites and enjoy yourself.

11. Facebook

Once press Facebook icon, Facebook interface comes and you can login your facebook account and surf in the Facebook world.

12. Twitter

Once press Twitter icon, Twitter interface comes and you can login your Twitter account and surf in the Twitter world.

13. Entertainment

13.1 FM Radio

You can use the phone as the FM Radio only with earphone insertion. Earphone will act as an antenna for FM Radio function.

For FM Radio screen:

Left and Right keys: Accommodate the channel frequency by frequency, each time by 0.1MHz.

Up and Down navigation keys: Auto search to previous or next channel.

* / # key: To decrease or increase the volume of FM radio

Global Search: select Option/Global Search, all the channels will be automatically searched out, and generate a channel list for user reference.

Channel List: select Option/Channel List, access to Channel List submenu, press left soft key, you can play the channel, edit the exist channel, or delete the channel or delete all

channels.

Save: select Option/Save, you can save current channel into channel list.

Minimize: Select Option/Minimize to make FM screen invisible, meanwhile you can use other functions (SMS, Games, Add names, and etc.).

In the FM Radio screen, press the PWR key to close the FM Radio.

 The quality of FM radio depends on the coverage of the radio station in that particular area.

13.2 Games

The phone is embedded with three games: Tetris, Brick attack and Black Jack.

Please refer to the game instructions for details and operations.

14. Settings

14.1 Profiles

Select Menu/Profiles, you can enter the profile menu. Here 4 modes are provided: Normal, Silent, Meeting, and Outdoor.

Select left soft key to enter the operation submenu, you can see the following operations:

Activate: active the present mode.

Personalize: Set the volume or the ring tone of incoming call, SMS, Alarm, and the alert mode of incoming call, SMS, alarm, missed call and power on/off.

Restore Factory Setting: Choose the mode as it was initially in the factory settings.

14.2 Display

You can do some settings following your need. In order to customize your phone by set Wallpaper, Style, Backlight Time, Keypad Light Set.

Wallpaper: Choose the wallpaper and set it as main screen.

Style: Choose a scheme of display. There are 6 available styles for you to choose

Backlight Time: Set the backlight time - 10 sec, 30 sec, 50 sec, always on

Keypad Light Set: You can turn on/off the keypad light and set the start time and end time of using the keypad light.

14.3 Phone

Language: English only.

Time Format: Set 12-hour mode and 24-hour mode.

Date Format: Set date format and you may have three options: dd/mm/yy, mm/dd/yy, yy/mm/dd.

Auto Key Guard: You can turn on/off the key guard.

14.4 Call

Answer Mode: You may access to following options to answer incoming calls: Any Key, Send, and Headset Auto.

50 Sec Alert: You will hear the alert sound at the 50th second of every minute during the call if you activate this function.

Voice Privacy: activated this feature, voice service will be protected by encoding.

Auto Redial: The cell phone will redial automatically when the call has failed.

DTMF Tone Settings: You can set the DTMF Tone as Normal or Long.

Call Services: You may access to call forward and call waiting by choosing this item.

Call Forward (require the network support): You can activate the status of call forward to forward calls to another phone in the following conditions: Immediate, When Busy, No Reply / Not Reachable. You can also edit the feature code for them separately.

Call Waiting (require the network support): When it is activated, you can pick up or end the second calling when you are on the phone. And you can edit the feature code yourself.

International code: You can set the international code as automatic or manual input.

14.5 Gallery

Images: You can view the pictures in the memory card.

Phone Images: You can view the images in the phone.

Music: When phone with memory card insertion, you can view the music (maximum of

256 files can be shown by phone) in the music file in the memory card.

Mass Storage Service: While phone with memory card insertion, you can select Settings/Gallery/ Mass Storage Service to use memory card as an Udisk. You can see the UI of Mass Storage Running. You can transfer some music file (.mp3), picture file and other files from PC to Phone, and vice versa. You can disconnect the Mass Storage Service by phone (Press STOP Key).

14.6 Auto power on

You can activate or inactivate Auto power on function, and set the time when you want the phone power on automatically.

14.7 Auto power off

You can activate or inactivate Auto power off function, and set the time when you want the phone power off automatically.

14.8 Security

Select menu/settings/security, then enter the security submenu by inputting the phone code (default phone code: 0000). You can set entry code for your Messages, Contacts, and Recent Calls here.

Network Information: You can see the network information in it.

Phone Lock: including phone code activation and inactivation, and password resetting, if you activate the phone code, you have to enter the phone code every time when the cell phone powers on.

PIN Setting: including PIN code checking and PIN code resetting. When PIN code is activated, the PIN code need to be input when cell phone turns on. If you enter incorrect PIN code for 3 times, you should enter PUK code to reset PIN code. PIN code and PUK code are supplied by operator for UIM card.

Contacts Lock: setting protective code to Contacts, the default code is the same as phone code.

Recent Calls Lock: setting protective code for Recent Calls, the default code is the same as phone code.

Messages Lock: setting protective code for SMS service, the default code is the same as phone code.

Call Barrings: setting the restriction of dialed calls and received calls

Restore Factory Setting: chosen this item, the phone will be resumed to original settings when it came out from the factory. Please be aware that after selecting the restore factory setting, all the information of users will be deleted.

14.9 Phone Information

From this menu, you can find the Software Version, Hardware Version, PRL Version and MEID/ESN.

15. Tools

15.1 Notes

Select Menu /Tools/ Notes to display the note List. If your phone has no note, you can press the Left soft key to add a new note. If your phone has existed note, Press the Left soft key to View, Rename, Edit, Add New, Delete, and Delete All. Users can edit up to 30 notes.

15.2 Stopwatch

Press Left Soft key to start time keeping, or press pause function key to pause time keeping, or press continue function key to resume time keeping. You can press record function key to get the time recorded.

15.3 Alarm

Your mobile phone has a built-in alarm clock. You can edit up to 6 alarm clocks.

Edit: You may edit the Alarm clock status, time, and mode. The status is either on or off. If

you have selected 24-hour Time Format under Settings-Phone, then you can input 00:00 to 23:59; if you have selected 12-hour Time Format, you can choose AM or PM for time by pressing OK key, if the number you input is out of the range, the phone will not show. The available modes are: Once, Every day, Monday to Friday, Monday to Saturday and any day of workday and weekend.

On/Off: Start/Stop using the alarm clock.

Delete: Delete the alarm selected.

Delete All: Delete all alarms.

15.4 Schedule

There is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked with an alarm icon.

15.5 Calculator

Your phone can carry out simple operations, i.e. the [Four Arithmetic Operations]. Numbers are entered using number keys, "." can be used to input decimal points, the left soft key can be used to insert the plus and minus symbols, the right soft key is used to clear the entries, the left key to insert "-" and the right key to insert "÷", the upper key is used to insert "+" and the down key to insert "×". Press the OK key to display the result of the calculation.

15.6 World Time

This function allows you to find out the time in different cities around the world.

15.7 Recorder

You can record sounds and listen to the existing record files.

FAQ

If an anomaly occurs when you are using your mobile phone, please refer to the following table. If the problem remains unsolved, please contact the phone vendor.

FAQ	Item to be checked
-----	--------------------

FAQ	Item to be checked
The telephone does not charge properly	Make sure that the charger is correctly connected to the phone and the power socket. Make sure you are using a charger specifically designed for this phone.
The phone does not switch on	Check the battery charge level. Make sure the battery is properly installed. Press and hold the PWR key until the screen comes on.
The phone card has been inserted but the card information cannot be read	Make sure the UIM card is properly inserted. Make sure your UIM card is valid. Make sure the card's contact face is not dirty, if it is, wipe it with a clean cloth.
The phone displays "Enter PUK number"	Contact the network operator for a PUK number. Unlock the phone using the PUK number.
Unable to dial a number	Make sure you have dialed a valid phone number. Check if your phone is connected to the network.
Poor sound quality	Check if the reception signal is strong enough. If you are inside a building, rotate the phone or move close to a window.
The other party cannot hear you during a call	Make sure the mouthpiece is not blocked.
The receiver volume is low	Check if the receiver volume is set to maximum.
The phone signal is poor or switches off frequently	Make sure the phone antenna is not damaged. Check the phone signal strength. If there is no signal, use your phone in a location where the signal is strong.

FAQ	Item to be checked
The phone displays “out of network” or “network failure”.	Check if you are in an area where the signal is weak (in a tunnel or surrounded by building). Move to another location and try again. Make sure you are not trying to use a service that you haven't subscribed to. If you require this service, contact the network for details.
When you cannot connect to the network normally	(1) The network provider does not provide this service or you have not subscribed to this service. Please contact your provider for details on the subscription and use of these services. (2) Incorrect setting. Please set the correct parameters.

Safety and use

Please read carefully and observe the following regulations to avoid damaging your telephone or using it against the law.

Electronic devices/Health care facilities.

Turn off your phone when you are near high-precision electronic devices in use to avoid causing malfunction or interfering with their operation (fire alarms, automatic doors and automatic control equipment).

Turn off your phone in hospitals or places where the use of mobile phones is restricted. Mobile phones affect the normal operation of electronic devices and medical instruments, such as pacemakers, hearing aids and other electronic medical devices.

Pacemaker manufacturers recommend that mobile phones are kept at least 15 cm away from pacemakers to prevent the phone interference. When using the phone, you should hold it against the ear on the opposite side to the device, to reduce interference.

Mobile phones should be forbidden inside an operating theatre, Intensive Care Unit (ICU) or Cardiac Care Unit (CCU).

Pay attention to the settings of the sound volume and the vibration to avoid disturbing the patients.

Flammable or explosive areas

Turn off your phone near flammable or explosive areas. Do not install/remove or charge the battery or use the phone in these areas to prevent any explosion or fire. Flammable and explosive areas include: chemical plants, facilities with chemical substances or particles in the air (grains, dust and metal powder), petrol stations and fuel depots, fuel storage areas (for example, under a ship's deck), areas with explosion warning signs, areas with "turn off two-way radio equipment" signs and places where you are usually recommended to switch off car engines.

Safety of use in a vehicle

Please observe the relevant local or national regulations related to the use of mobile phones in a vehicle. Please refrain from using the phone while driving. If you are driving and need to use the phone in an emergency, use a hands-free device (optional purchase) to be safe. Otherwise, park the car before using the phone.

Do not place your phone on the dashboard or within an airbag deployment area to avoid causing injury to passengers in the car when the bag inflates or bursts.

Using the phone on an airplane is strictly forbidden. Turn off your phone before you board an aircraft. It is recommended to remove the battery to avoid the phone being turned on accidentally.

Storing environment

To avoid demagnetizing problem, keep the phone away from magnetic materials, such as magnetic discs and credit cards.

Ensure that the phone does not come into contact with liquids. If it does, turn it off immediately, remove the battery and quickly contact the vendor.

Do not store the phone, battery or charger in an environment with a strong magnetic field,

such as an electromagnetic pot or a microwave oven, to avoid causing the phone to malfunction, catch fire or explode.

Do not subject the phone, battery or charger to heavy impact or vibration to avoid battery leakage, phone malfunction, overheating, fire or explosion

Do not place sharp metallic items such as needles, near the receiver because the receiver will attract them and you may be injured when using the phone.

Do not place the phone in the back pocket of your trousers or skirt to avoid damaging it when you sit down

Child health

Keep the phone, battery and charger out of the reach of children. Do not let children use the phone, battery or charger without supervision.

Do not let a child put a battery in his/her mouth to avoid electrolyte poisoning.

Keep children away from small phone accessories to prevent suffocation or blocking of the esophagus as a result of swallowing.

Operating environment

This phone is equipped with a built-in antenna. When the phone is on, unless necessary, do not touch the antenna area (top of the phone) for optimal communication quality.

Do not use your phone while it is being charged during thunderstorms, or use it outdoors to avoid being struck by lightning or other injury.

Do not use your mobile phone in dusty, wet, dirty places or places near magnetic fields to prevent malfunction of its internal circuits. Keep the phone as dry as possible. Keep the phone, battery and charger away from water and water vapor and do not clean the phone with a wet cloth to avoid short circuits, malfunction due to corrosion and electric shocks.

Do not turn on or off the phone against your ear to avoid your ears and body from being impaired.

To comply with regulations on radio frequency exposure, keep the antenna at least one inch (1.5 cm) away from your body when holding your phone or using its data functions.

If you feel unwell (epileptic seizures or blackouts) after playing the games with your phone

for a long period of time, please seek medical assistance immediately.

Move your mobile phone away from your ear while using the hands-free mode, because the amplified volume might cause hearing damage.

Make sure you switched off your phone in areas where mobile phone use is prohibited!

Cleaning and maintenance

Switch off the phone before cleaning and maintenance. The charger should be unplugged from the power socket and the phone and charger disconnected to prevent any electric shock or short circuiting of the battery or charger.

Do not wipe the phone or charger using chemical substance (alcohol benzene), chemical agents or abrasive cleaning agents to avoid damaging its parts or causing a malfunction.

You may clean with a slightly damp anti-static soft cloth.

Do not scrape or alter the phone case as paint substances may cause an allergic reaction.

If such a reaction occurs, cease using the phone immediately and seek medical help.

Wipe dust off the power plug and keep it dry to avoid risk of fire

If the phone or accessories do not work properly, contact your local vendor

Do not dismantle the phone or its accessories yourself.

Protecting the environment

Please observe the local regulations on phone packaging, battery and used phone disposal and bring them to the collection point for proper recycling. Do not dispose of used phones or batteries in a household rubbish bin.

Please take your used, unwanted lithium batteries to a designated place. Do not dispose of them in a rubbish bin.



Emergency call

In an emergency situation, if the phone is on and you are within the network range, it can be used to make an emergency call. However, emergency call numbers may not be reachable on all networks; you should never rely on your mobile phone for emergency

calls.

Using the battery/charger

Only use batteries and chargers approved by the manufacturer. Do not use batteries or chargers that are not compatible with your model to avoid any explosion.

Do not throw a battery in a fire as it might catch fire or explode. Do not cause a short circuit to the charger as it might result in malfunction, smoke or fire.

Do not place conductors like metals, keys or jewels, against the battery poles or allow them to touch the ends of the battery to avoid short circuiting the battery and causing injury (burns, for example) as a result of battery overheating

If the power cable is damaged (wires exposed or broken) or the connection to the plug is loose, do not use it to avoid electric shock, short-circuit of the charger or a fire.

Do not dismantle the battery or weld the two poles of the battery to prevent the battery from leaking, overheating, catching fire or exploding.

Keep the charger away from any container of water or other liquids. Infiltration of liquid may cause electric leakage or other malfunction to the charger.

If the battery leaks, emits smoke or a strange odour, cease use immediately and move it far away from naked flames or people to avoid a fire or injury from explosion.

Do not charge the battery in a dusty or damp environment and keep the cable away from heated objects.

The battery is not fully charged when leaving the factory. Therefore, you should charge the battery for two hours before use. Before charging, make sure the charge plug is correctly inserted in the power socket. If it is incorrectly inserted, electric shock might occur and the phone or battery may catch fire or explode. When charging is completed, pull out the charger plug from the power socket, and do not pull the cable.

If the liquid in the battery splashes into your eyes, do not rub the eyes to avoid damaging your vision, rinse the eyes immediately in clean water and go to a hospital for assistance.

Do not place heavy objects on the charger cable. Do not damage, twist or pull the cable to avoid causing electric shock or fire.

When the battery cannot be installed correctly in the phone, do not press down on it heavily to prevent it from leaking or exploding. Do not remove the battery when the phone

is on.

If the battery is distorted, has changed color or is unusually hot when charging or when it is stored, remove immediately the battery and stop using it or it may leak, become overheated, explode or catch fire.

If a battery is not used for a long period of time after charging, store it at room temperature. Do not touch the power socket, power cable or charger with wet hands to avoid electric shock.

If water or other liquid enters the charger, immediately disconnect the charger plug from the power socket to prevent it from overheating, catching a fire or malfunction.

Warning: The manufacturer disclaims any liability for damage, which may result as a consequence of improper use of this mobile phone or use contrary to the instructions contained in this manual.

ALCATEL is trademark of Alcatel-Lucent
and is used under license by
TCT Mobile Limited.

All rights reserved © Copyright 2010 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or
technical specification without Prior notice.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

The FCC limit is 1.6 W/kg. This phone's actual value: Head 0.849 W/Kg; Body 0.738W/Kg (the test distance of body is 1.5cm) .

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5cm from your body when the phone is switched on.