

Onetouch 710C

User Manual

CONTENTS

 
ABOUT YOUR PHONE	4
BEGIN TO USE	6
UIM CARD AND BATTERY	6
POWER ON AND OFF	6
IDLE STATUS	8
LIST INTERFACE	9
INPUT MODE	10
FUNCTION INTRODUCTION	11
CALL	11
RECENT CALLS	13
CONTACTS	14
MESSAGE	15
MMS	19
SETTINGS	20
BROWSER	21

DISPLAY	21
PROFILES	21
CAMERA	22
MULTIMEDIA PLAYER	23
JAVA	24
MY STUFF	24
CUSTOMER SERVICE	24
SCHEDULE	25
ALARM	25
CALCULATOR	25
NOTES	25
E-BOOK	25
STOPWATCH	25
WORLD TIME	25
UTK	26
RECORDER	26
RSS SUBSCRIPTION	26
BLUTETOOTH	26


SAFETY AND USE..... 31

ABOUT YOUR PHONE

Front View

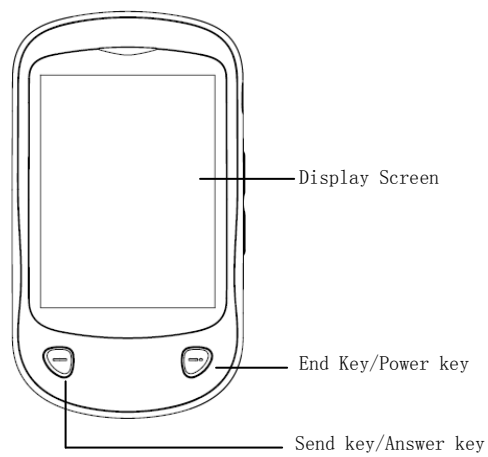

Silde View

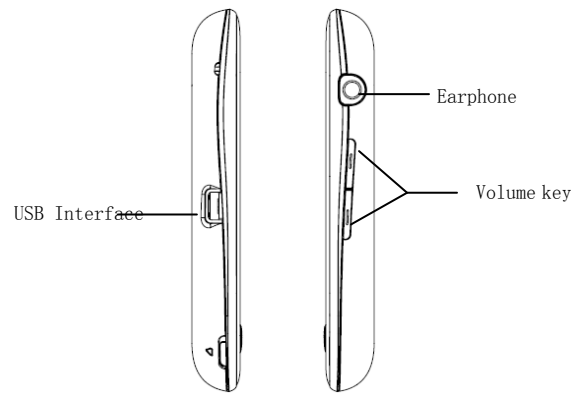

Begin to Use

UIMCard and battery

UIM card contains the information of the network services. Please consult with your UIM card provider, network service provider or network operator to obtain and use UIM-based information.

Insert UIM Card and Battery

Please power off the phone and ensure the adapter disconnected with the phone before removing the battery. Insert the UIM card into the socket with golden wafer downwards and then insert battery.

Recharge Battery

When the power is lower than the threshold value, the phone will be powered off automatically. Please recharge the battery. It takes about 3.5 hours to charge the battery.

Power On and Off Your Phone

Power on

Long press [End Key] until phone is on.

Input the phone code/PIN if needed. The initial code of the phone is 0000, PIN is provided by the network operator. If you input wrong PIN for 3 times continually, your UIM card will be locked. To unlock it, you need to input PUK, which are provided by the network supplier. If you continually and input wrong PUK for 10 times, your UIM card will be discarded and cannot use anymore.

 
 After the phone on, it will identify the UIM card automatically, and set up the SMS and network. If the phone does not configure correctly, please consult the service provider. Even the phone is powered on without UIM card inserted, emergency call is supported.

Power off

Long press [End Key] until phone is off when in the on mode.

Idle status



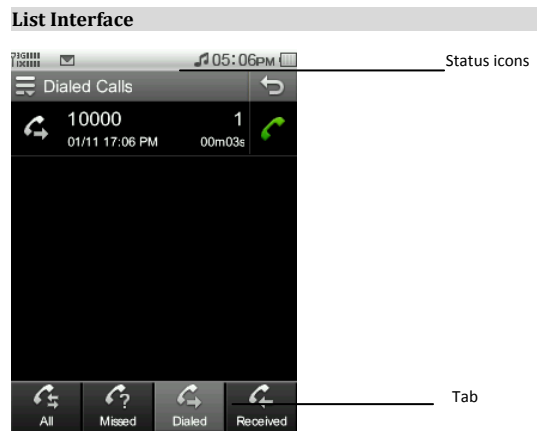

Status icons

Signal status, new message icon, incoming call status, profile status, current time, battery status, and the external memory availability status and so on.

widgets

Press the idle interface can be a blank area of the screen pop-up menu, the menu can be added by the widget, such as time,

operator logo, Music player and so on.

To remove a widget on the widget press, window will appear at the bottom of the trash, the components onto the trash can on top.

Shortcut icons

In the main menu, long press on an icon, the icon can be added to the standby screen as a shortcut menu; or in the standby screen press the screen to pop-up menu, shortcut menu by adding the option into a standby function as a shortcut menu the interface.

Menu Button

Part of the interface, click the title bar to pop-up menu, the menu on the modules can operate accordingly

Note: Press the standby interface widget or a shortcut menu or menu can drag the component to change its placement can also be directly dragged into the trash to delete it.

Input Method

Phone supports a virtual keyboard input common mode, the virtual full keyboard and handwriting input mode input mode,

enter the English and special symbols. In edit mode, you can press  at the bottom left corner to switch the input mode.

Normal Keypad Input

Edit mode, press the  Key to delete the character before the cursor, press the button to delete all the text edit box. By  Key to switch input method, English input method, press the switch case, according to  Line operations can be changed, if the need to enter symbols, press the  Key to bring up the list of symbols. After entering press  Key keyboard away.

Function Introduction

Call

Dial out

1. In idle mode, enter the main menu, click [Dial] to bring up the dial pad to dial.
2. In standby mode, press [call button], to bring up the call record, press the call after the call log icon to list the corresponding record of the call.
3. the main menu to enter the phone book, pressing the phone icon in the call record can be the right call.
4. To end the call or to to cancel the call, press [End key].

5 After a pre-set shortcuts in the dial pad, press the number, then press the [call button] to set the key contact for the call.

6. This mobile phone supports an emergency call. When the phone is within range of 3G or CDMA networks, regardless of whether the UIM card is inserted or not, under normal circumstances, you can make emergency calls. You only need to enter the emergency number, press the [call button] to initiate an emergency call.

7. Some countries or regions may set up other emergency numbers, so network operators may be stored in other local emergency numbers in the UIM card

Enter the international number or call in an extension: You can press [*] key twice to enter the P; continuous Press [#] key to enter the T; enter the first number in a row twice when [0] to enter

Answer the call

When a call comes in, press [Answer Key] to answer the call. When the call is not answered, the phone will display in the status bar a missed call icon. The status bar can be dragged out of a notification bar, notification bar, record the number of missed calls in detail.

Multi-call

Require network support conference call, please book the network services. Information, please consult your network service provider.

Call during Calling

Operation path: Option> Keypad to make a new call during calling.

Answer During Calling

To answer the new incoming call during calling, select “Receive” and you will directly enter call meeting.

Call Waiting

Setting path: Main menu > Setting > Call > Call waiting.

Once activated it puts other callers on hold while you are on a call & allows you to switch from current call to the call on hold.

 The function needs the support from the local network. Please consult your network operator.

Call Forward

Setting path: Menu > Settings > Call > Call Forward

With the Call Forward function, you may divert incoming calls to another phone, but not any extensions of a fixed telephone.

The function needs the support from the local network. Please consult your network operator.

Recent Calls

When enter Recent Calls, you can see four tab pages: all calls, missed calls, dialed calls, and received calls. You can save number to contacts, update existing contacts, send SMS or MMS, send V-card, edit before call or view call time through the option menu when you select one item or multiple mark items through Mark/Unmark in option menu

Contacts

Entering the phone book you can see: contacts, phone, UIM cards, group, four tabs. [Contact] listed all contacts in the phone and UIM card; [phone] sets out the phone contacts; [UIM card] lists the contacts in the UIM card; [Group] lists phone groups, you can view a group of contacts

Contact list

In the contacts, phone, UIM card tab, click the title bar pop-up menu to do the following:

Create contact

1. In the [Contact] tab, by choosing the new contacts, it will be stored in the UIM card, or stored in the phone.
2. in the UIM card can store contact name and a phone number
3. A contact name can be stored in the phone, and also phone number, a fax number, Email address, address, website, birthday, and company name, notes; you can also set up the group and set individual ringtones. Click the contact name on the right picture icon, you can set Caller ID
4. In the [phone] tab, select the contacts can be added directly to your phone
5. .In the [UIM card] tab, select the contact can be added directly to the UIM card.

Mark/Unmark

You can choose to enter the state by the number of options

1. Contacts can by sent by SMS or MMS t.
2. Contacts can be removed or selected

3. In the [phone] tab on the batch operation, you can copy the selected contact or transferred to the UIM card
4. In the [phone] tab on the batch operation, you can copy the selected contact or transferred to the UIM card.

Delete All

Select this to the corresponding tab in the contact record deleted.

Speed Dial

Enter the speed dial setup interface, select the corresponding number to enter the phone book, selected records can be set to the corresponding speed dial number.

Memory Status

Select this to enter the storage status view interface, where you can see the phone and UIM card information on the number of contacts

Groups

[Groups] tab on the phone can be managed in the group, the group can send short message selected, click on the selected groups can enter the list of group members to view, edit and other operations.

Message**Receive and View Message**

When the machine receives the information, the phone will ring sound alert or vibration, the screen will display information icon.

When new information is displayed on the screen when prompted, press the [View] button to view the information.

Create SMS

1. Path: Main Menu> SMS> Create SMS
2. Receiver's number can be directly entered in the To box, or press the [phone] icon to enter all the records from the phone in this list, select multiple contacts to add a recipient, multiple recipients by a semicolon to separate.
3. In the text edit box, enter the message, when completing the text, press [Send] button to send.

Inbox

- 1、 Received messages are stored in Inbox
- 2、 in the [SMS] tab, press the Inbox pop-up menu, this menu to view, delete all text messages in the Inbox.
- 3、 Click the Inbox go to the Inbox message list interface immediately
- 4、 Press the reply icon directly to reply the selected information
- 5、 Press a piece of information will display the pop-up menu, then you can reply, forward, delete, copy or transfer the information to the phone or UIM card.
- 6、 in the Inbox list, press the title bar to pop-up menu, the menu can be carried out by batch operation, all the deleted; batch operations, you can bulk delete the selected message.

Outbox

Messages which are sending or failed to send are stored in sendbox.

1. Press the Outbox to pop-up menu, this menu you can view, delete all outbox SMS.
2. Click the Outbox Outbox immediately into the list of interfaces. According to information the Send button to send the message again.
3. Press a piece of information may pop-up menu, you can perform re-issued through the menu, delete.
4. in the Outbox list, press the title bar to pop-up menu, the menu can be carried out by batch operation, all the deleted; selection of bulk quantities of information can be deleted

Sendbox

Successfully sent messages are stored in Outbox

1. Press and sent to the pop-up menu, this menu to view, delete all the information in the sendbox
2. Click the Sent box can be sent immediately into the list box interface.
3. Press the forward button to forward the message
4. Press and select the information to pop-up menu, forward through the menu and delete
5. In the list box has been sent by the interface title bar popup menu, this menu can be batch operation, all the deleted; batch operations, you can bulk delete the selected message.

Draft

The messages which are saved or given up by user (in editing process by pressing the hold button) are stored in Draft.

1. Press the Draft to pop-up menu, you can view, and delete all SMS in Draft
2. Click the Draft, you can enter into Draft list immediately
3. Press the delete button to delete the message
4. Press a piece of message you can pop-up menu, you can edit or delete the message through the menu.
5. In the Inbox list, press the title bar to pop-up menu, the menu can be carried out by batch operation, all the deleted; selection of bulk quantities of information can be deleted

Templates

Fixed texts that can be invoked when editing text message as templates for quick editing text are stored in Templates

1. Click the Templates to enter the templates list interface
2. Click the Send button, you can send the text containing the template
3. Press a piece of template you can pop-up menu, you can edit or delete the message through the menu
4. Press a piece of template you can pop-up menu, you can edit or view the template.
5. In the Templates list interface, you can add new templates or delete all the templates

Settings

In settings the following parameters can be set: storage location, period of validity, delivery report, priority, delivery mode, automatically delete and call back number.

Memory Status

To view capacity and percentage used of mobile phone and UIM card in. Memory status

Reserved Message

Regularly send text messages can be created.

Voice Mail

Phone support to view the number of voice messages and function of voice calls, and you can set the voice mail number.

(This function need to be supported by operator network, please consult your local operator)

MMS**Create and Send MMS**

1. Menu > Messages > MMS > Create Message;
2. Edit content, you can edit text, or insert picture, video, sound or any file as attachment;
3. Add recipient, you can add from contacts, or enter number or email directly;
4. Open option menu and select send item to send.

Read MMS

When receive new MMS, you can select 'Read' to read it, or open MMS inbox, and then select the new message to read.

Settings

Common settings for MMS, Including receiving settings, sending settings, quick text, signature, display settings, reply settings, auto-delete, and so on.

 If you cannot send or receive MMS successfully, please check the network settings for MMS (Main menu > Settings > Settings > Network > MMS Setting). If you still can not send successfully after reset default MMS settings, you can ask for right parameters from network service center. For sending to email it depends on the mail server / gateway side, may cause lost attachment or information

Settings

You can change the settings for the phone, call, data, network and security in each different tab pages on the setting menu.

Phone settings

From this menu you can change the Language, Airplane Mode Lock Screen, Auto Answer, Voice Privacy,DTMF Tone Touch Vibration, USB Data Cable, Calibration

Call settings

From this menu you can change the Answer Type, Auto Answer, Minute Alert, Voice Privacy, DTMF Tone, Call Waiting and Call Forward.

 Some feature may depend on your network provider support.

Network settings

From here you can change the Browser Setting, MMS Setting

Security Settings

This menu contains the settings for Phone Lock, Change Password, PIN Lock, Change PIN, Contacts Lock, Messages Lock,

Call Logs Lock, File Explorer Lock, Schedule Lock, Delete All Entries, and Factory Data Reset.

 The default phone code is 0000.

Browser

You can open web page in the browser, the browser support WAP pages and WWW pages.

 Not all the page can be displayed or loaded properly by the browser due to its limitation, for better and faster browsing experience using this browser please use the mobile format, in example **www.detik.com** type it to **m.detik.com** (not all web pages have the mobile format).

Display

Into the display settings can be seen [General Settings] and [Wallpaper Settings] tab.

[General Settings] tab on the phone's backlight can be time, screen brightness, date format and time format settings.

[Wallpaper Settings] tab and set out the mobile phone memory card pictures (via the title bar pop-up menu to switch to the storage media), press the button after the image files can be directly set the picture as wallpaper, also available in image file, enter the picture preview screen set the picture as wallpaper.

Profiles

The phone supports four default profiles mode, normal, silent, meeting, outdoor, and two empty profiles, my profile 1 and my

profile 2. You can edit and personalized each profile settings, ring tone, volume, call alert mode, SMS tone, etc

Camera

Press the [camera] button to take pictures, taking photographs after the default save photos, the photos can also be removed

Camera of Setting

In the preview screen press the "Settings" button on the camera be set as follows: camera model, the environment mode, color mode, storage location, restore settings, brightness adjustment, picture quality, picture resolution, flicker, self-timer and shutter sounds. Setup is complete press "Back" button to exit the setting screen.

In photo after photo preview screen may be "picture folder" button to enter the File Manager, to view photos.

When a resolution of 320 * 240, when, in the preview screen press the "Frame" button to set the state to enter the frame, press the "Previous" "Next" button on the frame for selection, selection is complete press the "return" key to exit the set state.

Video

Phone supports video capabilities, the camera mode to video function, press [Camera] button to start recording, the file will be saved as MP4 video .

Video of setting

Camera mode the following settings: camera model, environment model, color mode, storage location, to restore settings. Setup is complete press "Back" button to exit the setting screen.

After the camera can "video folder" button to enter the File Manager to view the video.

Multimedia Player

Multimedia player allows you to play audio files and video files. The media files in the format of amr, mp3, wav, mid, mp4, and 3gp may be play correctly. In SD card, your audio or music files should be saved in songs folder, and video files should be saved in videos folder.

Player

Open the media player can enter the player interface, the player control buttons below left to right are: switch on one, rewind, play (or pause), stop, fast forward, switch to the next. By clicking on the Play mode button can be set to play single player mode, the order of play, loop, etc.

Playlist

In the player interface, click the title bar to enter the playlist interface, which includes four tabs: [All] [Artist] [Album] [Favorites]. [All] tab lists the phone and memory card support

types of audio and video files; [Artist] tab file for classification according to the artist; [album] tab in the document in accordance with the classification album; [Favorite] tab to place the user's favorite audio or video list, the list of files can be added from other tabs.

Java

You can view the Java Manager on the phone or memory card, Java applications.

My stuff

You can browse the folders and files in phone memory or in SD card. You can copy or cut files to other place or delete them if you want. You can open the files directly if the supported by the phone

Customer Service

Click on customer service, enter the customer service list, you can select the Palm operating room, business inquiries, unsubscribe, roaming list update, the customer service hotline, international roaming customer service, phone service guide and other operations.

Schedule

Schedule helps to remind you to do the planned things. You can add up to 127 entries of new events in schedule.

Alarm

Up to 6 alarms profile can be edited.

Calculator

You can perform simple arithmetic.

Notes

You can save short memo information in Notes.

e-Book

You can read the e-Book which is txt format. The phone will load all books in e-Book folder in phone memory and in SD card automatically.

 *Not all e-Book formats can be supported by the phone*

Stopwatch

Stopwatch can be use to as a timer to count the timing for sports or any other purposes.

World Time

World time allows you to view current time of different cities under different time zones referring to your local time zone.

UTK

Some UIM cards provide value-added services. You can find them in UTK if the UIM card supports UTK function.



function may be not available for some UIM cards.

Recorder

Recorder feature, the default recording time is 3 minutes, and you can change the record time to 60 minutes if you record longer (also depends on the memory space). The recorder file can be set as ring tone if you like it. You can use recorder function when you are calling or listening to FM radio.

RSS Subscription

With this function, you can obtain your interested news from preset website.

Add RSS Channel

Operation path: Main menu > Entertainment > RSS subscription > Option>Add.

Use RSS Reader

Operation path: Main menu > Entertainment > RSS subscription.

Bluetooth

Bluetooth can be used for short-range communication. You can connect to other devices and transport files with them by Bluetooth.

 The Bluetooth cannot support the modem dial-up function for this phone.

PC-Suite and Udisk

PC-Suite

With PC-Suite, the phone can be used as virtual modem to use CDMA 1X and 3G (EVDO) network, and also can operate and manage the SMS and Contacts.

The following steps shall be correctly performed when using at the first time.

For different operation systems, there may be two installing modes:

- 1.If your system supports automatic installation, the installing guide will start automatically in your PC; you can install the software on your PC step by step from the guide.
- 2.If your system does not support automatic installation, a virtual modem driver will be appeared on your PC, open and run a file named "Modem_installation.exe" and install the software step by step from the guide upon the installation guide appeared.

After installing successfully, the program will run automatically each time the device inserted. If you activate PIN, please input the correct PIN in your phone, otherwise, the program shall not be used normally.

 For details and help, please refer to "Help" in "Settings" of the PC-Suit.

Udisk

Your T card in the phone can be used as Udisk after connected to PC by data connection line and select "USB Disk".

 The function of Udisk can be used only after the T card is inserted

FAQ

If an anomaly occurs when you are using your mobile phone, please refer to the following table. If the problem remains unsolved, please contact the phone costumer service.

FAQ	Item to be checked
The telephone does not charge properly	Make sure that the charger is correctly connected to the phone and the power socket. Make sure you are using a charger specifically designed for this phone.
The phone does not switch on	Check the battery charge level. Make sure the battery is properly installed and the battery is not empty. Press and hold the ON key until the screen comes on.
Unable to dial a number	Make sure you have dialled a valid phone number. Check if your phone is connected to the network.
Poor sound quality	Check if the reception signal is strong enough. If you are inside a building, move closer to a window or non obstacle places.

FAQ	Item to be checked
The other party cannot hear you during a call	Make sure the mouthpiece is not blocked.
The receiver volume is low	Check if the receiver volume is set to a higher level.
The phone signal is poor or switches off frequently	Make sure the phone antenna is not damaged. Check the phone signal strength. If there is no signal, use your phone in a location where the signal is strong.
The phone displays “out of network” or “network failure”.	Check if you are in an area where the signal is weak (in a tunnel or surrounded by building). Move to another location and try again. Make sure you are not trying to use a service that you haven’t subscribed to. If you require this service, contact the network for details.
When you cannot connect to the network normally	(1) The network provider does not provide this service or you have not subscribed to this service. Please contact your provider for details on the subscription and use of these services. (2) Incorrect setting. Please set the correct parameters

Safety and use

Please read carefully and observe the following regulations to avoid damaging your telephone or using it against the law.
Electronic devices/Health care facilities.

Turn off your phone when you are near high-precision electronic devices in use to avoid causing malfunction or interfering with their operation (fire alarms, automatic doors and automatic control equipment).

Turn off your phone in hospitals or places where the use of mobile phones is restricted. Mobile phones affect the normal operation of electronic devices and medical instruments, such as pacemakers, hearing aids and other electronic medical devices. Pacemaker manufacturers recommend that mobile phones are kept at least 1.5 cm away from pacemakers to prevent the phone interference. When using the phone, you should hold it against the ear on the opposite side to the device, to reduce interference.

Mobile phones should be forbidden inside an operating theatre, Intensive Care Unit (ICU) or Cardiac Care Unit (CCU).

Pay attention to the settings of the sound volume and the vibration to avoid disturbing the patients.

Flammable or explosive areas

Turn off your phone near flammable or explosive areas. Do not install/remove or charge the battery or use the phone in these

areas to prevent any explosion or fire. Flammable and explosive areas include: chemical plants, facilities with chemical substances or particles in the air (grains, dust and metal powder), petrol stations and fuel depots, fuel storage areas (for example, under a ship's deck), areas with explosion warning signs, areas with "turn off two-way radio equipment" signs and places where you are usually recommended to switch off car engines.

Safety of use in a vehicle

Please observe the relevant local or national regulations related to the use of mobile phones in a vehicle. Please refrain from using the phone while driving. If you are driving and need to use the phone in an emergency, use a hands-free device (optional purchase) to be safe. Otherwise, park the car before using the phone.

Do not place your phone on the dashboard or within an airbag deployment area to avoid causing injury to passengers in the car when the bag inflates or bursts.

Using the phone on an airplane is strictly forbidden. Turn off your phone before you board an aircraft. It is recommended to remove the battery to avoid the phone being turned on accidentally.

Storing environment

To avoid demagnetizing problem, keep the phone away from magnetic materials, such as magnetic discs and credit cards. Ensure that the phone does not come into contact with liquids. If it does, turn it off immediately, remove the battery and quickly contact the vendor.

Do not store the phone, battery or charger in an environment with a strong magnetic field, such as an electromagnetic pot or a microwave oven, to avoid causing the phone to malfunction, catch fire or explode.

Do not subject the phone, battery or charger to heavy impact or vibration to avoid battery leakage, phone malfunction, overheating, fire or explosion

Do not place sharp metallic items such as needles, near the receiver because the receiver will attract them and you may be injured when using the phone.

Do not place the phone in the back pocket of your trousers or skirt to avoid damaging it when you sit down

Child health

Keep the phone, battery and charger out of the reach of children.

Do not let children use the phone, battery or charger without supervision.

Do not let a child put a battery in his/her mouth to avoid electrolyte poisoning.

Keep children away from small phone accessories to prevent suffocation or blocking of the oesophagus as a result of swallowing.

Operating environment

This phone is equipped with a built-in antenna. When the phone is on, unless necessary, do not touch the antenna area (top of the phone) for optimal communication quality.

Do not use your phone while it is being charged during thunderstorms, or use it outdoors to avoid being struck by lightning or other injury.

Do not use your mobile phone in dusty, wet, dirty places or places near magnetic fields to prevent malfunction of its internal circuits. Keep the phone as dry as possible. Keep the phone, battery and charger away from water and water vapour and do not clean the phone with a wet cloth to avoid short circuits, malfunction due to corrosion and electric shocks.

Do not turn in or off the phone against your ear to avoid your ears and body from being impaired.

To comply with regulations on radio frequency exposure, keep the antenna at least one inch (1.5 cm) away from your body when holding your phone or using its data functions.

If you feel unwell (epileptic seizures or blackouts) after playing the games with your phone for a long period of time, please seek medical assistance immediately.

Move your mobile phone away from your ear while using the hands-free mode, because the amplified volume might cause hearing damage.

Make sure you switched off your phone in areas where mobile phone use is prohibited!

Cleaning and maintenance

Switch off the phone before cleaning and maintenance. The charger should be unplugged from the power socket and the phone and charger disconnected to prevent any electric shock or short circuiting of the battery or charger.

Do not wipe the phone or charger using chemical substance (alcohol benzene), chemical agents or abrasive cleaning agents to avoid damaging its parts or causing a malfunction. You may clean with a slightly damp anti-static soft cloth.

Do not scrape or alter the phone case as paint substances may cause an allergic reaction. If such a reaction occurs, cease using the phone immediately and seek medical help.

Wipe dust off the power plug and keep it dry to avoid risk of fire

If the phone or accessories do not work properly, contact your local vendor

Do not dismantle the phone or its accessories yourself.

Protecting the environment

Please observe the local regulations on phone packaging, battery and used phone disposal and bring them to the collection point for proper recycling. Do not dispose of used phones or batteries in a household rubbish bin.

Please take your used, unwanted lithium batteries to a designated place. Do not dispose of them in a rubbish bin.



Emergency call

In an emergency situation, if the phone is on and you are within the network range, it can be used to make an emergency call. However, emergency call numbers may not be reachable on all networks; you should never rely on your mobile phone for emergency calls.

Using the battery/charger

Only use batteries and chargers approved by the manufacturer. Do not use batteries or chargers that are not compatible with your model to avoid any explosion.

Do not throw a battery in a fire as it might catch fire or explode.

Do not cause a short circuit to the charger as it might result in malfunction, smoke or fire.

Do not place conductors like metals, keys or jewels, against the battery poles or allow them to touch the ends of the battery to avoid short circuiting the battery and causing injury (burns, for example) as a result of battery overheating

If the power cable is damaged (wires exposed or broken) or the connection to the plug is loose, do not use it to avoid electric shock, short-circuit of the charger or a fire.

Do not dismantle the battery or weld the two poles of the battery to prevent the battery from leaking, overheating, catching fire or exploding.

Keep the charger away from any container of water or other liquids. Infiltration of liquid may cause electric leakage or other malfunction to the charger.

If the battery leaks, emits smoke or a strange odour, cease use immediately and move it far away from naked flames or people to avoid a fire or injury from explosion.

Do not charge the battery in a dusty or damp environment and keep the cable away from heated objects.

The battery is not fully charged when leaving the factory.

Therefore, you should charge the battery for two hours before use. Before charging, make sure the charge plug is correctly inserted in the power socket. If it is incorrectly inserted, electric shock might occur and the phone or battery may catch fire or explode. When charging is completed, pull out the charger plug from the power socket, and do not pull the cable.

If the liquid in the battery splashes into your eyes, do not rub the eyes to avoid damaging your vision, rinse the eyes immediately in clean water and go to a hospital for assistance.

Do not place heavy objects on the charger cable. Do not damage, twist or pull the cable to avoid causing electric shock or fire.

When the battery cannot be installed correctly in the phone, do not press down on it heavily to prevent it from leaking or exploding. Do not remove the battery when the phone is on.

If the battery is distorted, has changed colour or is unusually hot when charging or when it is stored, remove immediately the battery and stop using it or it may leak, become overheated, explode or catch fire.

If a battery is not used for a long period of time after charging, store it at room temperature

Do not touch the power socket, power cable or charger with wet hands to avoid electric shock.

If water or other liquid enters the charger, immediately disconnect the charger plug from the power socket to prevent it from overheating, catching a fire or malfunction.

Explanation: The instructions in this user manual apply to English mode. In other language operating modes, slight differences may appear.

Warning: The manufacturer disclaims any liability for damage, which may result as a consequence of improper use of this mobile phone or use contrary to the instructions contained in this manual.

Alcatel logo and Alcatel name are
Trademark of Alcatel-Lucent used under
license by TCT Mobile Limited
All rights reserved © Copyright 2010TCT

Mobile Limited

**TCT Mobile Limited reserves the right to
Alter material or technical specification
without Prior notice.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

The FCC SAR limit is 1.6W/Kg. This phone's actual value: Head 1.270 W/Kg; Body 0.761W/Kg .

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that

contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5cm from your body when the phone is switched on. The CDMA antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter, except in accordance to FCC multi-transmitter product procedures.