

Contents

<i>1. Your mobile</i>	2
<i>2. Getting started</i>	5
<i>3. Basic functions</i>	6
<i>4. Display</i>	8
<i>5. Recent calls</i>	9
<i>6. Entertainment</i>	9
<i>7. Alarm</i>	9
<i>8. Contact</i>	10
<i>9. Messages</i>	11
<i>10. Settings</i>	14
<i>11. Profiles</i>	15
<i>12. Tools</i>	15
<i>13. FM radio</i>	16
<i>14. FAQ</i>	17
<i>15. Safety and use</i>	18

Friendly reminder:

This user manual applies to the OT-E206C mobile phone. If there are minor differences in the description or illustrations between the manual and the actual product the actual product shall take precedence. Customers will not be notified separately of any upgraded model of this mobile phone. Please contact our Customer service.

We reserve the right to revise anytime the contents of this manual without prior notice.

1. Your mobile


1.1 Basic specifications

Item	Specifications
Mobile Phone	Size: 87.5mm[L]x45mm[W]x21.5mm[Thickness]
	Weight: 80g approx.(Including lithium battery)
Screen resolution	128x128
Contacts	500 entries
Call Memory	30 entries
Message	350 entries
Li-ion	Rated capacity: 820mAh

Item	Specifications
battery	Standard voltage: 3.7V
	Talk time: 120 to 240 minutes
	Standby time: 80 – 150 hours (approx.)
	Operating temperature: -10°C to +55°C

Package list:

Handset, charger, battery, User menu, headset (depend on market)

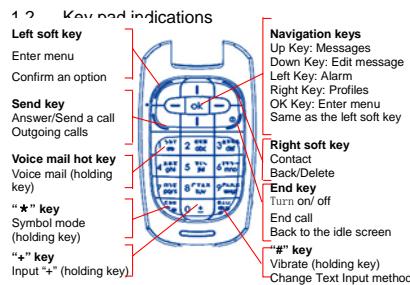

1.3 Main Menu

In the main menu mode, use the navigation key to select the item you want. After selection, press the left soft key to confirm.

-  **Display:**
Access to Display menu interface
-  **Recent calls:**
Access the Recent calls
-  **Entertainment:**
Access the games embedded in the phone
-  **Alarm:**
Access the alarm clock setting
-  **Contact:**
Enter the contact list where you can view or create a contact (the person data) and select a contact's phone number
-  **Messages:**
Read, write and send SMS messages, view the Inbox and the Outbox. Manage the settings applied to the messages
-  **Settings:**
Set the Time format, Date format, Language, Answer and security mode in your phone
-  **Profiles:**
Use this option to set the phone volume mode
-  **Tools:**
Set or use the stopwatch, the calendar and the world time


1.3 Screen Icons

-  **Battery charge level**
-  **Silent mode**
-  **Vibrate mode**
-  **Unread message**
-  **Inbox full**
-  **Voice mail**

-  Missed call
-  Call forwarding activated: Your calls will be forwarded
-  Alarm clock activated
-  Signal strength indicator


2. Getting started

2.1 Removing the back cover

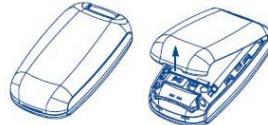

2.2 Insert the UIM card

The mobile phone can only be used with the UIM card inserted. Insert the UIM card with the gold plate facing down, sliding it into the card slot, paying attention to the position of the slanted angle.

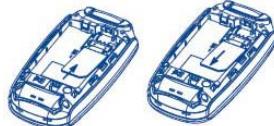

2.3 Install/ Remove the battery

Insert the top of the battery first, matching the gold contacts on the inside of the battery to those on the phone. Press lightly on the bottom end of the battery down into the phone until it slips into place. Place the back cover on the phone and slide it into place.

Remove the back cover and lift the battery up and away from the phone.

Note: Please switch off the phone before installing/removing

the battery.



2.4 Charging your battery

Insert the battery charger plug into the mini-USB port on the right side of the phone, and plug the other end into an electrical outlet.

Note: the phone will sound alert 20 minutes before the power runs out completely.

3. Basic functions

3.1 Turn on/off

Press and hold the key  to turn on. If you have activated password or PIN code, you will be prompted to enter it. For details on the PIN code and password, please refer to Menu/Settings/Security. Press and hold the key  to turn it off.

3.2 Make a call

3.2.1 Entering the number directly

In the standby mode, enter the number you want using the keypad, then press the key  to make the call.

3.2.2 Dialling a number in the Recent calls

In the standby mode, press the key  to open the Recent calls, and press again to dial the selected number.

3.2.3 Speed dialling

In the standby mode, press and hold keypad 2 to 9 to dial a number. If you have not set the speed dial number, the phone will display "Speed dial is empty". Press Menu/Contact/ Speed dial. You can set the speed dial number. For details regarding

speed dial setting, please refer to "Contact/Speed dial".

3.2.4 Emergency call

Enter 100 or different emergency number, and then press the key . You can dial the emergency number almost any time, even the PIN lock activated or the phone is locked.

3.3 Functions available during a call

During a call, open the Menu by pressing the key  , you can select the menu.

3.4 Input mode

The text input mode is used to edit contact, search a contact or edit a SMS and other text entry.

3.4.1 Text input operating sequence

Select the Text input method.

Enter the text.

You can change the input mode while entering the text.

3.4.2 Changing the text input method

In the text input mode, press the "#" to change the input method. Press the "*" key to switch upper case letters/lower case letters mode.

3.4.3 Text input methods

The phone includes five text input methods: He, T9He, English, T9English and numbers.

3.4.4 Introduction to the input method

Enter punctuations and special symbols

When you edit a text using the He and English input mode, press key "1" to select the punctuation mark or press and hold "*" key to open the symbol table. In the number input mode, press "*" key to enter "", press and hold the "*" key to open the table of symbols.

T9English input method

The English characters are labelled on the keypad

As soon as you enter letters in sequence, it will recognize that the most commonly used word. If this word is not the one you wish, using the up/down key to select the required word. Press the * key to switch upper case letters/lower case letters

mode. Press "0" key to enter a space.

Note:
We provide over 20,000 commonly used English words. If you correctly entered the characters will find the suitable word with the navigation key. You may insert it by using English input method also, repeatedly pressing the relevant key until the right letter inserted.

Single characters or numbers can be entered. Their distribution on the keypad is labelled as follow:

0	0
1	1, commonly-used symbols
2	a, b, c, A, B, C, 2
3	d, e, f, D, E, F, 3
4	g, h, i, G, H, I, 4
5	j, k, l, J, K, L, 5
6	m, n, o, M, N, O, 6
7	p, q, r, s, P, Q, R, S, 7
8	t, u, v, T, U, V, 8
9	w, x, y, z, W, X, Y, Z, 9

Number input method (123)

Press the key labelled with the corresponding number to enter the number, press "*" key to enter "*".

4. Display

Wallpaper: Choose the wallpaper and set it as main screen.

Style: Choose the style. There are 6 available styles for you .

Backlight time: Set the backlight time: 10 Sec, 30 Sec, 50 Sec or Always On

LED control: Set the LED light on or off for SMS, Call and Alarm.

LED Colour	Location	Related Issue
Orange	Up	Call
White	Down	SMS
Orange/White		Alarm

Keypad light Set: Set the Keypad light on or off during select

time.

5. Recent calls

In the standby screen, press the key  to display the list of dialled numbers. Press the left or right key to toggle between: Outgoing calls Missed calls and Received calls. In the "Recent calls" menu, you can also open the following submenu: Missed calls, Received calls, Outgoing calls, Call time and Delete all.

5.1 Missed calls, Received calls, Outgoing calls

Select Missed calls/ Received calls/ Outgoing calls from the Recent calls Menu to open the submenu of the various call logs. Use the left soft key to open the options such as Detail, Save, Call, Send message, Send contact and Delete.

Detail: View the information of the selected number.

Save: Save the selected number in Contacts.

Call: Dial the selected number.

Send message: Send a message to the selected number.

Send contact: Send the selected number.

Delete: Delete the selected number.

5.2 Call time

Select Menu/Recent calls/Call time to display the time record of received calls, outgoing calls or all calls. The call time of all calls can be cleared by resetting the timer.

5.3 Delete all

Select Recent calls/Delete all to delete all Missed Calls, Received Calls, Outgoing calls or All calls.

6. Entertainment

The phone has three games: Tetris, Brick Attack and Black Jack. Please refer to the game instructions about their rule.

7. Alarm

Users can set six alarm clocks. In the standby screen, press Menu/Alarm to open the Alarm clock editing screen. Press the left soft key then select Edit, Disable (when you choose the set alarm), Clear and Clear All.

Edit: you can set the status, time, and mode. The status is Enable/Disable. Use the numeric keys to enter the time. The

available modes are: Once, Sunday to Saturday, Sun-Thu, Sun-Fri and Every Day.

Disable: turn off the alarm clock

Clear: Clear the alarm settings

Clear all: Clear all alarm settings

8. Contact

The phone can store 500 contacts. In the standby mode, press the right soft key to open the list of contact. The contact list can also be opened through Menu/Contact.

8.1 Contact list

Select Menu/Contact/Contact list to open the contact list. Select the left soft key, the following options appear in the display: View, Edit, Call, Send Message, Send contact, Delete, and Copy

View: Check the contact's personal information.

Edit: Open the record to edit, you can classify it in a group and set a ring tone.

Call: Call the contact.

Send message: Send a text message to the contact.

Send contact: Add the record details to the SMS.

Delete: Delete a record in Contact.

Copy: Copy the record to UIM card/phone memory.

8.2 Search

Select Menu/Contact/Search for the options: Search by name, Search by group.

Search by name: You can look for a name by entering the whole name or part of it.

Search by group: You can search by the group which you have already set. And search all the contact in UIM card.

8.3 Delete

Select Menu/Contact/Delete to open the option. Mark the record using the left soft key, press OK to delete.

8.4 Add a new contact

Select Menu/Contact/Add. If the default save position is phone memory, you can enter Mobile number, Home number, Office number and a Fax number, Email, Address, URL, Memo, Group and Ringtone. If the default save position is UIM card, you can only enter Mobile number and Name. Please refer to

save position by setting save position.

8.5 Copy/Move

Select Menu/Contact/Copy/Move. You can copy or move all the records in the UIM or telephone. You can also copy one or several records in contacts.

8.6 Settings

Select Menu/Contact/ settings for the available options: Save position, View mode.

Save position: You can set the default storage location where new contact is stored.

View mode: You may set the view mode: UIM and Phone, Phone, UIM.

8.7 Speed dial

Select Menu/Contact/Speed dial to set keypad 2 through 9 for speed dial numbers. If it has not been set, press the left soft key and select a phone number from Contact. If it has been set, press the left soft key and the following options appear in the display: Add, Clear.

Add: assign the speed dial number again

Clear: delete the speed dial number

8.8 Memory status

Select Menu/Contact/Memory status to check the memory of the contact in the phone memory or UIM card.

9. Messages

In standby mode, press down key to open the message editing screen. Press up key or press the key  to select Messages to access the Messages menu from standby mode.

9.1 New message

Select Menu/Messages/New message to access the message editing screen. Please refer to "Input mode" section for instruction about message editing.

In the message editing screen, press the left soft key for the following options: Send, Send to Many, Insert Domain Symbol, Insert Contact, Templates and Insert Emoticons.

Send: Send a message to one

Send to Many: Send a message to many

Insert Domain Symbol: Insert the commonly used network symbols in a message
Insert Contact: Add contact details from Contact to a message
Templates: Add commonly-used template to a message
Insert Emoticons: Add emoticons to a message

9.2 Inbox

Select Menu/Messages/Inbox to access the list of messages in this box. Press the left soft key for the following options: View, Reply, Delete, Forward, Call, Copy to phone/UIM, and Move to Phone/UIM.
View: View the contents of the current message, press the left soft key for the following options: Reply, Delete, Forward, Extract details, Call, Copy to phone/UIM, Move to Phone/UIM.
Reply: Send a message to the sender of the current message.
Delete: Delete the message.
Forward: You can edit the contents of a message then send it.
Call: Call the number of the sender of the message.
Copy to phone/UIM: Copy a SMS to UIM card or phone.
Move to phone/UIM: Move a SMS to UIM card or phone.

9.3 Outbox

Select Menu/Messages/Outbox to access the list of messages in this box. Press the left soft key for the following options: View, Resend, Forward, and Delete.
View: View the detailed contents of a message. Press the left soft key in the message detailed contents for the options: Resend, Forward and Delete.
Resend: Send the message again.
Forward: Edit the message then send it
Delete: Delete the message.

9.4 Draft

Select Menu/Messages /Draft to access the list of messages in the draft box. Press the left soft key for the following options: View, Delete and Forward.
View: View the message currently in the draft.
Delete: Delete the message.
Forward: Edit the message then send it.

9.5 Templates

Select Menu/Messages/Templates to access the list of message templates. Press the up/down key to select the message you want.
Press the left soft key for the following options: View, Send, Edit and Add.
It has 10 message templates default, and you can edit it or add more templates optionally.

9.6 Delete messages

Select Menu/Messages/Delete messages to access delete menu. You can delete the messages in Inbox, Outbox, Draft box, UIM card, and phone memory and also clear all the messages.

9.7 Settings

Select Menu/Messages/Settings to access the following with below: Priority, Delivery reports, Callback number, Storage location, and Message validity.

Priority: Set the priority sequence such as Normal, Urgent, Emergency.

Delivery reports: You may enable/disable this function. The mobile phone will receive a information message notification that inform the message sent or unsent.

Callback number: You may enable/disable this function. When you activate it, you need to enter the number which you want the receiver to call back.

Storage location: You may set the default memory location where the message is stored. If set the phone as priority, received message will be saved to phone firstly and then transfer to UIM card when full memory in phone.

Message validity: Set the validity of message.

9.8 Memory Status

Select Menu/SMS/Memory Status to check SMS storage status in phone and in UIM card.

9.9 Voice mail

Select Menu/Messages/Voice mail to enter the voice mail submenu: Voice mail, listen voice mail and voicemail number.

Voice mail: Check how much voice mail in the phone, press and hold 1 key to call the voicemail from standby mode.

Listen voice mail: Dial the voice number and access to voicemail centre to listen it

Voicemail number: Set the voice mail number

Note: "Sent to many" When you have completed the message, press the contact personal number directly or select "search" to access to Directory. If the contact has the unique number, press the left soft key to choose the number that you want, then press OK key to send. If the contact has many numbers, you may switch the numbers by pressing the left key or the right key, and then choose the numbers you want to send, then press OK key to send.

10. Settings

Select Menu/Settings to set the parameters of mobile phone.

10.1 Phone

Language: Set language: Hebrew or English.

Time format: Set 12 hr mode or 24 hr mode.

Date format: Set date format mode, you have three options: dd/mm/yy, mm/dd/yy, yy/mm/dd.

10.2 Call

Answer mode: You may access to below option such as Any key, Flip, Send, and headset auto.

50 Sec alert: You will hear the alert when you have a call exceed 50 seconds if you activate this function.

Voice privacy: Activated this feature, voice service will be protected by encoding.

Auto redial: The cell phone will redial automatically while no service.

DTMF Tone settings: You can set it Normal or Long.

Supply services: You may access to call forward and call waiting by choosing this item.

Call forward: You can activate the status of call forward to the other phone in the following conditions: Busy, Unreachable And so on.

Customer Service: Dial customer service number.

10.3 Auto power on

You can activate or inactivate Auto power on function, and set the time when you want the phone power on automatically.

10.4 Auto power off

You can activate or inactivate Auto power off function, and set the time when you want the phone power off automatically.

10.5 Security

Select Menu/Settings/Security to enter the security submenu by inputting the phone code (default code is 1234). You can set entry code for your SMS, Contact, and Recent call.

Phone lock: Including phone code activation and inactivation, and password resetting, if you activate the phone code, you have to enter the phone code every time when the cell phone is powered on

PIN setting: Including PIN code checking and PIN code resetting. When PIN code is activated, the PIN code needs to enter when cell phone is powered on.

Contact lock: Setting protective code to contact, the default code is the same as phone code (1234)

Recent call lock: Setting protective code for recent call, the default code is the same as phone code (1234)

SMS lock: setting protective code for SMS, the default code is the same as phone code (1234)

Call barring: Setting the restriction of incoming and outgoing calls

Restore factory setting: The phone will reset yours phone's settings to default. Please be attention that after set this option, all the information of users will be deleted

11. Profiles

Select Menu/Profiles, you will enter to the profile menu, there you can set the ringtone mode of the cell phone according to the external circumstances of the time. 5 modes are provided: Normal, Silent, meeting, outdoor and In car.

Select left soft key to enter the following submenu:

Activate: Active the present mode

Personalize: Set the volume, the ringtones of incoming call, SMS, Alarm, and power on/off, and the alert mode of incoming call, SMS, and the unanswered call.

Restore factory setting: To reset your settings to default values..

12. Tools

12.1 Stopwatch

Press the key  to start stopwatch count and the key 

to stop it. While counting, press the key  to record the completion time for the previous event. Ten recordings can be stored. When the counting is stopped, press the key  to reset then press the key  again to exit the stopwatch.

12.2 Calculator

Your phone has calculator function, it can carry out simple operations, i.e. the "Four Arithmetic Operations". Numbers are entered using number keypad. "*" can be used to input decimal point, the left soft key can be used to insert the plus and minus symbols, the right soft key is used to clear the number, the left key is subtraction (-) and the right key is division (÷), the up key is addition (+) and the down key is multiplication (x). Press the OK key to display the result of the calculation.

12.3 World time

This function allows you to view the time of day or night in other part of the world. Press the navigation keys to view the city you want.

12.4 Jewish calendar

Jewish Calendar lets you view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is surrounded by a box.

13. FM radio (depend on market)

Before play FM radio, please insert the headset which is provided in the package.

After open FM radio interface, there is multiple FM control function, such as Play on back, Global search, Channel list and so on.

Quit: Select Option/Quit to back to stop FM radio.

Play on back: Select Option/Play on back, you can use other functions like sending SMS, playing games, change features, or even having a call, but when you calling, the FM will be turn off. When the call is finished, FM radio will automatically turns on.

Global search: Select Option/Global search, all the channels will be automatically searched out, and generate a channel list

for user.

Channel list: Select Option/Channel list to open Channel list submenu. Press left soft key, you can add new channel, delete the exist channel, or play the channel you choose. Press OK key to enter the specific channel you like.

Tuning mode: Press OK to select Mode, there are three mode present: List mode, Manual mode and Auto mode.

List mode: Select this mode, when you press left or right navigation key, the channel will be tuned by the sequence that the channel list you saved.

Manual mode: Tuning channel by pressing left or right navigation key

Auto mode: Tuning channel automatically by pressing left or right navigation key

Volume adjusts: Press up or down key to change the volume of FM radio.

14. FAQ

If an anomaly occurs when you are using your mobile phone, please refer to the following table. If the problem remains unsolved, please contact the phone vendor.

FAQ	Item to be checked
The telephone does not charge properly	Make sure that the charger is correctly connected to the phone and the power socket. Make sure you are using a charger specifically designed for this phone.
The phone does not switch on	Check the battery charge level. Make sure the battery is properly installed. Press and hold the ON key until the screen comes on.
The phone card has been inserted but the card information cannot be read	Make sure the UIM card is properly inserted. Make sure your UIM card is valid. Make sure the card's contact face is not dirty, if it is, wipe it with a clean cloth.
The phone displays "Enter PUK number"	Contact the network operator for a PUK number. Unlock the phone using the PUK number.

FAQ	Item to be checked
Unable to dial a number	Make sure you have dialled a valid phone number. Check if your phone is connected to the network.
Poor sound quality	Check if the reception signal is strong enough. If you are inside a building, rotate the phone or move close to a window.
The other party cannot hear you during a call	Make sure the mouthpiece is not blocked.
The receiver volume is low	Check if the receiver volume is set to maximum.
The phone signal is poor or switches off frequently	Make sure the phone antenna is not damaged. Check the phone signal strength. If there is no signal, use your phone in a location where the signal is strong.
The phone displays "out of network" or "network failure".	Check if you are in an area where the signal is weak (in a tunnel or surrounded by building). Move to another location and try again. Make sure you are not trying to use a service that you haven't subscribed to. If you require this service, contact the network for details.
When you cannot connect to the network normally	(1) The network provider does not provide this service or you have not subscribed to this service. Please contact your provider for details on the subscription and use of these services. (2) Incorrect setting. Please set the correct parameters

14. Safety and use

Please read carefully and observe the following regulations to avoid damaging your telephone or using it against the law.
Electronic devices/Health care facilities.

SAR INFORMATION

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types R5CE206C(FCC ID: R5CE206C) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.27 W/kg and when properly worn on the body is 1.28 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Turn off your phone when you are near high-precision electronic devices in use to avoid causing malfunction or interfering with their operation (fire alarms, automatic doors and automatic control equipment).

Turn off your phone in hospitals or places where the use of mobile phones is restricted. Mobile phones affect the normal operation of electronic devices and medical instruments, such as pacemakers, hearing aids and other electronic medical devices.

Pacemaker manufacturers recommend that mobile phones are kept at least 15 cm away from pacemakers to prevent the phone interference. When using the phone, you should hold it against the ear on the opposite side to the device, to reduce interference.

Mobile phones should be forbidden inside an operating theatre, Intensive Care Unit (ICU) or Cardiac Care Unit (CCU). Pay attention to the settings of the sound volume and the vibration to avoid disturbing the patients.

Flammable or explosive areas

Turn off your phone near flammable or explosive areas. Do not install/remove or charge the battery or use the phone in these areas to prevent any explosion or fire. Flammable and explosive areas include: chemical plants, facilities with chemical substances or particles in the air (grains, dust and

metal powder), petrol stations and fuel depots, fuel storage areas (for example, under a ship's deck), areas with explosion warning signs, areas with "turn off two-way radio equipment" signs and places where you are usually recommended to switch off car engines.

Safety of use in a vehicle

Please observe the relevant local or national regulations related to the use of mobile phones in a vehicle. Please refrain from using the phone while driving. If you are driving and need to use the phone in an emergency, use a hands-free device (optional purchase) to be safe. Otherwise, park the car before using the phone.

Do not place your phone on the dashboard or within an airbag deployment area to avoid causing injury to passengers in the car when the bag inflates or bursts.

Using the phone on an airplane is strictly forbidden. Turn off your phone before you board an aircraft. It is recommended to remove the battery to avoid the phone being turned on accidentally.

Storing environment

To avoid demagnetizing problem, keep the phone away from magnetic materials, such as magnetic discs and credit cards. Ensure that the phone does not come into contact with liquids. If it does, turn it off immediately, remove the battery and quickly contact the vendor.

Do not store the phone, battery or charger in an environment with a strong magnetic field, such as an electromagnetic pot or a microwave oven, to avoid causing the phone to malfunction, catch fire or explode.

Do not subject the phone, battery or charger to heavy impact or vibration to avoid battery leakage, phone malfunction, overheating, fire or explosion.

Do not place sharp metallic items such as needles, near the receiver because the receiver will attract them and you may be injured when using the phone.

Do not place the phone in the back pocket of your trousers or skirt to avoid damaging it when you sit down

Child health

Keep the phone, battery and charger out of the reach of children. Do not let children use the phone, battery or charger

without supervision.
Do not let a child put a battery in his/her mouth to avoid electrolyte poisoning.
Keep children away from small phone accessories to prevent suffocation or blocking of the oesophagus as a result of swallowing.

Operating environment
This phone is equipped with a built-in antenna. When the phone is on, unless necessary, do not touch the antenna area (top of the phone) for optimal communication quality.
Do not use your phone while it is being charged during thunderstorms, or use it outdoors to avoid being struck by lightning or other injury.
Do not use your mobile phone in dusty, wet, dirty places or places near magnetic fields to prevent malfunction of its internal circuits. Keep the phone as dry as possible. Keep the phone, battery and charger away from water and water vapour and do not clean the phone with a wet cloth to avoid short circuits, malfunction due to corrosion and electric shocks.
Do not turn in or off the phone against your ear to avoid your ears and body from being impaired.
To comply with regulations on radio frequency exposure, keep the antenna at least one inch (2.5 cm) away from your body when holding your phone or using its data functions.
If you feel unwell (epileptic seizures or blackouts) after playing the games with your phone for a long period of time, please seek medical assistance immediately.
Move your mobile phone away from your ear while using the hands-free mode, because the amplified volume might cause hearing damage.
Make sure you switched off your phone in areas where mobile phone use is prohibited!

Cleaning and maintenance
Switch off the phone before cleaning and maintenance. The charger should be unplugged from the power socket and the phone and charger disconnected to prevent any electric shock or short circuiting of the battery or charger.
Do not wipe the phone or charger using chemical substance (alcohol benzene), chemical agents or abrasive cleaning agents to avoid damaging its parts or causing a malfunction.
You may clean with a slightly damp anti-static soft cloth.

Do not scrape or alter the phone case as paint substances may cause an allergic reaction. If such a reaction occurs, cease using the phone immediately and seek medical help. Wipe dust off the power plug and keep it dry to avoid risk of fire

If the phone or accessories do not work properly, contact your local vendor
Do not dismantle the phone or its accessories yourself.

Protecting the environment

Please observe the local regulations on phone packaging, battery and used phone disposal and bring them to the collection point for proper recycling. Do not dispose of used phones or batteries in a household rubbish bin. Please take your used, unwanted lithium batteries to a designated place. Do not dispose of them in a rubbish bin.



Emergency call

In an emergency situation, if the phone is on and you are within the network range, it can be used to make an emergency call. However, emergency call numbers may not be reachable on all networks; you should never rely on your mobile phone for emergency calls.

Using the battery/charger

Only use batteries and chargers approved by the manufacturer. Do not use batteries or chargers that are not compatible with your model to avoid any explosion. Do not throw a battery in a fire as it might catch fire or explode.

Do not cause a short circuit to the charger as it might result in malfunction, smoke or fire.

Do not place conductors like metals, keys or jewels, against the battery poles or allow them to touch the ends of the battery to avoid short circuiting the battery and causing injury (burns, for example) as a result of battery overheating.

If the power cable is damaged (wires exposed or broken) or the connection to the plug is loose, do not use it to avoid electric shock, short-circuit of the charger or a fire.

Do not dismantle the battery or weld the two poles of the battery to prevent the battery from leaking, overheating, catching fire or exploding.

Keep the charger away from any container of water or other liquids. Infiltration of liquid may cause electric leakage or other

malfunction to the charger.
If the battery leaks, emits smoke or a strange odour, cease use immediately and move it far away from naked flames or people to avoid a fire or injury from explosion.
Do not charge the battery in a dusty or damp environment and keep the cable away from heated objects.
The battery is not fully charged when leaving the factory. Therefore, you should charge the battery for two hours before use. Before charging, make sure the charge plug is correctly inserted in the power socket. If it is incorrectly inserted, electric shock might occur and the phone or battery may catch fire or explode. When charging is completed, pull out the charge plug from the power socket, and do not pull the cable. If the liquid in the battery splashes into your eyes, do not rub the eyes to avoid damaging your vision, rinse the eyes immediately in clean water and go to a hospital for assistance.
Do not place heavy objects on the charger cable. Do not damage, twist or pull the cable to avoid causing electric shock or fire.
When the battery cannot be installed correctly in the phone, do not press down on it heavily to prevent it from leaking or exploding. Do not remove the battery when the phone is on.
If the battery is distorted, has changed colour or is unusually hot when charging or when it is stored, remove immediately the battery and stop using it or it may leak, become overheated, explode or catch fire.
If a battery is not used for a long period of time after charging, store it at room temperature.
Do not touch the power socket, power cable or charger with wet hands to avoid electric shock.
If water or other liquid enters the charger, immediately disconnect the charger plug from the power socket to prevent it from overheating, catching a fire or malfunction.

Explanation:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

The instructions in this user manual apply to Traditional Chinese language mode. In other language operating modes, slight differences may appear.

Warning: The manufacturer disclaims any liability for damage, which may result as a consequence of improper use of this mobile phone or use contrary to the instructions contained in this manual.

Alcatel logo and Alcatel name are Trademark of
Alcatel-Lucent used under license by TCT Mobile Limited
All rights reserved © Copyright 2008TCT Mobile Limited
TCT Mobile Limited reserves the right to Alter material or
technical specification without Prior notice.

CJA2010ALAAB