



Welcome!!

Thank you for choosing **S610** mobile phone! Please
read this manual carefully before you use your mobile phone.

For efficient use of your mobile phone,
we recommend you to read the Safety and General
Information chapter in advance.

* Please read before using the mobile phone

Table of contents

Safety and general information	6
Package contents	8
About your phone	9
Phone overview	9
Key definition	10
Status icon	12
Installing and Removing SIM card	14
Installing SIM card	14
Removing SIM card	14
Installing and Removing battery	15
Installing the battery	15
Removing the battery	15
Basic Function	16
Power on / off	16
About PIN/PUK	17
Making a call	19
Receiving a call	20
Missed a call	20
In call menu	21
Sub LCD	24
Quick access in idle mode	25
Storing a number	25
Main Menu	26
Selecting main menu item	26
Phone book	27
Phone book	27

Table of contents

Group edit	29
Turbo set	30
Memory status	30
My number	31
My profile	31
Call logs	32
Dialed call	32
Answered call	32
Missed call	33
Call time	33
Sound	35
Ring tone	35
Adjust volume	35
Ringer type	36
Alert tone	36
Key tone	37
Message tone	38
Setting	39
Phone set	39
Security set	42
Net account	45
Scheduler	47
Schedule	47
To do	48
Memo	49
Anniversary	49
Auto on / off	50
Alarm	51

Table of contents

Calculator	51
World time	52
Stopwatch	52
Currency	53
Calendar	53
Internet SVC	54
PROFILE	54
Bookmarks	55
Recent Pages	56
Enter Address	56
Push Message	56
Settings	55
Entertainment	59
Game	59
Avatar	60
Data folder	61
Display	63
Set graphic	63
Backlight	63
LCD contrast	64
Idle banner	65
Transparent	65
Network set	66
Call divert	66
Call barring	67
Call waiting	68
Caller ID	68
Network setup	69

Table of contents

Message	70
SMS	70
MMS	77
Reference information	82
Battery	82
About the battery	82
Charging the battery	82
Caution	83
Battery time	84
Entering text	85
General text input guideline	86
Changing the text input mode	86
English input	87
Number input	88
Symbol input	88
Data format	89
Troubleshooting	90
Technical information	92

Safety and General Information

Please read these simple guidelines and safety instructions carefully before using the phone.

[Driving]

Please do not use a phone while driving. If you want to use your phone, please use a hands-free kit or please park the car first.

[Hospital]

Please turn off the phone when you are in hospital. Mobile phones can cause possible interference to medical devices such as hearing aids or pacemaker.

[Aircraft]

Please turn off the phone when you are in an aircraft. It is prohibited to use phone in the aircraft.

[Blasting Area]

Please turn off the phone when you are near a blasting area.

[Battery and accessory]

Use only approved battery and accessories.

[When refuelling]

Do not use the phone at refuelling point(service station) or near fuel or chemicals.

Safety and General Information

[Disassembly]

Do not disassemble your phone or any of its accessories. Only certified service center can disassemble and repair your phone.

[Children]

Keep all accessories or batteries out of the reach of small children or babies. Please instruct children the proper ways of handling phone during usage. Shock circuit or breakdown may occur and may cause severe danger to user due to improper usage.

[Battery]

Do not apply extreme shock to battery. It is dangerous to disassemble a battery or to apply extreme shock to the battery via nail or heavy metal objects.

Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Package contents

 
Package contents



Transceiver



Battery



User Manual



Charger

* The above photos depicts the closest actual representation of the products.

About Your Phone

Phone overview



Key definition

Key	Function
	<p>[SEND Key] Makes or answers a call In idle mode: Access the Call list</p>
	<p>[END Key] End an active call. Hold the key down, switch phone On or Off.</p>
	<p>[Soft Key : Left] In menu mode : Performs the various functions according to the viewing menu. In idle mode : Connects to main menu.</p>
	<p>[Soft Key : Right] In Menu mode: Performs the various functions according to the viewing menu In Idle mode: Connects to Message</p>
	<p>[Side volume key] During a call : Adjusts earpiece volume In menu mode : Scrolls through the menu In idle mode : Adjusts the keytone volume</p>
	<p>[Numeric Key] Input 0~9 number in idle mode</p> <p>[Digit key 1] : When pressed and held in idle mode, quickly accesses voice mail server.</p> <p>[Digit key 9] : When pressed and held in idle mode, quickly accesses emergency Call</p>

Key	Function
	<p>[OK Key] In menu mode : Selects the main menu. In idle mode : Connects to WAP directly.</p>
	<p>[Navigation Key : Up] In menu mode : Scrolls the menu up. In idle mode : Access to Call log directly</p>
	<p>[Navigation Key : Down] In menu mode : Scroll down the menu In idle mode : Access to STK directly</p>
	<p>[Navigation Key : Left] In menu mode : Scrolls the menu up In idle mode : Access to Calendar directly</p>
	<p>[Navigation Key : Right] Edit mode : Moves the cursor right In Menu mode : Scrolls the menu Right Idle mode : Access to Phone book directly</p>
	<p>[Function Key : *] When pressed and held while entering a phone number , it enters a pause</p>
	<p>[Function Key : #] When pressed and held in idle mode, it enters <i>phone mode</i> menu.</p>

Status icon

Icon	Function
	[Signal Strength Indicator] Indicates the strength of the network signal
	[In Use] Appears when a call is progressing
	[No Use] Appears when the network signal is not received
	[Bell] Appears when you set the <i>Bell</i> type
	[Call Forward] Appears when the <i>Call forward</i> feature is activated
	[Vibrator] Appears when you set the menu of <i>Vibration</i> type
	[Vibrator then bell] Appears when you set the menu of ' <i>vibrator then bell</i> '
	[Meeting mode] Appears when you set the ' <i>Meeting mode</i> '
	[Street mode] Appears when you set the ' <i>Street mode</i> '
	[Concert mode] Appears when you set the ' <i>Concert mode</i> '

Icon	Function
	[Car mode] Appears when you set the ' <i>Car mode</i> '
	[Message] Appears when you have new or unread messages
	[Voice Message] Appears when you have new or unchecked voice messages
	[MMS Message] Appears when you have new or unchecked multimedia messages
	[Alarm] Appears when you set the <i>Alarm</i> and on
	[Roam] Indicates that you are roaming on another network
	[Data/WAP] Indicates that the phone is accessing the <i>WAP</i>
	[GPRS] Appears when you are connected to the <i>GPRS</i> network
	[Battery meter] Indicates the level of battery charged

Installing and Removing SIM card

SIM (Subscriber Identity Module) is a "Smart Card" that holds user phone number, service details, and memory for Phone Book numbers and messages. You can use your SIM in any GSM phone and will be charged for the calls.


1. Installing SIM card

1. Power off the phone first.
2. Pull out the battery.
3. Insert the SIM card.
4. Slide the latch over the SIM card to lock it in place.



2. Removing SIM card

1. Slide the latch to the right.
2. Remove your SIM card from the phone.

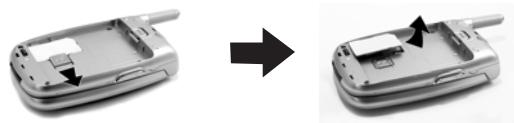

* Protect your SIM card from scratches, water, dirt and static electricity.


* Careful!

If you disregard the matters which above mentioned, it could be erase information which stored on the your IM card.

Installing and Removing battery


1. Installing the battery

Insert the battery into the battery compartment at a slant angle and press the top of the battery until the battery locks in the place.

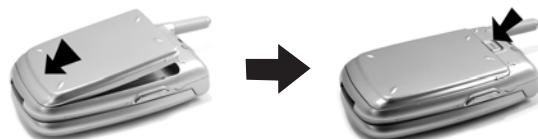

2. Removing the battery

Slide up the battery latch and then pull out the battery from the phone.

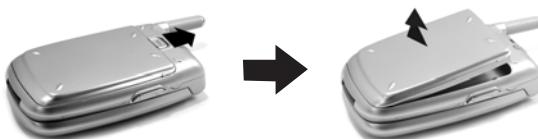

Power on/off

1. Power on

Press [END] key for a while.

* If PIN is activated, please enter 'PIN code'.

If 'Lock' is activated, please enter password.

Initial password is set to '0000'

If security of SIM card is enabled, the phone requests the PIN code every time when the phone is turned on.

2. Power off

Press and hold [END].

1. Making an emergency call

Your phone supports the international emergency number. This means that these numbers can normally be used to make an emergency call in any country with or without a SIM card inserted, if a GSM network is within range.

(Some network operators may require that a SIM card is inserted, and in some cases that the PIN has been entered as well)

* To make an emergency call, proceed as follows.

If the phone is not on, switch it on.

- With SIM card inserted : Dials the emergency call number
- Without SIM card inserted : Press [SOS] or dials the emergency call number directly.

About PIN/PUK

1. PIN (Personal Identification Number)

It is a personal code (4 to 8 digits) provided by your network operator in order to prevent other people from using your SIM card.

It is usually supplied with the SIM card. The PIN is usually requested each time when the phone is switched on.

If you enter an incorrect PIN three times consecutively, the SIM card is blocked and cannot be used until you unblock it by entering the PUK.

2. PIN2

It is a code composed of 4 to 8 digits and is supplied with some SIM cards to access specific function such as setting the charge detail display and access other additional functions.

If you enter an incorrect PIN2 three times consecutively, the SIM card is blocked and you cannot access the functions until you unblock it by entering the PUK2.

3. PUK (PIN Unblocking Key)

It is composed of 8 digits and used to unblock a SIM card. The PUK may be supplied with the SIM card.

If you forget the code, please contact your service provider.

If you enter an incorrect PUK ten times consecutively, the SIM card becomes invalid.

Please contact your service provider for a new card.

4. PUK2

It is composed of 8 digits and is supplied with some SIM cards to unlock PIN2.

If you forget the code, please contact your service provider. If you enter an incorrect PUK2 ten times consecutively, you will not be able to access the additional functions provided by PIN2. Please contact your service provider for a new card.

5. Change PIN or PIN2 code

Your can change the PIN or PIN2 code to any 4 to 8 digits number.

6. Set PIN Check

This feature asks for the PIN code whenever the phone is powered on.

Note: If you enter the wrong PIN code three times consecutively, the SIM card is automatically blocked.

7. PUK/PUK2 Code

The PUK and PUK2 codes are 8-digit codes that usually provided by your service provider along with the SIM card. Their purpose is to unlock SIM cards after wrong PIN has been entered repeatedly.

Making a call

1. Using Digit Keys

Enter the phone number in Idle mode, then press [SEND].

2. Using Turbo Dial

Press and hold a location number in Idle mode to connect a call to the corresponding number of the appropriate location.

If the location number is '2', press and hold [2].

If the location number is '21', press [2] and press and hold [1].

* It is possible to use Turbo dial numbers stored in your SIM card. You can switch Turbo dial settings between Phone entry and SIM entry.
Please see details for Turbo set in phone book.

3. Using Phone Book entry

Search for a number in the phone book, then press [SEND] to make a call.

* Use Redialing : If the connection of the call fails, your Phone will redial the number automatically.
Press [END] to abandon Auto-calling attempt.
(if Redial is set to 'On')

Receiving a call

When you receive a call, the phone rings or vibrates and displays an incoming call notice.

Flip open to receive the call. (if [Folder open] is selected)

When the flip is opened and the phone rings, press any key to answer. (if [Anykey press] is selected)

- * Except [END] key
- * You cannot receive calls when PIN is locked.
- * Please enter your PIN number to unlock your phone, before receiving your phone.

Missed a call

If you are unable to answer a call, the number of missed call is displayed.

1. Time and number (if CLI is supported) is displayed.
2. The latest call information appears on the display.

In call menu

You can access different menus during a call. Press [Menu] (left softkey) during a call to connect some of the In-call menu. Menu selection depends on the state of the call, the type and setting of your SIM card and subscription to these services.

I. Phone book

This option displays the Phone book menu.

1. Press [Menu], then move to "Phone Book".
2. Press [OK].
3. Scroll to the desired item and press [OK].

All the phone book functions are displayed.
(see "Phone book" on Main Menu)

II. Message

This option displays the Message menu.

1. Press [Menu], then move to "Message".
2. Press [OK].
3. Select the desired item and press [OK].

III. Mute On/Off

You can mute any active call. Muting means that you can hear the other person's voice but he/she cannot hear your voice.

During a call, press [Menu], then scroll to 'Mute on'. Press [OK]. 'Mute' icon appears on screen.
To unmute the call, press 'Mute Off' and press [OK]. 'Mute' icon disappears.

IV. Hold

You can put a current call on hold and accept an incoming call, or start a second call.

1. During a call, press [ANS].
2. Select "Hold & Ans", then press [OK].
To return to the first call, press "Switch".

* During a call, press [right soft key], then popup menu appears. It shows "End on call / End held call / End all" options. You can select the following items:

- └ End on call : End a call you put on hold.
- └ End held call : End the current active call.
- └ End all : End all connected calls.

If supported by service provider, more people can take part in a call.

1. When there is an incoming call, press [SEND] to enter into Answer mode.(select "Reject" to reject the incoming call)
2. Press [Menu], it has 'Drop & Answer / Hold & Answer/ Reject' menus.
Select 'Hold & Answer', the screen will display both 'In call' and 'Held call'.
3. Press [Menu], then Select "Join".
4. The phone displays active call indicator with the new active call.

V. Hold & Switch

Switches between the active call and the held call.

1. When there is an incoming call, press [SEND] to enter into Answer mode.
(If you selects 'Reject', the call will be rejected and the phone will return to Idle mode.)
2. Press [Menu] to display 'Drop & Answer / Hold & Answer / Reject' menus.
Select 'Hold & Answer', then the screen displays both 'Active call' and 'Held call'.
3. Press "Switch" to switch between the active call and the held call.
 - * Reject waiting call
You can reject an incoming call by pressing "Reject".
 - During a call, press "Reject" to display the pop-up menu.
 - Move to the desired item and press [OK].

VI. Split

Allow you to talk privately with one of the persons in a conference call.

1. During a conference call, select "Menu".
2. Press "Navigation key" to move to the desired call, then press [OK].
 - * To end a connected or held call etc.. press right softkey to select 'End a call' option.
For ending a call, press [Menu] to select the desired item, then press [OK].
 - * It has "End on call / End held call / End all call" options.

Sub LCD

When there is a new message or an incoming call, you can see caller number on sub LCD.

When the flip is closed, press the side key to turn the sub lcd light on.



Side keys function

Controls the bell volume when an incoming call.

Controls the earpiece volume during a phone call.

[Upper side key]


If you press and hold the key repeatedly, you can select the clock shape of analog or digital

[Lower side key]

If you press and hold the key repeatedly, you can enjoy the simple game.

Quick access in idle mode

In Idle mode, you can access designated menu by pressing designated navigation key.

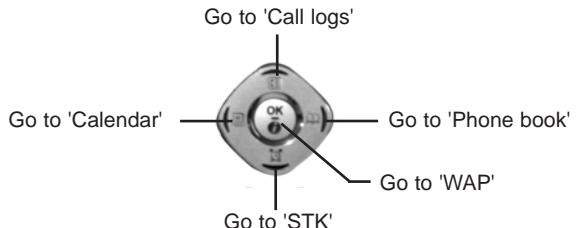

Storing number

You can store phone numbers in your phone or SIM card. It is possible to store up to 300 phone number entries in your phone book.

* The total number of entries in your SIM card are dependent on your SIM card capability.

1. Enter a number in idle mode
2. Press [STO]
3. Select [SIM] or [Phone]
4. Press [OK]
5. Enter content and then press [STO]

* Also, you can store phone numbers through the 'New Entry' of "Phone book" or 'Store' of "Call list" .

Phone Book

Selecting main menu item

Press [Main].

You may select the following 9 menus with navigation keys:

1. Phone book	2. Sound	3. Setting
4. Scheduler	5. Internet SVC	6. Entertainment
7. Display	5. Network set	9. Message

You may also select the desired menu by pressing the corresponding number of the desired menu.

Once you select the menu, then press [OK] key.

Phone book

You can store phone numbers and names in the memory of your SIM card or your phone.

You can store up to 300 numbers in your phone.

SIM card memory size depends on your SIM card capability.

I. Access to Phone book

By main menu

- (1) Press [Main] in the idle mode.
- (2) Scroll to [1.Phone book] by pressing the navigation key, then press [OK]. (Or press digit 1)

By shortcut

Press the [Right side navigation key] in idle mode.

II. Storing Number

1. Through the Phone book menu
(1) Press [Main] in the idle mode.
(2) Scroll to [Phone book] by pressing the navigation key, then press [OK]. (Or press digit 1)
(3) Scroll to [1.Phone book] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
(4) Press [Menu] then select [1.New entry].
(5) Select the storage memory to be store either SIM or Phone, then press [Save].
(6) Enters content of each categories, then press [Save].

2. Through the idle mode

- (1) Enter the number in the idle mode to be stored.
- (2) Press the [Save].
- (3) Select the storage memory to be store either SIM or Phone, then press [Save].
- (4) Enter contents and then press [Save].

* **Phone book detail**

- (1) Name : Enters the name
- (2) Location : Enters the location
- (3) Picture / Avatar : Changes the Picture or Avatar.
- (4) Number(Home / Cellular / Office / Other):
Enters the contact numbers
- (5) E-mail : Enters the e-mail address
- (6) Group : Selects the group type. (General / Family / Work / Friend / Group1 / Group2 / Group3)
- (7) Bell : Selects the desired ring tone when there is an incoming call.
- (8) Indicator : Selects the indicator color when there is an incoming call. (None / 7 Color / White / Red / Yellow / Green / Blue green / Blue / Pink)
- (9) Anniversary : Enters the anniversary date
(e.g. birthday, wedding anniversary. etc.)

* **About the [Menu]**

(The following options are available)

- (1) New entry : Adds the new entry
- (2) Send a MSG. : Sends the message(SMS, EMS) to selected number. (*Refer to the [9.Message])
- (3) Send a MMS : Sends the message(MMS) to selected number. (*Refer to the [9.Message])

- (4) Copy to SIM (or Phone) : Copies the selected number from any of both memories. (SIM card or Phone)
- (5) Delete : Deletes the selected number.
- (6) Delete all : Deletes all entry which is displayed in the selected group.
- (7) Find by name : Searches the entries by name.
- (8) Find by number : Searches the entries by number.

Group edit

You can arrange names and phone numbers saved in the phone book into groups.

For each group, you can set the specific ring tone when receiving a call. Basically, 7groups are provided. 4 groups of them (General, Family, Work, Friend) have fixed group names while the group names of the other 3 groups can be changed.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing the navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [2. Group edit] by pressing up or down navigation key, then press [OK]. (Or press digit 2)
4. Selects the desired group to edit, then press [Edit].

* **About the [Edit]**

(The following options are available)

- (1) Rename : With this menu you can edit group name. (It does not displayed in the General, Family, Friend, Work group mode)
- (2) Group bell : With this menu you can edit the ring tone of the group when you receive a call from a person in the group.

Turbo set

In the idle mode, simply by pressing the assigned number key, you can make a call easily . Also you can set the location of your SIM or Phone as the default memory for using turbo dial.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [3.Turbo Set] by pressing up or down navigation key, then press [OK]. (Or press digit 3)
4. Selects the [SIM] or [Phone]

* When you use the memory from 001 to 009 :

Press and hold the last digit key.

* When you use the memory from 010~300 :

Press the assigned number, provided that you have to press and hold the last key

Memory status

You can check how many entries are stored in your SIM card and phone's memory. If [Memory is full!] message appears, you cannot save any more entry until you have delete other item

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [4.Memory status] by pressing up or down navigation key, then press [OK]. (Or press digit 4)

My number

You can see phone number which stored in your SIM card, also you can edit your own name.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [5. My number] by pressing up or down navigation key, then press [OK]. (Or press digit 5)
4. Select the number press [OK], then you can save your own number with editing name.

My profile

You can enter your personal information in My profile.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [6.My profile] by pressing up or down navigation key, then press [OK]. (Or press digit 6)

* My profile detail

- (1) Name : Enters the name
- (2) Picture / Avatar : Changes the picture or avatar
- (3) Job title : Enters the job title
- (4) Address : Enters the address
- (5) Home : Enters the home number
- (6) Cellular : Enters the cellular phone number
- (7) Office : Enters the office phone number
- (8) Other : Enters the other number
- (9) E-mail : Enters the e-mail address
- (10) Birthday : Enters the birthday

Call logs

You can check the record of missed, answered and dialed calls only if the network supports CLI(Calling Line Identification) within the service area. In the Idle mode, you can access the this menu by pressing [SEND]key then call list will appear.

1. Dialed call

This menu lets you view the last 30 dialed call numbers. In the Idle mode, press [SEND]key then dialed call list will appear. The name, photo(or Avatar) if you saved, displays together with the date and time when the call was made.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [7.Call logs] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
4. Scroll to [1.Dialed call] by pressing up or down navigation key, then press [OK]. (Or press digit 1)

2. Answered call

This menu lets you view the last 30 answered call numbers. The name, photo(or Avatar) if you saved, displays together with the date and time when the call was made.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [7.Call logs] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
4. Scroll to [2.Answered call] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

3. Missed call

This menu lets you view the last 30 missed call numbers. The name, photo(or Avatar) if you saved, displays together with the date and time when the call was made.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [7.Call logs] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
4. Scroll to [3.Missed call] by pressing up or down navigation key, then press [OK]. (Or press digit 3)

* About the [Edit]

(The following options are available)

- (1) Save : Saves the selected number.
- (2) Delete : Deletes the selected item after confirmation.
- (3) Delete all : Deletes the entire Dialed call list after confirmation.

4. Call time

This menu lets you view the timers for calls made and received.

1. Press [Main] in the idle mode.
2. Scroll to [Phone book] by pressing navigation key, then press [OK]. (Or press digit 1)
3. Scroll to [7.Call logs] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
4. Scroll to [4.Call time] by pressing up or down navigation key, then press [OK]. (Or press digit 4)

Sound

- * Total Call time : Shows the total length of all calls made call since the timer was last reset.
- * Last Call time : Shows the length of the last call.
- * Pressing "Reset" will reset all the call timers.

Ring tone

With this menu, you can change the ring tone when a call is received. When ring tone is scrolled, the ring tone is played.

1. Press [Main] in the idle mode.
2. Scroll to [Sound] by pressing navigation key, then press [OK]. (Or press digit 2)
3. Scroll to [1.Ring tone] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
4. Selects the desired group by pressing left or right navigation key .
5. Scroll to desired item by pressing up or down navigation key, then press [OK]

Adjust volume

With this menu, you can adjust the volume from one to five levels using up or down navigation key. You can adjust volume of Keypad / Earpiece / Bell volume.

1. Press [Main] in the idle mode.
2. Scroll to [Sound] by pressing navigation key, then press [OK]. (Or press digit 2)
3. Scroll to [2.Adjust volume] by pressing up or down navigation key, then press [OK]. (Or press digit 2)
4. Selects the desired group by pressing left or right navigation key.
5. Selects the desired level by pressing up or down navigation key, then press [Save]

Ringer type

With this menu, you can change the ringer type when a call or message is received.

1. Press [Main] in the idle mode.
2. Scroll to [Sound] by pressing navigation key, then press [OK]. (Or press digit 2)
3. Scroll to [3.Ringer type] by pressing up or down navigation key, then press [OK]. (Or press digit 3)
4. Selects the desired item by pressing up or down navigation key, then press [OK].

Incoming calls or message

Bell	The ringing tone is played
Vibrator	The phone vibrates without ringing
Vib then Bell	Phone first vibrates and then start ringing
Vib and Bell	Phone vibrates and rings simultaneously
Sliding Bell	Phone ring becomes louder
Lamp	Only the light indicator operate

Alert tone

With this menu, you can set the alert tone

1. Press [Main] in the idle mode.
2. Scroll to [Sound] by pressing navigation key, then press [OK]. (Or press digit 2)
3. Scroll to [4.Alert tone] by pressing up or down navigation key, then press [OK]. (Or press digit 4)

4. Selects the desired item by pressing up or down navigation key, then press [OK].
5. Select the [Enable] or [Disable]

Alert Tone	Type Description
Connection	Alert tone rings when a call is connected
Out of SVC	Alert tone rings when the phone is out of range
1 min alert	Alert tone rings before 10 seconds when call time reaches 1 minute
Confirm	Alert tone rings when an item is confirmed
Menu sound	Alert tone rings scrolling through the menu
Power on	Alert tone rings when the phone is powered on
Power off	Alert tone rings when the phone is powered off

key tone

With this menu, you can change the key tone when pressing keys on the keypad. You can select one of Water or Drum or DTMF Tone as the key tone.

1. Press [Main] in the idle mode.
2. Scroll to [Sound] by pressing navigation key, then press [OK]. (Or press digit 2)
3. Scroll to [5.Key tone] by pressing up or down navigation key, then press [OK]. (Or press digit 5)
4. Selects the desired item by pressing up or down

- * If you select the Water or Drum, the battery consumption will be increased than you select the DTMF tone
- * Off means keys do not make any sound.

Message tone

With this menu, you can select different alert tones for incoming messages.

1. Press [Main] in the idle mode.
2. Scroll to [Sound] by pressing navigation key, then press [OK]. (Or press digit 2)
3. Scroll to [6.Message tone] by pressing up or down navigation key, then press [OK]. (Or press digit 6)
4. Selects the desired item by pressing up or down navigation key, then press [OK].

Setting

Phone set

This menu illustrates different phone settings to suit your preferences.

1. Press [Main] in the idle mode.
2. Scroll to [Setting] by pressing navigation key, then press [OK]. (Or press digit 3)
3. Scroll to [1.Phone set] by pressing up or down navigation key, then press [OK]. (Or press digit 1)

1. Language

With this menu, you can select a display language. When you select [Auto], the language is automatically selected according to the language of the SIM card used

2. Phone mode

With this menu, you can customize the ringer type for various events and environments. The default mode is preset to Normal mode and it does not customize. But the other mode change the following phone modes:

	Normal	Meeting	Street	Concert	Car
Incoming call	Bell	Vibrator	Vib. +Bell	Vibrator	Bell
Message tone	Bell	Vibrator	Vib. +Bell	Vibrator	Bell
Key tone	On	Off	On	Off	On
Alarm	Bell	Vibrator	Vib. +Bell	Vibrator	Bell
Auto redial					On
Backlight				Save mode2	

* In idle mode, press [#] for a while, the 'Phone mode' appears.

3. Time and Date

(1) Select mode : You can change the display mode of time & date from the idle display.

- Home : Displays the time and date of 'Home'
- Dual : Displays the time and date both of 'Home & Local'
- None : Does not display time and date.

(2) Time & Date : You can set the time zone for your area and other area.

- Home
- Region

(3) Time zone

- Auto :
- Manual :

(4) Daylight saving :

- Off
- One Hour
- Two Hour

4. Time format

You can change the time and date format.

(1) Time format :

This option is used to decide the format in which the time will appear on the idle mode.

- 24 hours
- 12 hours

(2) Date format

This option is used to determine how the current date is displayed on the idle mode.

- YYYY / MM / DD
- MM / DD / YYYY
- DD / MM / YYYY

5. Answer option

With this menu, you can change the way of answering a call.

(1) Folder open : Answer the incoming call by opening the flip. If the flip has already opened, press [SEND] to answer the call.

(2) Anykey press : Answer the incoming call by pressing any key, except [END] and the [Right soft] key.

(3) Send key answer: Only answer the incoming call by pressing [SEND].

6. Auto redial

If you fail to connect a call, with this menu you can make up to redial a phone number after unsuccessful call

(1) On : Phone number is redialed automatically.

(2) Off : Phone number is not redialed.

7. Data mode

This menu allows you to enable or disable the data mode.

8. GPRS set

With this menu you can set the GPRS network.

- (1) Auto : Searches GPRS network automatically anywhere.
- (2) Manual : Searches GPRS network in the place where GPRS network is in existence.

Security set

This feature locks your phone to prevent an unauthorized person from using it.

1. Press [Main] in the idle mode.
2. Scroll to [Setting] by pressing navigation key, then press [OK]. (Or press digit 3)
3. Scroll to [2.Security set] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

1. Phone lock

This feature enables you to prevent an unauthorized person from using your phone. When the phone is in lock status, you have to enter the 4-digit phone password.

The password is set to '0000' by default.

To change the phone password, refer to the 'Change PWD' menu option.

(1) Lock Now

After entering the correct security code, the phone will lock after going into the idle state. If you want to disable this phone lock, you should enter the right security code. If you power off in the phone lock state, when the phone is next powered on, the phone is the lock state

(2) Auto Lock

Enable : When you switch on the phone, you are required to enter the phone password when using the same SIM card.

Disable : When you switch on the phone, you are not required to enter the phone password.

* If SIM is changed, your phone will request security code only when you change your SIM card.

2. SIM PIN

(1) PIN check

When this feature is enabled, you have to enter your PIN each time when you power on the phone. Any person who does not have your PIN cannot use your SIM card without approval.

Enable : You have to enter the PIN each time when you power on the phone.

Disable : The phone connects directly to the network when you power on the phone.

(2) Change PIN 1

This feature enables you to change the current PIN to a new one, provided that the PIN Check feature is enabled. To change PIN 1, PIN should be enable on "PIN check". You have to enter the current PIN before entering a new one. You can change your PIN 1 (4~8 digits) codes. Once you have entered a new PIN, you are asked to confirm it by entering it again.

(3) Change PIN 2

This feature enables you to change current PIN 2 to a new one. You have to enter the current PIN 2 before entering a new one. Once you have entered a new PIN 2 you are asked to confirm it by entering it again.

* If you enter the code incorrectly, 'Invalid code' appears. If you enter wrong code three times consecutively, the PIN code is blocked. To unblock the PIN code, you should enter the 'PUK' code.

3. Master reset

This feature resets all the phone settings to factory default values.

* If you enter the password incorrectly, 'Invalid code' will appear. You should try to enter the correct one again. If correct password is entered, phone settings will be set to factory default and the phone will be restarted.

4. Master clear

This feature formats the file system and deletes all the saved data such as phone book entries, call history list, etc.

* If you enter the password incorrectly , 'Invalid password. Try again' will appear. You should try again to enter the correct one. If the correct password is entered, the phone will display 'Waiting...' message and the master clear operation is in progress. After the master clear operation has finished, the phone will be restarted.

5. Change PWD(Change password)

This feature enables you to change the current phone password to be a new one. You have to enter the current password before entering a new one. The default password is set to "0000"

* **FDN (Fixed Dial Number)** (SIM dependent)

You can restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. You can set the following submenu by PIN2 code. The PIN2 code is required.

Enable : You can restrict your outgoing calls to selected phone number.

Disable : You can call without restricting phone number.

Net account

You can save the network settings in Net account in order for you to access the WAP and MMS services. Some settings are not mandatory. Please consult your network operator or service provider for more information.

After inserting your SIM card into your phone, your phone will automatically detect and assign the corresponding network settings into your phone according to your SIM Card. If your network operator is not on the list of Net Account, please enter or modify the settings of WAP and MMS according to the following:

1. Press [Main] in the idle mode.
2. Scroll to [Setting] by pressing up or down navigation key, then press [OK]. (Or press digit 3)
3. Scroll to [3.Net account] by pressing up or down navigation key, then press [OK]. (Or press digit 3)

1. WAP

- (1) Profile name : Displays the Operator's name.
- (2) Homepage : Inputs the URL. It is different for each service provider.
- (3) Gateway : Gateway address in "xxx.xxx.xxx.xxx" format.
- (4) Port : Gateway port
- (5) Conn type : You can select a data connection type - HTTP, WSP CL, WSP CO (Default is "WSP CO").
- (6) Bearer type : You can select a bearer type : GSM-GPRS or GSM-CSD.
- (7) GSM-GPRS : APN (the address of the external data network that you want to connect to, either an IP address or a text string), User ID, Password, Linger time.
- (8) GSM -CSD : Dial number, user ID, Password, Linger time.

2. MMS

- (1) Profile name : Displays the Operator's name.
- (2) MMSC : Input a URL of multimedia messaging center.
- (3) Gateway : Gateway address in "xxx.xxx.xxx.xxx" format.
- (4) Port : Gateway port
- (5) Conn type : You can select a data connection type - HTTP, WSP CL, WSP CO (Default is "WSP CO").
- (6) Bearer type : You can select a bearer type : GSM-CSD or GSM-GPRS.
- (7) GSM-GPRS : APN (the address of the external data network that you want to connect to, either an IP address or a text string), User ID, Password, Linger time.
- (8) GSM -CSD : Dial number, user ID, Password, Linger time.

*APN : The address of the external data network that you want to connect to, either an IP address or a text string

Scheduler

Schedule

When you enter this menu, a calendar appears. A square cursor is located on the current date, you can move to another date using navigation key. If there is a stored schedule, it shows a square outline.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [1.Schedule] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
4. Selects a date by pressing navigation key, then press [OK].

* Entering Schedule

- (1) Schedule contents
To edit the text for schedule, press[Edit], and to save the schedule, press [Done]. To add the new entry on the same day, press [Add] of menu.
- (2) Alarm
To set an alarm for the schedule, enter an alarm time here.
- (3) Reminder time
Selects the On time, Before 1H(1hour), Before 1 D(Day) or Off by pressing navigation key.
- (4) Alert ring tone
To change the alert ring tone, press [Chng] and select your desired ring tone.

* About the [Menu]

(The following options are available)

- ─ Add : Enables to enter a new schedule.
- ─ Delete : Deletes the selected schedule after confirmation.

** On the calendar screen, you can delete all schedules from the selected date

By shortcut

Press the [Left side of navigation key] in Idle mode.

To do

You can save a note for a task that you have to do, select a priority level for the note and mark it as done when you have completed it. You can enter up to 32 English characters.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [2.To do] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

* To do detail

- ─ To do contents : To edit the text for to do, press [Edit], and to save the to do, press [Done].
- ─ Due date : Enters the due date
- ─ Priority : Selects the High, Normal or Low priority by pressing the navigation key.
- ─ Status : To mark the status of task, press [Sel]

Memo

With this menu, you can store a short memo.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [3.Memo] by pressing up or down navigation key, then press [OK]. (Or press digit 3)
You can enter up to 80 English characters.

* About the [Menu]

(The following options are available)

- ─ Add : Enables you to enter a new memo.
- ─ Delete : Deletes the selected memo after confirmation.
- ─ Delete all : Deletes all the memos after confirmation.

Anniversary

you can store the anniversaries to be remembered, such as wedding anniversaries, birthdays or other special days.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [4.Anniversary] by pressing up or down navigation key, then press [OK]. (Or press digit 4)
4. Enters anniversary contents, then press [OK].

* Anniversary detail

- (1) Name : Enters the anniversary contents
- (2) Solar/Lunar : Selects the lunar or solar.
- (3) Date : Enters the anniversary day.
- (4) Time : Enters the reminder time
- (5) Event : Selects the Anniversary, Birthday or Engagement
- (6) Reminder time : Selects the On time, Before 1D(Day), Before 2D(day) or Off.
- (7) Alert bell :Changes the alert ring tone, press [Chng].

* About the [Menu]

(The following options are available)

- ─ Add: Enables you to enter a new anniversary.
- ─ Delete : Deletes the selected anniversary after confirmation
- ─ Delete all : Deletes all the anniversaries after confirmation

Auto On / Off

Phone is automatically powered on and off according to set time.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [5.Auto On/Off] by pressing up or down navigation key, then press [OK]. (Or press digit 5)

Alarm

This feature sets the alarm to ring at a specific time.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [6.Alarm] by pressing up or down navigation key, then press [OK]. (Or press digit 6)

* Entering alarm

- (1) Period : Selects the Off / One time / Mon~Sat or Everyday. If you select *Off*, you are not required to input alarm time and set alarm bell.
- (2) Alarm time : Inputs the time.
- (3) Alarm bell : Set the arlarm bell. If you want to change the alarm bell, press [Chng].

Calculator

You can perform simple calculation such as addition, subtraction, multiplication and division.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [7.Calculator] by pressing up or down navigation key, then press [OK]. (Or press digit 7)

World time

This feature simultaneously displays current local time and date for major cities around the world.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [8.World time] by pressing up or down navigation key, then press [OK]. (Or press digit 8)

Stopwatch

With this feature, you can measure times for various conditions.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [9.Stopwatch] by pressing up or down navigation key, then press [OK]. (Or press digit 9)

* Stopwatch detail

- Start : To start the countdown timer.
- Stop : To stop the countdown timer.
- Reset : To reset the time without saving it.

Currency

This feature calculate the exchange rates.

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [10.Currency] by pressing up or down navigation key, then press [OK]. (Or press digit 10)

* Currency detail

- Select foreign currency and local currency to enter the rate for converting the amount to the desired currency.
- Enter the exchange rate, then enter amount.
- Press [OK] then result appears in the bottom.

Calendar

With this menu, you can see the calendar

1. Press [Main] in the idle mode.
2. Scroll to [Scheduler] by pressing navigation key, then press [OK]. (Or press digit 4)
3. Scroll to [11.Calendar] by pressing up or down navigation key, then press [OK]. (Or press digit 11)

* To move the previous or next month, press the [*]key or [#]key.

Internet SVC

Your phone includes a built-in WAP browser, allows you to access various WAP(Wireless Application Protocol) services. Such as news, sports, travel, weather report and entertainment.

* Access to Internet SVC(Service)

By main menu

- (1) Press [Main] in the idle mode.
- (2) Scroll to [Internet SVC] by pressing navigation key, then press [OK]. (Or press digit 5)

By shortcut

Press the [Center navigation key] in the idle mode.

PROFILE

The address of the homepage is entered in WAP profiles. Once connected, the homepage is displayed.

1. Press [Main] in the idle mode.
2. Scroll to [Internet SVC] by pressing navigation key, then press [OK]. (Or press digit 5)
3. Scroll to [1.PROFILE1] by pressing up or down navigation key, then press [OK]. (Or press digit 1)

* About the [Menu]

(The following options are available)

- (1) PROFILE1
- (2) Recent Pages
- (3) Refresh
- (4) Bookmarks
- (5) Enter Address
- (6) Save as...
- (7) Save as home
- (8) Push Message
- (9) Settings

Bookmarks

The list of bookmarks can have 10 entries in maximum.

1. Press [Main] in the idle mode.
2. Scroll to [Internet SVC] by pressing navigation key, then press [OK]. (Or press digit 5)
3. Scroll to [2.Bookmarks] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

Recent Pages

Shows the latest visited WAP pages.

1. Press [Main] in the idle mode.
2. Scroll to [Internet SVC] by pressing navigation key, then press [OK]. (Or press digit 5)
3. Scroll to [3.Recent pages] by pressing up or down navigation key, then press [OK]. (Or press digit 3)

Enter Address

Please enter the WAP address that you would like to access.

1. Press [Main] in the idle mode.
2. Scroll to [Internet SVC] by pressing up or down navigation key, then press [OK]. (Or press digit 5)
3. Scroll to [4.Enter address] by pressing up or down navigation key, then press [OK]. (Or press digit 4)

Push Message

1. Press [Main] in the idle mode.
2. Scroll to [Internet SVC] by pressing up or down navigation key, then press [OK]. (Or press digit 5)
3. Scroll to [5.Settings] by pressing up or down navigation key, then press [OK]. (Or press digit 5)

Settings

In this menu, you can make settings for the WAP servers of different network operators, and select the server that you would like to use when connecting to the Internet.

1. Press [Main] in the idle mode.
2. Scroll to [Internet SVC] by pressing up or down navigation key, then press [OK]. (Or press digit 5)
3. Scroll to [5.Settings] by pressing up or down navigation key, then press [OK]. (Or press digit 6)

(1) Option :

Refresh : Chooses the mode of "Refresh" or not.
Show Images : Enables you to choose the mode to show the pictures when you are browsing.
Never / Ask / Always

Play Movies :

Never / Ask / Always

Play Sounds : Enables you to choose the mode to listen the sounds when you are browsing.
Never / Ask / Always

Load Objects :

Never / Ask / Always

(2) Cache : You can set the Cache mode and clear the Cache.

Cache Mode :

Clear Cache :

(3) Cookies : You can enable and clear the Cookies.

Enable Cookies :

Clear Cookies :

(4) Push Settings :

(5) Clear recent pages : You can delete recent pages that you have accessed.

Entertainment

Game

You can enjoy two games with your phone.

1. Cargador

1. Press [Main] in the idle mode.
2. Scroll to [Entertainment] by pressing navigation key, then press [OK]. (Or press digit 6)
3. Scroll to [1.Game] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
4. Scroll to [1.Cargador] by pressing up or down navigation key, then press [OK]. (Or press digit 1)

Start : Continues the last game that you executed before.

Go to Level : Enters the level that you like to play, then press [OK]. A total of 80 steps is provided.

Help : Shows the key map and the simple game guide.

* Using the side keys, you can adjust the game sound while you are playing the game.

2. Blackjack

1. Press [Main] in the idle mode.
2. Scroll to [Entertainment] by pressing navigation key, then press [OK]. (Or press digit 6)
3. Scroll to [1.Game] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
4. Scroll to [2.Gophers] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

Start : Starts the game.

Help : Shows the key map and the simple game guide.
Press 1, 2, 3 to bet.
(Press 1 : 10\$, Press 2 : 20\$, Press 3: 50 \$)
Press [OK]: HIT

* Using the side key, you can adjust the game sound while you are playing the game.

Avatar

You can set the avatar to suit your preference and set it as wallpaper.

1. Press [Main] in the idle mode.
2. Scroll to [Entertainment] by pressing up or down navigation key, then press [OK]. (Or press digit 6)
3. Scroll to [2.Avatar] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

* Making a Avatar

- (1) Enter Avatar.
- (2) Select item by using Left/Right navigation key.
(Hair / Face / Eyes / Mouth / Jacket / Pants / Extra)
- (3) Select sub-item by using up/lower navigation key.
- (4) Press [Save].
- (5) Enter name, then press [OK].

* About the [Menu]

(The following options are available)

- (1) Add : You can add a new avatar.
- (2) Send a MMS : You can send the avatar via MMS.
- (3) Save to idle: You can set it as a wallpaper.
- (4) Delete : Deletes the selected avatar after confirmation.
- (5) Delete all : Deletes all the stored avatars after confirmation
- (6) Rename : Changes the name of the selected avatar.

Data folder

1. Download

In this menu, you can view the list of download items from the server (Picture, Photo, Bell & Melody, etc.).

Each item is indicated with a specific icon. When the memory is full, a warning message is displayed.

1. Press [Main] in the idle mode.
2. Scroll to [Entertainment] by pressing up or down navigation key, then press [OK]. (Or press digit 6)
3. Scroll to [3.Data folder] by pressing up or down navigation key, then press [OK]. (Or press digit 3)
4. Scroll to desired item press [OK].

(1) Download

This folder is used to store the image contents that you have received or downloaded through the WAP browser.

Display

Set graphic

You can change the wall paper graphic using up or down navigation key to scroll the images.

1. Press [Main] in the idle mode.
2. Scroll to [Display] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
3. Scroll to [1.Set graphic] by pressing up or down navigation key, then press [OK]. (Or press digit 1)

Backlight

You can set the backlight time for main LCD or Keypad. It helps to reduce the battery power consumption.

1. Press [Main] in the idle mode.
2. Scroll to [Display] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
3. Scroll to [2.Backlight] by pressing up or down navigation key, then press [OK]. (Or press digit 2)

1. LCD

Provides 3 mode.

Normal mode / Save mode 1 / Save mode 2

LCD Backlight state				
Normal mode	Backlight on for 10 sec	→	Dim mode for 20 sec	→ Backlight goes out
Save mode 1	Backlight on for 10 sec	→	Backlight goes out	
Save mode 2	Dim mode for 20 sec	→	Backlight goes out	

2. Keypad

You can set the keypad backlight time.

It helps to reduce the battery power consumption.

"For 5 sec / For 10 sec / Always Off"

LCD contrast

You can adjust the contrast of the LCD screens to make them lighter or darker.

1. Press [Main] in the idle mode.
2. Scroll to [Display] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
3. Scroll to [3.Contrast] by pressing up or down navigation key, then press [OK]. (Or press digit 3)

(1) Main LCD

Enter the Main LCD menu, adjust the contrast by pressing left or right navigation key, then press [OK]

(2) Sub LCD

Enter the Sub LCD menu, adjust the contrast by pressing left or right navigation key, then press [OK]

Idle banner

You can edit the idle banner and move the banner position using the navigation key.

1. Press [Main] in the idle mode.
2. Scroll to [Display] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
3. Scroll to [4.Idle banner] by pressing up or down navigation key, then press [OK]. (Or press digit 4)

(1) Edit

Changes the idle banner.

(2) Position

Adjusts the idle banner position

Transparent

1. Press [Main] in the idle mode.
2. Scroll to [Display] by pressing up or down navigation key, then press [OK]. (Or press digit 7)
3. Scroll to [7.Transparent] by pressing up or down navigation key, then press [OK]. (Or press digit 6)
3. Selects the desired item, then press [OK].

Network set

Various features are provided for you to set up the network services. Before using the network services, you have to subscribe them through your service provider and obtain user instructions from your service provider.

Call divert

You can direct your incoming calls to another number. Contact your service provider for more information.

1. Press [Main] in the idle mode.
2. Scroll to [Network set] by pressing up or down navigation key, then press [OK]. (Or press digit 8)
3. Scroll to [1.Call divert] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
4. Selects the desired item, then press [OK].

- Divert always : All calls are diverted.
- On busy: Calls are diverted if are currently on another call.
- No reply: Calls are diverted if you have not answered the call.
- Unreachable : Calls are diverted if are not in an area covered by your service provider.
- Cancel : All call diverting options are cancelled.

Call barring

This service allows you to restrict outgoing calls and incoming calls.

1. Press [Main] in the idle mode.
2. Scroll to [Network set] by pressing up or down navigation key, then press [OK]. (Or press digit 8)
3. Scroll to [2.Call waiting] by pressing up or down navigation key, then press [OK]. (Or press digit 2)
4. Selects the desired item, then press [OK].

- All outgoing : All calls cannot be made.
- Int'l Call (International Call) :
 - International calls cannot be made.
- Int'lExpHome (International Except Home) :
 - When you are abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.
- All incoming : All calls cannot be received.
- In.AtAbroad (International At Abroad) :
 - Calls cannot be received when you use your phone outside of your home service area.
- Cancel all : All call barring settings are deactivated.
- Change PWD : User can change the call barring password.

Call waiting

This service enables you to be informed when you receive a second call during an ongoing call.

1. Press [Main] in the idle mode.
2. Scroll to [Network set] by pressing up or down navigation key, then press [OK]. (Or press digit 8)
3. Scroll to [3.Call waiting] by pressing up or down navigation key, then press [OK]. (Or press digit 3)
4. Selects the desired item, then press [OK].

- Enable : Activating the corresponding service.
- Disable : Deactivating the corresponding service.
- Check status : Checking the status of the service.

Caller ID

This network service allows whether to display your phone number on the other person's phone or not. But some networks do not support this feature.

1. Press [Main] in the idle mode.
2. Scroll to [Network set] by pressing up or down navigation key, then press [OK]. (Or press digit 8)
3. Scroll to [4.Caller ID] by pressing up or down navigation key, then press [OK]. (Or press digit 4)
4. Selects the desired item, then press [OK].

- Default : This menu is set by network supports
- Hide number: Your number will not be displayed on the other person's phone.
- Send number: Your number is sent each time when you make a call.

Netowrk setup

1. Press [Main] in the idle mode.
2. Scroll to [Network set] by pressing up or down navigation key, then press [OK]. (Or press digit 8)
3. Scroll to [5.Network setup] by pressing up or down navigation key, then press [OK]. (Or press digit 5)
4. Selects the desired item, then press [OK].

(1) Auto select

* Please be careful that the phone may not operate properly if you change the network set up.

(2) Manual sel(Manual select)

Message

This menu allows you to create, send, read and save messages with the SMS(Short Message Service), EMS(Enhanced Message Service : message including simple image, animation or melody), MMS(Multimedia Message Service).

* This message service may not be available on all networks.
Contact your service provider for more information.

SMS

You can use this SMS(Short message service) feature to send, receive and edit short text message. In addition, your phone supports the EMS(Enhanced Message Service), it enables you to make short message consisting of simple pictures, melodies and animations .

1. Press [Main] in the idle mode.
2. Scroll to [Message] by pressing up or down navigation key, then press [OK]. (Or press digit 9)
3. Scroll to [1.SMS] by pressing up or down navigation key, then press [OK]. (Or press digit 1)
4. Selects the desired item, then press [OK].

1. New message

With this menu you can write a message and insert EMS options.

By shortcut

Press the [] (Right soft key) in the idle mode.

*** Entering New message**

(1) To :

- Press the [Edit] then inputs the phone number of recipient.
- * You can use the [PHBook] to search the recipient's number from the phone book.
You can send a message to 5 recipients simultaneously.

(2) Text

- Press the [Edit] then writes the message.

*** About the [Menu]**

(The following options are available)

1. Input method

You can use this menu to select input text mode.

* eZi / abc / 123 / Symbol

2. Language

Using this menu, you can change the input languages.
Please select the language that you would like to choose.

* The supported language may be different by countries.

3. Insert Media

Using this menu, you can containing multimedia contents when you create the message.

Possible items are Picture, Melody, Sound and Animation

(3) After you complete the message, press [Send] and select one of the following options.

* About the [Send]

(The following options are available)

Send Only : Sends the message.

Save and Send : Saves the message, and send it.

Save Only : Saves the message so that it can be sent later

2. Inbox

With this menu you can read messages. When you have received the message, new message icon appears together with beeps. (except meeting and concert modes)

The latest incoming message is displayed on top of the inbox. When the callback number is displayed, press [SEND] to connect a call.

* About the [Menu]

(The following options are available)

(1) Reply : You can reply the message to sender.

(2) Forward : You can forward the message to new recipients.

(3) Copy to SIM(Phone) : Enables you to copy message to the phone or vice versa.

(4) Delete : Deletes selected message.

(5) Delete all : Deletes all the messages saved in inbox after confirmation.

(6) Cut address : You can extract phone number, URL and email address from the contents so that you can use them to save the number, go to URL to save email address, respectively.

3. Outbox

With this menu you can view the saved messages that you have already sent (If you choose "Save and Send" in New Message menu) or just saved without sending (if you choose "Save only")

* About the [Menu]

(The following options are available)

(1) Forward : Forwards a received message to other recipient

(2) Copy to SIM(Phone) : Enables you to copy message to the phone or vice versa.

(3) Delete : Deletes the selected message.

(4) Delete all : Deletes all the messages from inbox.

(5) Cut address : You can extract phone number, URL and email address from the contents so that you can use them to save the number, go to URL to save email address, respectively.

4. Draft

With this menu you can view the messages saved as draft that are not sent.

* About the [Menu]

(The following options are available)

- (1) Forward : Forwards a received message to other recipient.
- (2) Delete : Deletes the selected message.
- (3) Delete all : Deletes all the messages from inbox.
- (4) Cut address : You can extract phone number, URL and email address from the contents so that you can use them to save the number, go to URL or save email address, respectively.

5. Quick text

There are preset messages in the list. With this messages, you can edit the preset message or create new message.

* About the [Menu]

(The following options are available)

- (1) Edit : Enables you to edit the selected preset message.
- (2) Send : Enables you to send the selected preset message.

6. Voice mail

With this menu, you can access your voice mailbox quickly. The voice mail message icon will be displayed on the screen if there is a voice mail.

* About the [Menu]

(The following options are available)

- 1) Number : Please enter Voice center number.
- 2) Listen : Press [OK] to connect to voice center.

7. Broadcast

With this menu, you can receive the broadcast messages on general information such as weather or traffic, etc.. For more information about topics, please contact your service provider.

* About the [Menu]

(The following options are available)

- (1) Inbox : You can read all the received broadcast messages.
- (2) Option : Selects whether to receive the broadcast messages or not
- (3) Set language : Selects your preferred language to be display of broadcast message.
- (4) Channel list : Indicates the channel from which you wish to receive broadcast message

8. Setting

With this menu, you can set up SMS message.

(1) Service center :

Enables you to store or change the number of your SMS center required when sending messages

You must obtain the number from your service provider.

(2) Expire period :

Enables you to set the length of the time for which your messages are stored at the message center while attempts are made to deliver them .

Selects the period in which the service center tries to deliver the message.

1 hour, 6 hours, 12 hours, 24 hours, 72 hours,
1 week, Maximum

(3) Message type :

Enables you to set the default message type - Text, Voice, E-mail and Fax. The network can convert the message into the selected format.

(4) Status report :

Enables you to activate or deactivate the report function.

When this function is **On**, the network will inform you whether or not your message has been delivered .

(5) Alert period :

Enables you to select the period of alert type when incoming message

One time, Every 2 min, Off

9. Memory status

You can check the status of your phone and SIM card memory. If [Memory is full!] message appears, you cannot save any more item until you have deleted other item.

MMS

You can use this MMS feature to send and receive messages containing multimedia contents (image, sound).

1. Multimedia

1. Press [Main] in the idle mode.
2. Scroll to [Message] by pressing up or down navigation key, then press [OK]. (Or press digit 9)
3. Scroll to [2.MMS] by pressing up or down navigation key, then press [OK]. (Or press digit 2)
4. Selects the desired item, then press [OK].

(1) Multimedia

With this menu you can write a message and insert MMS options.

** Entering MSG editor*

(1) **To**[] : Enters the phone number or Email address of recipient. Press the [Edit] then input the phone number of recipient.

(2) **Cc**[] : To send the message to another mobile phone, enter the phone number or Email address of recipient. Press the [Edit] then inputs the phone number of recipient.

Message

- * You can use the [Phone book] to search the recipient's number from the phonebook.
- (3) **Subject** [■] : Writes a title.
- (4) **Options** [■] : You can set the following features,
 - Validity period : Selects the validity period to 1 Hour, 12 Hours, 1 Day, 1 Week or Max.
 - Read report : Enables you to request for a report that the recipient reads the message.
 - Delivery report : Enables you to request for report of the message delivery status.
 - Priority : Selects the 'Low, Normal or High'.
- (5) **Edit content** [■] : You can edit the content type.
 - Split-Text&Image : Inserts an image after entering the text
 - Split-Image&Text : Inputs a text after inserting an image

2. Inbox

When a new multimedia message comes in, the display shows the text notification along with the Subject of the message.

* About the [Menu]

(The following options are available)

- (1) View : Enables you to view the received message.
- (2) Reply : You can reply a message to sender.
- (3) Reply to all : You can reply a message to all senders and recipients.
- (4) Forward : You can forward the received message to others.
- (5) Delete : Deletes the selected message.

Message

- (6) Delete all : Deletes all message.
- (7) Refresh : Refreshes the selected message.
- (8) Back : Returns to previous screen

3. Outbox

In this menu saves any messages that you have already sent (If you choose "Save and Send" in New Message menu) or just saved without sending (if you choose "Save only").

* About the [Menu]

(The following options are available)

- (1) View : Enables you to view the message.
- (2) Edit message : Enables you to edit the message.
- (3) Delete : Deletes the selected message.
- (4) Delete all : Deletes all message.
- (5) Send : Sends the selected message.
- (6) Refresh : Refreshes the selected message.
- (7) Back : Goes to previous screen.

4. Drafts

The unsent message is stored in Drafts Box. It has some sub menu such as view, send, delete and change.

* About the [Menu]

(The following options are available)

- (1) View : Enables you to view the message.
- (2) Edit message : enables you to edit message.

- (3) Delete : Deletes the selected message.
- (4) Delete all : Deletes all message.
- (5) Send : Sends the selected message.
- (6) Refresh : Refreshes the selected message.
- (7) Back : Goes to previous screen.

5. Sent

When you access this menu option, the list of the MMS messages that you have already sent successfully will display.

6. Templates

You can use it to edit the preset messages which contains picture and or MIDI sound.

7. Settings

You can change the default multimedia message settings. The following options are available.

* Settings detail

1. Sending

You can set the sending status of validity period, read report, delivery report, etc.

(1) Validity period :

Sets the length of the time for your message will be saved at the message center while attempts are made to deliver them. Set on the 1 Hour, 12 Hours, 1 Day, 1 Week, Max

- (2) Read report : When this option sets to ON, your recipient's phone sends a reply to let you know when your message was read by him/her.
- (3) Delivery report : When this option sets to On, the network informs you whether or not your message has been delivered
- (4) Priority : Set the priority of message. Low, Normal or High.
- (5) Auto save
- (6) Slide duration

2. **Retrieval Mode** : You can select the mode between Delayed and Immediate.
3. **Filters** : You can set the received message type: 'Immediate limit, Treat as delayed, Max size'.

* USSD Service

USSD is a GSM service that user requests services by entering a service code (specific short digit or characters) at the handset.

If you need more details, please contact your service provider because the service code differs.

Battery

About the battery

The battery pack is not fully charged when purchased. Fully charge it for 8 hours the first time before using. Use only batteries approved by the phone manufacturer. Recharge battery only with the chargers approved by the manufacturer. Unplug the charger when not in use.

Charging the Battery

1. Connect the power plug to the wall socket outlet.
2. Insert the power cable jack into the connector at the lower part of the phone.



* Tips

- When the battery is almost empty, you will hear 'Beep' sounds.
- It may take additional charging time if the phone is powered on.

Caution!

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. If you use the non-approved batteries, it may cause fire or explosion. Unplug the charger when not in use .
- Do not leave the battery in hot or cold places, such as in a closed car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Also do not leave the battery in microwave, pressure pot. If the battery is heated in the closed space, it may cause fire, smoke or broken. Always try to keep the battery between -10~55°C
- Do not apply extreme shock to the battery. It is dangerous to disassemble a battery or to apply extreme shock to the battery via nail or heavy metal objects.
- Keep all accessories or batteries out of reach of small children or babies. Please instruct children the proper ways of handling phone during usage. Shock circuit and breakdown may occur and cause severe danger to user due to improper usage.

Battery Time**1. Charging Time(Power Off Status)**

Description	Standard(720mAh)
Time	2 hours


2. Battery Time

Description	Standard(720mAh)
Talk Time (min)	100 ~ 120 min
Standby Time (hours)	60 ~ 100 hours

1. Battery operating time (standby and talk time) is an estimated value from normal field condition (DRX=5). Therefore the battery performance depends on many factors including network configuration, signal strength, battery age and condition, the temperature and backlight status.
2. If the phone is in 'no service area', the standby time will become shorter.
3. Receiving call requires the same amount of electric current as much as that of making a call.

Entering Text

You can enter characters by using the phone's keypad. Using this feature you can store a name in the phone book, creating idle banner and scheduling events.

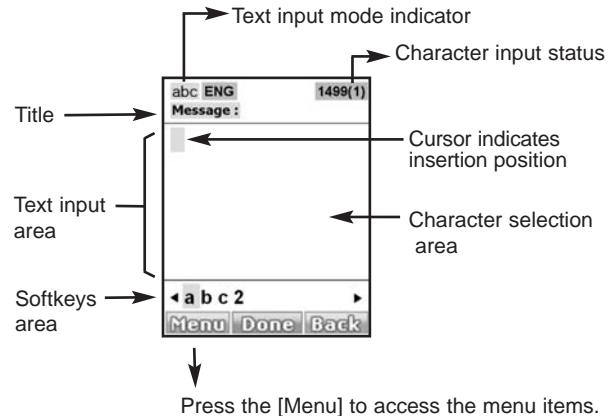

General text input guideline

Press [CLR] key

- Press the key : To delete one letter at a time.
- Press and hold down the key : To deletes the all characters in text area

Press [*] key

- Word is entered : To select the word you entered.
- No word is entered : To insert a space

Press [END] key : Go to idle screen.

Press [1] key : To enter the punctuation marks.

Press [Side key] : To change input method.

Press [#] key

- Press the key : Changes the up case and lower case.
- Press and hold down the key : On the text input mode, it changes the text a line

Changing the text input mode

- i) By pressing [Input Method] from [Menu]
- ii) By pressing [Side key], you can change the mode

* About the [Menu]

(The following options are available)

(1) Input method

Using this menu, you can select input text mode.

Possible input mode are eZi, abc, 123 and Symbol mode.

(2) Language

Using this menu, you can change the input languages. Please select the language that you would like to choose.

* The supported language may be different by countries.

(3) Insert Media

Using this menu, you can containing multimedia contents when you create the message.

Possible items are Picture, Melody, Sound and Animation

(4) Exit

Return to previous screen.

English input

1. Predictive English (eZi mode)

Word input : Press 2-9 one time to input letter at the key. Symbol Input : Press[0] to select all support symbol when no word is input.

Press Key[left / right] or [+]key to navigate (move highlight forward or back).

Press[*] or Key Down to confirm the highlight word.

Press[Clear](Right Softkey) to delete current preview input letter.

Space input : key[*]

2. Normal English (abc mode)

Letters input: press 2-9 one or more times to select letter.

Example : Input 'a' should press[2] once, input 'y' should press[9] three times.

Symbol Input : press [1] to select mark symbol,
Press[0] to select context symbol.

Space input : key[*]

Changing uppercase and lowercase: key[#]

Number input (123 mode)

This feature type numbers using one keystroke per number.

Input number : Press 0~9 keypad

Space Input : key (")

The 123 mode indicator is displayed at the top of the screen.

Symbol input (SYM mode)

This feature enable(s) you to insert symbols in a text message.

This feature enables you to insert symbols in a text message.

- Use the navigation keys to scroll to the desired symbol.
- Press [1~8]key to select one of them.
- Press [*] to confirm the first candidate.

Data Format

Idle Mode	Month:1~9,10,11,12 Day(DD) :1~9,10,31 12/25(Su) 10:30A A day of the week A:AM/ P:PM Min(MM):00~09,10~59 Hour(HH):0~9,10,11,12
Schedule / Anniversary / Alarm	00:00am Min : Enter Min from 00 to 59 Hour : Enter hour from 01 to 12 am:AM / pm:PM
Anniversary / To do	0000/00/00 Day :Enter Day from 01 to 12 Month :Enter Month from 01 to 12 Year :Enter 1890 to 2040
Stopwatch	00:00:00 Millisecond Second Minute
World Time	Maxico City 08/13(We) 02:14A Mo-Su City name

Troubleshooting

Check these questions first if you experience problems with your phone :

Q : I press the Power / End key, but nothing happened.

A : Be sure to press and hold [END] (the END/Power key) until the display appears. You will hear an audible alert. If nothing happens, check the battery pack.

Q : The display says "Insert SIM Card" or "Check SIM Card" even through I have inserted my SIM card in the hone.

A : The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly. Be sure to turn your phone off and turn it on again after your re-insert the SIM card.

Q : The display says "Locked" . How do I unlock my phone?

A : Try entering the 4 digit lock code 0000.

Q : The display says "SIM Blocked". How do I unblock my SIM card?

A : Call your service provider to obtain the PIN unblocking key(PUK) code.

Q : My phone does not ring.

A : If you see "Silent / Vibrator icon" in the display, then the ringer is turned off. Also, the ringer may be set to "Silent" even through your phone is set to a ring alert profile.

Q : I cannot send/receive calls.

A : Make sure that you have a phone network signal. Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings. Your phone also may have the "Call Barring" feature turned on. If you know the password, you can change this setting in the network setup menu.

Also check and make sure your SIM card is installed and working properly.

**Q : My battery didn't last as long as I expected.
What can I do to extend battery life?**

A : Your battery's performance is affected by charging frequency, feature use, temperature changes and other factors.

Q : I tried to place a call and heard an alternating high/low tone.

A : Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before making a call.

Technical information

Supported Systems	GSM 850/1800/1900
Operating Frequency Range	GSM 850: 824 to 849 MHz(TX) 869 to 894 MHz(RX) DCS 1800: 1710 to 1785 MHz(TX) 1805 to 1880 MHz(RX)
	PCS 1900: 1850 to 1910 MHz(TX) 1930 to 1990 MHz(RX)
Max. Transmitting Power	GSM 850 : 33dBm(2Watt) Nominal DCS 1800 : 30dBm(1Watt) Nominal PCS 1900 : 30dBm(1Watt) Nominal
Size	84 x 47 x 21.7 mm
Weight	86 g(approx.)

* GSM : Global Systems for Mobile Communications

* DCS : Digital Cellular System

* PCS : Personal Communication Service

Telcel has tried its best to ensure the accuracy of the contents on this printing material yet it does not accept liability for any error.

Telcel reserves all the rights to change the product specifications without prior notice.

Safety Information

1 . SAFETY INFORMATION FOR FIXED WIRELESS TERMINALS

.POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

INTERFERENCE TO MEDICAL DIVICES

Certain electronic equipment may be shielded against RF signal from your wireless phone. (pacemakers, Hearing Aids, and so on) Turn your phone OFF in health care

facilities when any regulations posted in these areas instruct you to do so. RF signals may affect improperly installed or inadequately shielded electronic system in motor vehicles.

.EXPOSURE TO RF ENERGY

Use only the supplied or an approved replacement antenna. Do not touch the antenna unnecessarily when the phone is in use. Do not move the antenna close to, or covering any exposed part of the body when making a call.

U.S.A.

***U.S.FEDERAL COMMUNICATIONS COMMISSION
RADIO FREQUENCY INTERFERENCE STATEMENT***

INFORMATION TO THE USER

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if Not installed and used in accordance with the instructions, may cause harmful Interference to radio communications. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *- Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- *- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- *- Consult the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables.

FCC Compliance Information

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.

SAFETY INFORMATION FOR RF EXPOSURE

Body worn operation

This device was tested for typical body-worn operations with the back of the phone kept 15 mm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 15 mm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.46 W/Kg and when worn on the body , as described in this user guide, is 0.379 W/Kg . (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: R5WNGTS610**. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.