



T503F User Manual

GSM/GPRS

# T503F

T503F User Manual for GSM voice call



## Overview of keys



## Overview of Display



- Signal strength indicator.
- Alarm mode indicator.
- Roam indicator.
- Text message (SMS) indicator.
- Missed call indicator
- Keyboard locked indicator
- Silent ring indicator
- Call Forwarding indicator
- GPRS indicator.
- Vibrator on indicator.
- Battery power level

## Contents

Overview of keys.....	2
Overview of Display .....	3
Contents.....	4
Introduction .....	5
Security .....	5
Safety and General Information .....	5
Personal .....	5
Mobile phone Use .....	6
Battery Use.....	7
On the Road.....	7
Inside Aircraft.....	7
Getting Started.....	8
Battery.....	9
Switching ON and OFF & PIN entry .....	10
Making phone calls .....	11
Making calls.....	12
Answering Calls .....	13
Missed & Rejected Calls.....	14
Active Call.....	15
In Call Features .....	16
The Menu Structure .....	18
Top level menu structure .....	19
Feature Menu Structures.....	20
Applications.....	27
Settings .....	27
Camera .....	45
Call Records.....	45
Phonebook.....	45
Messages (SMS, Short Message Service) .....	45
CB (Cell Broadcast Service).....	45

## Introduction

Congratulations on choosing the Tresor T503F Tri Band GSM phone. We are sure that you will find the features and functionality of this phone easy to use and of benefit.

Please read this User Guide thoroughly before use of T503F so that you understand all of the features and functions

Authorized optional accessories are listed on the section 15 of this User Guide. Please note that use of unauthorized accessories could cause harm to you, your mobile phone or both and will void the warranty. Only use Tresor approved accessories.

Tresor reserves the right to make changes and improvements to any of the products or accessories described in this guide without prior notice.

**IMPORTANT NOTICE:** Some service providers do not support all of the functions described in this User Manual. See additional documentation from your supplier.


## Security

If your phone is lost or stolen, you must report it to your network operator or service provider so that they can restrict the phone from use.

This is important, as you may be liable for the cost of unauthorized calls until the equipment is restricted.

You can help prevent mobile phone crime by taking the following pre-cautions:

- Set the SIM PIN in lock mode.
- Sets call restrictions.
- Don't leave your phone visible in a vehicle when you leave it. Take the phone with you or lock it in the trunk or glove compartment of your car.
- Make a note of the IMEI no. This number will be found on the box your T503F came in and on the phone near to the SIM card.

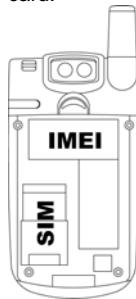

- Make a note of the SIM card number.

**SIM**

## Safety and General Information

### Personal Statement according FCC part 15.19



**FCC identifier has to be on the equipment**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

### Statement according FCC part 15.21

Modifications not expressly approved by Beaucom could void the user's authority to operate the equipment.

### Statement according FCC part 15.105

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CAUTION! Read this information carefully before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standards for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards parties. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

#### **Body-worn Operation**

This device was tested for typical body-worn operation with the back of the phone kept **1.5 centimeters** from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5 centimeters must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any **metallic components**. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Note : For more information about FCC RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

#### **Safety Information**

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. Beaucom therefore believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

- Operation of any radio equipment including mobile phones may interfere with the function of inadequately shielded medical devices such as hearing aids and pacemakers. You must consult the manufacturer of these devices or your physician, before use.
- Do not switch on your mobile phone in hospitals unless in areas where it is clearly marked to do so. Mobile phones continue to transmit call responses even if left in stand-by mode. You must switch off when requested to do so.
- Do not move the antenna close to, or it to touch any exposed part of the body when making a call; a damaged antenna may cause a minor burn.

### **Mobile phone Use**

- Your mobile phone produces magnetic fields. Do not place next to magnetic storage media such as computer diskettes or credit cards.
- Operating your mobile phone close to other electrical equipment such as televisions, phones, radios and personal

computers, may cause interference. Once again, please turn your phone off when entering a Hospital; Medical Equipment can be affected.

- Do not expose your mobile phone to strong sunlight, direct heat or liquids (such as water).
- Do not expose your mobile to strong ESD (Electro Static Discharge) since the ESD could result incorrect characters or wrong image being displayed on your LCD screen.

If this should happen, you may need to shutdown and restart your phone.

## Battery Use

- Do not short-circuit the battery terminals. This will damage the battery, produce heat and may cause a fire.
- Never dispose of batteries in a fire as it can cause them to explode. Return dead batteries to your supplier or an approved recycling centre. DO NOT dispose along with household waste.

**WARNING:** If the battery case breaks, avoid contact with the contents. Wash contaminated skin with lots of water and seek medical attention. Discard the battery in a safe way and seek advice from your dealer.

## On the Road

- Before making or receiving calls, acquaint you thoroughly with the applicable local laws and guidelines regarding the use of mobile radiotelephones and observe them at all times. Only use an Ear-Microphone, which is also known as a "personal hands free".
- Air safety bags, anti-lock brakes, speed control and fuel injection systems are normally immune to radio transmissions but if you experience problems, consult your vehicle dealer.
- Turn off your mobile phone when refuelling or where there are signs restricting the use of 2-way radio equipment. Do not store or carry flammable or explosive materials in the same compartment as your mobile phone, internal sparks could cause ignition.

## Inside Aircraft

- Switch off your mobile phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and is illegal.
-

## Getting Started

Read this section before attempting to use your phone. It tells you how to attach, charge and care for the phone's battery. We have also included information about the wake-up and stand-by screen displays, how to turn the phone ON and OFF, and what to do if you are having difficulty in connecting to a network.


### Todo

<b>Battery</b>	<b>1.1</b>
Insert and remove Battery	1.1
Fully Charge Battery	1.1
Charging Battery	1.1
Battery Performance	1.2
Battery Power Level	1.2
Usable Time for Battery	1.2
<b>Switching ON and OFF / PIN entry</b>	<b>1.3</b>
Switching On and Off	1.3
PIN entry	1.3
Emergency call (SOS)	1.3

## Battery

### Insert and remove battery

- Insert battery at the bottom of the phone ① and press inward until it clicks into place ②.
- Switch off the phone before you remove the battery.
- To remove the battery, unlock the battery ②, and then remove ①.

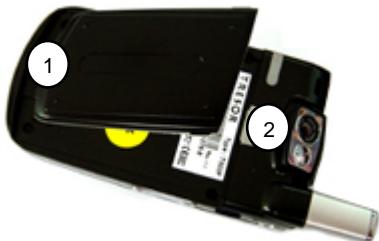

### Fully Charge the Battery.

Failure to do this will affect the life of the battery and reduce operating times between recharges. Best battery performance will be achieved after fully charging and discharging the battery two or three times.

### Charging Battery.

- Connecting the TRC (Travel Charger) plug into charger jack of phone.
- Battery charging time takes approximately 1.5 – 2 hours.
- Supplied battery type is MBL-0720T 720mAh Li-Ion battery.

**WARNING:** Charge the battery in a well-ventilated area between 0°C and +40°C using the supplied or approved charger. The use of a non-approved charger could result in a fire or injury through an electrical shock.

### Battery Performance.

Any quoted stand-by or talk times are subject to network conditions.

### Battery Power Level

The battery power level is shown in the top right corner of the display when you switch the phone ON. Six levels are displayed from full (all green) to empty (all white).



Six levels are displayed from empty (all white) to full (all green).



### Usable Time for Battery

Conditions Types	Talk Time	Stand-by Time
Normal GSM call (MBL-0720T)	3 ~ 6.5 hours	80 ~ 320 hours
GPRS Data Transfer (MBL-0720T)	1.5 ~ 4 hours	80 ~ 320 hours

- Above times are talk only and stand-by only times. In normal use the time shall be lower because a large amount of battery power shall be consumed by initiating and receiving calls between intervals of standby.
- Times may vary, depending on the network condition set by base station.
- Usable time of battery may vary; depend on the operating conditions such as charge conditions, temperature, user's habit or the location's radio wave conditions.
- Usable time of battery shall decrease over time as they age.

## Switching ON and OFF & PIN entry

When the phone is switched ON, the phone will wake-up and a stand-by screen will be displayed. The following pages explain the displayed message and symbols.

### Switching ON and OFF

- Hold down  key to switch on or off.

### PIN entry



- After power-up, following PIN entry screen appears if the PIN lock has been enabled.
- The SIM card can be protected with a 4 digit PIN code.
- Enter your PIN code and press  key.
- Failure to enter correct PIN code three times will result the SIM card blocked.
- For a SIM card that has been blocked, please read SIM card manual or contact with your service provider to unlock it.

### Emergency call (SOS)

- Even if the phone is locked with PIN code, you can still dial

Note: 112 is the international emergency number used in most countries.

## Making phone calls

After setting up the phone and understanding the stand-by screen, you'll want to make and receive calls. This section gives you all the basic information you will need.

### Todo

Making Calls	2.1
Dial a number	2.1
Last Number Redial	2.1
Emergency Call	2.2
Answering Calls	2.3
Missed Calls	2.3
Call hold & Call waiting	2.4
In Call Features	2.5
Ear Piece Volume	2.5
Active in call menu	2.5
Mic. Mute	2.5
DTMF Send	2.5
Compose SMS	2.5
Call Hold	2.6
Call Join	2.6
Call private	2.6
Call remove	2.6
Memo pad	2.6
Phonebook search	2.6
Voice mail	2.7

## Making calls

### Dial a number.

The phone must be switched on to make a call.

Enter the digits of the telephone number you wish to reach:



Use key to clear and correct any wrongly entered number(s)

The button simply closes the sub-menu and returns to the parent screen.

When you are happy with the entered number, press or the key to initiate the call.

*In summary:*

**<International code> + <Country code> + <Area code> + <Telephone number> + Key**

Note that the **<International code>** and **<Country code>** are optional.

While the call is being established, the following screen is displayed:



The button gives access to the following functions:

Outgoing Call	Show outgoing call status screen (this screen)
Active Call	Show details of any other active calls (if applicable)
Held Call	Show details of any other held calls (if applicable)
Conference	Show details of any existing conference calls (if applicable)
Call Settings	Shortcut to the Call Settings. This is the same screen that is accessible via "Settings"/"Calling" from the main menu.

If, for any reason, the call does not get established, a screen similar to the following is displayed (The cause of the failure may differ):



Via the button, the following items: are available:

Redial	Try the call again
Outgoing Call	Show outgoing call status screen
Active Call	Show details of any other active calls (if applicable)
Held Call	Show details of any other held calls (if applicable)
Conference	Show details of any existing conference calls (if applicable)
Call Settings	Shortcut to the Call Settings. This is the same screen that is accessible via "Settings"/"Calling" from the main menu.

## Terminating a call



To hang up at the end of the call, press key

## Last Number Redial



Press to recall the last number dialled, if correct, press again to dial the number.



You could use the key to browse the last dialled numbers then press to make the call.

## Emergency Call

- Your national emergency services numbers are stored in a special memory in the phone to enable the calls to be made even when the phone is locked, the restrict feature is set or when no SIM is fitted.
- Ignore any phone/SIM locked or restricted messages and dial as normal. The call should be successful if you are within network coverage and there is sufficient signal strength

Note: 112 is the international emergency number used in most countries.

## Answering Calls

The phone must be switched on to receive calls.



Press key or & to answer the call at any time during the ringing.

- If the "any key answer" feature has been activated, press any key to answer the call except or key.
- During the ring tone, the caller's number or name may be displayed (if this is supported by the network).

\*Caller's name will only be displayed if the caller's number has been previously stored on the phone book.

Pressing gives the following options:

Accept      Accept the incoming phone call

Reject      Reject the incoming phone call

Add to phonebook      Add this incoming call to your phone book via the "Phonebook Add Entry" screen}. For further info, please refer to the phone book section of this manual.

Incoming Call      Show incoming call status screen

Active Call	Show details of any other active calls (if applicable)
Held Call	Show details of any other held calls (if applicable)
Conference	Show details of any existing conference calls (if applicable)
Call Settings	Shortcut to the Call Settings. This is the same screen that is accessible via "Settings"/"Calling" from the main menu.

- Press the  key to close the menu.

Once the call is accepted and active, the following screen is displayed:



Please refer to the "Active Call" section below for more information on these screens.

- To hang up at the end of the call, press  key, or  & .

## Missed & Rejected Calls


- Missed (unanswered) incoming calls are automatically entered onto the Call List if the caller's number is available. The phone also displays the  icon on the idle screen.




Or



- Press the  soft key (maybe via ) to access the details of the missed call e.g. the phone number and the time of the call.

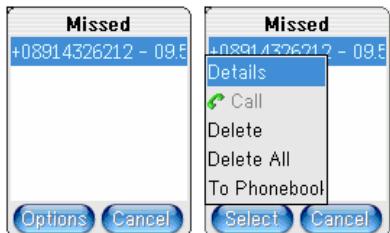

Selecting  option shows the details of the missed call:

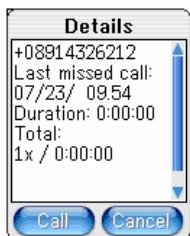

(The functionality here is identical to that of the Call Records option in the Main menu)

From here, the button may be used to return the call.

Pressing gives the following options:

- Call Call back the person whose call was missed.
- Delete Delete this entry from the missed call records
- Delete All Delete all entries from the missed call records.
- After viewing the details, the icon and softkey/menu item will be cleared.


## Active Call

- If you have a new incoming call whilst you are in conversation or call on hold, the following screen is displayed



- You can put the current call into hold mode and answer the new incoming call by pressing the key or & .
- Pressing will cause release of the call that is currently in conversation state. Selecting & has the same effect.

Pressing gives the following options:

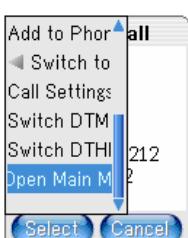

Release	Reject the new call, and return to the initial call.
Hold	If there is a call in progress, put that call on hold. If there is no call in progress, then this option is greyed and cannot be selected.
Swap	This option allows you to alternate between the two active calls. The option is greyed-out if there is only one call in progress.
Join Conference	If there is a conference in progress; add the incoming call to the conference.
Release all parties	If there are some parties who are joined to you, then release them all.
Ect	"Explicit Call Transfer" - Once you are in a conference call, this enables you to connect the other two other parties while leaving the conference yourself.
Add to Phonebook	
Switch to ...	

Call Settings      Modify Call Settings. This is identical to the functionality in Settings/Calling screen accessible via the main menu.

Switch DTMF Off

Switch DTHF On

Open Main Menu

## In Call Features


### Ear Piece Volume



To adjust the earpiece volume, press the buttons on a side of the phone during a call. The display will briefly show your current volume setting.

#### Activate In-call menu.

Whilst in a call the following screen is displayed:

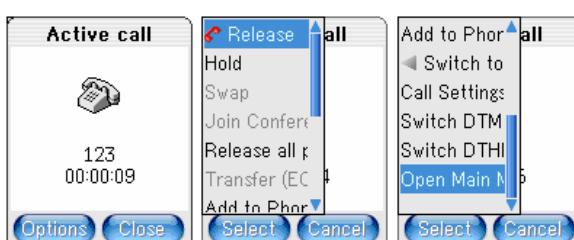

Pressing **Options** gives the following options:



Scroll up and down using **Navigation** key to highlight desired menu and press the left hand soft key to select the desired feature.

Release      Terminate the current call

Hold      Place the current call on hold.

Swap      Swap between two active calls. For a single call, this item is greyed out, and has no function.

Join conference      Create a conference call with the two currently active calls. If successful, the "Active Conference" screen is displayed. If only a single call is active, this item is greyed out, and has no function.

Release all parties

Ect      "Explicit Call Transfer" - If there are two currently active calls, this enables you to connect the other two other parties while leaving the calls yourself.

Add to Phonebook

Switch to ...

Call Settings      Modify Call Settings. This is identical to the functionality in Settings/Calling screen accessible via the main menu.

Switch DTMF Off

Switch DTHF On

Open Main Menu

If there is already a call on hold, the [Hold] menu option mentioned above, is replaced by:

[Retrieve] Retrieve the current call from hold

The Right hand soft key labelled  closes the sub-menu.

## Conference Call

On selection of "Join conference" in the In-Call menu, the "Active Conference" screen is displayed:



Pressing  gives the following options:

- Release Multiparty Place the currently selected participant on hold.
- Release member Release the currently selected participant from the conference call.
- Release all parties :
- Hold Multiparty :
- Retrieve Multiparty :
- Split Create a "new" call with the selected member. This will become the new "Active call", and the "Active Call" screen will be displayed.
- Switch to ... :
- Call Settings Modify Call Settings. This is identical to the functionality in Settings/Calling screen accessible via the main menu.
- Switch DTMF off :
- Open Main Menu :

## The Menu Structure

*This section shows you an overview of the Menu Structure and brief descriptions for each feature menu.*


**Todo**

<b>Top level menu structure</b>	<b>3.1</b>
In call menu vs. Feature menu	3.1
<b>Feature menu structure</b>	<b>3.2</b>
Phonebook	3.3
Messages	3.3
Call records	3.4
Sound	3.4
Profiles	3.5
Settings	3.6
Net. services	3.7
Accessories	3.8
Securities	3.9
Special SIM service menu	3.9

## Top level menu structure

### In call menu vs. Feature menu.

Pressing  key in idle mode or pressing  during the "In call" state will display different options. The options displayed are applicable to the current mode or state of the phone.

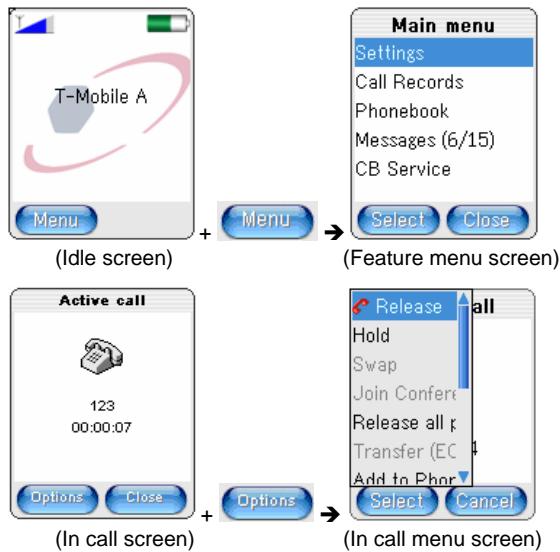

## Feature Menu Structures

### Call Menus


- Making a Call
- Receiving a Call
- Active Call

### Main Menu


- > Settings
- > Call Records
- > Phonebook
- > Messages
- > CB Service
- > Image Browser
- > Sound Browser

## Call Menus


### *Making a Call*

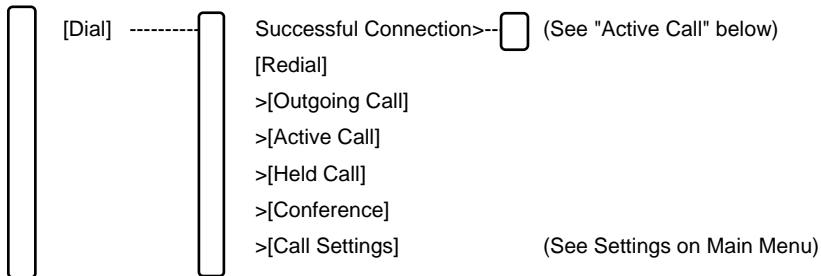

### *Receiving a Call*

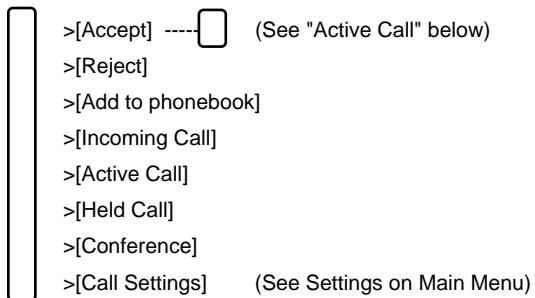


### *Active Call*

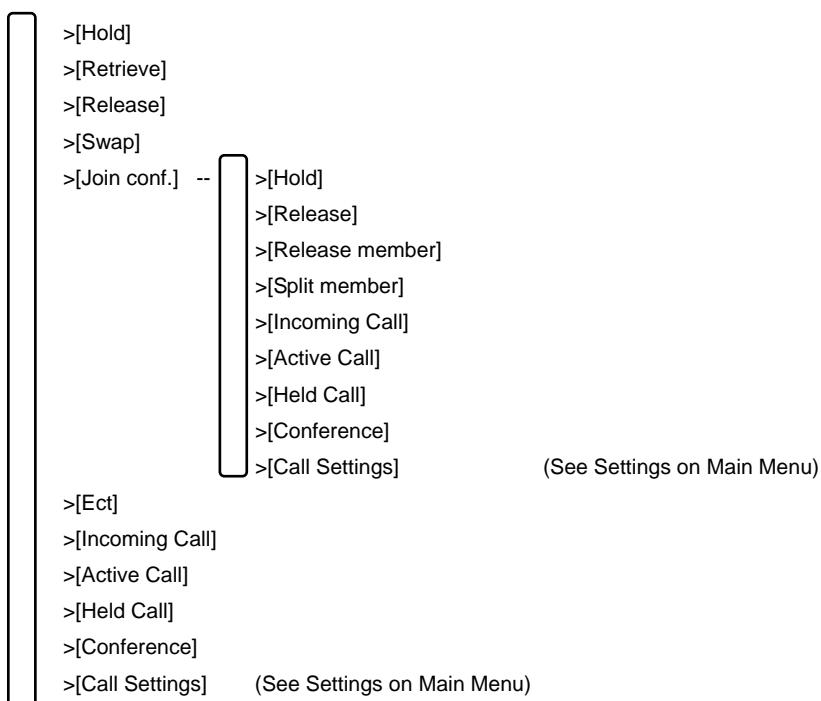


## Main Menu


### ***Settings***

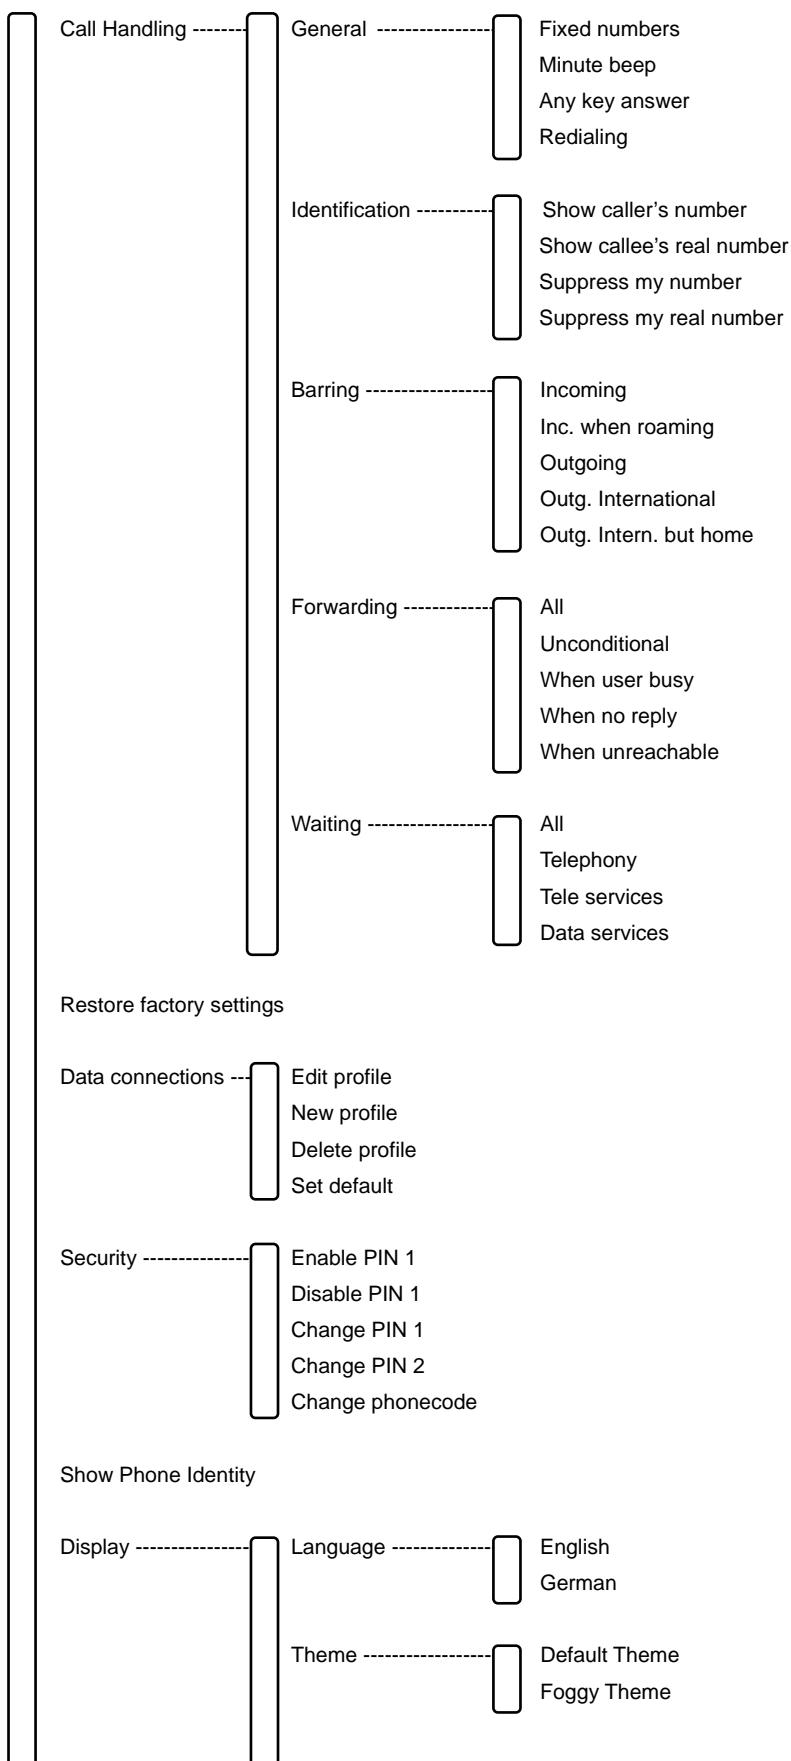


**Settings(continued)**

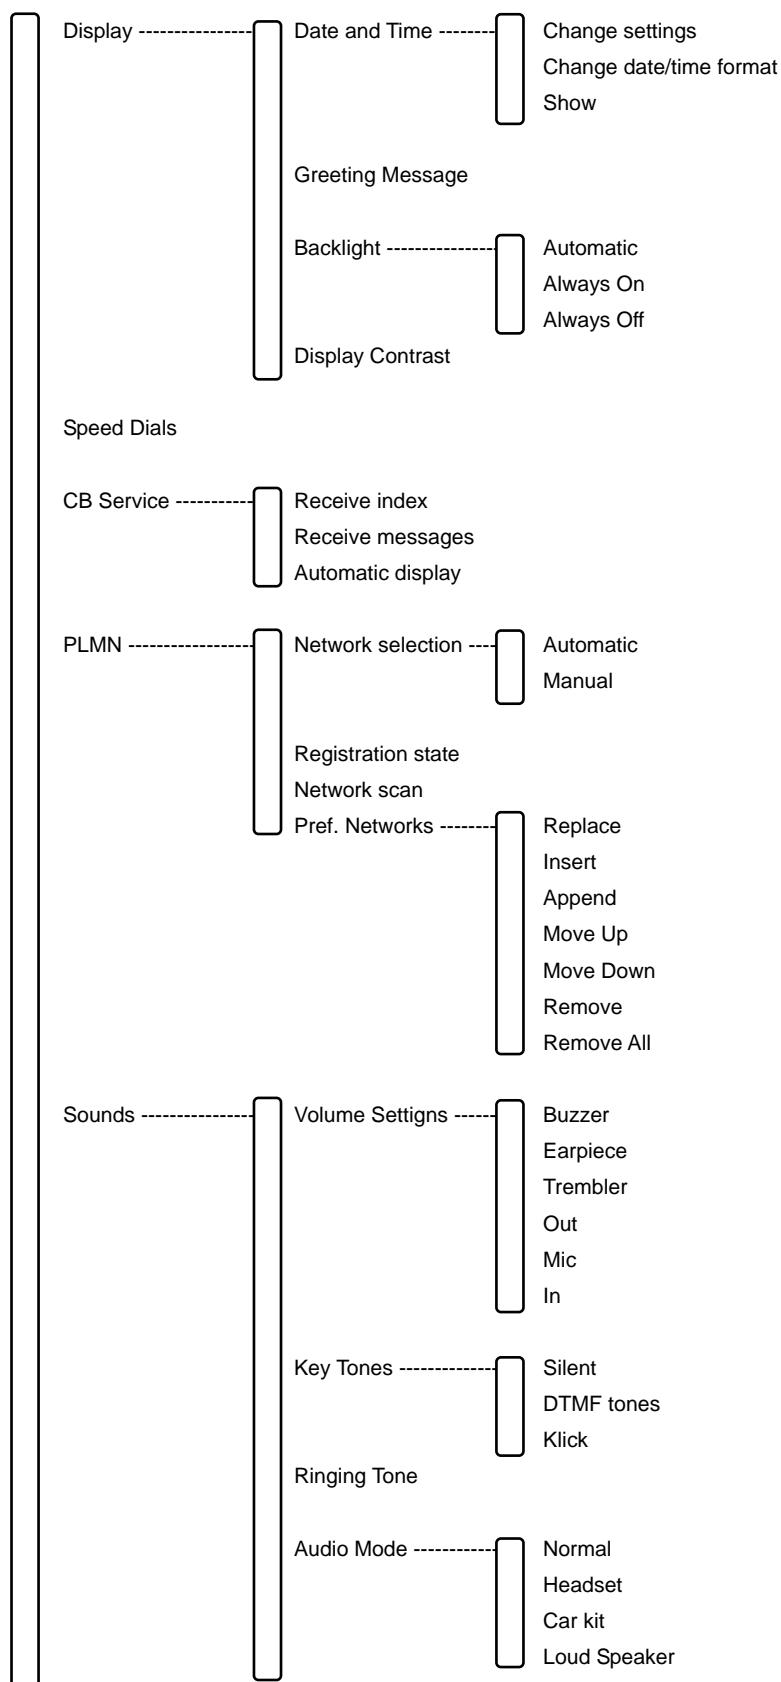


### ***Settings(continued)***

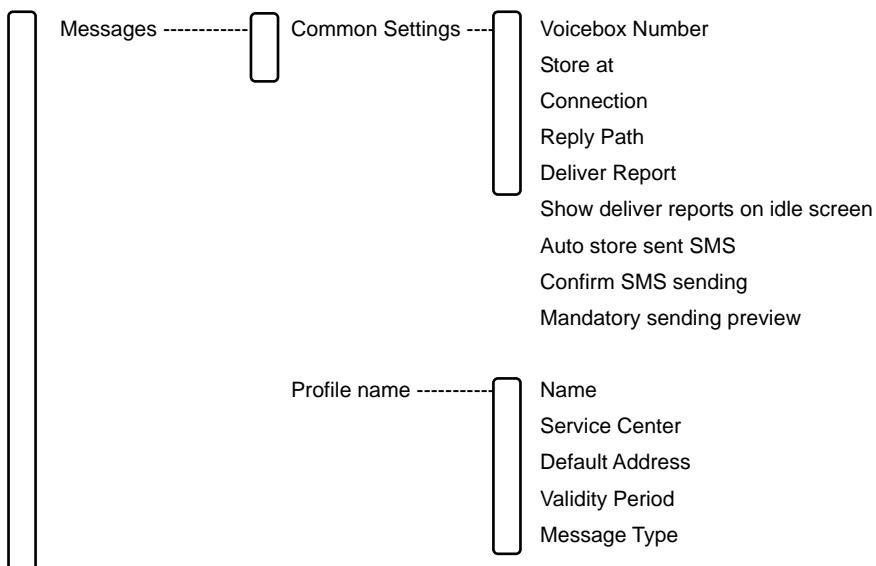


### ***Call Records***

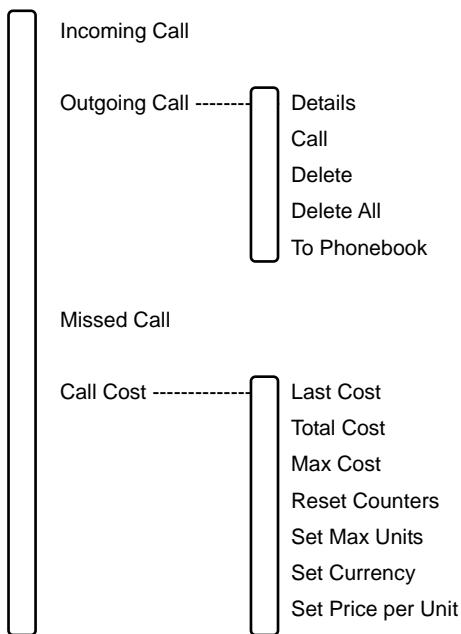


### ***Phonebook***

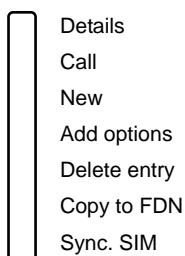


### Messages

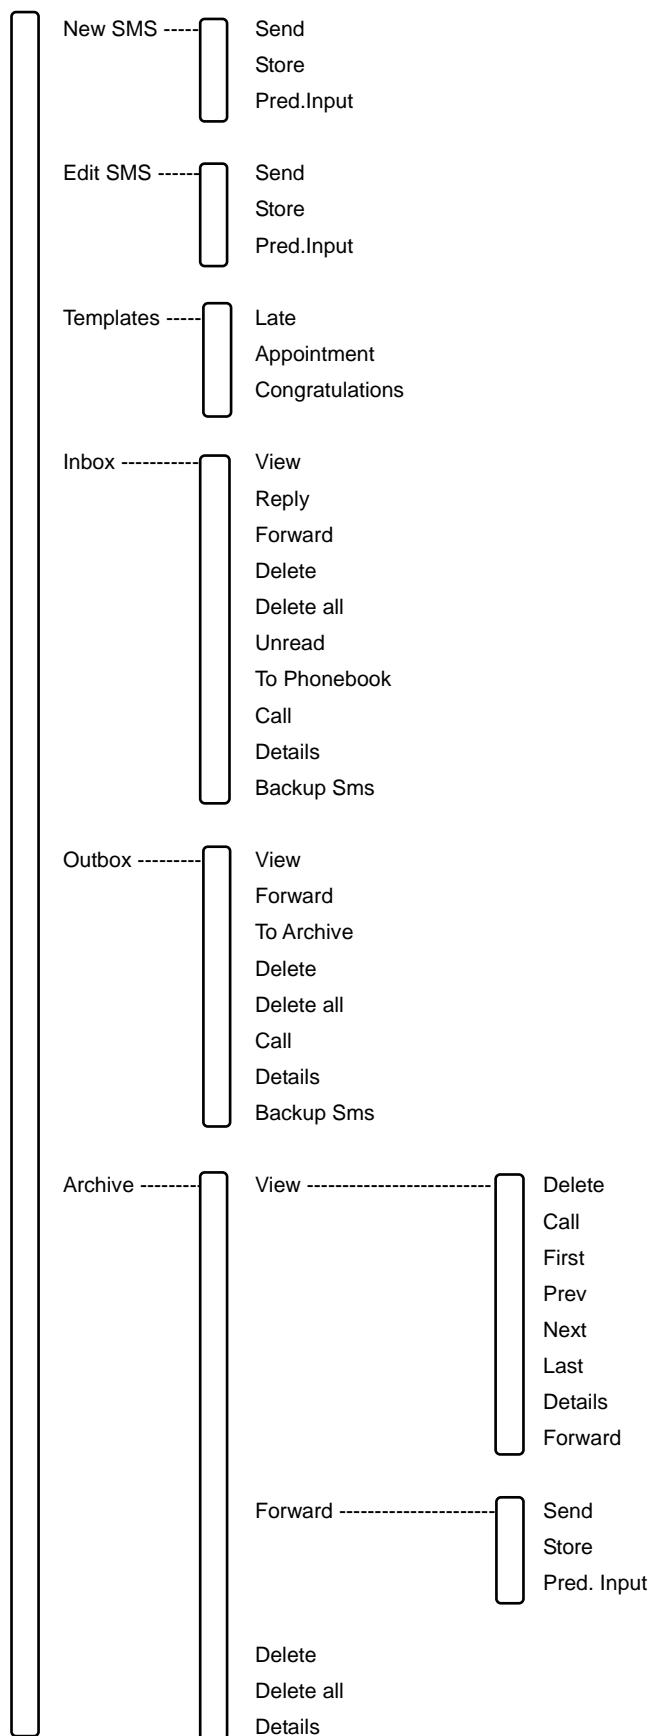

**Messages(continued)**

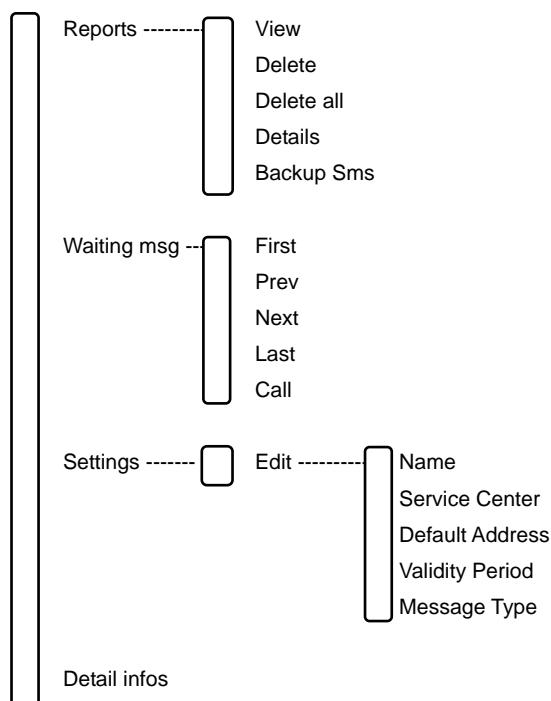

**CB Service**

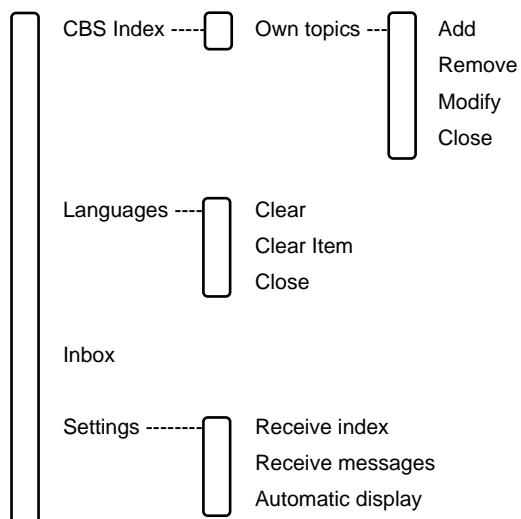


**Image Browser**

**Sound Broswer**

## Applications

### Settings

You can set various phone operating options from this menu.

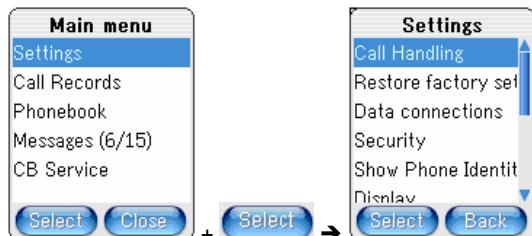

Use  key to browse the Settings options then press the  key.

#### "Settings" Sub-menu

Call Handling	Call settings eg Call Identification, Barring, Forwarding and Call Waiting
Restore Factory Settings	Revert to factory settings
Data connections	Set profiles.
Security	Security settings eg Changing your PIN or PIN2
Show phone identity	Display IMEI number of your phone.
Display	Display settings eg Language, Themes, Date/Time, Greeting etc
Speed Dials	Speed dial setup
CB Service	Cell Broadcast settings
PLMN	Network search and registration settings
Sounds	Sound and audio settings
Messages	SMS/Text Message settings

To close the Settings sub-menu and return to the Main menu, press the  key.

### Call Settings

#### "Call Settings" screen




Use  key to browse the Settings options then press the  key.

The available options are:

General:	Change your general settings eg Fixed numbers, Minute Beep & any key answer. Refer to the "General Settings" screen below.
Identification:	Refer to the "Call Identification" screen below. (Also known as Call-ID or CLID)
Barring:	Refer to the "Call Barring" screen below
Forwarding:	Refer to the "Call Forwarding" screen below
Waiting:	Refer to the "Call Waiting" screen below

To close this screen and return to the parent screen, press the  key.

### "General Settings" screen

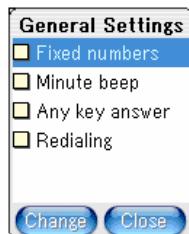

Use  key to browse the Settings options then press the  key to toggle the state of the highlighted item.

Fixed numbers

Activate the Fixed number dialling option of the T503F. Please refer to the Phonebook FDN screen for details of maintaining the list of permissible outgoing numbers.

Minute beep

Activate the "minute beep" option. When active, the phone will play a short tone every minute during a telephone call. This is particularly useful for "pay-as-you-go" subscriptions where call cost may be a concern.

Any key answer

When active, this allows you to answer incoming calls by pressing any digit on the keypad.



When disabled, you can only answer incoming calls by pressing the  key.


Redialing

When your call can't reach because your party is busy or there are some trouble in network, retry dialling automatically.

To close this screen and return to the parent screen, press the  key.

### "Call Identification" screen

The Call line ID option allows you to prevent your phone number from being displayed on the phone of the person being called. For each of the settings below concerned with incoming calls, if enabled, the telephone number is displayed and, if the number exists in your phonebook, the associated name is also displayed on the screen before the call is answered. (Note, however, that this also subject to the caller enabling call identification for outgoing calls).

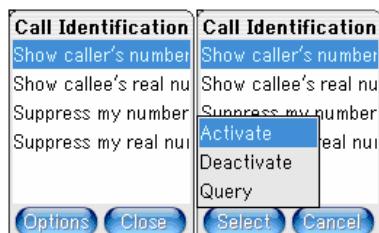

Use  key to browse the Settings options then press the  key.

Show caller's number

Display the callers details for incoming calls.

Show callee's real number

Display the details of the number being called for incoming calls (i.e. your own number).

Suppress my number

Allow the person you are calling to see your telephone number before the call is answered.

Suppress my real number

If the person you are calling exists in your phonebook, this will allow the person's name to be displayed on your screen.

Pressing  gives access to the following options:

[Activate]

Turn ON the currently highlighted option.

[Deactivate]


Turn OFF the currently highlighted option.

[Query] Show the status of the currently highlighted option.

To close this screen and return to the parent screen, press the  key.

### "Call Barring" screen

You can set any combination of the call barring to help manage network usage and increase security. The Service Provider will supply a special four-digit code of your choice if you find it difficult to remember or think someone else may know it

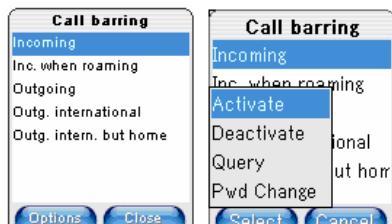

Use  key to browse the Settings options then press the  key.

Incoming	Calls cannot be received.
Inc. when roaming:	You do not receive calls when you are out of your home network coverage.
Outgoing	No outgoing calls can be made (except emergency calls).
Outg. international	No outgoing international calls can be made.
Outg. intern. but home:	You only can make a call to your home network when you are outside of your home network coverage.


Pressing  gives access to the following options:

- [Activate] Turn ON the currently highlighted option.
- [Deactivate] Turn OFF the currently highlighted option.
- [Query] Show the status of the currently highlighted option.
- [Pwd Change] Change password.

To close this screen and return to the parent screen, press the  key.

### "Call Forwarding" screen

You can set which calls shall be diverted to your voice mailbox or other numbers.

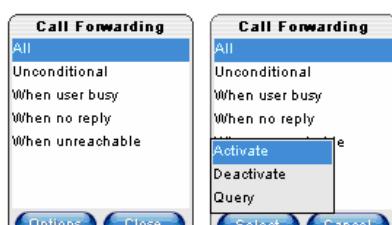

Use  key to browse the Settings options then press the  key.

All	All calls are diverted.
Unconditional:	:
When user busy:	Divert incoming call when you are using your phone.
When no reply:	A call is only diverted if you don't answer.
When unreachable:	When phone is switch off or out of range, divert.

Pressing  gives access to the following options:

[Activate]	Turn ON the currently highlighted option.
[Deactivate]	Turn OFF the currently highlighted option.
[Query]	Show the status of the currently highlighted option.

To close this screen and return to the parent screen, press the  key.

### "Call Waiting" screen

When the feature is activated, you can hear a soft ringing tone during the conversation when a second caller is trying to contact you. You will then have the opportunity to place the current call on hold and accept the call.



Use  key to browse the Settings options then press the  key.

All	Activate Call waiting for all types of incoming call.
Telephony	Activate Call waiting only for voice calls.
Tele Services	Activate Call waiting only for all Tele service.
Data Services	Activate Call waiting for all types of incoming call.

Pressing  gives access to the following options:

[Activate]	Turn ON the currently highlighted option.
[Deactivate]	Turn OFF the currently highlighted option.
[Query]	Show the status of the currently highlighted option.

To close this screen and return to the parent screen, press the  key.

### Factory Settings

This menu option will restore all settings to their factory defaults.

**WARNING: NO FURTHER CONFIRMATION IS REQUESTED. ON SELECTION, YOU WILL UNCONDITIONALLY LOSE ALL OF YOUR PERSONALISED SETTINGS.**

Note that Restoring "Factory settings" does not effect security settings; date & time and PIN lock.

### Data connections

This menu option will configure profiles.

### Security Settings

Phone and SIM card are protected against misuse by several security codes.

- PIN1: Protects your SIM card (personal identification number)
- PIN2: Needed to set for additional functions of special SIM card.
- PUK: Used to unlock SIM card after incorrect PIN input.
- Phonecode: (Also known as SIM Lock) This protects your phone. Must be entered at the first security setting (4-8digits). The default Phonecode is 0000.

### "Security" screen



Enable PIN1

This is also often referred to as "**PIN lock**". If enabled, you will be prompted to enter your PIN1 each time the phone is switched on. You will be prompted to enter your PIN before being allowed to proceed with this function. This option is disabled (greyed) if PIN1 is already enabled.

Disable PIN1

You will be prompted to enter your PIN before being allowed to proceed with this function. This option is disabled (greyed) if PIN1 is not enabled.

Change PIN

Please refer to the "Change PIN" screen below. You will be prompted to enter your PIN before being allowed to proceed with this function.

Change PIN2

Please refer to the "Change PIN" screen below. You will be prompted to enter your PIN2 before being allowed to proceed with this function.

Change Phonecode


"Change Phonecode" screen

[Select]

To close this screen and return to the parent screen, press the key.

**"Change PIN" screen**

You can change the PIN to any 4digits number.

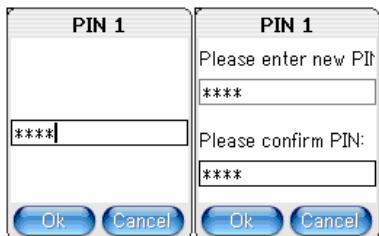

Before being allowed to change your PIN, you are prompted to enter your existing PIN. Once at the "New PIN" screen, you must enter your new PIN twice in order to ensure that you did not make any typing mistakes.

Press the button to proceed, or press the button to cancel this operation and return to the previous screen.


If you enter the wrong PIN, the following screen is displayed.



**"Change PIN2" screen**

PIN2 is required for functions concerning the FDN and BDN. |

You can change the PIN2 to any 4digits number (This option is enabled only when PIN2 is available).

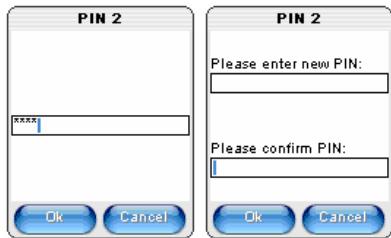


Before being allowed to change your PIN, you are prompted to enter your existing PIN. Once at the "New PIN" screen, you must enter your new PIN twice in order to ensure that you did not make any typing mistakes.

Press the **Ok** button to proceed, or press the **Cancel** button to cancel this operation and return to the previous screen.

If you enter the wrong PIN, the following screen is displayed.



#### **"Change Phonecode" screen**

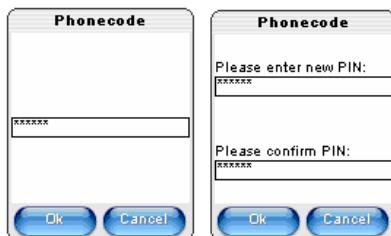

You are allowed 3 attempts to enter your existing phonecode.

Before being allowed to change your Phonecode, you are prompted to enter your existing Phonecode. Once at the "New Phonecode" screen, you must enter your new Phonecode twice in order to ensure that you did not make any typing mistakes.


Phone code must at least 6 digits in length, but not greater than 8 digits.

Press the **Ok** button to proceed, or press the **Cancel** button to cancel this operation and return to the previous screen.

#### **Other Security related screens**

##### **"PIN2 Entry" screen**

Before being allowed to modify your FDN or BDN lists, you are prompted to enter your PIN2.

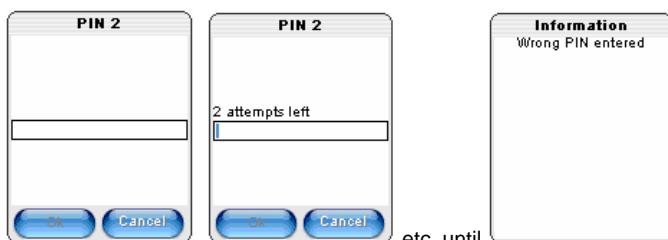


etc, until


If you get PIN2 wrong 3 times, you have to enter PUK2 in order to rest your PIN2.

### **Resetting PIN or PIN2**

If you enter your PIN (or PIN2) incorrectly 3 times, you will be prompted to enter your PUK2 before being allowed to reset/choose a new PIN (or PIN2).

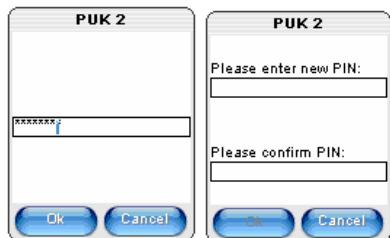

Press the button to proceed, or press the button to cancel this operation and return to the previous screen.

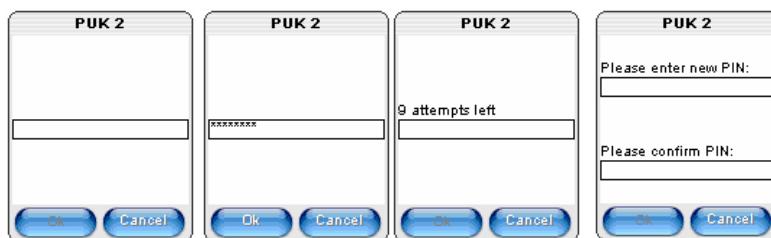

After entering PUK2, you are able to capture a new PIN2.

This must have a length of 8 digits.

The OK key only becomes enabled if the new PIN and confirm PIN fields match, and the length is  $\geq 4$  digits.

## **Phone Identity Settings**

### ***Phone Identity "Information" screen***



Every phone that is manufactured has a globally unique number which is used to identify it to the network. This number is known as your IMEI number and is independent of the details of your subscription with the network operator. This screen displays the IMEI number of your phone.

To close this screen and return to the parent screen, press the key.

## **Display Settings**

### ***"Display Settings" screen***





Use key to browse the Settings options then press the key.

Language: Change the active language of your phone. Refer to the "Language" screen below.

Theme: Change the cosmetic theme/skin of your phone. Refer to the "Theme" screen below.

Date and Time: Adjust Date & Time and related settings. Refer to the "Date and Time" screen below.

Greeting message: Adjust the greeting message that is displayed when you turn on your phone. Refer to the "Greeting Message" screen below.

Backlight: Adjust the way that the backlight is handled. Refer to the "Backlight" screen below.

Display contrast: Adjust the display contrast setting. Refer to the "Display Contrast" screen below.

To close this screen and return to the parent screen, press the key.

### ***"Language" screen***

English is always available as a basic language. The language of your Service Provider is loaded automatically when your SIM card is inserted. With this option, you are able to select a language other than the default.



Use key to browse the Settings options then press the key.

English Change the current language to English.

German Change the current language to German.

Press the button to proceed, or press the button to cancel this operation and return to the previous screen.

### ***"Theme" screen***

This screen allows you to select your preferred theme (or skin) for your phone.



Use key to browse the Settings options then press the key.

Default Theme: This is the theme that is used when the phone is in a "Factory defaults" state.

Foggy Theme: This is an alternate theme.

Press the button to proceed, or press the button to cancel this operation and return to the previous screen.

### "Date and Time" screen



Use  key to browse the Settings options then press the  key.

Change Settings

Change the Date and/or time. Refer to the "Change Date/Time" screen below.

Change Date/Time format

Change the format that is used for displaying the date and/or time. Refer to the "Date/Time Format" screen below.

Show

Enable/disable display of the Date and Time on the idle screen

To close this screen and return to the parent screen, press the  key.

### "Change Date/Time" screen

Note: The date and time has to be set again if the battery is removed or empty for more than eight hours.



Date entry field

{date entry field, masked according to current format}


Time entry field

{time entry field, masked according to current format}

Press the  button to proceed, or press the  button to cancel this operation and return to the previous screen.

### "Date/Time Format" screen

Set the display format of the date and/or time.

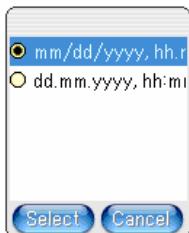

Use  key to browse the Settings options then press the  key.

"mm/dd/yyyy, hh:mm":

American style of Date/Time display.

"dd.mm.yyyy, hh:mm":

European style of Date/Time display.

Press the  button to proceed, or press the  button to cancel this operation and return to the previous screen.

### **"Greeting Message" screen**

You can create a greeting message, which is displayed each time you turn on your phone.



Press the button to proceed, or press the button to cancel this operation and return to the previous screen.

### **"Backlight" screen**



Automatic	The backlight illuminates for 15 seconds in standby and talk mode when marked.
Always On	The backlight is always turned on. This will adversely affect the life of your battery.
Always Off	The backlight is always turned off. Disabling the backlight entirely will result in substantial power saving and increased battery life.

Press the button to proceed, or press the button to cancel this operation and return to the previous screen.

### **"Display Contrast" screen**

You can control the display contrast.



Press key left and right to adjust the LCD contrast to a preferred level and press key to confirm or press key to exit the menu without making the selected LCD contrast change.


The Contrast slide bar control will indicate the current setting.

## **Speed Dial Settings**

Your favourite phone numbers can be programmed with a speed dial number using keys 1-9.

\*Key 1 is usually reserved for access voice mail centre.

### "Speed Dials" screen

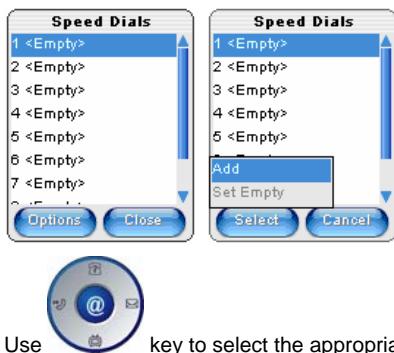

Use  key to select the appropriate Speed Dial entry then press the  key.

1 Speed Dial Entry 1

2 Speed Dial Entry 2

3 <Empty>

4 <Empty>

N <Empty>


Pressing  gives access to the following options:

[Add]/[Change] Change or Add a speed dial to a specific key on your telephone keypad. Please refer to the "Select speed dial" screen below.

[Set Empty] Reset the currently highlighted Speed Dial entry. This will leave the selected slot unassigned.

To close this screen and return to the parent screen, press the  key.

### "Select speed dial" screen

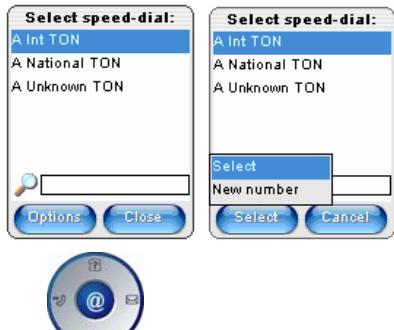

Use  key to browse the Phonebook then press the  key.

Phone book entry 1

Phone book entry 1

Phone book entry N

Pressing  gives access to the following options:

[Select] Select this phonebook entry as the requested speed dial number.

[New Number] Capture a new number that may not already exist in your phonebook. Refer to the Speed Dial "Enter New Number" screen below.

To close this screen and return to the parent screen, press the  key.

### Speed Dial "Enter New Number" screen



Pressing gives access to the following options:

[Save Number] Add the newly entered number to your phonebook. Please refer to the Phonebook "Add Entry" screen for further details.

Press the button to proceed, or press the button to cancel this operation and return to the previous.

## Cell Broadcast Settings

### "CBS Settings" screen



Use key to browse the Settings options then press the key.

This screen is used to set up your preferences regarding receipt of Cell Broadcast messages. These options are also accessible via the CB Service/Settings options from the main menu.

Receive Index	Enable/Disable receipt of CBS Index messages.
Receive messages	Enable/Disable receipt of the actual CBS messages.
Automatic Display	Enable/Disable the automatic display of CBS messages when they are received.
[Change]	Toggle the state of the highlighted setting.

To close this screen and return to the parent screen, press the key.

## Network Settings

### "PLMN" screen



Network selection	Choose between Automatic and Manual network selection. Please refer to the "Network Selection" screen below.
-------------------	--------------------------------------------------------------------------------------------------------------

Registration state

Show the current state of the phone regarding network registration. Please refer to the Registration "Information" screen below.

Network scan


Perform a scan of the available networks. Please refer to the "Network scan" screen below.

Pref. networks:

Manage your list of preferred networks. Please refer to the "Pref. PLMN List" screen below.

To close this screen and return to the parent screen, press the  key.

**"Network Selection" screen**

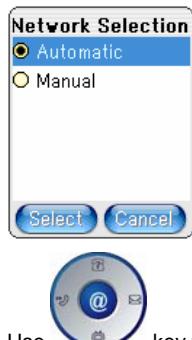

Use  key to browse the Settings options then press the  key.

Automatic


Set the phone to Automatic network search. This is the default and recommended setting.

Manual

Set the phone to manual network search. You will be presented with a list of available networks from which to choose. This is very useful when you are located in an area where there is coverage by two networks and you wish to stay with one specific network. It is essential that you remember to return the T503F back to automatic when leaving a specific network area to continue making and receiving calls.

To close this screen and return to the parent screen, press the  key.

**Registration "Information" screen**

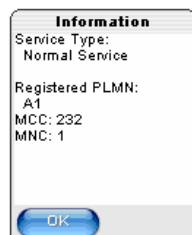

This screen displays information about the network on which you are currently registered.

To close this screen and return to the parent screen, press the  key.

**"Network scan" screen**



PLMN 1

PLMN 2

PLMN N

[Select]

To

close this screen and return to the parent screen, press the  key.

**"Pref. PLMN List" screen**



Use  key to browse the Settings options then press the  key.

Preferred PLMN 1


Preferred PLMN 2

Preferred PLMN N

Pressing  gives access to the following options:

[Replace]	"Network List" screen
[Insert]	:
[Append]	:
[Move Up]	:
[Move Down]	:
[Remove]	Remove the currently highlighted PLMN from your list of preferred networks. Please note that NO further warning or request for confirmation is given.
[Remove All]	Remove ALL entries from your list of preferred networks. Please note that NO further warning or request for confirmation is given.
[Cancel]	{go back one level}

**Preferred PLMN "Replace/Insert/Append" screens**

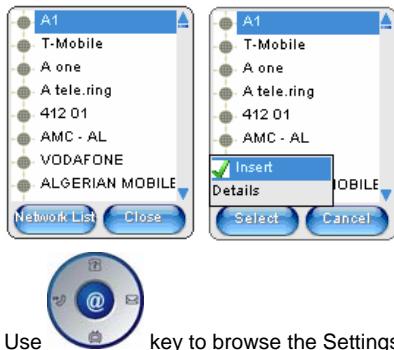

Use  key to browse the Settings options then press the  key.

PLMN 1 {radio button}

PLMN 2 {radio button}


PLMN N {radio button}

Pressing  gives access to the following options:

[Insert]	Add the currently highlighted entry to your preferred PLMN list.
[Details]	Add the currently highlighted entry to your preferred PLMN list.

To close this screen and return to the parent screen, press the  key.

### Preferred PLMN "Details" screen

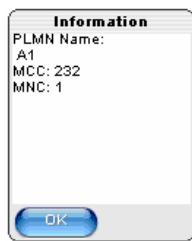

To close this screen and return to the parent screen, press the key.

## Sound Settings

With "Sound Settings" you can set the volume levels and the ringing and key tones.

### "Sound Settings" screen




Use key to browse the Settings options then press the key.

Volume Settings	Set the volume for various audio devices. Refer to the "Volume Settings" screen below.
Key Tones	Refer to the "Key Tones" screen below.
Ringing Tones	You can select the ring tone you prefer, when receiving normal Mobile calls. Refer to the "Ringing Tone" screen below.
Audio Mode	You can select audio mode.

To close this screen and return to the parent screen, press the key.

### "Volume Settings" screen

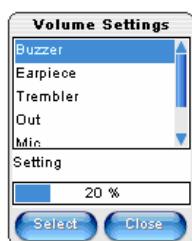

Use key to browse the Settings options then press the key.

Buzzer:	Ring tone emitter
Earpiece:	Voice & Tone emitter
Trembler:	Vibrator
Out:	Handfree
Mic:	Microphone sensitivity
In:	Mic
[Select]	Selection of each volume category is implicit using the Up/Down keys, so this option has no use on this screen.

Press the  key when you are happy with your selections.

### "Key Tones" screen



Use  key to browse the Settings options then press the  key.

Silent: No sound is made when keys are pressed.

DTMF tones: When keys are pressed, emit DTMF tones. These are similar to the tones that can be heard on a normal touch-tone telephone when keys are pressed.

Klick: Emit a discrete clicking sound each time a key is pressed.


When you are happy with your selection, press the  button to return to the previous screen.

### "Ringing Tone" screen



Use  key to browse the Settings options then press the  key to activate your choice. As you are switching through the choices, the associated ring tone is emitted navigating through the ring tone buzzer.

### "Audio Modes" screen

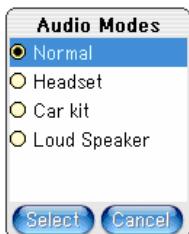


Use  key to browse the Audio Modes options then press the  key.

When you are happy with your selection, press the  button to return to the previous screen.

## Message Settings

### "SMS Settings" screen

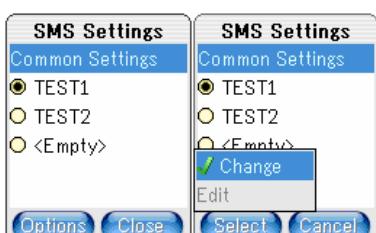

(Also called from "Main Menu/Messages/Settings" menu item)



Use  key to browse the Settings options then press the  key.

Common Settings: General settings, which are not applicable to any specific profile. Refer to the "Common Settings" screen below.

SMS Profile Entry 1

} Existing SMS profiles

SMS Profile Entry 2

SMS Profile Entry N

<Empty>

Next available slot for a new profile.


Pressing  gives access to the following options:

[Edit]	Modify the settings associated with the currently highlighted profile. Refer to the "SMS Profile" screen below. This option is disabled for "Common Settings". To modify Common Settings, please select the [Change] Option.
[Change]	Modify the Common Settings, or activate the currently highlighted profile, as applicable. Refer to the "Common Settings" screen below for details on changing your common settings.

Press the  button to close the options menu, and the  button to return to the previous screen.

### "Common Settings" Screen

General settings are those settings which are not applicable to any specific profile, but instead are common to all profiles.

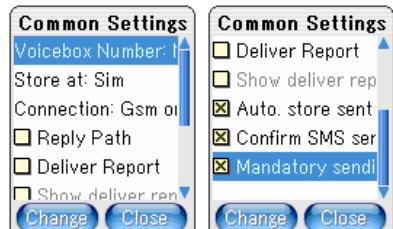

Use  key to browse the Settings options then press the  key.

Voice box number XXX View or modify your voice mailbox number. This number is used and is necessary in the retrieval of your voice mail. Refer to the "Voice Box" screen below.

Store at: XXX Specify the default storage location for your messages. Refer to the "SMS Storage" screen below.

Connection: XXX Specify the transport medium for your short messages eg GSM or GPRS. Refer to the "SMS Connection" screen below.

Reply path Specify a reply address which is different to your normal telephone number. If specified, any replies to your message(s) will be sent to the specified number instead of this phone.

Deliver Report If enabled, the network will notify you (by means of a special short message) that your outgoing message has been delivered to the recipient(s).

Show deliver report If enabled, any received delivery reports are displayed on the screen immediately as they are received. Otherwise, the delivery reports are stored in your Inbox similar to your normal received messages. Note that the receipt of Delivery Reports is dependant on the state of the "Delivery Report" setting.

Auto store sent SMS If enabled, copies of your sent messages are automatically stored in your Outbox. Otherwise, no record is kept of your sent messages.

Confirm SMS Sending If enabled, your phone will prompt you for confirmation prior to the transmission of outbound messages.

Mandatory Sending Preview :

To close this screen and return to the parent screen, press the  key.

### "Voice Box" screen

View or modify your voice mailbox number. This number is used and is necessary in the retrieval of your voice mail.



Enter your Voice Mailbox number. Your Network operator provides this number. Please refer to the documentation that came with your subscription/SIM.

Press the  button to proceed, or press the  button to cancel this operation and return to the previous screen.

### "SMS Storage" screen

Specify the default storage location for your messages.



Use  key to browse the Settings options then press the  key.

Sim	Always store your messages in the SIM.
Sim preferred, (Sim, Phone)	Store your messages in the SIM, but if this fails for any reason (eg SIM memory is full), then store the messages in your phone.
Phone preferred, (Phone, Sim)	Store your messages in the Phone, but if this fails for any reason (eg Phone memory is full), then store the messages in your SIM.
Phone	Always store your messages in the Phone.

Press the  button to proceed, or press the  button to cancel this operation and return to the previous screen.

### "SMS Connection" screen



Use  key to browse the Settings options then press the  key.

Gsm preferred (Gsm, Gprs)	Use the conventional GSM channel for message delivery. If this fails for any reason, then
---------------------------	-------------------------------------------------------------------------------------------

use GPRS.

Gprs preferred (Gprs, Gsm)	Use the GPRS channel for message delivery. If this fails for any reason, then use GSM.
Gsm only	Always use the GSM channel for message delivery.
Gprs only	Always use the GPRS channel for message delivery.

 
Press the  button to proceed, or press the  button to cancel this operation and return to the previous screen.

### "SMS Profile" screen




Use  key to browse the select the settings that you want to view/modify, then press the  key.

Name:	View/Modify the name of this profile. This name is cosmetic only. Refer to the "Profile Name" screen below.
Service Centre	View/modify the service centre number for incoming and/or outbound messages. Your Network operator provides this number. Please refer to the documentation that came with your subscription/SIM. Please refer to the "Service Centre" screen below.
Default Address	This is the Refer to the "Default Address" screen below.
Validity Period	View/specify the amount time that your sent message remain on the server pending delivery. Refer to the "Validity Period" screen below.
Message Type	View/specify the "type" of your out bound messages eg SMS, Fax etc. Please refer to the "Message Type" screen below.

To close this screen and return to the parent screen, press the  key.

### "Profile Name" screen


This screen allows you to view/modify the name of your Messaging profile. This name is cosmetic only.

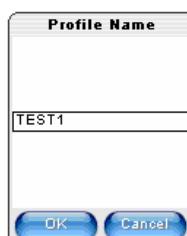

Press the  button to accept your changes, or press the  button to cancel this operation and return to the previous screen.


### "Service Centre" screen

This screen allows you to view/modify the service centre number for incoming and/or outbound messages. Your Network operator provides this number. Please refer to the documentation that came with your subscription/SIM.

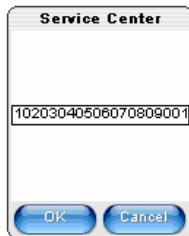

Press the button to accept your changes, or press the button to cancel this operation and return to the previous screen.

#### **"DefaultAddress" screen**

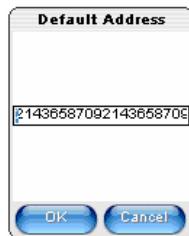

Press the button to accept your changes, or press the button to cancel this operation and return to the previous screen.

#### **"Validity Period" screen**

View/specify the amount time that your sent message remain on the server pending delivery.



Use key to browse the options then press the key to activate/save your selection.

12 hours

1 day

1 week

1 month

3 months

Maximum

Manual

Select the message validity on a "per message" basis. i.e. you will be prompted for the message validity when you send each message. |

Press the button to cancel this operation and return to the previous screen.

#### **"Message Type" screen**

This screen allows your to view/specify the "type" of your out bound messages eg SMS, Fax etc.



Use key to browse the options then press the key to activate/save your selection.

Text

Telex

Telefax (Group 3)

Fax (or Facsimile)

Pager

Teletex (Carrier unspecified)

X400

Gsm/Umts

Manual

Select the message type on a "per message" basis. i.e. you will be prompted for the message type when you send each message.

Press the button to cancel this operation and return to the previous screen.

## Camera

Using the Camera application built in your phone, you can display previews of people or events while on the move.

In order to take photos, push  button in Idle Screen.

### ***"Take a Photo" screen***



On entry to this screen, you can see the previews of people or events while on the move.


The camera lens is on the back of the phone, and you can use the display as a viewfinder. The maximum resolution of photo will be 640\*480

Pressing  close this sub menu.

## Call Records

The Call Records application stores the phone numbers and other charge related information of outgoing, incoming and missed calls.

### "Call Records" Sub-menu

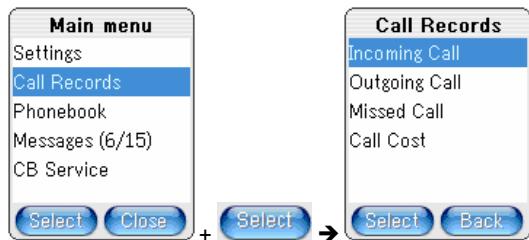

Use  key to browse the following call records menu then press the  key.

### Incoming Call Records

#### "Incoming Call Records" screen



On entry to this screen, a summary list of received calls is displayed indicating the person that called and when the call was made. If a caller's number is listed in the phonebook, then the users name appears here instead of his/her number. If the caller's number was withheld for any reason (eg due to the caller withholding his/her identity), then this is indicated accordingly.

Pressing  gives access to the following options:

[Details]	Display additional information regarding the highlighted entry, as described in the next section.
[Call]	Place a call to the phone number associated with the highlighted entry. If no telephone number is available (eg due to the caller withholding his/her identity) then this options is greyed-out and not selectable. Please see the "Making a Call" section in this guide.
[Delete]	Delete the highlighted entry from the call records.  WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.
[Delete All]	Delete all entries from the incoming call records.  WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.
[To phonebook]	Add the incoming phone number to your address book.
[Cancel]	Close this sub menu

#### "Incoming Call Details" screen



[Call]


Place a call to the phone number associated with the highlighted entry. If no telephone number is available (eg due to the caller withholding his/her identity) then this options is greyed-out and not selectable. Please see the "Making a Call" section in this guide.

[Cancel]

Close this screen and return to the call records list.

#### Outgoing Call Records

##### "Outgoing Call Records" screen

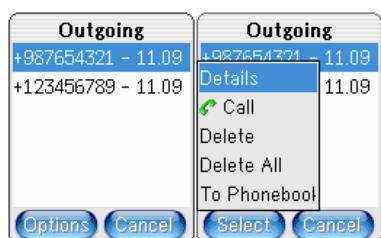

On entry to this screen, a summary list of dialled calls is displayed indicating the person that was called and when the call was made. If a number called is listed in the phonebook, then the users name appears here instead of his/her number.

Pressing gives access to the following options:

[Details]

Display additional information regarding the highlighted entry, as described in the next section.

[Call]

Place a call to the phone number associated with the highlighted entry. If no telephone number is available (eg due to the caller withholding his/her identity) then this options is greyed-out and not selectable. Please see the "Making a Call" section in this guide.

[Delete]

Delete the highlighted entry from the call records.

WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.

[Delete All]

Delete all entries from the incoming call records.


WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.

[To Phonebook]

Append outgoing phone number to phonebook.

Pressing close this sub menu.

##### "Outgoing Call Details" screen

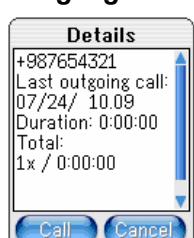


[Call] Place a call to the phone number associated with the highlighted entry. If no telephone number is available (e.g. due to the caller withholding his/her identity) then this options is greyed-out and not selectable. Please see the "Making a Call" section in this guide.

[Cancel] Close this screen and return to the call records list.

## Missed Call Records

### "Missed Call Records" screen

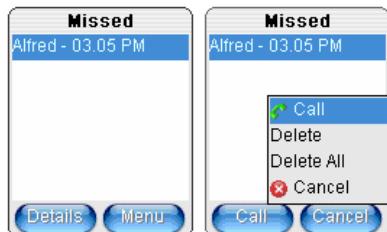

On entry to this screen, a summary list of missed or rejected calls is displayed indicating the person that called and when the call was made. If the caller's number is listed in the phonebook, then the users name appears here instead of his/her number. If the caller's number was withheld for any reason (eg due to the caller withholding his/her identity), then this is indicated accordingly.

[Details] Display additional information regarding the highlighted entry, as described in the next section.

Pressing  gives access to the following options:

[Call] Place a call to the phone number associated with the highlighted entry. If no telephone number is available (eg due to the caller withholding his/her identity) then this options is greyed-out and not selectable. Please see the "Making a Call" section in this guide.

[Delete] Delete the highlighted entry from the call records.  
WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.

[Delete All] Delete all entries from the incoming call records.  
WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.

[Cancel] Close this sub menu

### "Missed Call Details" screen



[Call] Place a call to the phone number associated with the highlighted entry. If no telephone number is available (eg due to the caller withholding his/her identity) then this options is greyed-out and not selectable. Please see the "Making a Call" section in this guide.

[Cancel] Close this screen and return to the call records list.

## Call Cost

### "Call Cost Records" screen




On entry to this screen, a list of call cost is displayed.

[Last Cost]	:
[Total Cost]	:
[Max Cost]	:
[Reset Counters]	:
[Set Max Units]	:
[Set Currency]	:
[Set Price per Unit]	:

## Phonebook

*Everything you need to know about the phone book has been grouped together in this section, from storing names and numbers to recalling and dialling.*

The T503F Tri band GSM phone is capable of storing phonebook entries in both its main memory and in the SIM. The main phonebook (in the phone memory) has additional storage and information capability. It is advised that this be used wherever possible. On the SIM, the number of phone book numbers allowed is determined by the capacity of the SIM, and differs from one SIM to the next.. In both phonebooks, recalling of entries is by location number, by name, or by browsing through the phone book one by one.

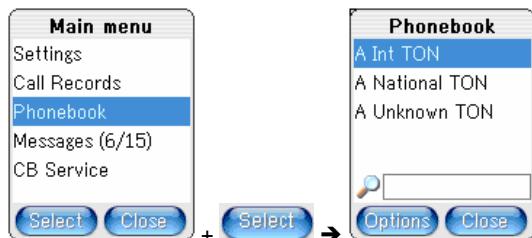

As mentioned, the T503F offers two phonebook implementations:

The basic Phonebook consists of:


- SIM-only support
- Name and one phone number supported
- Call, Add, edit, delete entries
- Display names and details
- Display SIM position of entry
- Display space left on SIM
- Display statistics
- Phonebook Services

The advanced (or main) Phonebook offers the following additional features:

- Phone memory (Flash/NvRam) support
- Intelligent copy from SIM to Phonebook and back by hand
- Display of storage space remaining in memory.
- Up to three phone numbers per name is supported
- People/contacts can be assigned to groups
- It is possible to switch between SIM- and Phone-Phonebook
- The telephone numbers are vCard compliant.

## Using the Phonebook

### Main Phonebook screen

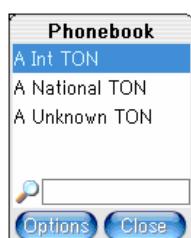

This screen allows for the selection or input of phonebook entries. The list of phone numbers is read from your phonebook according to your current settings (SIM or Phone etc).

There are two ways in which to locate a phonebook entry:



1. Use the navigation keys to move up and down the list until the required entry is found, then press .

2. If the name for the phonebook entry is known, start typing the name using the keypad as normal. The characters typed


appear in the quick search text box, and the list automatically scrolls to the appropriate location in the list. If there is no entry in the list corresponding exactly to the characters typed, then the highlight is positioned to the entry that would follow such an entry, if it did exist.



Use key to clear and correct any wrongly entered characters. As you get close to the entry, you can also use the



navigation keys to locate the actual entry. When you have found the desired phonebook entry, press in order to carry out the desired action.

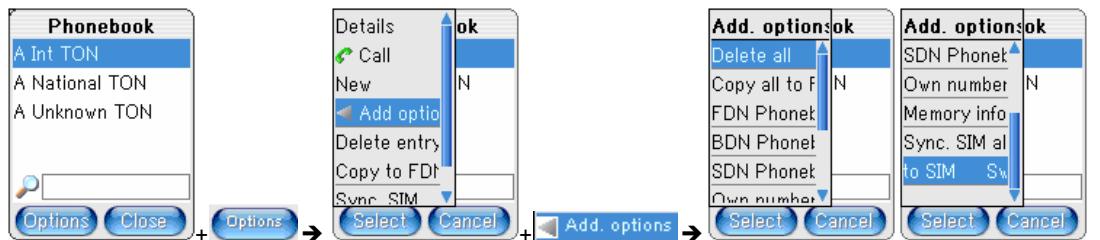

Pressing gives access to the following options:

[Details]

View the details of the currently highlighted phonebook entry.

[Call]

Place a voice call to this person. Please refer to the "Outgoing Call" section above.

[New]

Create a new entry to your phonebook. Please refer to the Phonebook "Add Entry" screen below.

[Delete entry]

Delete the currently highlighted item from the phonebook.

A confirmation/warning screen is displayed before the actual deletion takes place. Please refer to the "Phonebook Delete Entry" screen below.



[Copy to FDN]

Copy the selected phonebook entry to the FDN (Fixed Dial Numbers" list. You will be prompted for PIN2 in order to authorise this action. Please refer to the security section of this guide for further details.

[Sync. SIM]


Synchronise the selected phonebook entry with the SIM.

Pressing ("Additional Options") gives access to the following functions:

[Delete All]

Delete ALL entries from your phone book.

A confirmation/warning screen is displayed before the actual deletion takes place. Please refer to the "Phonebook Delete All" screen below.

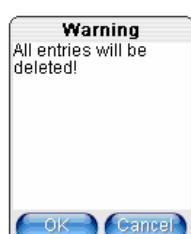

[Copy all to FDN]

Copy ALL the phonebook entries to the FDN (Fixed Dial Numbers" list. You will be prompted for PIN2 in order to authorise this action. Please refer to the security section of

this guide for further details.

[FDN Phonebook] Display your list of "Fixed Dial Numbers". Please refer to the "FDN Phonebook" section below.

[BDN Phonebook] Display your list of "Blacklisted Dial Numbers". Any numbers entered into this list are blocked for both incoming and outgoing call. Please refer to the BDN Phonebook section later in this chapter.

[SDN Phonebook] :

[Own numbers] Display your "Own Numbers". For further information, please see the Phonebook "Own Numbers" section below.


[Memory info] Display your current phonebook memory usage. See the Phonebook "Memory In Use" section below.

[Sync. SIM all] Synchronise all the main phonebook entries with the SIM.

[Switch to SIM] Open a new window showing your SIM phonebook. Your SIM phone book is an equivalent, but less advanced version of your main phonebook. The number of entries that can be stored in the SIM is usually substantially less than what can be stored in the phone. The amount and type of information that can be stored is also somewhat less than that in the main phonebook. Please refer to the "SIM Phonebook" section below.


Pressing  closes the Options menu, and pressing  closes this screen and returns to the parent screen.

### Phonebook Entry "Details" screen

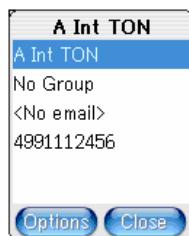

This screen contains details of the phonebook entry, including Name, Group, email address and Telephone number.

Pressing  access to the following options:

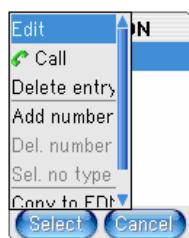

In order to change one of the details, Use the  navigation keys to select the required line and then press Please refer to the Phonebook entry edit section below.

Select the  option when you are happy with your changes.

### SIM Phonebook screen



This screen allows for the selection or input of phonebook entries. The list of phone numbers is read from your phonebook according to your current settings (SIM or Phone etc). The functionality is similar to that of the "Main Phonebook screen" – please refer to this for further information.

Pressing  gives access to the following options:


[Details]	View the details of the currently highlighted SIM entry.
[Call]	Place a voice call to this person. Please refer to the "Outgoing Call" section above.
[New]	Create a new entry to your SIM. Please refer to the SIM Phonebook "Add Entry" screen below.
[Delete entry]	Delete the currently highlighted item from the SIM phonebook. A confirmation/warning screen is displayed before the actual deletion takes place. Please refer to the "Phonebook Delete Entry" screen below.



[Sync. Phone]	Synchronise the selected SIM entry with the main phonebook.
---------------	-------------------------------------------------------------

Pressing  ("Additional Options") gives access to the following functions:


[Delete All]	Delete ALL entries from your SIM phone book. A confirmation/warning screen is displayed before the actual deletion takes place. Please refer to the "Phonebook Delete All" screen below.
--------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

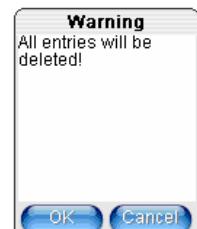

[Sync. Phone all]	Synchronise all of the entries in the SIM with the main phonebook.
-------------------	--------------------------------------------------------------------

Pressing  closes the Options menu, and pressing  closes this screen and returns to the "Main Phonebook" screen.

### **SIM Phonebook Entry "Details" screen**

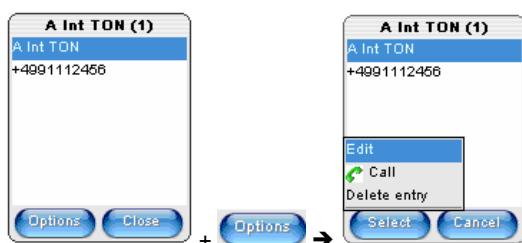

This screen contains details of the phonebook entry, including Name and Telephone number.

Pressing  gives access to the following options:

[Edit]	Phonebook Edit Entry screen
[Call]	Place a voice call to this person. Please refer to the "Outgoing Call" section above.
[Delete entry]	Delete the currently highlighted item from the SIM phonebook. A confirmation/warning screen is displayed before the actual deletion takes place. Please refer to the "Phonebook Delete Entry" screen below.





In order to change one of the details, use the navigation keys to select the required line and then press + **Edit**. Please refer to the Phonebook entry edit section below.

Select the **Close** option when you are happy with your changes.

## Managing the phone book

### Phonebook Edit Entry screen

The Phonebook Edit Entry screen applies to both the main phonebook and the SIM phonebook, and can be reached by selecting the Edit option from the Details screen.

In the case of the main phonebook, the screens look as follows:



...and in the case of the SIM phonebook, the screen looks similar, but with fewer fields:



Use the navigation keys to move left or right. Press **@** key to erase the character preceding the cursor.

Press the **OK** button to save your changes, or the **Cancel** button to discard the changes and return to the details screen.

### Phonebook Delete Entry screen

The Phonebook Delete Entry screen applies to both the main phonebook and the SIM phonebook.



This screen is displayed to confirm that you really do want to delete the specified phonebook entry. This will reduce the risk of deleting your contacts inadvertently. After you have confirmed this deletion, this action cannot be un-done.

[Yes]


Delete the entry and return to the phonebook screen

[No]

Return to the phone book screen without deleting the entry.

### Phonebook "Add Entry" screen

The Phonebook Delete Entry screen applies to both the main phonebook and the SIM phonebook.

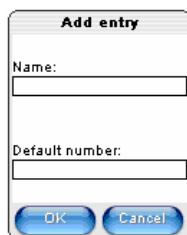


Use the navigation keys to move left or right. Press key to erase the character preceding the cursor.

Press the button to save your changes, or the button to discard the changes and return to the details screen.

### Phonebook Delete All screen

The Phonebook Delete All screen applies to both the main phonebook and the SIM phonebook.

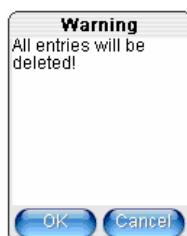

This screen is displayed to confirm that you really do want to delete ALL of the relevant phonebook entries. This will reduce the risk of deleting your contacts inadvertently. After you have confirmed this deletion, this action cannot be un-done.

[Yes] Delete the entry and return to the phonebook screen

[No] Return to the phone book screen without deleting the entry.

## FDN & BDN Phonebooks

This section allows you to control the numbers used on your phone.

FDN (Fixed Dialling) allows you to limit the use of your phone (typically a friend or family member) to only the numbers stored in your FDN list in your phonebook. This is different to call barring, which blocks only certain types of call.

BDN allows you to exclude calls from certain numbers. This is also known as a "Black List".

These two concepts are almost identical in structure and maintenance, so they are handled together in this section.


Any additions, changes or deletions to the FDN list is regarded as a security sensitive function, so as such requires entry of your SIM PIN2. This is the code that controls fixed dialling on your T503F phone. For details on changing your PIN2, see the section on Security.

### "FDN/BDN Phonebook" screens

Fixed Dialling:



Banned Dialling:

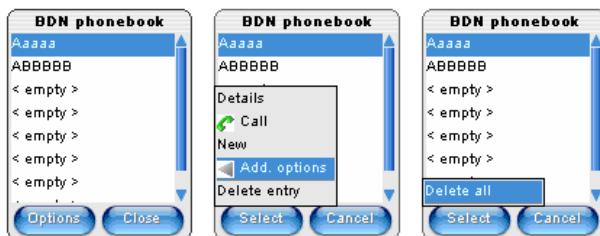

Pressing gives access to the following options:


- [Details] Display the details of the currently highlighted FDN/BDN entry. Please refer to the FDN/BDN "Add Entry" section below.
- [Call] Place a voice call to this number. Please refer to the "Outgoing Call" section above.
- [New] Add a new entry to your FDN/BDN Phonebook. You will be prompted to enter your PIN2 before the new entry screen appears. Please refer to the FDN/BDN "Add Entry" screen below.
- [Delete entry] Delete the currently highlighted item from the FDN/BDN phonebook. You will be prompted to enter your PIN2 before a confirmation/warning screen is displayed. Only then does the actual deletion takes place. Please refer to the "FDN/BDN Delete Entry" screen below.



- [Copy to PB] Copy the currently highlighted entry to the phonebook.


Pressing ("Additional Options") gives access to the following function:

- [Delete All] Delete ALL entries from your FDN/BDN phonebook. You will be prompted to enter your PIN2 before a confirmation/warning screen is displayed. Only then does the actual deletion takes place. Please refer to the "FDN/BDN Delete All" screen below.

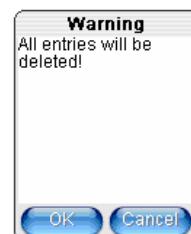

Pressing closes the Options menu, and pressing closes this screen and returns to the "FDN/BDN Phonebook" screen.

#### "FDN/BDN Details" screen

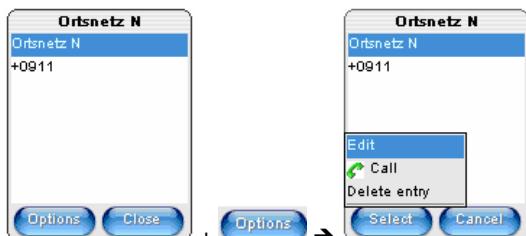

This screen contains details of the FDN/BDN phonebook entry, including Name and Telephone number.


Pressing gives access to the following options:

- [Edit] Edit the currently highlighted field. Please see the FDN/BDN Edit Entry screen below.

[Call] Place a voice call to this person. Please refer to the "Outgoing Call" section above.

[Delete entry] Delete the currently highlighted item from the FDN/BDN phonebook.

A confirmation/warning screen is displayed before the actual deletion takes place. Please refer to the "FDN/BDN Delete Entry" screen below.

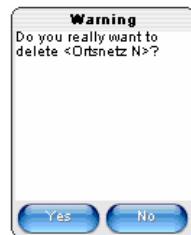


In order to change one of the details, use the navigation keys to select the required line

and then press + . Please refer to the Phonebook entry edit section below.

Select the option when you are happy with your changes.


#### **"FDN/BDN Edit" screen**

The FDN/BDN Phonebook Edit Entry screen can be reached by selecting the Edit option from the Details screen.

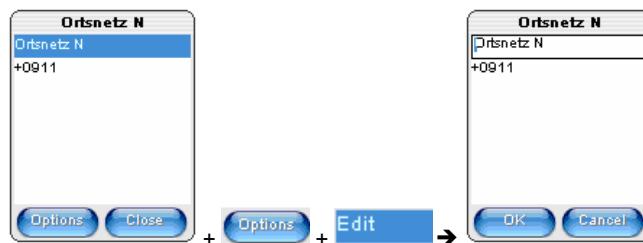

Use the navigation keys to move left or right. Press key to erase the character preceding the cursor.

Press the button to save your changes, or the button to discard the changes and return to the details screen.

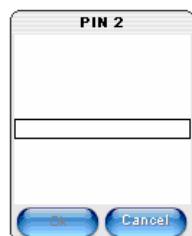


You will be prompted to enter your PIN2 before the modified entry can be saved to the FDN/BDN phonebook. Please refer to the section on Security for details of your PIN2.

#### **"FDN/BDN Add Entry" screen**

Add a new entry to your FDN/BDN Phonebook.



You will be prompted to enter your PIN2 before the new entry screen appears. Please refer to the section on Security for details of your PIN2.

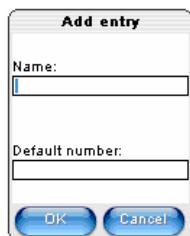


The 'Add entry' screen is a rectangular window with a title bar 'Add entry'. It contains two text input fields: 'Name:' and 'Default number:'. Below the fields are two buttons: 'OK' and 'Cancel'. At the bottom of the screen is a circular navigation key with a central '@' symbol and four arrows pointing left, right, up, and down.

Use the navigation keys to move left or right. Press the  key to erase the character preceding the cursor.

Press the  button to save your changes, or the  button to discard the changes and return to the details screen.

#### **"FDN/BDN Delete Entry" screen**

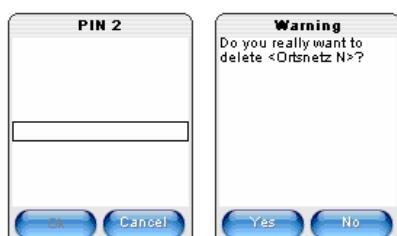


The 'FDN/BDN Delete Entry' screen consists of two side-by-side windows. The left window is titled 'PIN 2' and contains a text input field. The right window is titled 'Warning' and contains the text 'Do you really want to delete <Ortsnetz N>?'. Both windows have 'OK' and 'Cancel' buttons at the bottom.

You will be prompted to enter your PIN2 before being prompted for confirmation of the deletion. Please refer to the section on Security for details of your PIN2.

This screen is displayed to confirm that you really do want to delete this FDN/BDN phonebook entry. This will reduce the risk of deleting your contacts inadvertently. After you have confirmed this deletion, this action cannot be un-done.

[Yes]	Delete the entry and return to the phonebook screen
[No]	Return to the phone book screen without deleting the entry.

#### **FDN/BDN Delete All screen**

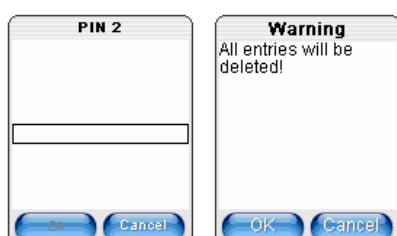

The 'FDN/BDN Delete All' screen consists of two side-by-side windows. The left window is titled 'PIN 2' and contains a text input field. The right window is titled 'Warning' and contains the text 'All entries will be deleted!'. Both windows have 'OK' and 'Cancel' buttons at the bottom.


You will be prompted to enter your PIN2 before being prompted for confirmation of the deletion. Please refer to the section on Security for details of your PIN2.

This screen is displayed to confirm that you really do want to delete ALL FDN/BDN phonebook entries. This will reduce the risk of deleting your contacts inadvertently. After you have confirmed this deletion, this action cannot be un-done.

[Yes]	Delete the entries and return to the FDN/BDN phonebook screen
[No]	Return to the FDN/BDN phonebook screen without deleting any entries.

## Own Numbers

### Phonebook "Own Numbers" screen

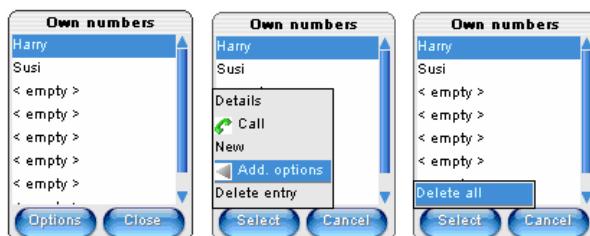


Pressing **Options** gives access to the following options:

[Details]  
[Call]  
[New]

Phonebook "Own Numbers Detail" screen. Please see below.  
Place a voice call to this number. Please refer to the "Outgoing Call" section above.  
Create a new "Own number". This is functionally equivalent to the Phonebook function. Please refer to the Phonebook "Add Entry" screen above for details.


[Delete Entry]

Delete the currently highlighted item from the Own Numbers list. A confirmation/warning screen is displayed before the actual deletion takes place.

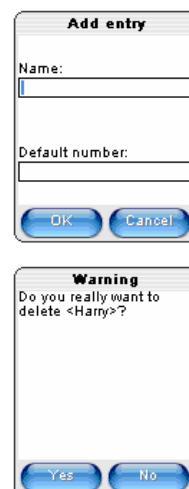

Pressing **Add. options** ("Additional Options") gives access to the following functions:

[Add. options]/[Delete All]: Delete ALL entries from your SIM phone book.  
A confirmation/warning screen is displayed before the actual deletion takes place.

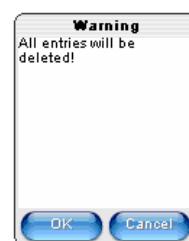

Pressing **Cancel** closes the Options menu, and pressing **Close** closes this screen and returns to the parent screen.


### Phonebook "Own Numbers Detail" screen



Pressing **Options** gives access to the following options:

[Edit]

Edit the currently highlighted field. Please refer to the Phonebook Add Entry screen for details of navigation controls and editing functions.

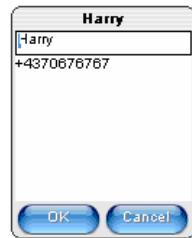

[Call]

Place a voice call to this number. Please refer to the "Outgoing Call" section above.

[Delete Entry]

Delete the currently highlighted item from the Own Numbers list. A confirmation/warning screen is displayed before the actual deletion takes place.



Pressing closes the Options menu, and pressing closes this screen and returns to the parent screen.

## Memory Usage

### Phonebook "Memory In Use" screen



This screen displays your current phonebook memory usage.

Select the option to return to the phonebook screen.

## Messages (SMS, Short Message Service)

The T503F Tri band GSM/GPRS phone is capable of sending and receiving SMS messages including service provider dependent email and fax transmission and reception through the SMS.


The T503F supports concatenated SMS messages, so your messages are NOT restricted to the 160 character limit of many other phones.

This chapter explains how to compose, browse, reply and save those messages.

Summary of features:

- Inbox, Outbox, Reports, Archive
- Compose, Reply & Forward SMS
- Edit last sent SMS
- Send and Store on SIM
- Forward/Reply SMS
- Display SMS
- Show Capacity Information
- Supported Message Types: Text, Telex, Pager, Fax, GSM-UMTS, x400, Teletex
- Supported Validity Periods: 1 hour, 12 hours, 24 hours, 1 week, 1 month, 3 month, Maximum
- Supported Settings: Service Centre Address, Default Destination, Validity Period, Message Type, Voice Box Number, Mandatory Sending Preview, Auto Store, Delivery Report, Show Delivery Report on Idle-Screen, Sending Confirmation
- Idle-Screen Indications for arrived and pending SMS
- SMS-Service
- Notify Indication-Service

The Messages application can be found on the main menu, as follows:

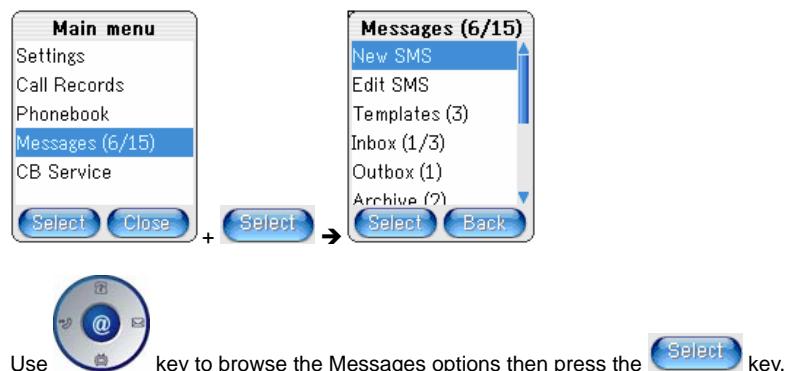

Use  key to browse the Messages options then press the  key.

### "Messages" Sub-menu

New SMS	Compose a new message. Please refer to the "Write SMS" screen below.  NOTE: If you were previously composing a message, that message will be cleared in order to start a new message. If you wish to continue working on an earlier "new" message, please use the "Edit SMS" option.
Edit SMS	Continue editing a message. Please see the "Write SMS" screen below.
Templates (N)	Select a Template to be used in creation of a new message. A Template is a pre-created, partially complete generic message that can be quickly modified for sending.  Eg "Sorry, I will be -- minutes late on --."  Please see the "Templates" screen below.
Inbox (X/Y)	Open your messages Inbox. The Inbox contains your received/saved messages. Please refer to the "Inbox" screen below.
Outbox (N)	Open your messages Outbox. The Outbox contains your sent messages. Please refer to the "Outbox" screen below.
Archive (N)	Open your messages Archive box. The Archive folder contains your archived & saved


Reports (N)	messages. Please refer to the "Archive" screen below.
Waiting Messages (N)	The reports box contains your received message reports eg Delivery successes and failures. The reports that you receive are dependent on your settings and configuration (see Message Settings/Common Settings/Deliver Report). Please refer to the "Reports" screen below.
Settings	Please refer to the "Waiting Messages" screen below.
Detail infos	View and/or modify your message settings and preferences. This is identical to the settings screen that can be accessed via the "Settings" option on the Main menu. Please see the "SMS Settings" screen in the Settings chapter of this guide.
	View status and memory information of your phone. Please refer to the "SMS Detail" screen below.

## Composing and Sending SMS Messages

This section applies to both the "New SMS" and "Edit SMS" options on the Messages menu.

NOTE: If you were previously composing a message, you need to select the "Edit SMS" option in order to continue working on that message. **IF YOU SELECT "NEW SMS", THE PREVIOUS SEMI-COMPOSED MESSAGE WILL BE LOST.**

### "Write SMS" screen

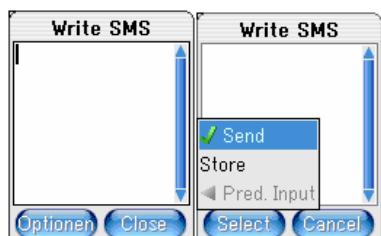

This is where you can compose and send SMS messages.

Your message may contain texts. As you are typing, the text will automatically wrap to the next line, keeping each word intact (where possible).

In order to compose messages (or indeed phone book entries) you will use the numeric keypad of your phone to enter text, numbers, spaces and punctuation.

Each keypad number is also used to enter several alpha characters. For message entry, you must repeatedly press the key that shows the character that you want, until it appears on display. You must wait a short while for the phone to accept this character if the next character you wish to enter is located on same key that you have just pressed.

Press  key to insert space between characters.

To switch between uppercase and lowercase letters, press  key before typing the characters.

Press  key to erase the character preceding the cursor.

Press  key and  key to move left or right to edit or delete a wrongly entered character, and then re-type the new character(s).

Press the  then select  when the text message is complete and you are ready to send it.

The key assignments are as follows:

<b>1 QWERTY</b>	. , ! ? : ' " ( ) % & 1	<b>2 ABC</b>	a b c 2
<b>3 DEF</b>	d e f 3	<b>4 GHI</b>	g h i 4
<b>5 JKL</b>	j k l 5	<b>6 MNO</b>	m n o 6
<b>7 PQRS</b>	p q r s 7	<b>8 TUV</b>	t u v 8
<b>9 WXYZ</b>	w x y z 9	<b>0</b>	space + - x * / = > < # 0
<b>*</b>	* (asterisk)	<b>#</b>	abc / ABC (change case)

Pressing  gives access to the following options:

[Send] Send the message. Please see the "Send SMS to:" screen below.  
 [Store] Save the message to the Archive folder. An information dialog box is briefly displayed stating: "SMS has been stored".

Pressing  closes the Options menu, and pressing  closes this screen and returns to the parent screen.

#### Some notes on message size:

Most network operators charge for text messages on a "per segment" basis, where one segment is equivalent to approximately 160 characters. Typically, each segment is a chargeable text message.

Please refer to your Network Operator for information regarding charging and cost of text messages.

Each time a special format is selected (eg different font, colour etc - see [Format] below), this takes up an equivalent of 8 characters internally. i.e. each special format reduces the effective message length by 8 bytes. Each image or sound entered takes up an additional 6 characters of the message.

The top line of the screen shows information about the size of your current message. Specifically, the line shows how many segments comprise the current message, and how much space is remaining in the current segment. eg "Seg.: 1, Free: 157" indicates that your message is made up of a single segment, and you have space for an additional 157 characters.

#### "Send SMS to:" screen

This screen allows for the selection or input of a telephone number to whom to send your message. The list of phone numbers is read from your phonebook according to your current settings (SIM or Phone etc).

There are two ways in which to locate a phonebook entry:



1. Use the  navigation keys to move up and down the list until the required entry is found, then press .

2. If the name for the phonebook entry is known, start typing the name using the keypad as normal. The characters typed


appear in the quick search  text box, and the list automatically scrolls to the appropriate location in the list. If there is no entry in the list corresponding exactly to the characters typed, then the highlight is positioned to the entry that would follow such an entry, if it did exist.

Use  key to clear and correct any wrongly entered characters. As you get close to the entry, you can also use the



navigation keys to locate the actual entry. When you have found the desired phonebook entry, then press



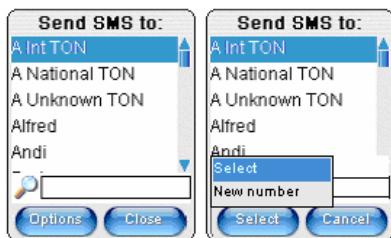

This screen contains the following:

Phonebook entry 1  
Phonebook entry 2  
Phonebook entry N

Quick Search field: This is the quick search entry field. Characters/keys pressed are displayed here and the phonebook list is scrolled automatically to the appropriate location.

Pressing gives access to the following options:

[Select] Select the currently highlighted address book entry  
[New number] Type in a telephone number manually.

### **SMS "New Number" screen**

This screen allows for the direct input of a telephone number to whom to send your message.



Pressing gives access to the following options:

[Save Number] Save the typed number to the phone book. For further details, please refer to the Phonebook "Add Entry" section below.  
[Cancel] Return to the "Send SMS to" screen without entering a number.

### **"Templates" screen**

Select a Template to be used in creation of a new message. A Template is a pre-created, partially complete generic message that can be quickly modified for sending.

Eg "Sorry, I will be -- minutes late on --."



This screen contains the following:

Late "Sorry, I will be -- minutes late on --"  
Appointment "Let us meet. On: --; At: --; In: --"  
Congratulations "Dear --. Congratulations to your -- from --."  
[Forward] Create a new SMS message, with the highlighted template pasted into the message area ready for editing. Please see the "Write SMS" section above.  
[Close] Close this screen and return to the Messaging menu, without choosing a template.

## Viewing and Managing SMS Messages

### "Inbox" screen

The Inbox contains your received/saved messages. In the list, each message is displayed with an icon and some text. The following icons are used:




Unread/New message



Read message

If the senders phone number exists in your phone book, then the relevant name is displayed, otherwise the phone number is displayed.

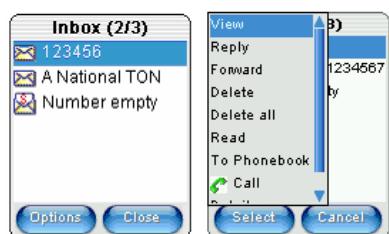

This screen contains the following:

SMS Entry 1

SMS Entry 2

SMS Entry N

} Your received messages.

Pressing  gives access to the following options:

[View]	Open the selected message for viewing. Please refer to the "View SMS" screen below.
[Reply]	Reply to the sender of the highlighted message. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please see the "Write SMS" section above.
[Forward]	Forward the highlighted message to another recipient. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please see the "Write SMS" section above.
[Delete]	Delete the highlighted message.
[Delete all]	WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.
[Read]/[Unread]	Delete all messages from the Inbox.
[To phonebook]	WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.
[Call]	Mark the highlighted message as "Read"/"Unread" as applicable.
[Details]	Add the senders phone number to your address book. You will be prompted for the sender's name. Please refer to the "Add entry to phonebook" screen below.
[Backup Sms]	Place a voice call to the sender of the message. Please refer to the "Outgoing Call" section above.
	Display detailed information for the highlighted message. Please see the "SMS Detail" screen below.
	Backup Sms messages.

Pressing  closes the Options menu, and pressing  closes this screen and returns to the parent screen.

### "View SMS" screen

From here you can view your SMS message.



This screen contains the following:

**SMS Content:** Your message. It may contain text, formatted text, images or sounds. The text will automatically wrap to the next line, keeping each word intact (if possible).

Pressing gives access to the following options:

- [Forward] Forward this message to another recipient. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please see the "Write SMS" section above.
- [Delete] Delete this message.
- WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**
- [Call] Place a voice call to the sender of the message. Please refer to the "Outgoing Call" section above.
- [First] Skip to the first message in the parent list.
- [Prev] Skip to the previous message in the parent list.
- [Next] Skip to the next message in the parent list.
- [Last] Skip to the last message in the parent list.
- [Details] Show detailed information regarding this message. Please refer to the "SMS Detail" screen below.
- [Reply] Reply to the sender of this message. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please see the "Write SMS" section above.


Pressing closes the Options menu, and pressing closes this screen and returns to the parent screen.

### "Outbox" screen

The Outbox contains your messages, which are waiting for transmission. In the list, each message is displayed with an icon and some text. The following icons are used:

- Unread/New message
- Read message

If the senders phone number exists in your phone book, then the relevant name is displayed, otherwise the phone number is displayed.

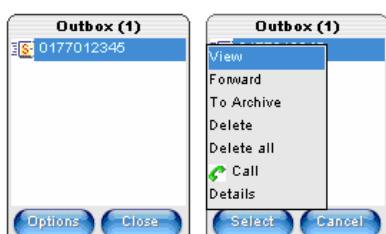

This screen contains the following:

Entry1	{	Your outbox messages
Entry2		

Entry3

Pressing  gives access to the following options:

- [View] Open the selected message for viewing. Please refer to the "View SMS" screen above.
- [Forward] Forward this message to another recipient. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please see the "Write SMS" section above.
- [To Archive] Move the currently highlighted message to the Archive folder. Please refer to the Archive section below.
- [Delete] Delete the highlighted message

**WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**

- [Delete all] Delete ALL messages from the Outbox.
- WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**

- [Call] Place a voice call to the sender of the message. Please refer to the "Outgoing Call" section above.
- [Details] Show detailed information regarding this message. Please refer to the "SMS Detail" screen below.
- [Backup Sms] Backup Sms message.

Pressing  closes the Options menu, and pressing  closes this screen and returns to the parent screen.

### "Archive" screen

The Archive screen contains your archived (stored) messages. In the list, each message is displayed with an icon and some text. The following icons are used:



Stored message



Incomplete message

If the senders phone number exists in your phone book, then the relevant name is displayed, otherwise the phone number is displayed.



This screen contains the following:

- Entry1
- Entry2
- Entry3

  } Your Archived (Stored) messages.

Pressing  gives access to the following options:

- [View] Open the selected message for viewing. Please refer to the "View SMS" screen above.
- [Reply] Reply to the sender of this message. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please see the "Write SMS" section above.
- [Forward] Forward this message to another recipient. The content of this message is pasted into the new message and opened in the message editor to allow you to add your own text. Please

see the "Write SMS" section above.

[Delete]

Delete the currently highlighted message.

**WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**

[Delete all]

Delete all archived messages.

**WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**

[Details]

Show detailed information regarding this message. Please refer to the "SMS Detail" screen below.

Pressing  closes the Options menu, and pressing  closes this screen and returns to the parent screen.

### "Reports" screen

This reports screen contains your received message reports eg Delivery successes and failures. The reports you receive are dependent on your settings and configuration (see Message Settings/Common Settings/Deliver Report). In the list, each message is displayed with an icon and some text. The following icons are used:



Unread/New message



Read message

If the senders phone number exists in your phone book, then the relevant name is displayed, otherwise the phone number is displayed.



Pressing  gives access to the following options:

[View]

Open the selected message for viewing. Please refer to the "View SMS" screen above.

[Delete]

Delete the currently highlighted report.

**WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**

[Delete all]

Delete all reports.

**WARNING: NO FURTHER WARNING OR CONFIRMATION IS OFFERED BEFORE THE DELETION.**

[Details]

Show detailed information regarding this message. Please refer to the "SMS Detail" screen below.

[Backup Sms]

Backup Sms message.

Pressing  closes the Options menu, and pressing  closes this screen and returns to the parent screen.

### "Waiting Messages" screen

This screen contains a list of the message for which delivery reports were requested, but the network has not yet confirmed delivery.




This screen contains the following:

Waiting messages: Your list of waiting messages.

Pressing gives access to the following options:

[First]	Skip to the first message in the parent list.
[Prev]	Skip to the previous message in the parent list.
[Next]	Skip to the next message in the parent list.
[Last]	Skip to the last message in the parent list.
[Call]	Establish a call to your Voice Mail Box. Please refer to the "Outgoing Call" screen in the "Making a phone call" section above. If you have not previously entered the number of your Voice Mailbox, you will be prompted to do so before continuing.

Pressing closes the Options menu, and pressing closes this screen and returns to the parent screen.

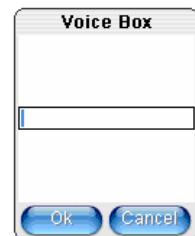


### **"SMS Settings" screen**

This menu option allows you to view and/or modify your message settings and preferences. This is identical to the settings screen that can be accessed via the "Settings" option on the Main menu. Please see the "SMS Settings" screen in the "Settings" chapter of this guide.

### **"SMS Detail" screen**

View status and memory information of your phone.

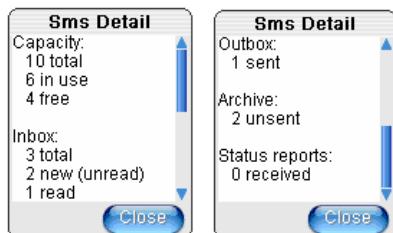

This screen contains the following:

SMS Usage information Details of your SMS sub-system are displayed here.

Pressing the button closes this screen and returns to the parent screen.


## CB (Cell Broadcast Service)

The T503F Tri band GSM/GPRS phone is capable of receiving Cell Broadcast messages.

Cell broadcast is a Tele-service which enables an Information Provider to broadcast short messages to a specified area within the network. Although each message is typically broadcast many times, your phone is designed to receive each message only once. Furthermore, you are able to configure your Cell Broadcast service to filter those messages which are not interesting to you. Reception of Cell broadcast messages is only possible in idle mode, and typically each message is limited to 93 characters.

Your T503F Cell Broadcasting Service application offers the following features:

- Inbox
- Language filtering
- Topic/Channel filtering
- User defined Topics/Channels
- Enhanced index format
- Optional reception of Index messages
- Optional display of messages on the idle screen as they arrive
- Optional receipt of Cell Broadcast messages

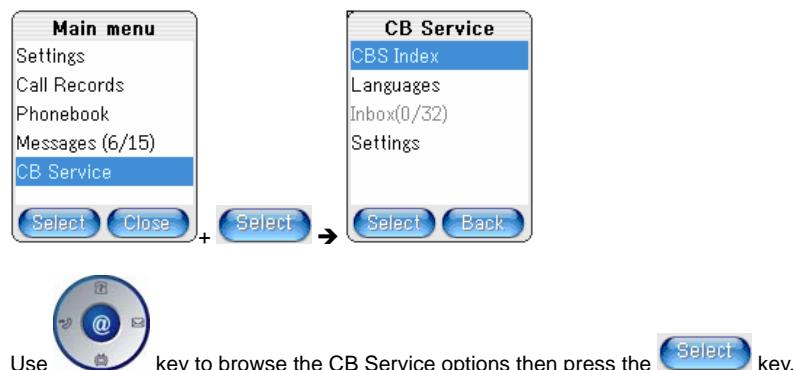

Pressing closes the CB Service screen and returns to the main menu.

### CBS Index

#### "CBS Index" screen



This screen is used to choose which Cell Broadcast topics you are interested in. Specific topics can be selected, or alternatively, All topics can be selected.

Own Topics

Selection of this menu option (using the [Enter] soft key, opens the "Own Topics" screen (see below) where individual Cell Broadcast topics may be enabled or disabled. This item is not active if/while the "All Topics" option is enabled.

All Topics

Checkbox allowing all topics to be enabled. With this item enabled, the Own Topics option is not active.

[Enter]

Selects the highlighted item if it is a menu option, or in the case of "All Topics", this toggles the state of its checkbox, thus enabling or disabling receipt of all cell broadcast topics.

**"Own Topics" screen**



This screen lists all of the specified/requested Cell Broadcast topics. From here topics can be added, modified, enabled/disabled, or removed. The status of each topic is indicated by means of a checkbox next to the Title.

Back	Save any changes and exit to the "CBS Index" screen
"ddee"	An example of an "Own Topic". The "ddee" is a place holder for the Title of the item as specified in the Add or Change screens. For each item that has been created, an entry such as this appears on this "Own Topics" screen. As described above, each topic can be enabled or disabled independently using the [Enter] softkey.
[Enter]	Enable or Disable the state of the highlighted topic.
[Back]	Save any changes and exit to the "CBS Index" screen

Pressing  gives access to the following options:


[Add]	Create a new "Own Topic". You will be prompted to enter an Identifier and a Title. Please see the next section entitled "Add Topic screen".
[Remove]	Remove this topic from your "Own Topic" list. Be aware that no further warning of confirmation is given before deletion.
[Modify]	Change the details (Identifier and/or Title) of the highlighted topic.
[Close]	Close this sub-menu

**"Add Topic" screen**



Identifier	Text entry field allowing entry of the Cell broadcast Topic Identifier.
Title	Text entry field allowing entry of the Cell broadcast Topic Title.
[Ok]	Save entry and exit to "Own Topics" screen
[Cancel]	Discard any changes to this entry and return to "Own Topics" screen

**"Change/Modify Topic" screen**

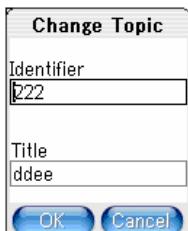

Identifier	Text entry field allowing entry of the Cell broadcast Topic Identifier.
Title	Text entry field allowing entry of the Cell broadcast Topic Title.
[Ok]	Save entry and return to "Own Topics" screen
[Cancel]	Discard any changes to this entry and return to "Own Topics" screen

## CBS Languages

### "Languages" screen



This screen is used to limit/unlimit the languages for which Cell Broadcast messages are received. Specific languages can be selected, or alternatively, All languages can be selected.

If no language is selected, "All languages" is set implicitly.

All Languages

Checkbox allowing All languages to be enabled. With "All languages" enabled, the "Change" softkey becomes disabled disallowing selection of individual languages.

German  
English  
Italian  
French  
Spanish  
Dutch  
Swedish  
Danish  
Portuguese  
Finnish  
Norwegian Nynorsk  
Greek  
Turkish  
Hungarian  
Polish  
Czech  
Hebrew  
Arabic  
Russian  
Icelandic  
[Change]

Checkbox per supported language. With a language enabled, Cell broadcast messages in that language will be received.

Toggle the state of the highlighted language.

Pressing  gives access to the following options:

[Clear]

Clear all the individual settings and restore the default of "All Languages"

[Clear Item]

Return to the main CB Service screen.

[Close]

## CBS Inbox

### *CBS "Inbox" screen*



This screen allows you to view your received cell Broadcast messages

## CBS Settings

### *CBS "Settings" screen*



This screen is used to set up your preferences regarding receipt of Cell Broadcast messages. These options are also accessible via the Settings CB Service options from the main menu.

Receive Index	Enable/Disable receipt of CBS Index messages.
Receive messages	Enable/Disable receipt of the actual CBS messages.
Automatic Display	Enable/Disable the automatic display of CBS messages when they are received.
[Change]	Toggle the state of the highlighted setting.
[Close]	Return to the main CB Service screen.

# Blank Page