

## The usage manual of remote control toy car

Welcoming use type 256CH/239CH/238CH remote control toy car of our company .For insuring the operation is pleasing, please peruse the usage manual below before using it, which make you having enough understanding and use it correctly.

### Part 1 THE OPERATIN METHOD

1. Pack battery in the remote control: Opening the battery covers, put into an 12V layer battery in accordance with the battery pole direction, then put the battery cover
2. Pack battery in the bodywork: Opening bottom battery covers of the toy car, linking up correctly the plug in the battery unit (or battery box) with the electrical outlet on the bottom, and cover the battery cover
3. Turn the switch of the car and transmitter to "ON" position. Please proceed the operation when the Red light is bright
4. Pulling the trigger of the remote control will control the advance and countermarch of the car (note: there is the function of acceleration in trigger of some cars type). Turning the knob on the right will control the car turning to the left or right in drove when car are advancing or countermarching
5. The remote control with the key can distinguish to control the car start voice and trumpet voice
6. Adjusting the direction regulating knob can regulate line when excursion in keeping in front and back straight line
7. The remote control distance of the car would be farther if the pole antenna was pull longer

### Part 2 ANNOUNCEMENTS

1. It can be unload into small piece, Don't swallow them
2. Please use the high-quality alkaline battery or charge battery for developing the toy function well
3. Please choose other environment there is serious wireless wave interference in the operation
4. Please replace the new battery if discovering the car become slower or not summit to control soon
5. If the charge (Ni-Cd ) battery isn't used correctly, it will have fever, leaking liquid etc. dangerous, notice the following affair for this:
  - 1) Please correctly charge the charging battery according to the user manual of the charger
  - 2) (positive, anode) Don't pack mistake
  - 3) When the toy car do not be used, please turn the switch of the car to direction" OFF" position. If do not use it for a long-term, please take the battery saved in order to prevent battery getting worse
  - 4) Do not make the battery short-circuit, this is disallows absolutely
  - 5) The battery can't be used after getting a drenching by the water, because of taking place the short circuit
6. disallow to throw it into the water, fire; disallow to tear it to weld
7. do not break and curving the antenna in fold in order to prevent hurting body
8. do not store near fire or heat, damp places
9. Attention to avoid the hair were reeled in wheel
10. Attention chooses the safe place when play in outdoor
11. That please not to throw literally away the packing after torn downing order to prevent pollution environment.

### **Part 3 Warning**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

### **Part 4 Note**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

#### **- The user's manual should include Service Center in U.S.A**

Company's name: J.C PENNEY PURCHASING COMPANY  
ADD: 6800 VAUEY VIEW AVE, BUENA PARK, CA, 9062 USA.  
TEL: 972 431 3170 FAX: 972 431 9325  
CONTACT: RON GAUUCCL