

USER MANUAL

Radio Controlled Tractor Trucks

Model: 2023/1

CAUTIONS:

1. Charge the product before use.
2. Use only the special charger for charging the product. The whole charging course needs 4 hours.
3. The battery group will gain heat after use. Please wait till they have completely cooled down before charging them.
4. Do not try to disassemble the battery group.
5. Do not charge the battery group if they are disassembled or you find any abnormal phenomena on the battery group. Such as electrolyte leakage and corrosion.
6. Do not throw the battery group into water to avoid short circuit.
7. The nickel-cadmium battery can be used repeatedly.

Battery Installation:

1. Non-rechargeable battery is not to be recharged.
2. Only battery of the same or equivalent type as recommended is to be used.
3. Battery is to be inserted with the correct polarity.
4. Exhausted battery is to be removed from the toy.

5. The supply terminals are not to be short circuited.
6. Do not use rechargeable battery.
7. Do not mix old and new batteries.
8. Do not mix alkaline standard or rechargeable batteries.
9. The battery included in this toy is intended for in-store demonstration purpose only.
10. Please take out batteries when not in use.

NOTE: Please retain this information for further reference. Also please refer the information in package for details.

FCC Statement:

“Modifications not authorized by the manufacturer may void users authority to operate this device.”

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.