

Cover OUTSIDE

11" (27.9cm)

FCC STATEMENTS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published, or used for any purpose without prior written permission. It is not permitted to alter, remove, or reproduce any trademarks, or copyright notice from this manual.
Model No.: 1019128

F·A·O
SCHWARZ

SHADOW WING DRONE

AGES
8+

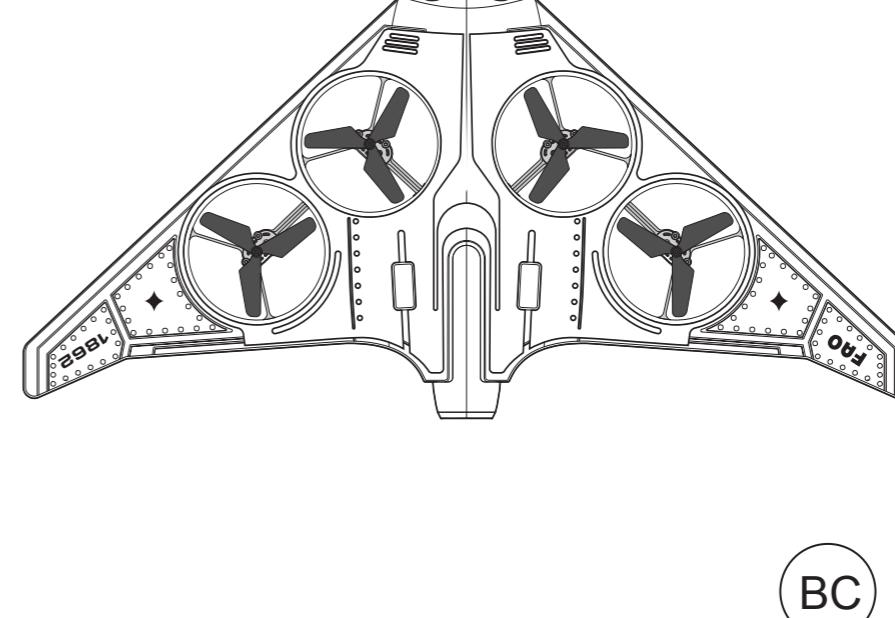


BC


WARNING:
CHOKING HAZARD - Small Parts.
Not for Children under 3 years of age.

Cover INSIDE

CONTENTS

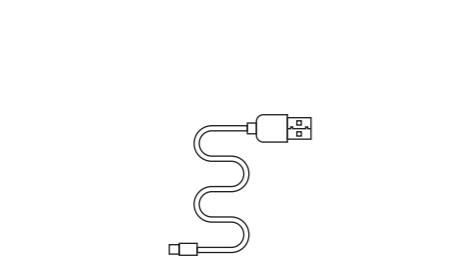

1 Shadow Wing Drone

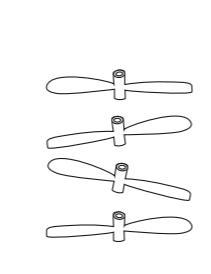

1 Remote Control



1USB-C



4 Propellers

1

2

PLAY


PAIRING

- Place the drone on a level and solid surface to ensure a steady takeoff.
- Press the power button on the remote control to power on the remote control. The indicator light on the remote control will fade on and off slowly to indicate the remote control is in pairing mode and ready to pair with the drone.
- Slide the power switch on the bottom of the drone to power on the drone. The indicator light on the drone will fade on and off to indicate the drone is in pairing mode and ready to pair with the remote control.
- Push the left stick forward and quickly backward to pair the remote control to the drone. Once successfully paired, the remote control will play a notification sound and the status lights on the remote control and drone will both remain solidly lit.
- If the drone and remote control cannot be paired successfully within 1 minute, power off and then power on both to exit sleep mode and then restart the pairing process.

Note: The remote control and drone use a 2.4GHz wireless connection. If either the remote control or the drone disconnects, the other will automatically enter pairing mode.

STABILIZATION

- If the drone has stability issues after an impact, reset the gyroscope by simultaneously pointing the left stick to the bottom left and the right stick to the bottom right as shown. The lights on the drone will flash to indicate recalibration was successful and the drone is ready for flight.

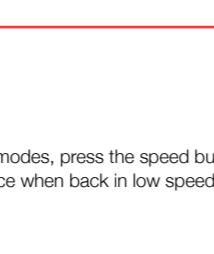

- If the resetting the gyroscope does not resolve the issue, power off and power on the drone and remote control and pair both again.

Note: The recalibration process in step 1 can be used to clear previous trim settings before flights.

3

4

SPEED

- To switch between low and high speed modes, press the speed button. The remote control will beep twice when entering high speed mode and once when back in low speed mode. The drone defaults to low speed when powered on.

AUTO ORIENTATION

- Press the auto orientation button to activate auto orientation mode. Press it again to deactivate this mode.
- The drone will always move in the direction you press the right stick in relation to the remote control, no matter which direction the drone is currently facing.
- Pressing the right stick up will make the drone fly away from the remote control, and pressing the right stick down will make the drone fly towards the remote control.
- When auto orientation is active, the remote control will beep every 6 seconds.


FLIP STUNT

- Press the stunt button and then press the right stick to backward to flip the drone to backward.

Note:

- The stunt function may be disabled if the drone battery power is low.


- Hover the drone at or above 10 feet before attempting a stunt.

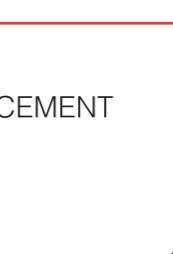

5

6

PROPELLER REPLACEMENT

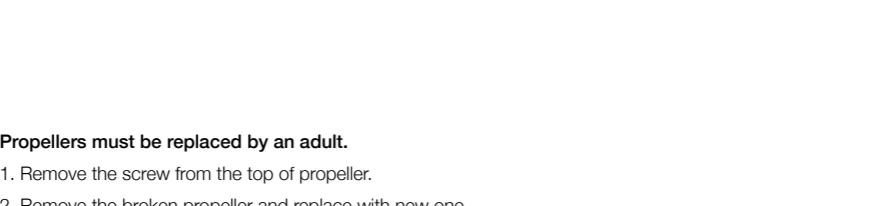

Propellers must be replaced by an adult.

1. Remove the broken propeller and replace with new one.

2. Make sure you installed the correct propeller, each propeller has a number written on it. Match propellers with the corresponding number on the drone.

3. Insert the screw into the top of the propeller and securely tighten it.

7

SAFETY PRECAUTIONS

- Adult supervision required.
- Do not touch spinning propellers.
- Use this item only for its intended purpose.
- Do not point the drone towards people, animals, or fragile objects. May cause injury or property damage.
- Do not expose to extreme temperatures or moisture.
- Throw away intact products before every use. If the product appears worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- For indoor use only.
- Use caution and pay attention to your surroundings while operating the drone.
- Always turn off when not in use.

RECHARGEABLE BATTERY WARNINGS: NON-REPLACEABLE BATTERY

- This product contains batteries that are non-replaceable.
- There is a risk of personal injury if battery is punctured, damaged, or misused.
- Never expose battery to heat, crush, or damage to the terminals.
- Do not expose battery to water or moisture.
- Only charge using the provided charging cable, and/or adapters.
- Rechargeable batteries are flammable and may catch fire.
- Adult supervision is required while charging the battery.
- Use caution when handling the battery.
- Do not expose battery to extreme temperatures or moisture.
- Do not short-circuit the battery supply terminals.
- Remove or dispose of batteries strings according to federal, state, and local laws.
- Keep these instructions for future reference.
- Always keep the battery away from flammable products.

ALKALINE BATTERY WARNINGS

- Do not mix old and new batteries.
- Alkaline batteries using the recommended polarity. Always use the specified voltage.
- Do not attempt to recharge alkaline batteries.
- Do not short-circuit the battery supply terminals.
- Do not expose or dispose of batteries strings.
- Remove or dispose of batteries strings according to federal, state, and local laws.
- Keep these instructions for future reference.

8