

1. Battery Setting
 - 3 AA batteries
 - Ensure switch set to “on” position before playing. Turn to “off” position if not use
 - Note: Remove the batteries for an extended period;
 - Do not mix the old and new batteries;
 - Do not use rechargeable batteries.
 2. Turn on/off
 - Turn on: Press and hold “i” for 5 seconds, after 2 power up tones, the blue LED flashed indicates the music toy is power on.
 - Turn off: Press and hold “i” for 5 seconds, after 2 power down tones, then blue LED being off.
 3. Pairing/Connecting your Bluetooth music toy with Bluetooth equipment.
- Detailed operation procedures are as follows:
- Place Bluetooth music toy close to your Bluetooth handset, and ensure your Bluetooth music toy is power off, handset is power on.
 - Turn on Bluetooth music toy.
 - Following your phone user guide to activate Bluetooth device search on the phone side, on your phone screen you will see a list of Bluetooth equipment found by the phone at the end of the searching process. Select “I talk” from list and initiate paring following handset's on screen prompts.
 - Continue to follow on screen prompts to enter passkey “0000” and confirm to pair the music toy with your handset

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.