

## Le Vise Phone Whistle Instructions



(1) Front Button



(2) UP Button

(3) DOWN Button

### 1. Connect to Your Phone

- Turn on the Phone Whistle by pressing and hold the FRONT button (1) until the LEDs light up.

- The upper left blue LED will blink twice every few seconds, which indicates the Phone Whistle is not connected to any phone.
- On your phone, select your Bluetooth to connect to “Phone Whistle”.
  - Different phones have different set up for Bluetooth. Please refer to your mobile phone manual.
  - If your phone asks for a passcode to connect to the Phone Whistle, please try “0000”.
- Once the Phone Whistle is connected to the Phone, the upper left blue LED will blink once every few seconds.
- Phone Whistle remembers which phone it connected to. If you want to connect Phone Whistle to a different phone, you need to reset the connection memory in Phone Whistle. To do so, the upper left blue LED must be blinking twice, indicating it is not connected to a phone, and the press and hold the FRONT button (1) and the UP button (2) simultaneously until you feel a vibration, and then release the buttons. Now the Phone Whistle is ready to connect to another phone.

## 2. Change Ring Tone

- Press and hold the UP button (2) until the ring tone starts playing.
- Press and release the UP button (2) to cycle through the ring tones.
- Press the FRONT button (1) to select the desired ring tone.

## 3. Change Volume

- Ring tone volume can be adjusted by pressing the UP (2) and DOWN (3) buttons.

## 4. Mute and Vibration Mode

- Press and hold the DOWN button (3), and release when you feel a vibration. The Phone Whistle is now in the vibration mode. It will now ring, but only vibrate and light up when there is an incoming call or when there is a loss of connection.

## 5. Answering and Rejecting Incoming Calls

- To answer all incoming calls, you must answer it with your phone or other Bluetooth hands-free devices.
- To reject incoming calls:
  - Press the FRONT button (1) once when the Phone Whistle is ringing, and it will mute the ring tone; however, the call is still waiting to be connected, and you can still use your phone to answer the call.
  - Press the FRONT button (2) twice when the Phone Whistle is ringing, it will reject the call and push it into your voicemail.

## 6. Charging and Low Power Warning

- When the battery power is low, the lower left LED will blink in red.
- To charge the Phone Whistle, plug in the mini-USB connector to the bottom of the Phone Whistle, and plug the charger to an electrical outlet.
- When the battery is fully charged, the red LED will stop blinking, and the upper left LED will start to blink in blue.

## DECLARATION OF CONFORMITY

FCC ID: R9J-AAA01

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.