



Contents

- 1 Introduction
- 2 Safety precaution
- 3 General View
 - 3.1 keys
 - 3.2 Turn on the device on and off
 - 3.3 Charging the battery
 - 3.4 Navigation
 - 3.5 Home Page
- 4 Function operations
 - 4.1 Music
 - 4.2 Video
 - 4.3 Photo
 - 4.4 Browser
 - 4.5 Camera
 - 4.6 Calculator
 - 4.7 Calendar
 - 4.8 Clock
 - 4.9 Download
 - 4.10 Email
 - 4.11 File Manager
 - 4.12 Search
- 5 Setting
 - 5.1 Wifi
 - 5.2 Data usage
 - 5.3 Sound
 - 5.4 Display
 - 5.5 Storage
 - 5.6 Battery
 - 5.7 Storage
 - 5.8 Accounts & sync
 - 5.9 Location services
 - 5.10 Security
 - 5.11 Language & Input
 - 5.12 Backup & reset

5.13	Date & Time
5.14	Accessibility
5.15	Developer options
5.16	About tablet
6	USB Connections
7	Specifications
8	Troubleshooting

1. Introduction

Congratulations on the purchase of the player!

It can support picture, video,

music, E-book, games, online chat and other functions, moreover, various settings will fully show your individuality.

This manual contains important safety and operating information in order to prevent accidents, please read this

 
manual thoroughly and keep it for future reference.

2. Safety precautions

- To use this player safely, please read and follow the instructions in this manual carefully before use.
- Never use the player while driving or when operating any vehicle, as this could cause an accident. It is also against the law in many areas. Take care when using the player outdoors, especially when crossing the street.
- Do not listen to music at very high volumes using the earphones as this can permanently damage your hearing.
- Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Do not put the player in high temperature places (over 40°C), especially not in a car with the windows closed in

summer.

- Keep the player away from strong magnetic fields.
- Please don't turn on the device in where the wireless equipment is forbidden or when the usage of the device will cause interference and danger.
- Press the player's buttons gently. Pressing them or the screen too hard can damage the player.
- Do not use the player in an electronics-prohibited area, such as in an airplane.
- Do not use the player in an extremely dry environment, as this can lead to static discharge, which can damage the player.
- Do not subject the product to harsh impacts.
- Do not drop the appliance. This may result in damage to the product.
- Do not attempt to dismantle or repair this unit yourself, Repairs should only be performed by qualified personnel only.
- We will not be responsible for any memory loss caused by product damage, repairs or other reasons.
- Disconnect the appliance from the power source when cleaning.
- In order to prevent program failure, never disconnect the player suddenly from a PC during downloading, uploading or formatting to prevent program failure.
- Use a slightly damp, lint-free cloth to clean this appliance. Do not dismantle the player or use alcohol, thinner or benzene to clean the surface of the player.

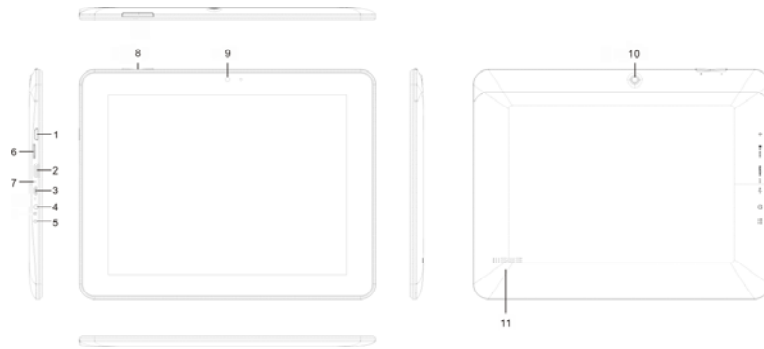


3.1 Keys

- 1) Power on/off
- 2) HDMI Port
- 3) USB Port
- 4) Earphone Port
- 5) DC port
- 6) Micro Sd slot
- 7) Reset
- 8) Volume
- 9) Front camera
- 10) Back camera
- 11) Speaker

3.2 Turn on the device on and off

 Note: After you turn on the device, you will see the Lock key

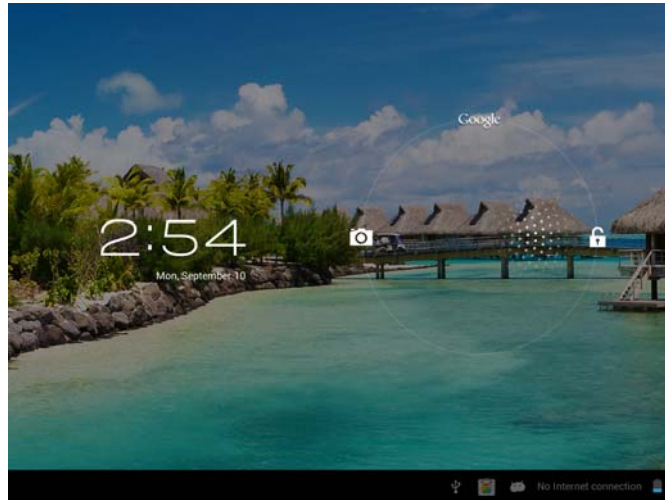

symbol appear on the screen, keep your finger pressed to Unlock.

3.3 Charging the battery

Important: The battery must be charged for at least 4-5 hours before using it for the first time.

3.4 Navigation

Touch screen navigation

The touch screen makes navigation smooth and quick. Move your finger over the touch screen's surface to select the various menus or applications and navigate around your device.



3.5 Home page

The Home screen gives you an overview of the contents of your device and gives you access to all of its available functions and applications.

1. Return button
2. Home page
3. Vol -
4. Vol +
5. Tabbed Internet browser
6. USB connect
7. USB debug
8. Battery
9. Function block

4 Functions Operation

Click the related program icons to enter corresponding functions.

4.1 Music

Click 'Music' icon to open the music application.

This application is used to play and store MP3 audio files.

4.2 Video

Click 'Video', you will see all video in this application. Click the video files and play it.

4.3 Photo

Click "Gallery "you will see all video and photos in this application. Click the photo files and review it.

4.4 Browser

Click 'Browser' icon to open 'web browser' application and freely browse the internet. (Before you enter into website, please check you connect the wifi)

4.5 Camera

Click 'Camera' icon to open camera application. You can take a photo or make the video recording.

4.6 Calculator

Click 'Calculator' icon to open the calculator application. This calculator is used to perform advanced mathematical operations. Use the number pad to enter the numbers.

4.7 Calendar

Click 'Calendar' icon to open the calendar application. You can personalize and add your memorandum.

4.8 Clock

Click 'Clock' icon to open the Clock application. You can personalize and program several types of alarms.

4.9 Downloads

Click 'Download' icon to open the download, you will see all the files under downloading.

4.10 Email

Click 'Email' icon to open the email application and go directly to your personal e-mail software. This application is compatible with most e-mail software and is used to easily read, send and receive e-mails.

4.11 File Manager

Click 'File Manager' icon to open your tablet's navigator and have access to the contents of your Micro SD or device's internal memory.

4.12 Search

Click 'Search' icon to open the search application. From here, you can search Web/Apps/Music.



5. Settings

5.1 Wifi

Search the wifi and connect it. If you use 3G dongle, please input the 3G SIM card into dongle.

5.2 Data usage

Set data limit.

5.3 Sound

Set the volumes, system sounds

5.4 Display

Set the brightness, wallpaper, screensaver etc.

5.5 Storage

Show all storage and space of apps in internal memory/ SD card.

5.6 Battery

Show battery time.

5.7 Apps

Show all apps you installed.

5.8 Accounts & Sync

Sync your accounts you setup.

5.9 Location services

Determine your location by Intel.

5.10 Security

Set the screen security/Encryption/Passwords etc.

5.11 Language & Input

Set the language of device and input language you want.

5.12 Backup & reset

Recover factory data reset.

5.13 Date & Time

Set the date & time of device.

5.14 Accessibility

Set the font, auto-rotate etc.

5.15 Developer options

 
Show pointer location, screen updates, CPU usage etc.

5.16 About tablet

Show the model number, version etc.

6. USB Connections

You can connect your device to your computer, use it as a

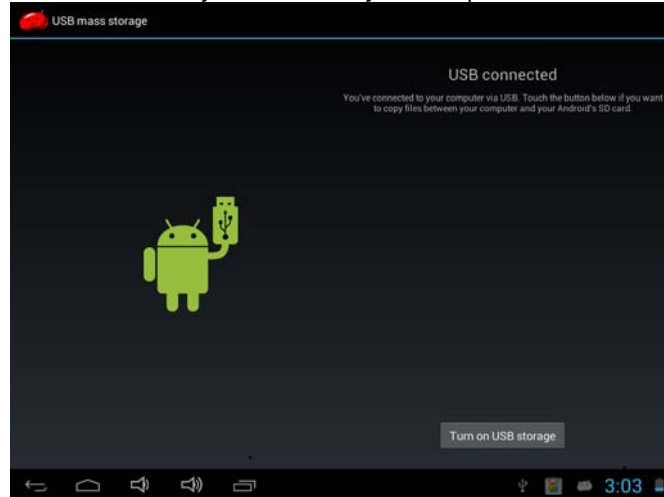

removable disk and open any files saved on your device.

When you see above picture, press 'Turn on USB storage' to connect with computer.

7. Specifications

LCD Display	Size	10.1" TFT Capacitive touch panel
	Resolution	1280*800
Solution	Rockchip 3066	
OS	Android 4.1	
System Memory	1GB,DDR3	
Wifi	802.11b/g/n	
Camera	Front 0.3M, Rear 2M	
Built-in Flash	4GB/8GB/16GB	
Capacity	Support Micro SD Card , capacity	
Expansion	128MB~16GB	
Power Supply	Built-in 6800mAH Lithium rechargeable battery	
	DC 5V@2A	
Audio format	MP3/WMA/APE/FLAC/AAC/OGG/AC3/WAV	
	Max.1280*720.MKV/AVI/RM/RMVB/FLV/ WMV9/ MP4	
Video format	JPEG /BMP/ GIF/ PNG	
Picture format	-5 ~ 40 °C	
Working temperature	Multiple languages	
Languages	242 x 188 x 12 mm	
Dimensions	Manual, Charger, USB, Gift box etc.	
Accessories (Optional)		

8. Troubleshooting

Problem	Solution
The device will turn itself off after a few seconds	Check that the battery is charged.
No volume is heard	Adjust the volume level Check if audio file is broken
Screen is hard to see in bright light.	Adjust the screen brightness in the system menu. Avoid using the reader in direct sunlight.
Data on the screen is corrupted or a program is not responding properly	Use thin object like a paper clip to perform a reset to restart the device
Can't copy file into the device	Check if the device is connected to the computer correctly. Check if the memory space is full. Check if the USB cable is broken



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.